



USA's primary source for projector lamps
myprojectorlamps

PROJECTOR OWNER'S MANUAL

Acco Europe

NOBO X20M

Need a replacement lamp for this projector?

www.myprojectorlamps.com

Original manufacturer manual, provided unmodified as a courtesy of MyProjectorLamps.com.
All trademarks belong to their respective owners.



NOBO

X20M DLP Projector

User Manual



ACCO Europe
www.accoeuropa.com

Made in Taiwan

■ Usage Notice	
• Precautions	4
■ Introduction	
• Product Features	5
• Package Overview	6
• Product Overview	7
• <i>Main Unit</i>	7
• <i>Panel Control</i>	8
• <i>Connection Ports</i>	8
• <i>Remote Control with Mouse Function and Laser Pointer</i>	9
• <i>Laser Pointer Caution</i>	9
■ Installation	
• Connecting the Projector	10
• Powering On/Off the Projector	11
• <i>Power On the Projector</i>	11
• <i>Power Off the Projector</i>	12
• Adjusting the Projected Image	13
• <i>Adjusting the Projector Height</i>	13
• <i>Adjusting the Projector Zoom/Focus</i>	14
• <i>Adjusting Projection Image Size</i>	14
■ User Controls	
• Panel Control and Remote Control	15
• On-Screen Display Menus	16
• How to Operate	17
• Image-I (Computer Mode)	18
• Image-I (Video Mode)	19
• Image-II (Computer Mode)	20
• Image-II (Video Mode)	21
• Audio	22
• Language	22
• Management	22
■ Appendices	
• Troubleshooting	24
• Changing the Lamp	26
• Specifications	27
• Compatibility Modes	28

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation.

Trademarks

Trademark are the rights of their respective owners.





WARNING Do not look into the lens. The bright light may hurt your eyes.



WARNING To reduce the risk of fire or electric shock, do not expose the product to rain or moisture.



WARNING Please do not open or disassemble the product as this may cause electric shock.



WARNING When changing the lamp, please allow unit to cool down, and follow all changing instructions.



WARNING This product will detect the life of the lamp itself. Please be sure to change the lamp when it shows the warning messages.



WARNING After changing a new lamp, please reset the lamp life from OSD menu.



WARNING Before switching off the product, please keep the cooling fan running for a few minutes.



WARNING When connecting the projector to computer, please turn on the projector first.



WARNING To reduce the risk of injury to the eyes, do not look directly into the laser light on the remote control and do not point the laser light into anyone's eyes. This remote control is equipped with a Class II laser that emits radiation.



WARNING When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under **Changing the lamp** on page 26.

PRECAUTIONS

Follow all warnings, precautions and maintenance as recommended in this User's Guide to maximise the life of your unit.

DO

- Turn off the product before cleaning
- Use a soft cloth moistened with mild detergent to clean the display housing
- Disconnect the power plug from AC outlet if the product is not being used for a long period of time

DON'T

- Block the slots and opening on the unit provided for ventilation
- Use abrasive cleaners, waxes or solvents to clean the unit
- Use under the following conditions:
 - Extremely hot, cold or humid conditions
 - In areas susceptible to excessive dust and dirt
 - Near any appliance generating a strong magnetic field
 - Place in direct sunlight

PRODUCT FEATURES

*This product is an XGA single chip 0.7" DLP™ projector.
It's outstanding features are:*

- True XGA, 1024 x 768 addressable pixels
- 2.9 kg (6.4 lbs) compact design
- Single chip DLP™ technology
- SXGA compression and VGA, SVGA re-sizing
- 200 Watts user replaceable UHP lamp
- Mac compatible
- NTSC / NTSC4.43 / PAL / PAL-M / PAL-N / SECAM and HDTV compatible
- Full function remote with mouse control and laser pointer
- High-tech DVI Connection for digital and analog video connectivity
- High definition TV compatibility
- User-friendly multilingual on-screen display menu
- Advanced electronic keystone correction
- User-friendly control panel
- Luxurious carrying case included

PACKAGE OVERVIEW

This projector comes with all the items shown below. Please ensure your unit is complete. Contact your dealer immediately if anything is missing.



Projector with lens cap



Power Cord



VGA Cord



S-Video Cord



Audio Cable Jack / RCA



Composite Video Cable



DVI to D-Sub Cable



Remote Mouse Y Cable



User's Guide



Warranty Card



Remote Control with
Mouse Function and
Laser Pointer



Quick Start Sheet




Carry Case



Batteries x 2

PRODUCT OVERVIEW


MAIN UNIT

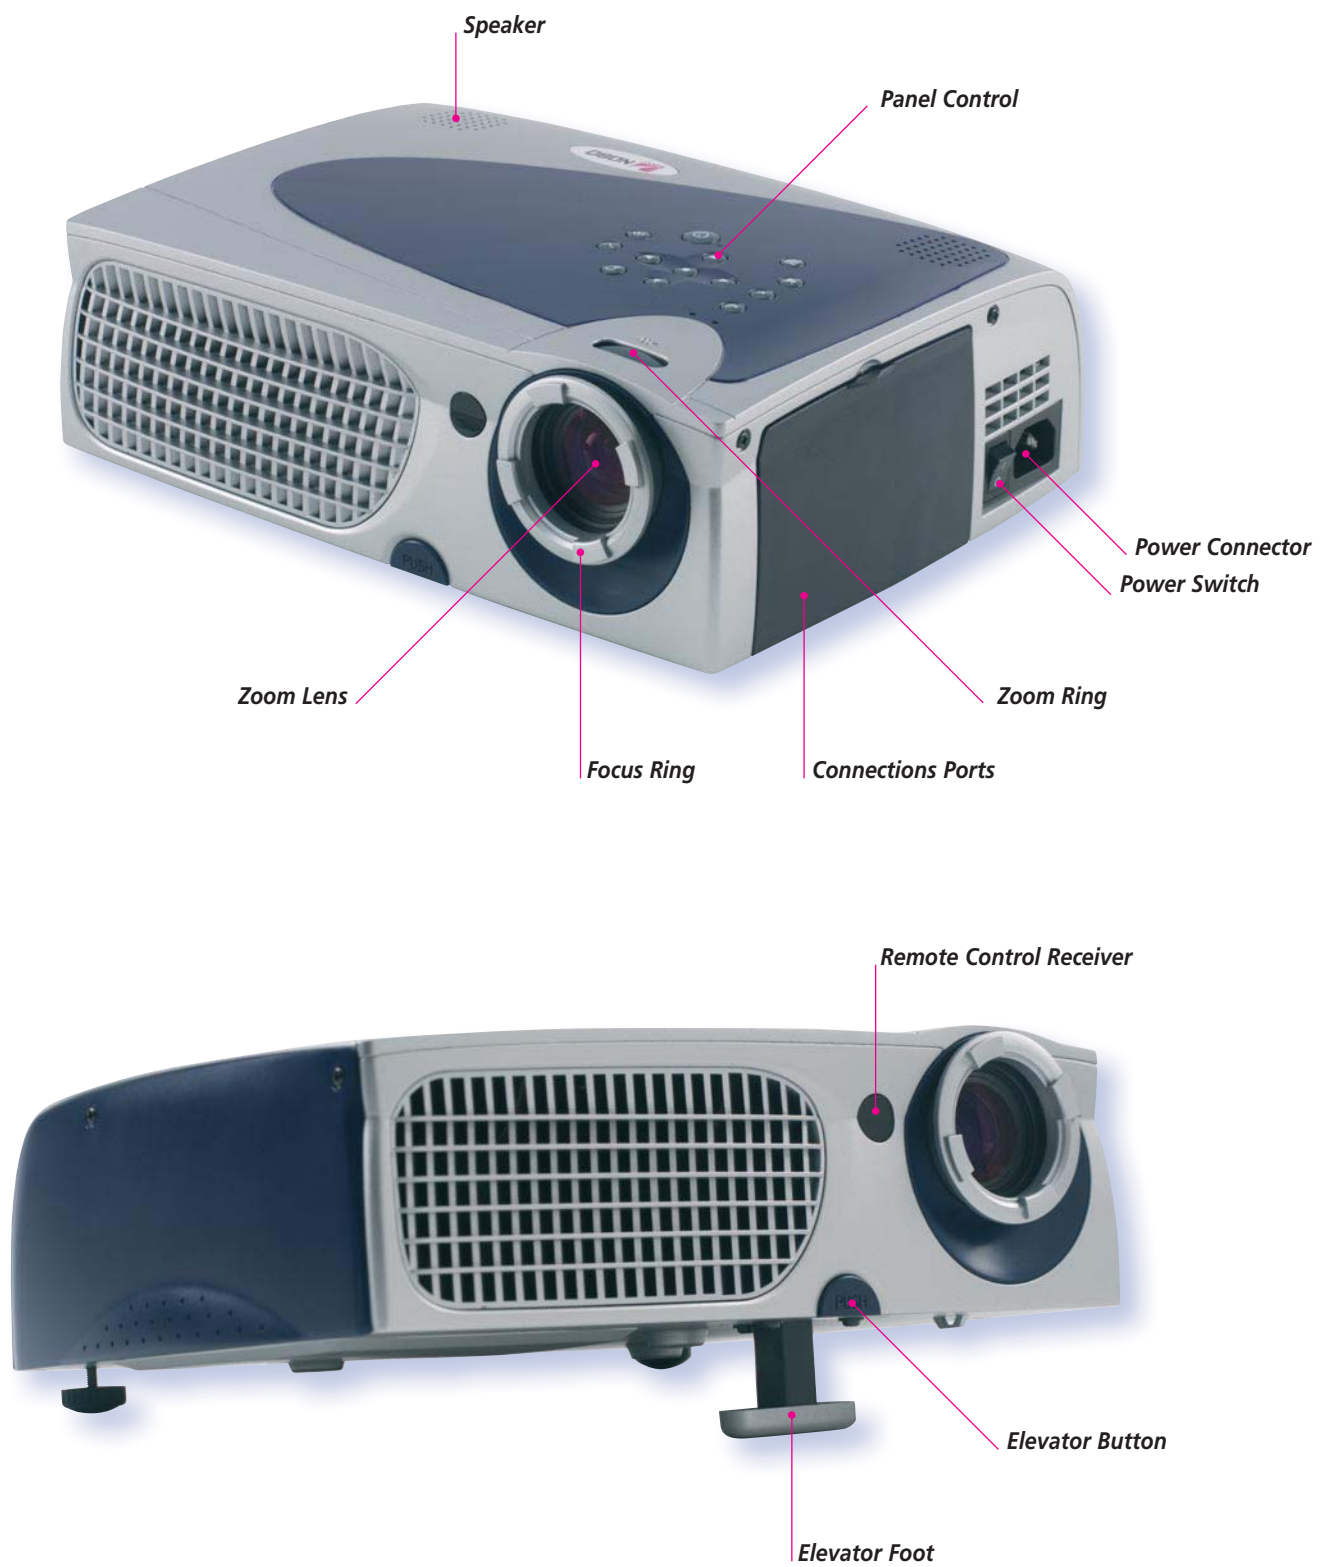

PANEL CONTROL



CONNECTION PORTS

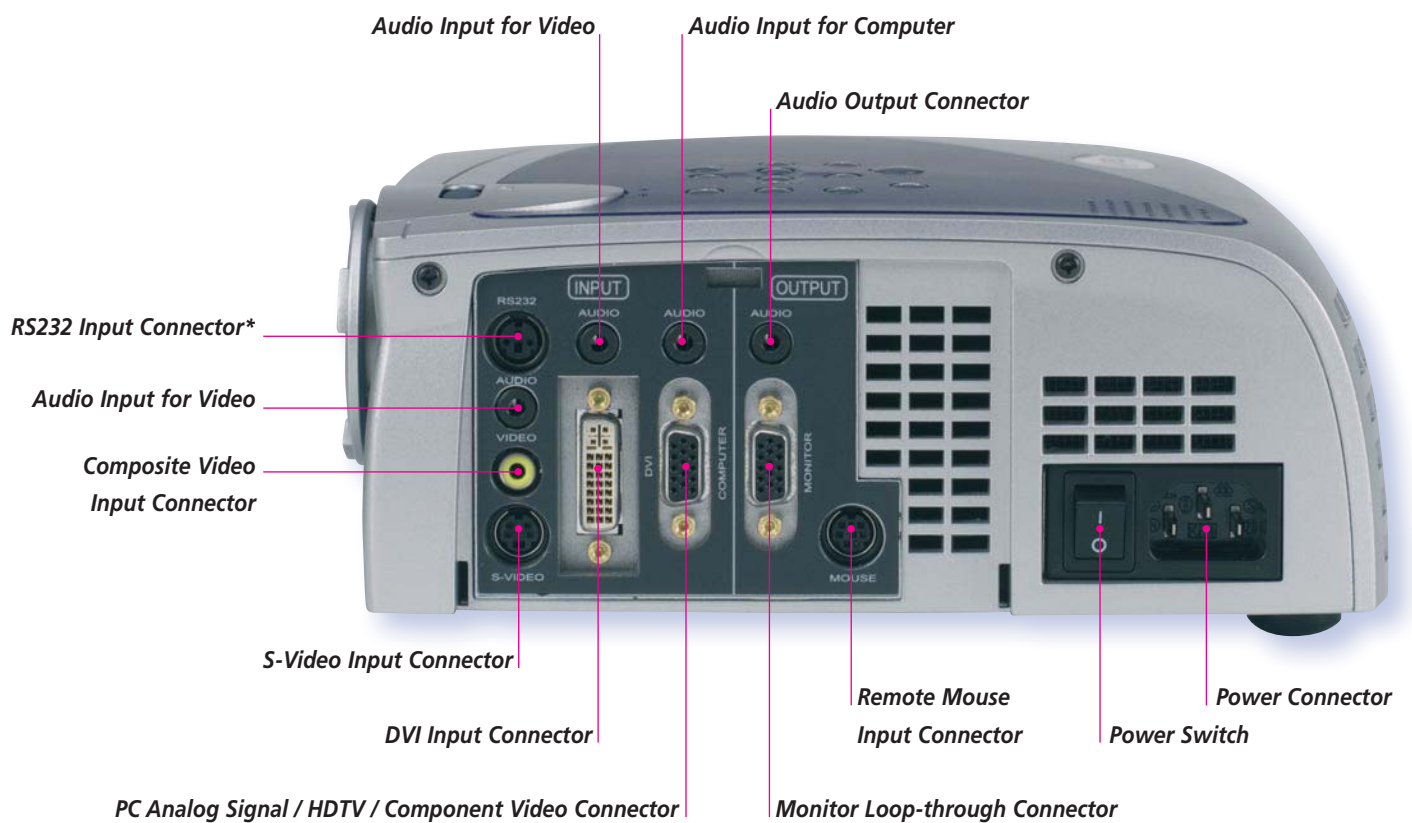

REMOTE CONTROL

WITH MOUSE FUNCTION & LASER POINTER

Close the cover of the remote control when you want to use the remote mouse

LASER POINTER CAUTION



WARNING

To reduce the risk of injury to the eyes, **do not look directly into the laser light on the remote control and do not point the laser light into anyone's eyes.** This remote control is equipped with a Class II laser that emits radiation




AVOID EXPOSURE
Laser radiation is emitted from this aperture

CAUTION
LASER RADIATION - DO NOT STARE INTO BEAM
WAVE LENGTH: 650nm
MAX OUTPUT: <1mW
CLASS II LASER PRODUCT

CONNECTING THE PROJECTOR

To ensure the projector works well with your computer, please configure the display mode of your graphic card to make it less than or equal to 1024 x 768 resolution. Make sure timing of the display mode is compatible with the projector. Refer to the **Compatibility Modes Section** on page 28.

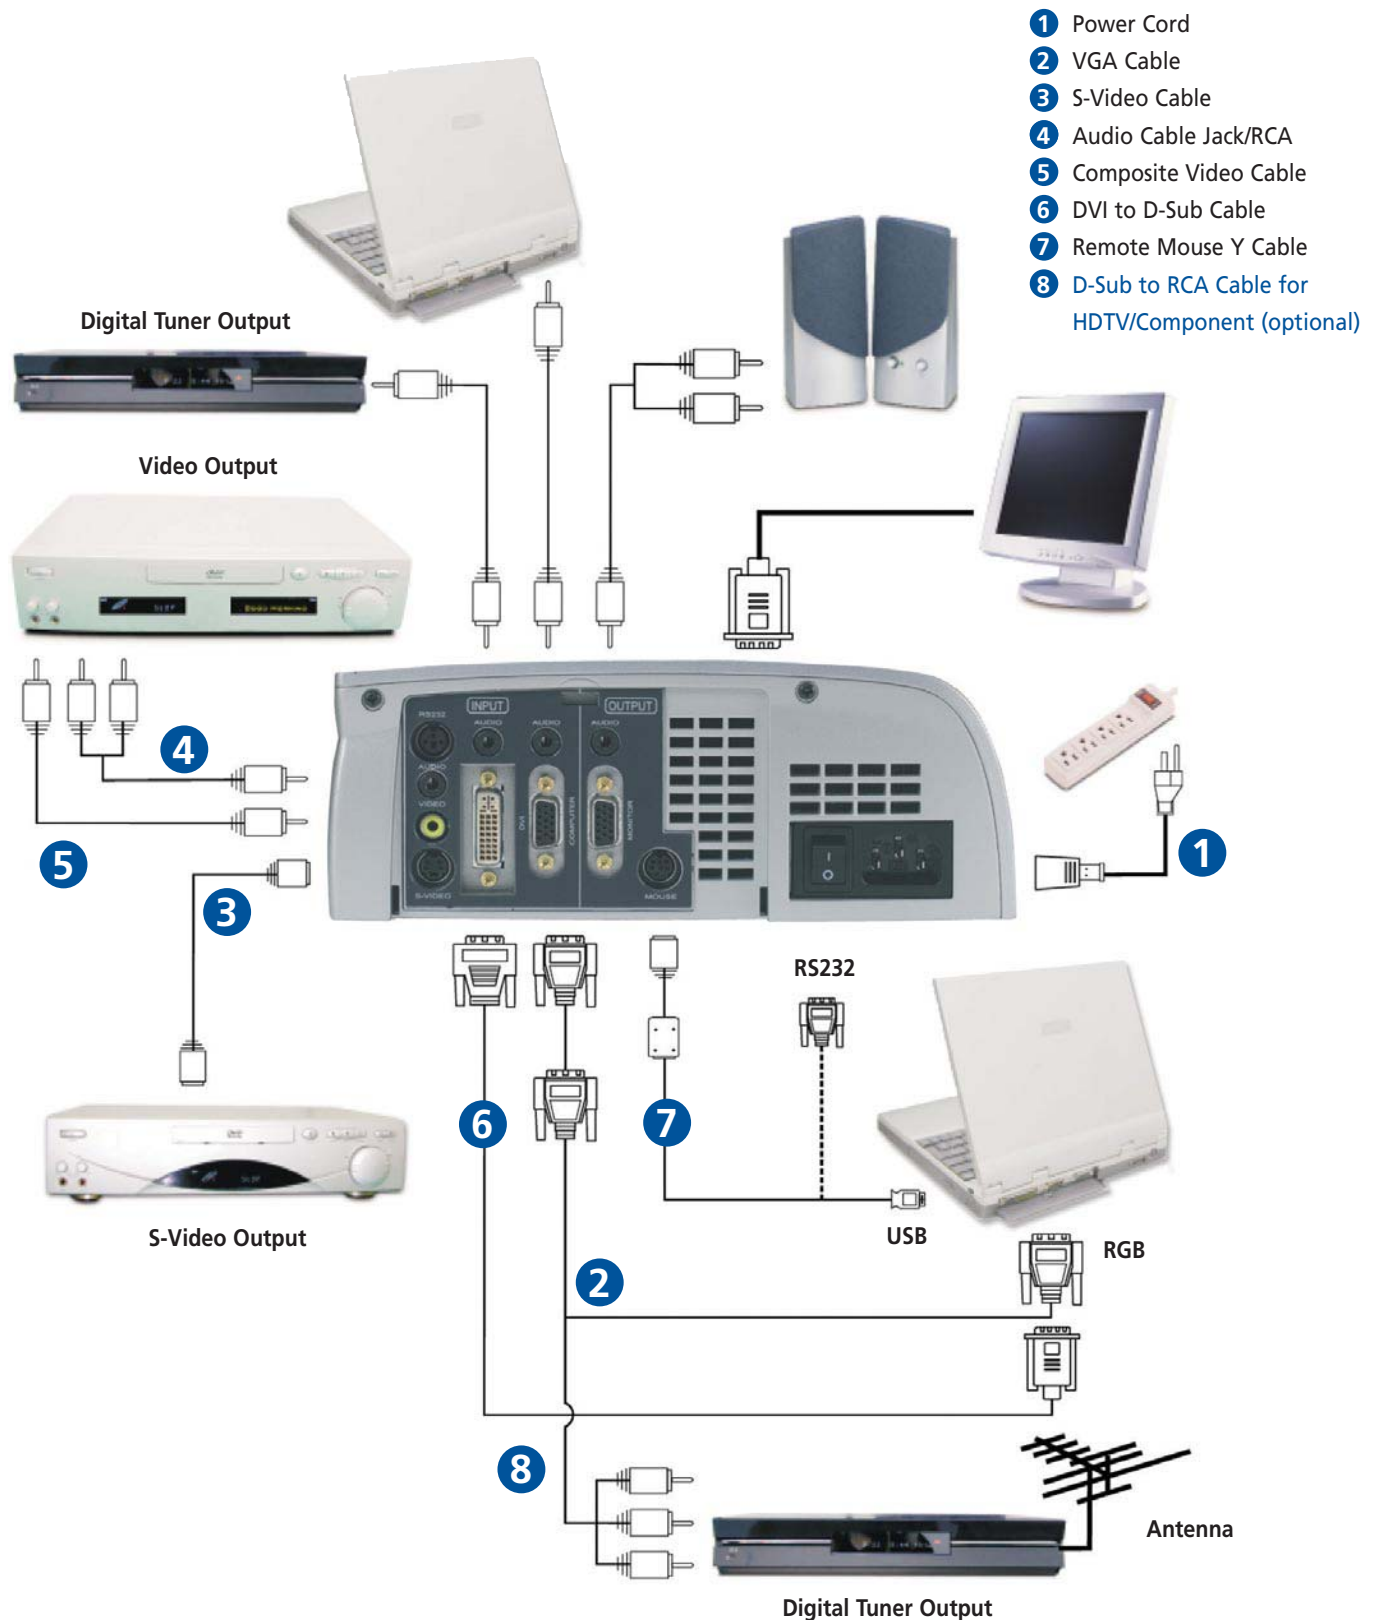

POWERING ON THE PROJECTOR

Turn on the projector first and then the computer.

If the screen displays "No Signal", please ensure the signal cables are securely connected.

If you connect multiple sources at the same time, use the "Source" button on the Remote Control or Panel Control to switch.

1 Remove the lens cap.

Ensure that the power cord and signal cables are securely connected.

2 Turn on the main power switch on the side of the projector and allow the projector to warm up for 1-2 minutes.

3 Turn on the lamp by pressing "Power / Standby" button on the control panel.

The start-up screen will display and count down for 20 seconds and the "Power / Standby" indicator will light solid amber.

The "LAMP" LED indicator will light solid green.

Turn on your source (computer, notebook, or video player, etc.). The projector will detect your source automatically.



POWERING OFF THE PROJECTOR

- 1 Press the "Power / Standby" button to turn off the projector lamp.
- 2 You will see a message "Power off the lamp?" on the on-screen display. Press the "Power / Standby" button again to confirm. Otherwise the message will disappear after 5 seconds.
- 3 "Power / Standby" LED indicator will light solid amber for about 30 seconds. After the "Power / Standby" indicator starts flashing, you can turn off the main power switch on the side of the projector.

If you want to turn on the projector again, you must press the "Power / Standby" button within 90 seconds of the indicator flashing.

- 4 Do not turn on the projector immediately following this Power Off procedure.

When the "LAMP" indicator flashes green for about 10 seconds, you will see a message "Fan Fail" on the on-screen display. Please contact your local dealer or our service centre.



When the "TEMP" indicator lights solid orange, it indicates the projector has been overheated. You will see a message "Over Temperature" on the on-screen display. The projector will automatically shut itself down. Under normal conditions, the projector can be switched on again for your presentation. If the problem persists, you should contact your local dealer or our service centre.



ADJUSTING THE PROJECTOR HEIGHT

The projector is equipped with an elevator foot for adjusting the projector height.

To raise the projector

- 1 Press the Elevator Button.
- 2 Raise the projector to the desired display angle, then release the button to lock the elevator foot into position.
- 3 Use the Height Adjuster Button to fine-tune height adjustment.

To lower the projector

- 1 Press the Elevator Button.
- 2 Lower the projector, then release the button to lock the elevator foot into position.
- 3 Use the Height Adjuster Button to fine-tune height adjustment.




ADJUSTING THE PROJECTOR ZOOM / FOCUS

You may adjust Zoom Ring to zoom in or out. Rotate the Zoom Ring counter-clockwise to zoom in and clockwise to zoom out. To focus the image, rotate the focus ring until the image is clear. The projector will focus at distances from 1.1m to 12.4m (3.7 feet to 40.7 feet).



ADJUSTING THE PROJECTOR IMAGE SIZE

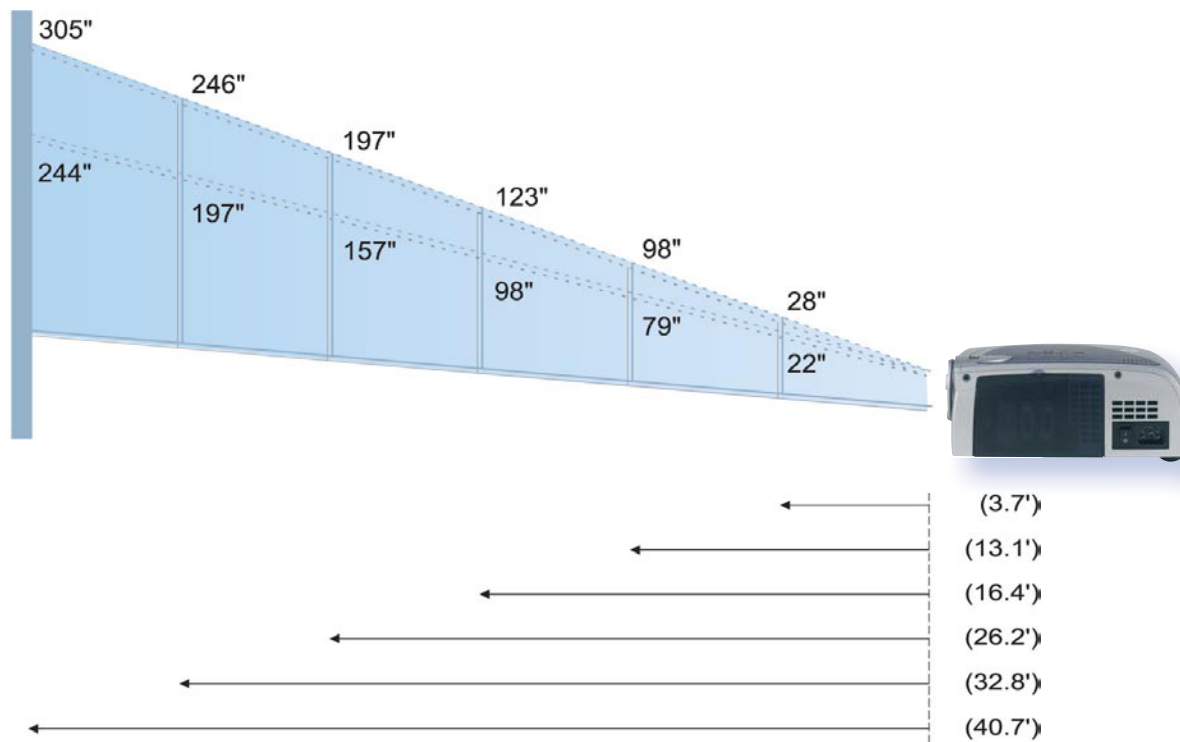

Screen (Diagonal)	Max.	28"	98"	123"	197"	246"	305"
	Min.	22"	78"	98"	157"	197"	244"
Screen Size	Max (W x H)	22.4 x 16.8"	78.4 x 58.8"	98.4 x 73.8"	157.6 x 118.2"	196.8 x 147.6"	244.0 x 183.0"
	Min. (W x H)	17.8 x 13.2"	62.4 x 26.8"	78.4 x 58.8"	125.6 x 94.2"	157.6 x 118.2"	195.2 x 146.4"
Distance		3.7'	13.1'	16.4'	26.2'	32.8'	40.7'

This graph is for User's reference only

PANEL CONTROL & REMOTE CONTROL

There are two ways for you to control the functions:
Remote Control or Panel Control.



Remote Control



Panel Control



Power / Standby

- Refer to the **Power On / Off the Projector** section on page 11.

Source

- Press "Source" to choose RGB, DVI-Digital, DVI-Analog, S-Video, Composite, Component and HDTV sources.

Zoom

Use the **Panel Control**

- When you press "Zoom" button, the Zoom icon appears in the screen. Press the Up or Down buttons to zoom in or zoom out of the image.

Re-Sync

Use the **Remote Control**

- Automatically synchronises the projector to the input source, when you press this button while the remote control cover is open.
- If the remote control cover is closed, the Mouse / Re-Sync button functions like the right mouse button.

Use the **Panel Control**

- Automatically synchronises the projector to the input source.



Four Directional Select Keys

- When you **close** the cover of remote control, this key can be used as a mouse to control direction.

The above function is only enabled with the connection between computer and projector by remote mouse Y cable.

Page Up / Page Down Under remote mouse connected status only



- When the cover of remote control is **opened**, this key can be used for the up, down, left and right operation for OSD display.



Page Up (Computer mode only)

- Use this button to page up.



Page Down (Computer mode only)

- Use this button to page down.



Laser Pointer

- Aim the remote at the viewing screen, press and hold button to activate the laser pointer.

Menu

- Press "Menu" to open the on-screen display (OSD) menus and press left and right keys to select menu items. To exit OSD, press "menu" button again. The projector will save any changes you made automatically.



Freeze

- Press the "Freeze" button to still the screen image.



Mute

- Use to mute sound.



Volume + / -

- Increases or decreases speaker volume.



Keystone + / -

- Adjust image distortion caused by tilting the projector (± 16 degrees).



Zoom In / Out (Computer mode only)

- Magnifies an image up to a factor of 32 times on the projection screen.
- Diminishes the zoom-in image.



Enter

Use the **Remote Control**

- Confirm your selection of items, when you open the front cover of remote control.
- If the remote control is closed, the "Enter" button functions like the left mouse button.

Use the **Panel Control**

- Confirm your selection of items.

ON-SCREEN DISPLAY MENUS

How to Operate

- The projector has multi-lingual On-Screen Display (OSD) menus that allow you to make image adjustments and change a variety of settings. In computer source, the OSD will be the "Computer OSD". In video source, the OSD will be the "Video OSD". The projector will detect the source automatically.
- To open the OSD menu, press the "menu" button on the remote control or the panel control.
- When OSD is displayed, press   keys to select menu items.
E.g.: Image-I > Image-II > Audio > Language > Management > Image-I...
While making selection on a particular page, press "Enter" key to go into sub-menu.
- Press   keys to select the required item and use the   keys to adjust the settings. When a specified item is selected, the colour of the item will change from yellowish brown to blue.
E.g.: Brightness > Contrast > Colour Temp. > Zoom > Keystone > Brightness...
- While using   keys to adjust the parameter or required function in the items of the sub-menu, confirm all the functions of the main menu by pushing "Enter" button after all / part of the items have been modified. Press the "Enter" button to confirm, and the screen will be back to the main menu at once. Only   keys are enabled now.
- To exit the OSD, press the "Menu" button again.

Computer Mode

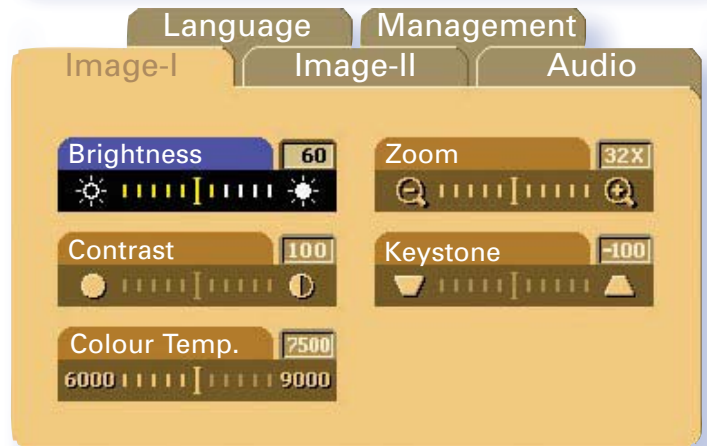


IMAGE-I (COMPUTER MODE)

Brightness

Adjusting the brightness of the image.

- Press the ◀ key to darken the image.
- Press the ▶ key to lighten the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- Press the ◀ key to decrease the contrast.
- Press the ▶ key to increase the contrast.

Colour Temperature

Adjust the colour temperature. the range is from 6000K to 9000K. The factory default setting is 7500K. With a higher temperature the screen looks colder, with a lower temperature the screen looks warmer.


Zoom

- Press the ▶ to magnify an image up to a factor of 32 times on the projection screen.
- Press the ◀ to Diminish the zoom-in image.

Keystone (Keystone Correction)

Adjust the image distortion caused by tilting projection (± 16 degrees).

Video Mode

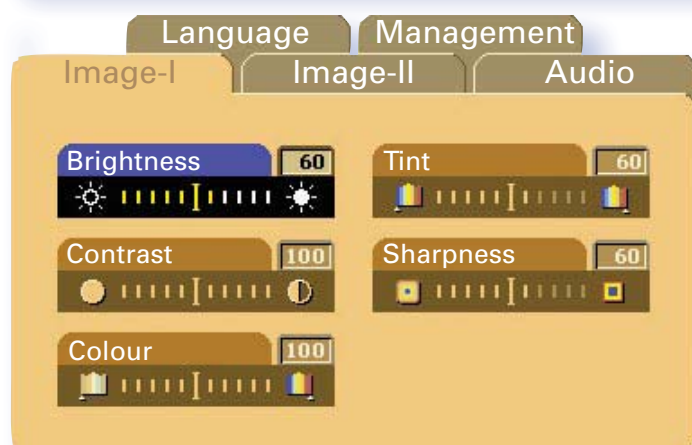**IMAGE-I
(VIDEO MODE)****Brightness**

Adjusting the brightness of the image.

- Press the ◀ key to darken the image.
- Press the ▶ key to lighten the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- Press the ◀ key to decrease the contrast.
- Press the ▶ key to increase the contrast.

Colour

The colour setting adjusts a video image from black and white to fully saturated colour.

- Press the ◀ key to decrease the amount of colour in an image.
- Press the ▶ key to increase the amount of colour in an image.

Tint

The tint adjusts the colour balance of red and green.

- Press the ◀ key to increase the amount of green in the image.
- Press the ▶ key to increase the amount of red in the image.

Sharpness

Adjusting the sharpness of the image.

- Press the ◀ key to decrease the sharpness.
- Press the ▶ key to increase the sharpness.

Computer Mode

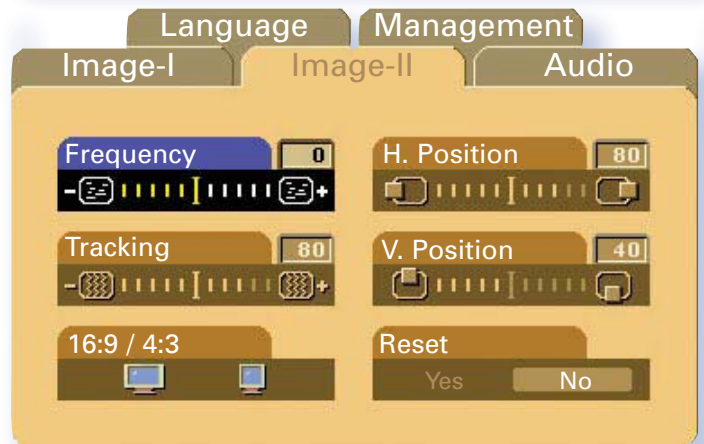


IMAGE-II (COMPUTER MODE)

Frequency

"Frequency" is for changing the display data frequency to match the frequency of your computer's graphic card. When you experience a vertical flickering bar, use this function to make an adjustment.

Tracking

Choose "Tracking" item to synchronise the signal timing of the display with that of the graphic card. When you experience an unstable or flickering image, use this function to correct it.

16 : 9 / 4 : 3

You can use this function to fit your desired aspect ratio type.

Horizontal Position

- Press the ◀ to move the image left.
- Press the ▶ to move the image right.

Vertical Position

- Press the ▲ to move the image up.
- Press the ▼ to move the image down.

Reset

Choose "Yes" to return the display parameters back to the factory default.

Reset:

Reset select includes both Image-I and Image-II settings

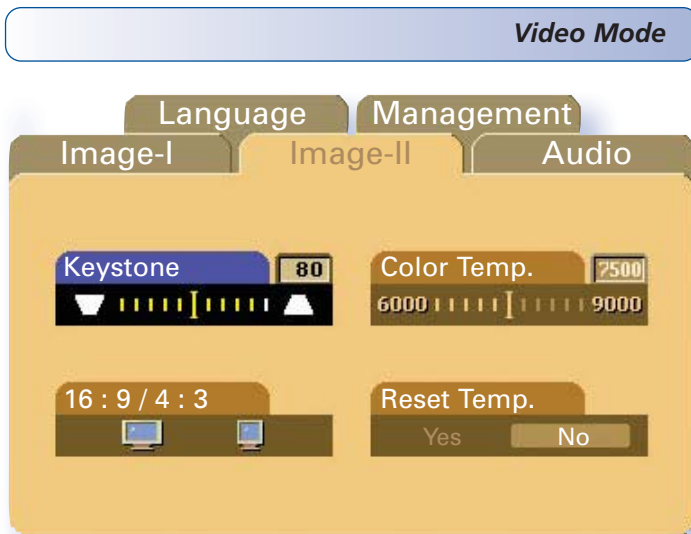


IMAGE-I (VIDEO MODE)

Keystone Correction

Adjust image distortion caused by tilting the projector (± 16 degrees).

16 : 9 / 4 : 3

You can use this function to fit your desired aspect ratio type.

Colour Temperature

Adjust the colour temperature. The range is from 6000K to 9000K. The factory default is 7500K. With the higher temperature, the screen looks colder; with the lower temperature, the screen looks warmer.

Reset:

Reset select includes both Image-I and Image-II settings

Reset

Choose "Yes" to return the display parameters back to the factory default.

AUDIO

Volume

- Press the  to decrease the volume.
- Press the  to increase the volume.

Treble

The treble setting controls the higher frequencies of your audio source.

- Press the  to decrease the treble.
- Press the  to increase the treble.

Bass

The bass setting controls the lower frequencies of your audio source.

- Press the  to decrease the bass.
- Press the  to increase the bass.

Stereo / Mono

-  Mono sound effect.
-  Stereo sound effect.

Mute


- Choose the left icon to turn Mute on
- Choose the right icon to turn Mute off.

LANGUAGE


You can display the multi-lingual OSD menu.

- Use the  and  key to select your preferred language.


Computer / Video Mode

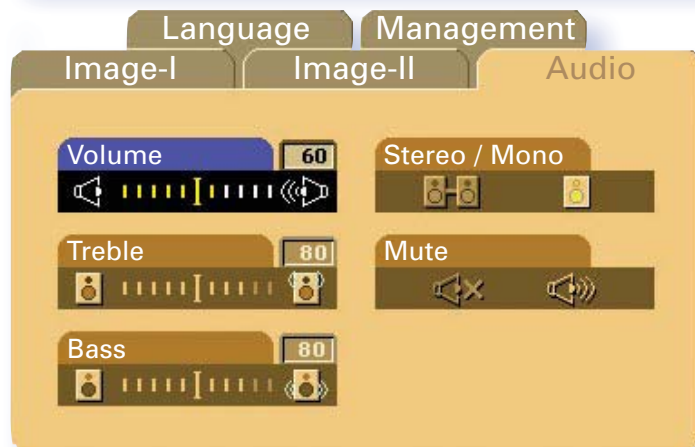

Computer / Video Mode

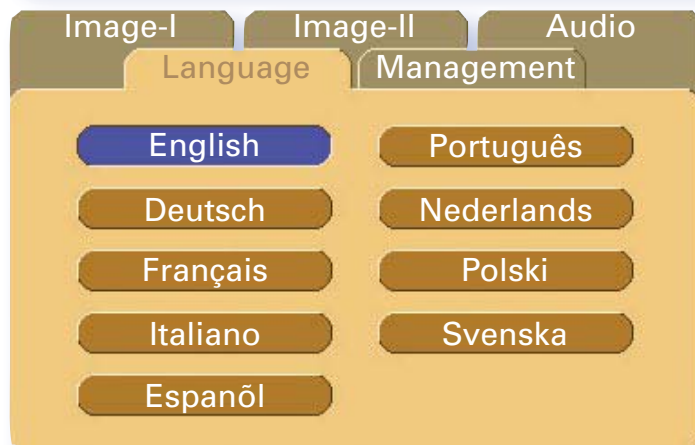

Computer / Video Mode

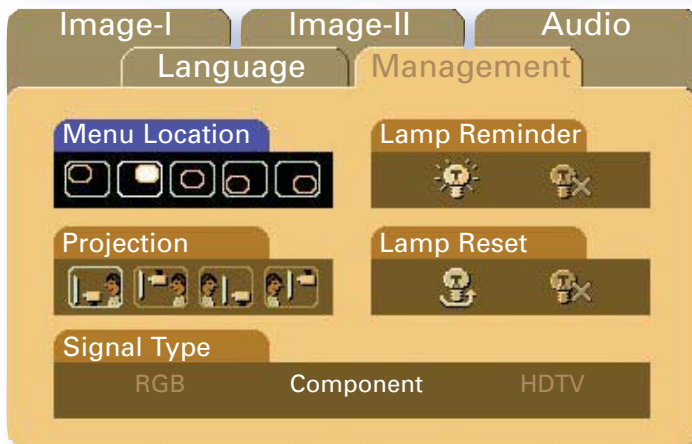

MANAGEMENT

Menu Location

Choose the Menu location on the display screen.

Projection

-  Front-Desktop

The factory default setting.

-  Rear-Desktop

When you select this function, the projector reverses the image so you can project behind a translucent screen.

-  Front-Ceiling

When you select this function, the projector turns the image upside down for ceiling-mounted projection.

-  Rear-Ceiling

When you select this function, the projector reverses and turns the image upside down at the same time. You can project from behind a translucent screen with ceiling mounted projection.

Signal Type

Select signal type between RGB, HDTV and Component video sources.

Lamp reminder

Select this function to show or to hide the warning message when the changing lamp is displayed. The message will show up 30 hours before end of life.

Lamp Reset

Reset the lamp setting only when the new lamp is replaced.

TROUBLESHOOTING

If you are experiencing problems with the projector, refer to the following. If the trouble persists, please contact your local dealer or our service centre.

PROBLEM No image appears on the screen

- Ensure all the cables and power connections are correctly and securely connected as described in the [Installation Section](#), page 10.
- Ensure the pins of connectors are not crooked or broken.
- Check if the projection lamp has been securely installed. Please refer to the [Changing the Lamp Section](#), page 26.
- make sure you have removed the lens cap and the projector is switched on.

PROBLEM Partial, scrolling or incorrectly displayed image

- Press the "Re-Sync" button on the remote control.

■ If you are using a PC:

If the resolution of your computer is higher than 1024 x 768.

Follow the steps below to reset the resolution.

■ For Windows 3.x

- 1 In the Windows Program Manager, click the "Windows Setup" icon in the main group.
- 2 Verify that your display resolution setting is less than or equal to 1024 x 768.

■ For Windows 95

- 1 Open "My Computer" icon, the "Control Panel" folder, and then double click the "Display" icon.
- 2 Select the "Setting" tab.
- 3 In the "Desktop Area" you will find the resolution setting. Verify that the resolution setting is less than or equal to 1024 x 768 resolution.

If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.

- 4 Follow the steps 1-2 above. Click on the "Advanced Properties" button.
 - 5 Select the "Change" button under the "Monitor" tab.
 - 6 Click on "Show all devices" then select "Standard monitor types" under the "Manufacturers" box; choose the resolution mode you need under the "Models" box.
 - 7 Verify that the resolution setting of the monitor display is less than or equal to 1024 x 768.
- If you are using a Notebook PC:
 - 1 You are required to implement above steps of resolution setting of computer first.
 - 2 Switch the Notebook PC display to the "External display only" or "CRT only" mode.
 - If you are experiencing difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.

PROBLEM The screen of the Notebook or PowerBook computer is not displaying your presentation

■ **If you are using a Notebook PC:**

Some Notebook PCs may deactivate their own computers' screen when a second display device is in use. Each of them has a different way to be re-activated. Refer to your computer's documentation for detailed information.

■ **If you are using an Apple PowerBook:**

In "Control Panels", open the PowerBook Display to select "Video Mirroring ON".

PROBLEM Image is unstable or flickering

- Use "Tracking" to correct it.
- Check and reconfigure the display mode of your graphic card to make it compatible with the product.

PROBLEM Image has vertical flickering bar

- Use "Frequency" to make an adjustment
- Check and reconfigure the display mode of your graphic card to make it compatible with the product.

PROBLEM Image is out of focus

- Adjust the Focus Ring on the projector lens.
- Make sure the projection screen is between the required distance 3.7 – 40.7 ft (1.1 – 12.4m) from the projector.

PROBLEM The screen is outstretched when displaying 16:9 DVD

The projector itself will automatically detect 16:9 DVD and adjust the aspect ratio by digitisation to full screen with 4:3 default setting.

If the projector is still outstretched, you will also need to adjust the aspect ratio by referring to the following:

- Please select 4:3 aspect ratio type on your DVD player if you are playing a 16:9 DVD.
- If you can not select 4:3 aspect ratio type on your DVD player, please select 4:3 On-Screen Display (OSD) function of the projector for your display.

PROBLEM Image is reversed

- To open "menu" then select "Management" to adjust the proportion.

PROBLEM Lamp burns out or makes a popping sound

- When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures in [Changing the lamp](#), page 26.



CHANGING THE LAMP

The projector will detect the lamp life itself. It will show you a warning message **"Lamp is running out of standard time. Be sure to replace the lamp as soon as possible."** Make sure that the projector has cooled down for at least 30 minutes before changing the lamp.

■ Lamp Changing Procedure

- 1 Turn off the power to the projector by pressing the "Power / Standby" button.
- 2 Allow the projector to cool down for at least 30 minutes.
- 3 Turn off the main power switch.
- 4 Disconnect the power cord.
- 5 Use screwdriver to remove the screw from the cover.
- 6 Remove the cover.
- 7 Remove the three screws from the lamp module.
- 8 Pull out the lamp module.

To replace the lamp module, reverse these steps.

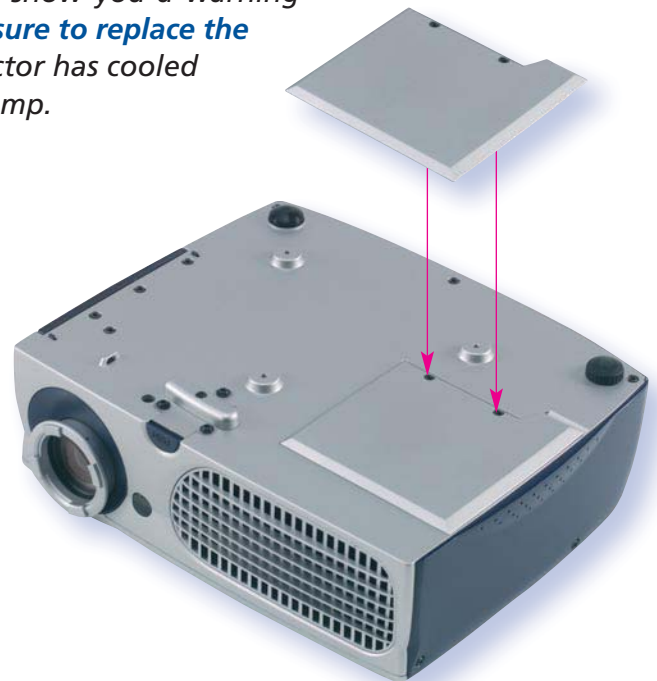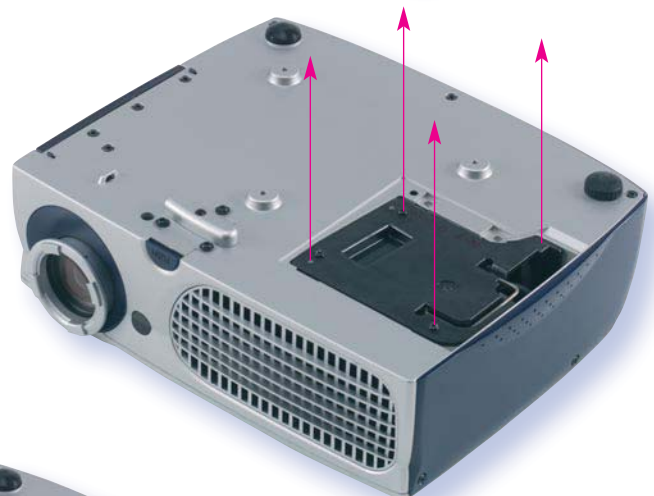

WARNING

Lamp compartment is hot! Allow it to cool down before changing the lamp!!



WARNING

To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if dropped.

SPECIFICATIONS

Light Valve	Single Chip DLP™ Technology
Contrast Ratio	600:1 (Full On / Full Off)
Lamp	200W User Replaceable UHP Lamp
Number of Pixels	1024 pixels (H) x 768 lines (V)
Displayable Colour	16.7M colours
Projection Lens	F/2.44–2.69 f=28.8–34.5mm with 1.2 zoom & focus
Projection Screen Size	22"–305" Diagonal
Projection Distance	3.7–40.7 ft (1.1–12.4m)
Video Compatibility	NTSC / NTSC / 4.43 / PAL / PAL-M / PAL-N / SECAM and HDTV compatible
H. Frequency	15–100kHz horizontal scan
V. Frequency	43–120Hz vertical refresh
Multimedia Audio	Two internal speakers with 3 watts output
Power Supply	Universal AC input 100–240V; Input frequency 50–60Hz
Power Consumption	320 watts at normal operation
Uniformity	90%
I/O Connectors	<p><i>Power:</i> AC power input socket</p> <p><i>Computer Input:</i> 1 x 30-pin DVI for DVI signal 1 x 15-pin D-sub for analog/ component and HDTV signal 1 x RS232 input</p> <p><i>Computer Output:</i> 1 x 15-pin D-sub computer output</p> <p><i>Video Output:</i> 1 x Composite video RCA input 1 x S-Video input</p> <p><i>Audio Input:</i> 1 x Phone jack for audio input</p> <p><i>Audio Output:</i> 1 x Phone jack for audio output</p> <p><i>Mouse Output:</i> 1 x 8-pin connector for remote mouse output (USB & RS232)</p>
Weight	2.9 kg (6.4 lbs)
Dimensions (W x H x D)	277 x 225 x 85mm (10.9 x 8.9 x 3.3 inches)
Environmental	<p><i>Operating Temperature:</i> 0°C–40°C (32°F–104°F)</p> <p><i>Humidity:</i> 80% maximum</p>
Safety Regulations	FCC Class B, BSMI, CE Class B, VCCI-II, UL, CUL, TÜV

COMPATIBILITY MODES

MODE	RESOLUTION	ANALOG		DIGITAL	
		V. Frequency (Hz)	H. Frequency (Hz)	V. Frequency (Hz)	H. Frequency (Hz)
VESA VGA	640 x 350	85	37.9	85	37.9
VESA VGA	640 x 400	85	37.9	85	37.9
VESA VGA	640 x 480	60	31.5	60	31.5
VESA VGA	640 x 480	72	37.9	72	37.9
VESA VGA	640 x 480	75	37.5	75	37.5
VESA VGA	640 x 480	85	43.3	85	43.3
VESA VGA	720 x 400	85	37.9	85	37.9
SVGA	800 x 600	56	35.2	56	35.2
SVGA	800 x 600	60	37.9	60	37.9
SVGA	800 x 600	72	48.1	72	48.1
SVGA	800 x 600	75	46.9	75	46.9
SVGA	800 x 600	85	53.7	85	53.7
VESA XGA	1024 x 768	43	35.5	43	35.5
VESA XGA	1024 x 768	60	48.4	60	48.4
VESA XGA	1024 x 768	70	56.5	70	56.5
VESA XGA	1024 x 768	75	60.0	75	60.0
VESA XGA	1024 x 768	85	68.7	85	68.7
*VESA SXGA	1280 x 1024	60	63.98	60	63.98
*VESA SXGA	1280 x 1024	75	79.98	-	-
Mac LC13"	640 x 480	66.66	34.98	-	-
Mac II 13'	640 x 480	66.68	35	-	-
Mac 16"	832 x 624	74.55	49.725	-	-
Mac 19"	1024 x 768	75	60.24	-	-
*Mac	1152 x 870	75.06	68.68	-	-
Mac G4	640 x 480	60	31.35	-	-
Mac G4	640 x 480	120	68.03	-	-
Mac G4	1024 x 768	12	97.09	-	-
i-Mac DV	640 x 480	117	60	-	-
i-Mac DV	800 x 600	95	60	-	-
i-Mac DV	1024 x 768	75	60	-	-
*i-Mac DV	1152 x 870	75	68.94	-	-
*i-Mac DV	1280 x 960	75	75	-	-

Remark!
 "*" compression
 computer image