

myprojectorlamps.com

**The most trusted, dependable name
in projector lamp sales.**



<http://www.myprojectorlamps.com>



<http://www.myprojectorlamps.ca>



<http://www.myprojectorlamps.eu>


The following projector manual has not been modified or altered in any way.

EPSON®

M M PROJECTOR
ULTI EDIA

User's Guide

EMP-52

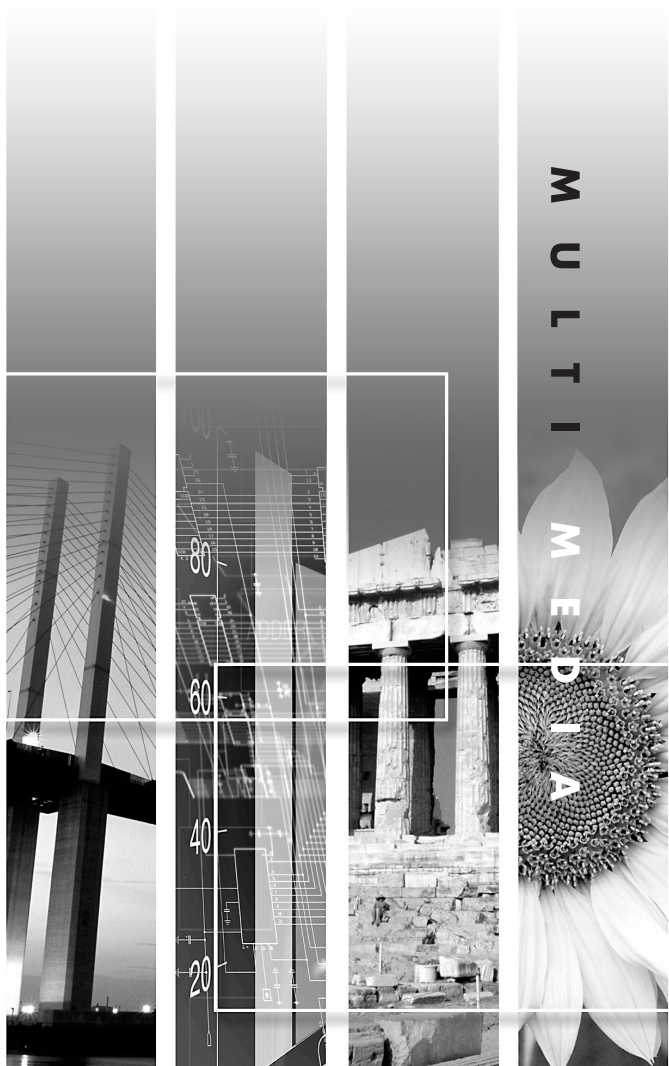

M
U
L
T
I
M
E
D
I
A

Notations Used in This User's Guide


Caution :	Indicates procedures which may result in damage or injury if sufficient care is not taken.
Tip :	Indicates additional information and points which may be useful to know regarding a topic.
»	Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. Refer to the "Glossary" in the "Appendices". (p.81)
Procedure	Indicates operating methods and the order of operations. The procedure indicated should be carried out in the order of the numbers.

When "unit" or "projector" appears in the text of this *User's Guide*, it may refer to items which are accessories or optional equipment in addition to the main projector unit itself.



Unpacking the Projector


When you unpack the projector, make sure that you have all these components. If any of the components are missing or incorrect, please contact the place of purchase.

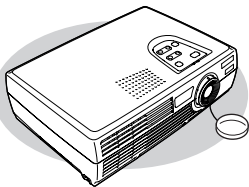


Projector
(with lens cover)



Remote control
(including a CR2025 lithium battery)

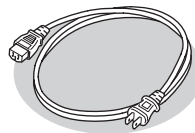

Power cable
(3 m (9.8 ft.))
For connecting the projector to a wall outlet

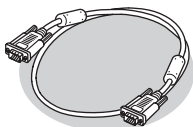


Computer cable
(mini D-Sub 15-pin/mini D-Sub 15-pin 1.8 m (6 ft.))
For connecting the projector to a computer



Soft carrying case
(with shoulder strap and handle)
For carrying the projector

Documentation

- Read this first
- Safety Instructions/
World-Wide Warranty Terms
- Document CD-ROM
- Quick Reference Guide

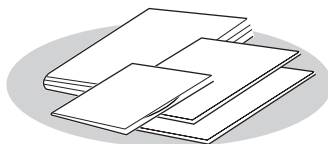

Features of the Projector


Automatic setup function

When projecting computer images, the signals from the connected computer are detected automatically and adjusted so that the optimum images are projected. Even if several people are giving presentations using the same projector, the optimum picture quality can be obtained simply by disconnecting and reconnecting the computers. Each individual setting can also be adjusted manually. (p.37)

Keystone correction function

Keystone distortion in projected images can be corrected easily.

This makes images appear correctly even when the projector has been set up on a tilted vertical angle. (p.35)

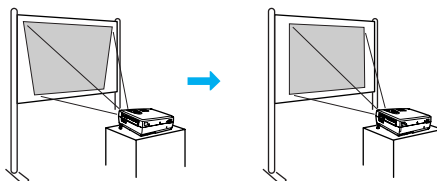

Brilliant, attractive images

Despite its compact size, the projector can display images at high resolutions with a high degree of luminance, providing beautifully clear images even in bright environments.

Easy to Operate

The accessory remote control can be used for operations such as pausing projection (see "Freeze" on p.43) and zooming in on important areas of an image (see "E-Zoom" on p.45).

Colour mode function

The optimum images can be projected simply by selecting the image quality from the following six preset settings according to the projection environment being used.

No other troublesome colour adjustments are necessary. (p.47, 49)

- sRGB▶
- Normal
- Meeting
- Presentation
- Theatre
- Game

Features of the Projector



Contents

Unpacking the Projector.....	1
Features of the Projector.....	2

Before Using the Projector

Part Names and Functions	8
Front/Top.....	8
Left Side.....	9
Control Panel.....	10
Rear	11
Base.....	11
Remote Control.....	12
Before Using the Remote Control	13
Using the Remote Control and Remote Operating Range	13
Installation.....	15
Setting Up the Projector.....	15
Screen Size and Projection Distance.....	16
Connecting to a Computer	17
Eligible Computers	17
Projecting Images from the Computer	18
Playing Sound from the Computer	18
Connecting to an External Monitor.....	20
Connecting to a Video Source	21
Projecting Composite Video Images.....	21
Projecting S-Video Images.....	22
Projecting Component Video Images	22
Projecting RGB Video Images	23
Playing Sound from the Video Equipment	24

Basic Operations

Turning On the Projector	28
Connecting the Power Cable.....	28
Turning On the Power and Projecting Images	29
Turning Off the Projector	31
Adjusting the Screen Image.....	33
Adjusting the Image Size	33
Adjusting the Image Angle	34
Correcting Keystone Distortion	35



Adjusting the Image Quality	37
Focusing the Screen Image	37
Adjusting Computer Images	37
Selecting the Colour Mode	40
Advanced Operations	
<hr/>	
Functions for Enhancing Projection	42
A/V Mute	42
Freeze.....	43
Wide-screen Projection of Component Video and Video Images (Changing the Aspect Ratio)	44
E-Zoom	45
Using the Configuration Menu Functions	46
List of Functions	46
Using the Configuration Menus.....	56
Troubleshooting	
<hr/>	
Using the Help	60
When Having Some Trouble.....	61
Power Indicator.....	61
🔊 (Warning) Indicator	62
When the Indicators Provide No Help	64
Appendices	
<hr/>	
Maintenance	72
Cleaning	72
Replacing Consumables.....	74
Optional Accessories	80
Glossary.....	81
List of ESC/VP21 Commands.....	84
Command List.....	84
Communication Protocol	84
Cable Layouts	85
List of Supported Monitor Displays	86
Specifications	88
Appearance.....	90
Index	91

Before Using
the Projector

Basic Operations

Advanced Operations

Troubleshooting

Appendices








Before Using the Projector

This chapter describes the procedures for setting up the projector before use.

Part Names and Functions	8
• Front/Top	8
• Left Side	9
• Control Panel.....	10
• Rear	11
• Base	11
• Remote Control	12
Before Using the Remote Control	13
• Using the Remote Control and Remote Operating Range	13
Installation	15
• Setting Up the Projector	15
• Screen Size and Projection Distance	16
Connecting to a Computer	17
• Eligible Computers	17
• Projecting Images from the Computer	18
• Playing Sound from the Computer	18
• Connecting to an External Monitor	20
Connecting to a Video Source	21
• Projecting Composite Video Images	21
• Projecting S-Video Images	22
• Projecting Component Video Images.....	22
• Projecting RGB Video Images.....	23
• Playing Sound from the Video Equipment	24


Part Names and Functions

Front/Top

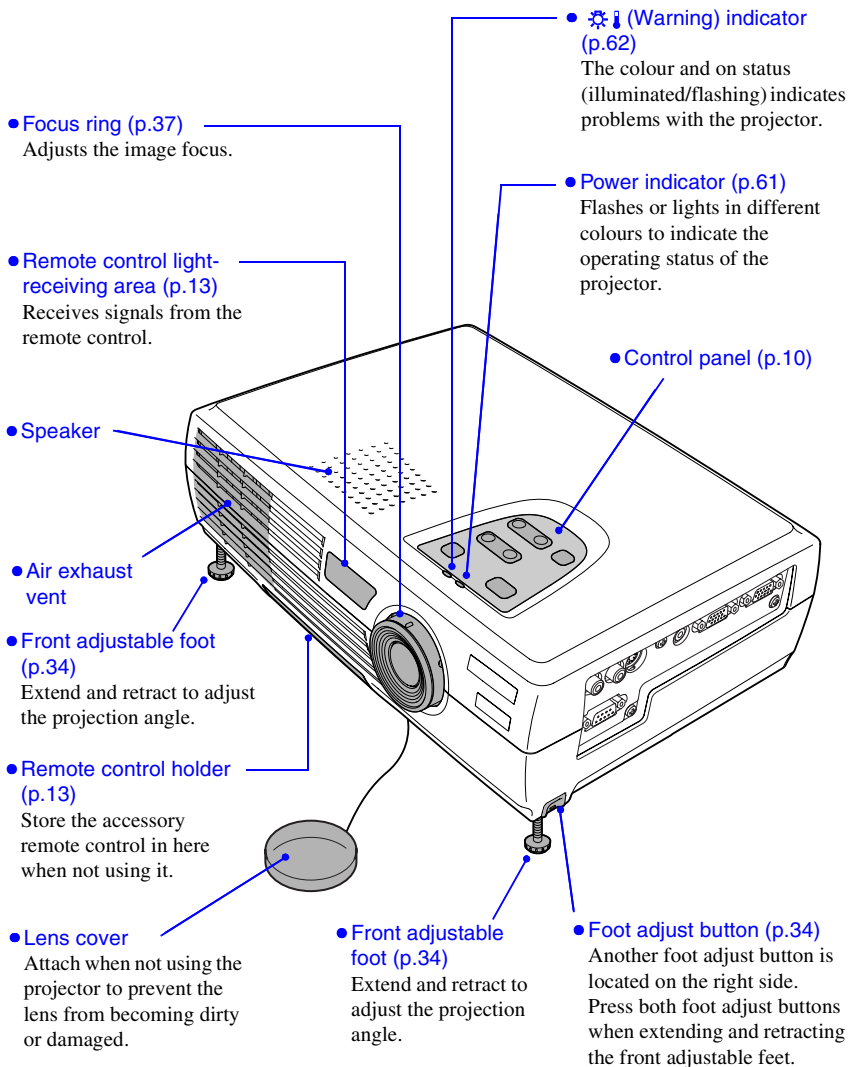

Left Side

- **S-Video port (p.22)**
Inputs S-Video signals to the projector from other video sources.
- **Video port (p.21)**
Inputs composite video signals to the projector from other video sources.
Use the RCA video cable for this connection.
- **Audio port (p.24)**
Inputs audio signals from a video source.
Connect using an RCA audio cable.
- **Audio port (p.18)**
Inputs audio signals from a computer or component video equipment.
Connect using a stereo mini jack.
- **Computer/Component Video port (p.18, 22, 23)**
Inputs analogue video signals from a computer and component video signals from other video sources.
The connection surface is coloured blue.
- **Control (RS-232C) port (p.85)**
Connects the projector to a computer using an RS-232C cable. This port is for service use and should not be used by the customer.
- **Monitor Out port (p.20)**
Outputs the projected analogue video signal from a computer to an external monitor. This feature is not available for video equipment signals.
The connection surface is coloured black.

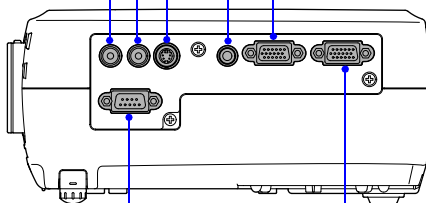


Control Panel

- **[Power] button (p.29, 31)**

Turns the projector power on and off.

- **[Help] button (p.60)**

Displays the online help menu to assist you if you have a problem.

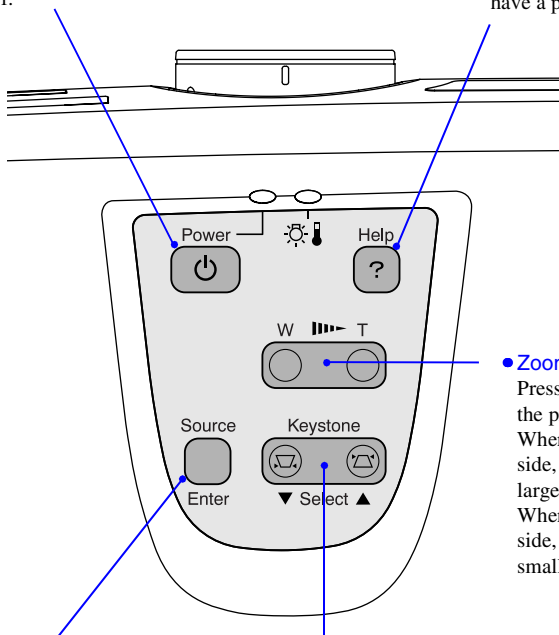

- **[Source] button (p.30)**

Switches the input source between the Computer/Component Video port, S-Video port and Video port each time the button is pressed.

When pressed while a help menu is being displayed, it accepts the menu item that is currently selected. (p.60)

- **[Zoom] button (p.33)**

Press to adjust the size of the projected images.

When pressed to the "W" side, the images become larger.

When pressed to the "T" side, the images become smaller.


- **[Keystone] button (p.35)**

Press to correct keystone distortion in images.

When pressed while a help menu is being displayed, it selects items in the menu. (p.60)


Rear

- Remote control light-receiving area (p.13)
Receives signals from the remote control.
- Power inlet (p.28)
Connects the power cable.
- Security lock (A) (p.82)

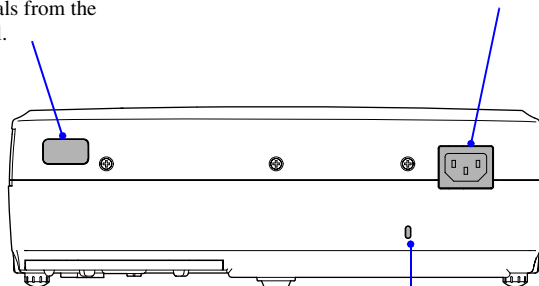

Base


- Suspension bracket fixing points (3 points) (p.15, 80)
Install the optional ceiling mount here when suspending the projector from the ceiling.

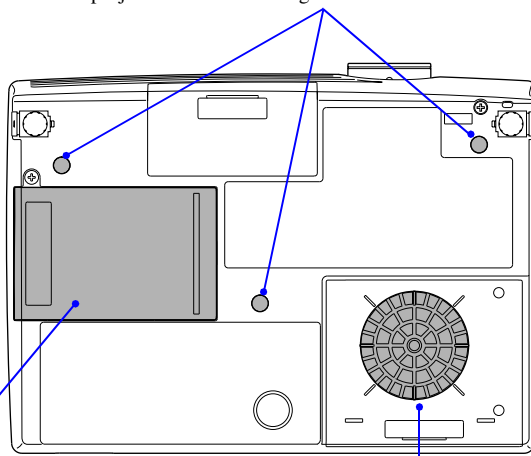

- Lamp cover (p.76)
Open this cover when replacing the lamp inside the projector.
- Air filter (air intake vent) (p.73, 79)
Prevents dust and other foreign particles from being drawn into the projector. When replacing the lamp, replace the air filter also.




Remote Control

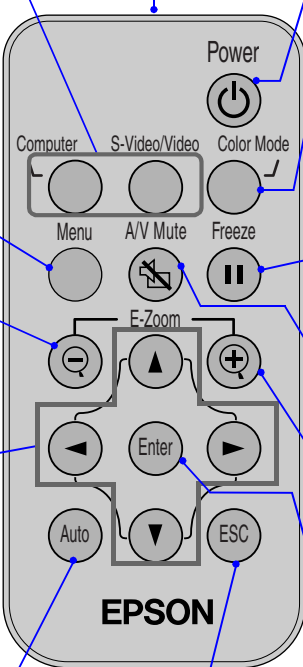- 
- The diagram shows a grey remote control with various buttons. Blue lines connect text descriptions to specific buttons on the device. The buttons are arranged in a grid-like fashion. At the top right is a power button. Below it are three buttons labeled 'Computer', 'S-Video/Video', and 'Color Mode'. The next row contains 'Menu', 'A/V Mute', and 'Freeze'. Below these are 'E-Zoom' buttons with minus and plus signs. The next row has left and right arrow buttons, an 'Enter' button, and another right arrow button. The bottom row contains 'Auto', a down arrow button, and an 'ESC' button. The 'EPSON' logo is at the bottom center.
- **Input select buttons (p.30)**
 [Computer]: Switches the signal source to the images being input from the Computer/Component Video port.
 [S-Video/Video]: Switches the signal source being input from the S-Video port and the Video port.
 - **Remote control light-emitting area (p.14)**
 Outputs remote control signals.
 - **[Power] button (p.29, 31)**
 Turns the projector power on and off.
 - **[Color Mode] button (p.40)**
 Selects the colour mode. The color mode changes in the order of Normal, Meeting, Presentation, Theatre, Game and sRGB▶▶ each time the button is pressed.
 - **[Menu] button (p.56)**
 Displays or hides the configuration menus.
 - **[E-Zoom] button (⊖) (p.45)**
 Reduces the part of images that have been enlarged using the [⊕] button.
 - **[Freeze] button (p.43)**
 Keeps the current computer or video image on the screen.
 - **[A/V Mute] button (p.42)**
 Momentarily turns off the audio and video.
 - **[E-Zoom] button (⊕) (p.45)**
 Enlarges the part of images without changing the size of the projection area.
 - **[Enter] button (p.56, 60)**
 Accepts a menu item or displays the next screen or menu while viewing a configuration menu or help menu.
 - **[Auto] button (p.37)**
 Use this button to automatically adjust computer images to the optimum images when automatic setup has been set to "OFF".
 - **[ESC] button (p.57)**
 Stops the current function. Displays the previous screen or menu while viewing a configuration menu.
 - **[▲][▼][◀][▶] buttons (p.56, 60)**
 When a configuration menu or help menu is displayed, these buttons select menu items and setting values. When using the E-Zoom function, these buttons move the cross around the screen and scroll the image.

Before Using the Remote Control

Using the Remote Control and Remote Operating Range

When using the remote control for the first time, pull out the insulating tape that is protruding from the battery holder. When the insulating tape is pulled out, the remote control can then be used.

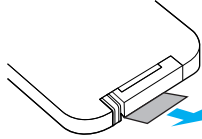


Using the Remote Control

The remote control is used in the following way.

Procedure


Point the remote control light-emitting area toward one of the remote control light-receiving areas on the projector and operate the remote control buttons.

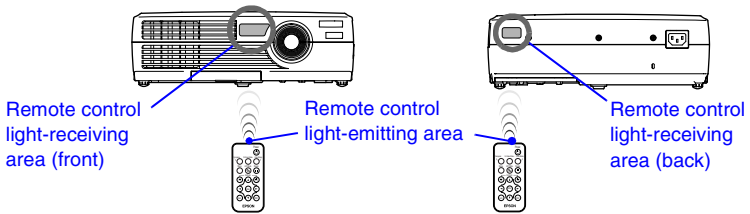

Tip :

- Do not allow sunlight or light from fluorescent lamps to shine directly onto the projector's remote control light-receiving areas, otherwise it may interfere with the reception of signals from the remote control.
- When not using the remote control, place it into the remote control holder underneath the projector so that it does not get lost.

Hook your fingers into the handle in the base of the remote control holder and pull straight out.

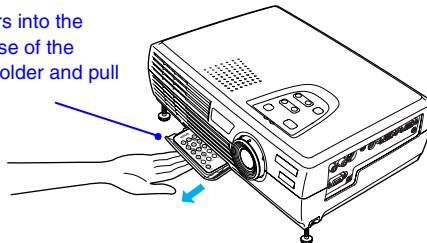


Remote Operating Range


Use the remote control within the ranges indicated below. If the distance or angle between the remote control and the remote control light-receiving area is outside the normal operating range, the remote control may not work.

Operating distance	Operating angle
Approx. 6 m (20 ft.)	Approx. $\pm 30^\circ$ horizontally Approx. $\pm 15^\circ$ vertically


Approx. $\pm 30^\circ$ horizontally

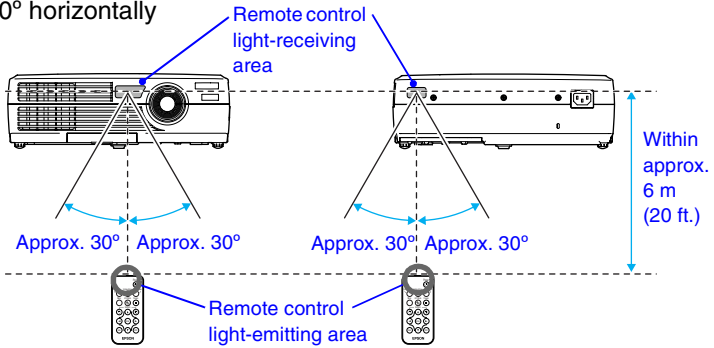

Approx. $\pm 15^\circ$ vertically

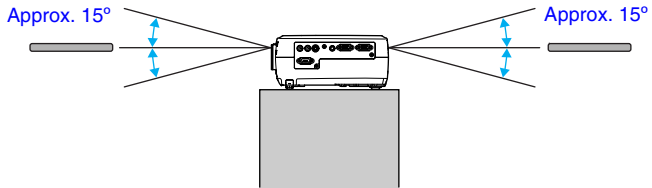

When suspended from the ceiling

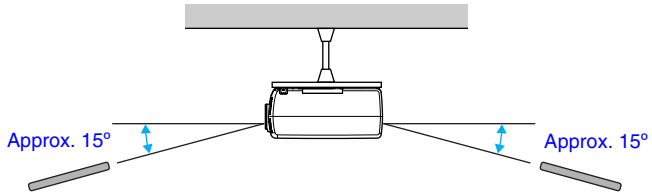

Installation


Setting Up the Projector

The projector supports the following two different projection methods, allowing you to choose the best method for displaying your images.


Caution :

Before setting up the projector, be sure to first read the separate Safety Instructions/ World-Wide Warranty Terms.


- Front projection

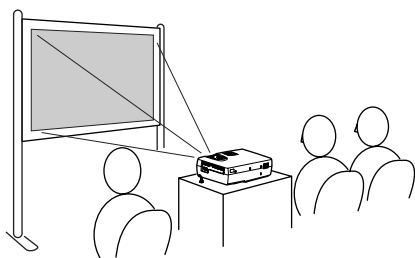


- Rear projection using a translucent screen

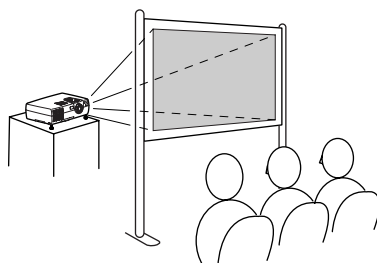

- Front/ceiling projection

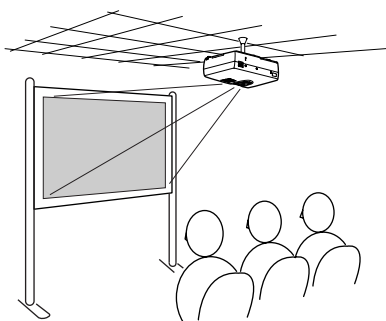

- Rear projection using a translucent screen

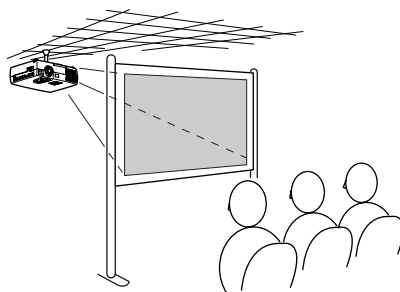

* A special method of installation is required in order to suspend the projector from the ceiling. Please contact the place of purchase if you would like to use this installation method. The optional ceiling mount is required when installing the projector to the ceiling. (p.80)

Tip :

When using rear/ceiling projection using a translucent screen, set the "Ceiling" or "Rear Proj." command in the "Advanced" menu to match the installation method. (p.53)

Screen Size and Projection Distance


The distance between the projector and the screen determines the actual image size.

Recommended distance	0.9–11.3 m (2.9–37.0 ft.)
----------------------	---------------------------

While referring to the table below, position the projector so that the image size is smaller than the screen size.

The values should be used as a guide for setting up the projector. The actual values will vary depending on projection conditions and the zoom setting.

4:3 Screen size (cm (in.))	Projection distance Ⓐ (m (ft.))	Distance from centre of lens to bottom edge of screen Ⓑ (cm (in.))
30" (61 × 46 (24.0 × 18.1))	0.9–1.1 (2.9–3.6)	4.3 (1.7)
40" (81 × 61 (31.9 × 24.0))	1.2–1.5 (3.9–4.8)	5.8 (2.3)
60" (120 × 90 (47.2 × 35.4))	1.8–2.2 (5.9–7.3)	8.6 (3.4)
80" (160 × 120 (63.0 × 47.2))	2.4–3.0 (7.9–9.8)	11.5 (4.5)
100" (200 × 150 (78.7 × 59.1))	3.0–3.7 (9.9–12.3)	14.4 (5.7)
200" (410 × 300 (161.4 × 118.1))	6.1–7.5 (19.9–24.6)	28.8 (11.3)
300" (610 × 460 (240.2 × 181.1))	9.1–11.3 (29.8–37.0)	43.1 (17.0)

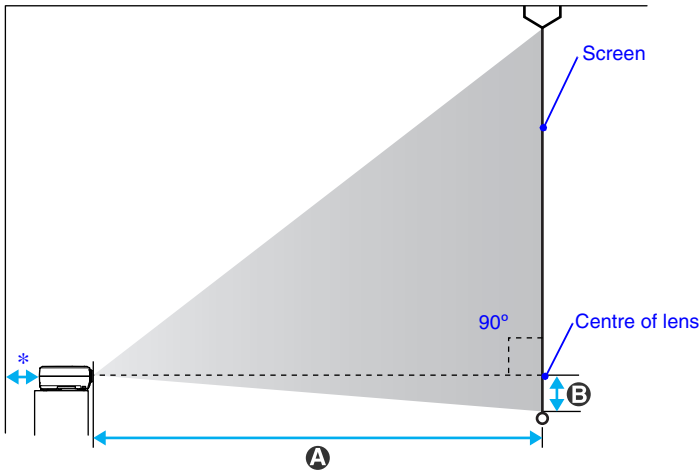

* When installing against a wall, leave a space of about 20 cm (7.9 in.) between the projector and the wall.

Tip :

The image size will be reduced when keystone correction is carried out.



Connecting to a Computer

Caution :

When connecting the projector to a computer, be sure to check the following.

- *Turn off the power for both the projector and the computer before connecting them. If the power for either device is on at the time of connection, damage may result.*
- *Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, damage to the connector or port may result.*

Eligible Computers

The projector cannot be connected to some types of computer, or projection of images may not be possible even if actual connection is possible. Make sure that the computer you intend to use satisfies the conditions given below.

- **Condition 1:** The computer must have an image signal output port. Check that the computer has a port such as an "RGB port", "monitor port" or "CRT port" which can output image signals. If the computer has a built-in monitor, or if using a laptop computer, it may not be possible to connect the computer to the projector, or alternatively you may need to purchase a separate external output port. Refer to the documentation for your computer under a heading such as "Connecting an external monitor" or similar for further details.
- **Condition 2:** The display resolution and frequency of the computer must be listed in the "List of Supported Monitor Displays". See "Appendices: List of Supported Monitor Displays" (p.86). Some computers allow you to change the output resolution, so if necessary, change the resolution to one that matches a setting in the "List of Supported Monitor Displays", while referring to the documentation provided with the computer.


Tip :

- *You may need to purchase a separate adapter depending on the shape of the computer's port. Refer to the documentation provided with the computer for further details.*
- *If the computer and projector are too far away from each other for the accessory computer cable to reach, use the optional VGA-HD15 PC cable. See "Appendices: Optional Accessories" (p.80)*



Projecting Images from the Computer

Use the accessory computer cable to connect the Computer/Component Video port on the left side of the projector to the monitor port of the computer.

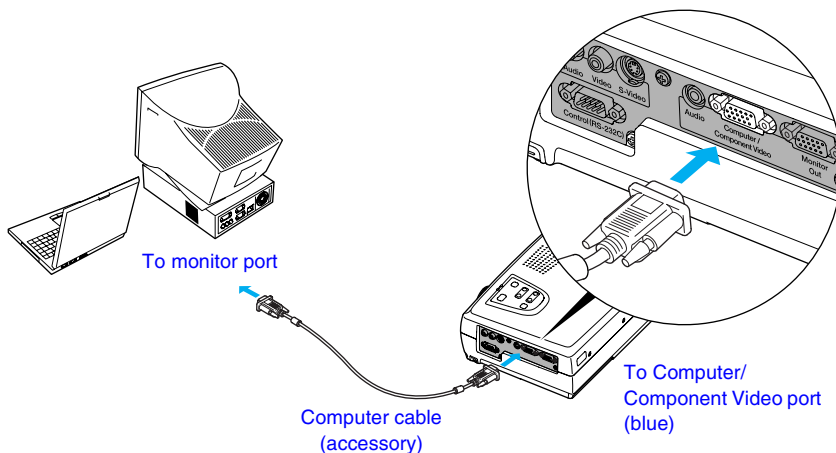


Tip :

- Change the "Input Signal" setting in the "Video" menu to "RGB" after making the connections. (p.47)
- If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [Computer] button on the remote control to select the Computer port as the input source. (p.30)
- Do not bind the power cable and the computer cable together, otherwise image interference or errors in operation may result.

Playing Sound from the Computer

The projector has a single built-in speaker with a maximum output of 1 W. If the computer that is connected to the projector has an audio output port, you can output sound from the computer through the projector's speaker by connecting the computer's audio output port and the Audio (stereo mini jack) on the left side of the projector using a stereo mini jack audio cable (commercially-available). It is recommended that you use an audio cable with a 3.5 mm diameter stereo mini jack.

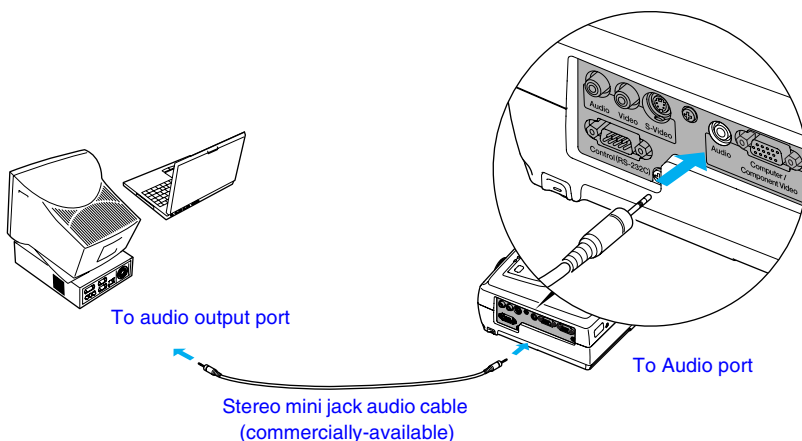


Use the following procedure to adjust the volume of the sound output.

Procedure


- 1 Press the [Menu] button on the remote control, and then select "Volume" from the "Audio" menu.**

For details on this operation, refer to "Using the Configuration Menus". (p.56)

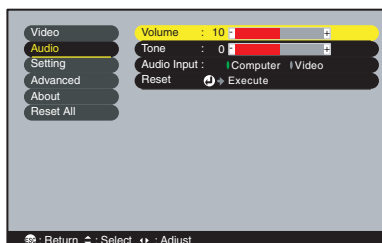

- 2 Use the [◀] and [▶] buttons to adjust the volume.**


The volume is increased or reduced each time a button is pressed.

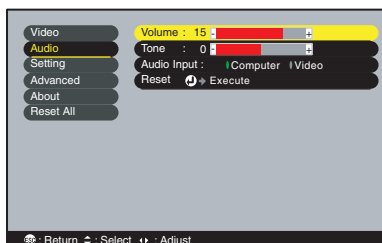

- 3 After making the adjustment, press the [Menu] button to exit the configuration menu.**

Connecting to an External Monitor

Images can be viewed on an external computer monitor at the same time they are being projected by the projector. Use the cable provided with the computer monitor to connect the monitor to the Monitor Out port at the left side of the projector.

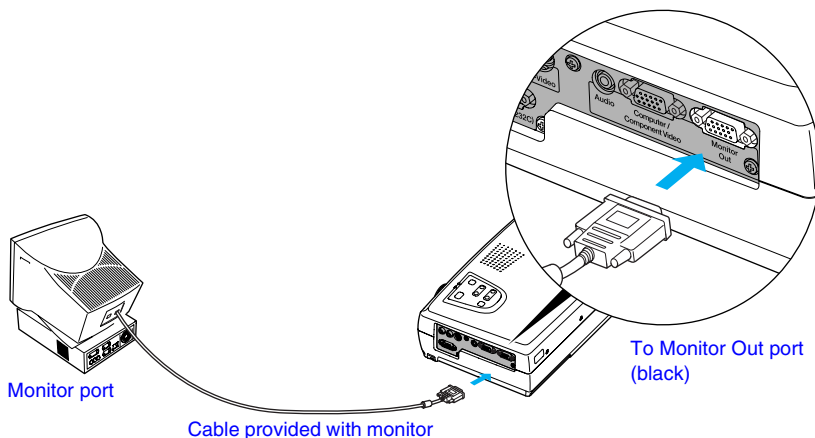

Tip :

- Video images cannot be output to an external monitor.
- The setting gauge for keystone correction and the configuration menus and help menus are not output to the external monitor.

Connecting to a Video Source


Caution :

When connecting the projector to other video sources, take the following precautions.

- Turn off the power for both the projector and the video source before connecting them. If the power for either device is on at the time of connection, damage may result.
- Check the shapes of the cable connectors and the device ports before making the connections. If you try to force a connector to fit a device port with a different shape or number of terminals, a malfunction or damage to the connector or port may result.

Projecting Composite Video Images

Use a RCA video cable (commercially-available) to connect the video source to the Video port on the left side of the projector.

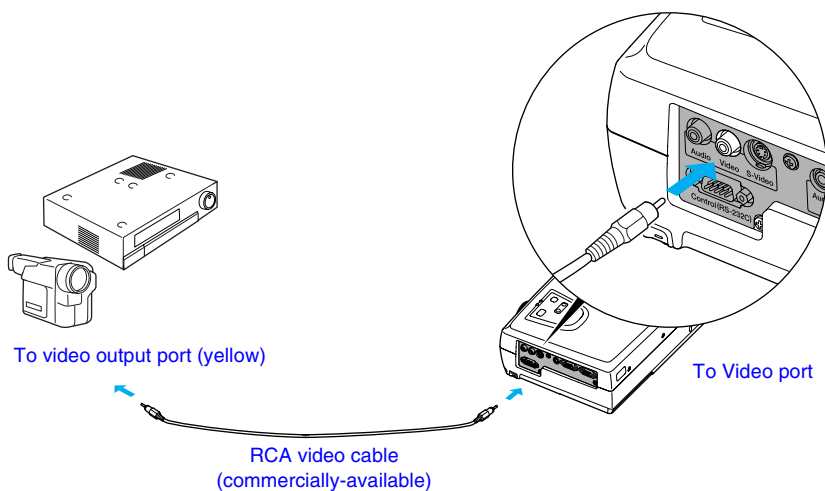


Tip :

If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [S-Video/Video] button on the remote control to select the Video port as the input source. (p.30)

Projecting S-Video Images

Use an S-Video cable (commercially-available) to connect the video source to the S-Video port on the left side of the projector.

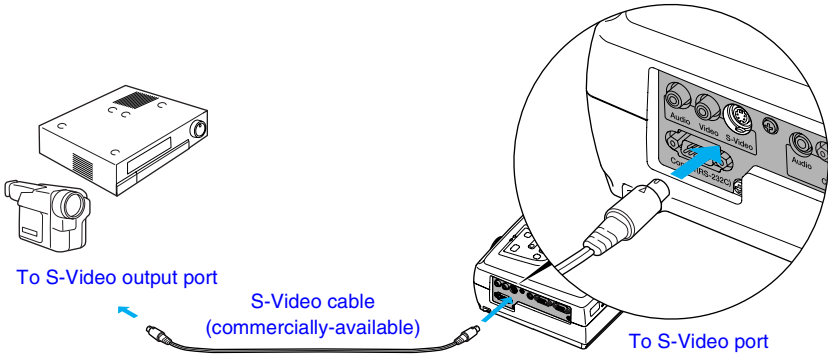


Tip :

If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [S-Video/Video] button on the remote control to select the S-Video port as the input source. (p.30)

Projecting Component Video Images

Use the optional component video cable to connect the video source to the Computer/Component Video port on the left side of the projector. See "Appendices: Optional Accessories" (p.80)

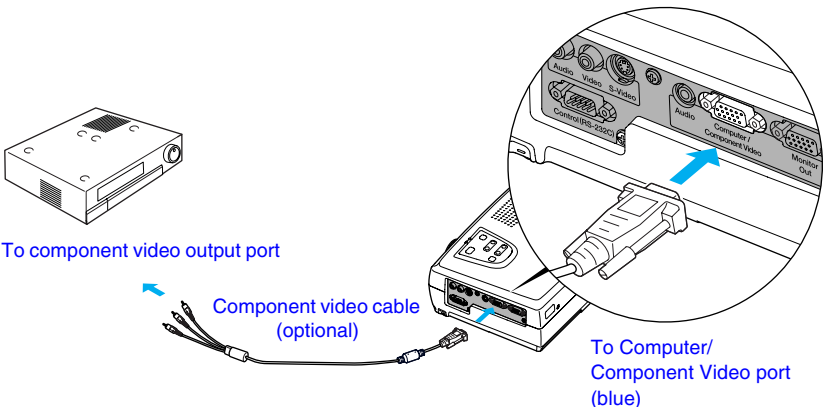


Tip :

- Change the "Input Signal" setting in the "Video" menu to "YCbCr" or "YPbPr" after making the connections. (p.49)
- If more than one external component is connected to the projector, use the [Source] button on the projector's control panel or the [Computer] button on the remote control to set the input source to "YCbCr " or "YPbPr ", depending on the type of signal being input. (p.30)

Projecting RGB Video Images

RGB video is used when RGB signals that have copy protection added are input and projected. Use the accessory computer cable to connect the video source to the Computer/Component Video port on the left side of the projector.

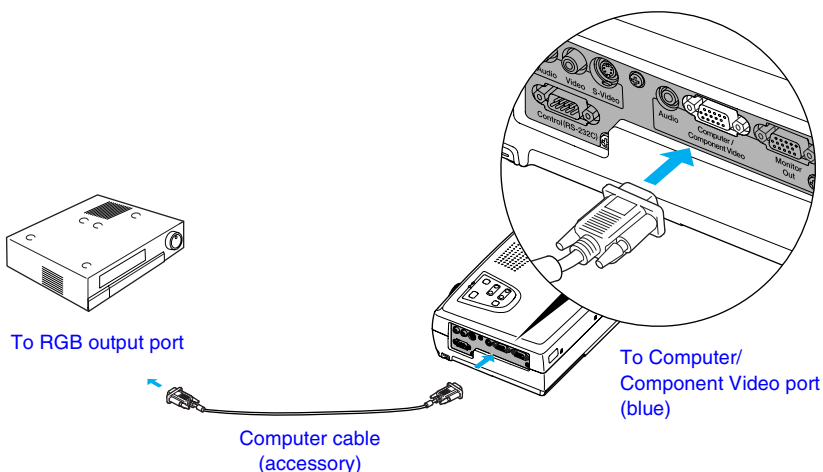


Tip :

- Change the "Input Signal" setting in the "Video" menu to "RGB" after making the connections. (p.47)
- For a RGB connection, a commercially available adapter or converter cable might be required.

Playing Sound from the Video Equipment

The projector has a single built-in speaker with a maximum output of 1 W. You can output sound from the video equipment through the projector's built-in speaker by connecting the video equipment's audio output port and the Audio port (RCA monaural jack) on the left side of the projector using an RCA audio cable (commercially-available).

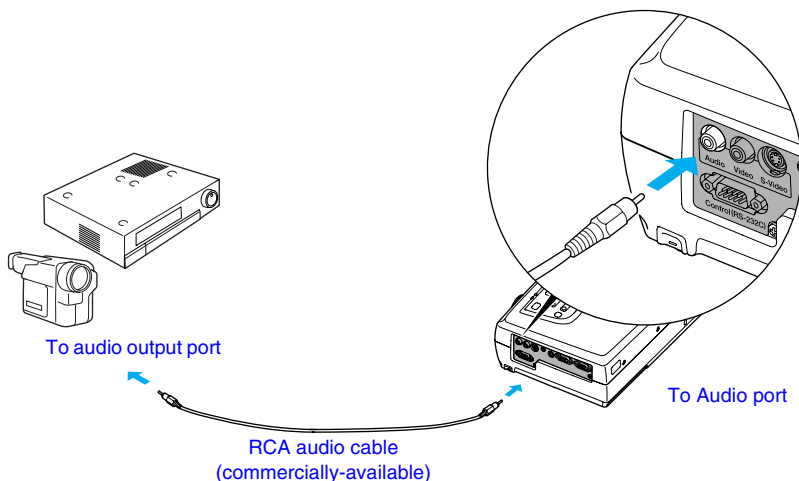


Use the following procedure to adjust the volume of the sound output.

Procedure


- 1 Press the [Menu] button on the remote control, and then select "Volume" from the "Audio" menu.**

For details on this operation, refer to "Using the Configuration Menus". (p.56)

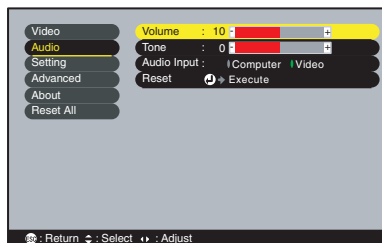

2 Use the [◀] and [▶] buttons to adjust the volume.

The volume is increased or reduced each time a button is pressed.

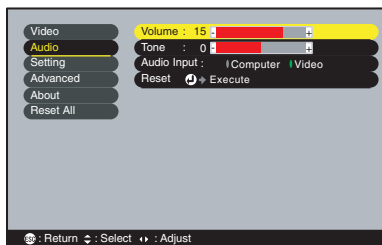

3 After making the adjustment, press the [Menu] button to exit the configuration menu.





Basic Operations

This chapter describes basic operations such as turning projection on and off and adjusting the projected images.

Turning On the Projector	28
• Connecting the Power Cable.....	28
• Turning On the Power and Projecting Images.....	29
Turning Off the Projector	31
Adjusting the Screen Image	33
• Adjusting the Image Size.....	33
• Adjusting the Image Angle.....	34
• Correcting Keystone Distortion.....	35
Adjusting the Image Quality	37
• Focusing the Screen Image.....	37
• Adjusting Computer Images.....	37
• Automatic Setup.....	37
• Adjusting the Tracking.....	38
• Adjusting the Sync.....	39
• Selecting the Colour Mode.....	40

Turning On the Projector

Turn on the power to start projecting images.

Caution :

Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before projecting images.


Connecting the Power Cable

Procedure

- 1** Check that the power is turned off for the projector and all components connected to the projector.
- 2** Connect the computer or other video source to the projector.
(p.17, 21)
- 3** Remove the lens cover.


- 4** Connect the accessory power cable to the projector.

Check that the power cable connector is facing the same way as the power inlet on the projector, and then insert the power cable connector securely into the projector.

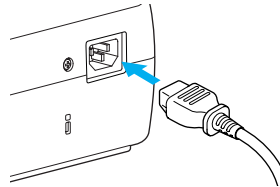

- 5** Connect the other end of the power cable to an earthed electrical outlet.

Wait until the Power indicator lights orange.

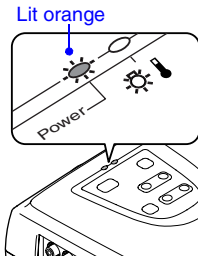

Tip :


The projector's control panel and remote control buttons cannot be operated while the Power indicator is flashing orange.



Turning On the Power and Projecting Images

Procedure

- 1 Check that the Power indicator has stopped flashing and is lit orange.

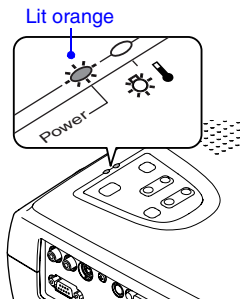

- 2 Turn on the power for all equipment connected to the projector.


For a video source, press the [Play] button at the video source to start playback if necessary.

- 3 Press the [Power] button on either the projector's control panel or the remote control to turn on the power for the projector.

The Power indicator flashes green, and after a short period it stops flashing and projection starts.

Wait until the Power indicator lights green (it normally takes about 40 seconds to change).

Changes from flashing to lit green

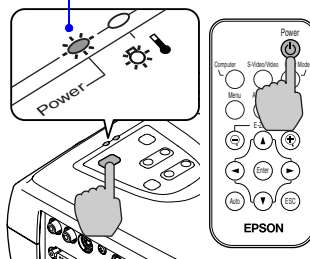


Remote control

Tip :

The projector's control panel and remote control buttons cannot be operated while the Power indicator is flashing green.

Depending on the settings, the message "No-Signal." may appear. See "Setting" - "No-Signal Msg." (p.51)

4 If more than one signal source has been connected, use the projector's control panel or the remote control buttons to select the port which the signal source that you would like to use is connected to, while referring to the following table.

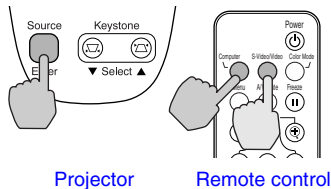

Port	Button to press		Display at top-right of screen
	Projector	Remote control	
Computer/ Component Video	The image source changes each time [Source] is pressed.	[Computer]	Computer * YCbCr▶▶ * YPbPr▶▶ *
S-Video		[S-Video/Video]	S-Video
Video			Video

* The items selected using the "Input Signal" command in the "Video" menu will appear.

Tip :

- If only one signal source has been connected, the signals from that source will be projected without needing to press one of the buttons from the previous table.
- If the "No-Signal." message does not disappear, check the connections again.
- If a laptop computer or a computer with an LCD screen has been connected to the projector, the images may not be projected straight away. After making the connections, check that the computer has been set up to output signals externally. The following table shows examples of how to toggle output settings. For details, refer to the section of the documentation provided with your computer under a heading such as "External output", "Connecting an external monitor" or similar.

NEC	Panasonic	Toshiba	IBM	Sony	Fujitsu	Macintosh
[Fn]+[F3]	[Fn]+[F3]	[Fn]+[F5]	[Fn]+[F7]	[Fn]+[F7]	[Fn]+[F10]	After startup, change the Control Panel adjustments so that Mirroring is active

- If the same still picture is projected for a long period of time, the projected image may become burned in on the computer screen. You should avoid leaving the same image displayed for long periods.



Turning Off the Projector

Follow the procedure below to turn off the power for the projector.


 
Procedure

1 Turn off the power for the signal sources that are connected to the projector.

Check that the power for all connected components has been turned off.

2 Press the [Power] button on either the projector's control panel or the remote control.

The following confirmation message will appear.

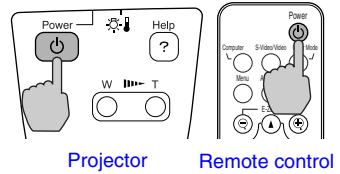

If you do not want to turn off the power, press any button except the [Power] button.

If you do not press any button, the message will disappear automatically after seven seconds. (The power will not turn off at this time.)


3 Press the [Power] button once more.

The lamp will switch off. The Power indicator will flash orange and cool-down will start.

The cool-down period lasts for about 20 seconds.

(This varies depending on factors such as the ambient air temperature.)

Stops flashing and lights orange

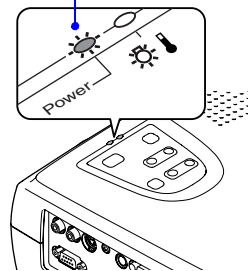

Tip :

The projector's control panel and remote control buttons cannot be operated while the Power indicator is flashing orange. Wait until it lights steadily.

4 Check that the cool-down is complete.

When cool-down is complete, the Power indicator lights orange.


5 Unplug the power cable from the electrical outlet.

Caution :

Do not disconnect the power cable from the outlet while the Power indicator is still flashing orange, otherwise it may result in errors in projector operation and reduce the lamp unit operating life.


6 Retract the front adjustable feet if they are extended.

Gently push down on the projector while simultaneously pressing the two foot adjust buttons.

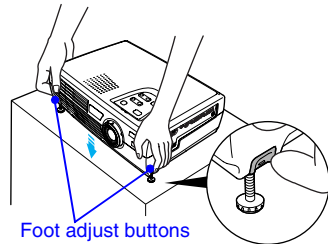

7 Attach the lens cover.

Attach the lens cover to the lens when not using the projector, in order to stop the lens from getting dusty or dirty.

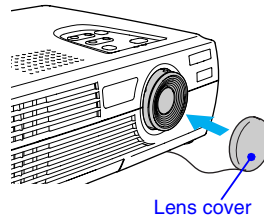

Adjusting the Screen Image

You can correct and adjust the screen image in order to obtain the best possible picture.

Adjusting the Image Size

The size of the projected image is basically determined by the distance from the projector to the screen. (p.16)

If further minor adjustment is required, press the [Zoom] button on the projector's control panel to make the adjustment. Minor adjustments can be made to the image size to between a zoom ratio of approximately 1.0 to 1.2 in 33 steps.



Tip :

The E-Zoom function lets you enlarge parts of the image. (p.45)

Procedure



Press the [Zoom] button on the projector's control panel.

When pressed to the [W] side, the images become larger.

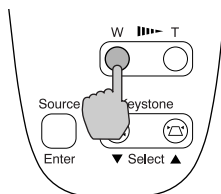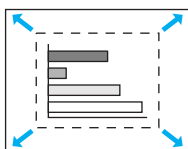

Projector

When pressed to the [T] side, the images become smaller.

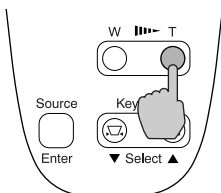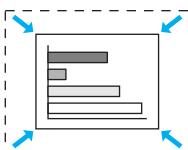


Projector


Adjusting the Image Angle

The projector should be set up so that it is as perpendicular to the screen as possible.

Seen from the side

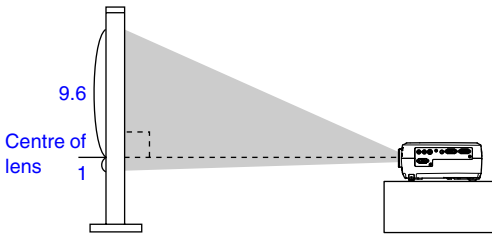

Seen from above

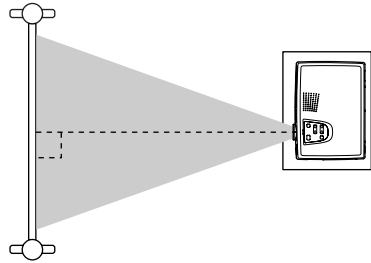

If it is not possible to set up the projector so that it is perpendicular to the screen, it can be set up at a slight vertical angle instead. You can extend or retract the front adjustable feet to adjust the projection angle within a maximum range of 10°.

Procedure


While pressing the two foot adjust buttons at either side, lift up the front of the projector so that the front adjustable feet can extend.

Extend the front adjustable feet until the desired angle is obtained, and then release the foot adjust buttons.

To retract the front adjustable feet, gently push down on the projector while pressing the two foot adjust buttons.


Tip :

- *When the foot is adjusted, it may cause the projected images to become distorted. Use the keystone correction function to adjust this distortion. (p.35)*

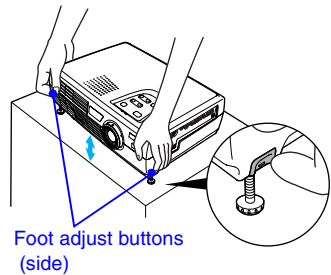

Adjusting the Screen Image


- If the projector is tilted horizontally, turn the bases of the front adjustable feet to adjust the angle.

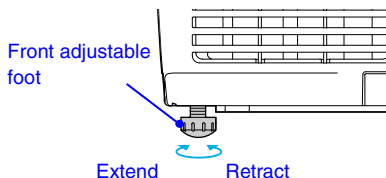


Correcting Keystone Distortion

When the projector is tilted, it will cause keystone distortion to appear in the image, but this distortion can be corrected using the keystone correction function as long as the vertical angle of tilt is within a range of approximately 15°.

Approx. 15° above

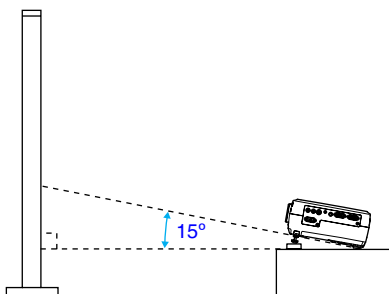


Approx. 15° below

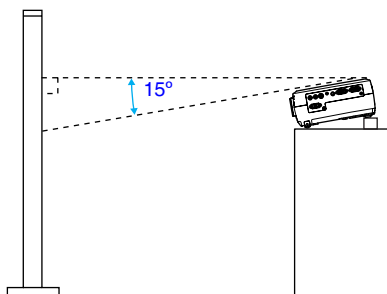

Procedure

Keystone correction can be carried out using either the projector's control panel or the configuration menu. The following explanation describes how to correct keystone distortion using the projector's control panel.

For adjustment using the configuration menu: "Setting" - "Keystone" (p.51)

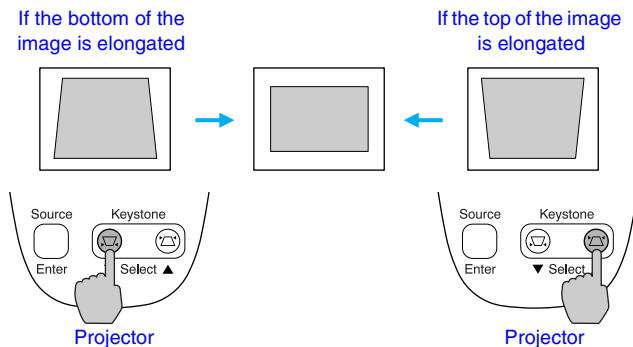

Tip :

- When keystone correction is carried out, the projected image will become smaller.
- The keystone correction settings are memorised even when the power is turned off. If you change the position or angle of the projector, you may need to readjust the keystone settings.
- If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting. (p.47, 48)
- If the value displayed in the gauge on the screen stops changing when keystone correction is being carried out, it indicates that the limit for keystone correction has been exceeded. Check that the projector has not been set up at an angle which exceeds the proper limit.

Adjusting the Image Quality


The quality of the screen images can be adjusted as follows.

Focusing the Screen Image

Procedure

Turn the focus ring to adjust the image focus.

Turn the focus ring of the projector until the projected images are in proper focus.

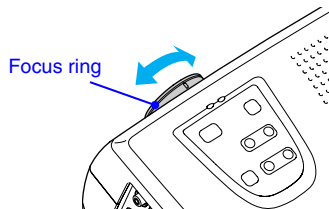

Tip :

- If the surface of the lens is dirty or misted over as a result of condensation, it may not be possible to adjust the focus correctly. If this happens, clean or de-mist the lens. (p.66, 72)
- If the projector is positioned outside the normal projecting range of 0.9–11.3 m (2.9–37.0 ft.), it may not be possible to obtain the correct focus. If you have trouble obtaining the correct focus, check the projection distance.

Adjusting Computer Images


Automatic Setup

Automatic setup detects the status of the signals coming from the connected computer, and automatically adjusts these signals so that the optimum images can be obtained. It involves adjustment of the following three items:

Tracking▶▶, Position and Sync▶▶.

Tip :

- If "Auto Setup" in the "Video" menu is set to "OFF" (the default setting for this item is "ON"), automatic setup is not carried out. If you press the [Auto] button on the remote control while computer signals are being projected, adjustment will then be carried out.

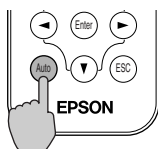


Remote control

- If you press the [Auto] button while the E-Zoom or Freeze function is being used or while a configuration menu or help menu is being displayed, the function will be cancelled when you press the [Auto] button, and then the adjustment will be carried out.
- Sometimes the signals may not be adjusted correctly depending on the type of signals being output by the computer. In such cases, use the configuration menu commands to adjust the tracking and sync settings manually. (p.38, 39)

Adjusting the Tracking


If vertical stripes appear in the projected images, and this cannot be fixed using automatic setup, you will need to adjust the tracking manually using the following procedure.

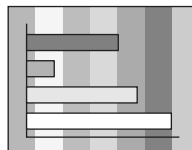

Procedure

- 1 Press the [Menu] button on the remote control, and then select "Tracking" from the "Video" menu.**

For details on this operation, refer to "Using the Configuration Menus". (p.56)

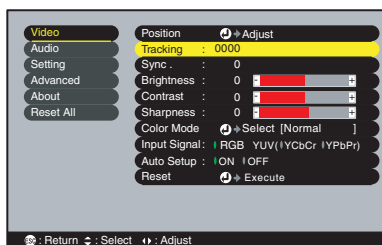

- 2 Press the [◀] and [▶] buttons to set the tracking value.**

The tracking value increases or decreases each time a button is pressed.



- 3 After making the adjustment, press the [Menu] button to exit the configuration menu.**


Tip :

The image will flash when continuous tracking adjustment is carried out, but this is normal.



Adjusting the Sync


If flickering, fuzziness or interference appear in images that are input from the computer, and this cannot be fixed using automatic setup, you will need to adjust the sync manually using the following procedure.

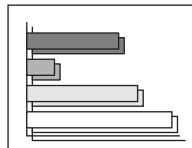

Procedure

- 1 Press the [Menu] button on the remote control, and then select "Sync." from the "Video" menu.**

For details on this operation, refer to "Using the Configuration Menus". (p.56)

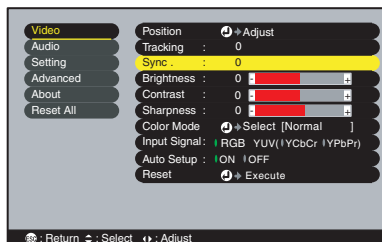

- 2 Press the [◀] and [▶] buttons to set the sync value.**

The sync value increases or decreases each time a button is pressed.



- 3 After making the adjustment, press the [Menu] button to exit the configuration menu.**

Tip :

- If you adjust the sync without adjusting the tracking first, it will not be possible to get the best adjustment results. Incorrect tracking adjustment may not be noticeable with some types of picture. However, pictures with lots of lines and shading will tend to show incorrect tracking adjustments more clearly, so be sure to check the tracking adjustment first.
- It may also be possible to fix flickering and fuzziness by adjusting the brightness, contrast, sharpness and keystone correction settings.



Selecting the Colour Mode


The following six preset colour modes are available for use depending on the characteristics of the images that are being projected. You can easily obtain the optimum image quality simply by selecting the colour mode that corresponds to the projected images. The brightness of the images will vary depending on which colour mode is selected.

Mode	Application
sRGB▶▶	Images conform to the sRGB colour standard. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB.
Normal	Brightness is emphasised. For presentation in bright rooms.
Meeting	Images are modulated using their original tints, with no colour enhancement.
Presentation	For presentations in dark rooms.
Theatre	Movie images are optimised using natural tints.
Game	Brightness is emphasised. Ideal for playing video games in bright rooms.

Procedure

The colour mode changes as follows each time the [Color Mode] button on the remote control is pressed.


Normal → Meeting → Presentation → Theatre → Game → sRGB ...

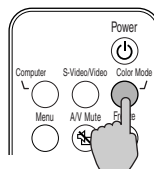

Remote control

The current setting appears in the top-right corner of the screen each time the colour mode is changed.

The default colour mode setting is "Normal" when computer image signals are being input, and "Theatre" when component video▶▶ or video signals are being input.

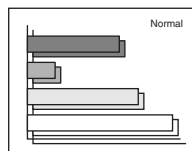

Tip :

The colour mode can also be set using the "Color Mode" command in the "Video" menu. (p.47, 49)



Advanced Operations

This chapter describes functions for enhancing the projection of images, and how to use the configuration menus.

Functions for Enhancing Projection.....	42
• A/V Mute	42
• Freeze	43
• Wide-screen Projection of Component Video and Video Images (Changing the Aspect Ratio).....	44
• E-Zoom	45
Using the Configuration Menu Functions	46
• List of Functions.....	46
• "Video" Menu	46
• "Audio" Menu	50
• "Setting" Menu.....	51
• "Advanced" Menu	52
• "About" Menu	54
• "Reset All" Menu.....	55
• Using the Configuration Menus.....	56

Functions for Enhancing Projection

This section describes the various useful functions that can be used to enhance presentations.

A/V Mute

This function momentarily pauses the image and sound.

For example, it can be used when you do not want to show viewers details of operations such as selecting different files while computer images are being projected.


However, if you use this function when projecting moving images, the images and sound will still continue to be played back by the source, and you cannot return to the point where the mute function was activated.

Procedure

Press the [A/V Mute] button on the remote control.

The image and sound will then be paused.

Press the [A/V Mute] button on the remote control to continue normal projection.

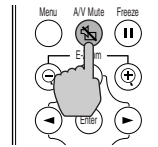

Remote control

When the images and sound have been momentarily paused, one of the following two types of display appears depending on the "A/V Mute" setting in the "Setting" menu. (p.51)

Solid black



Default setting

Solid blue



Freeze

This function pauses only the projected images. The sound keeps playing without pausing.


The image source will still be playing back the images even while projection is paused, and so it will not be possible to resume projection from the point where it was paused.

Procedure

Press the [Freeze] button on the remote control.

The images will then be paused.

To continue projecting the images, either press the [Freeze] button again or press the [ESC] button.

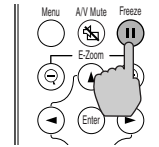


Remote control

Tip :


- Pressing the [Freeze] button also clears menu displays and help messages.
- The Freeze function still works while the E-Zoom function is being used. However, in this case the Freeze function can only be cancelled by pressing the [Freeze] button.

Wide-screen Projection of Component Video and Video Images (Changing the Aspect Ratio)

This function changes the aspect ratio of images from 4:3 to 16:9 when component video images (YCbCr and YPbPr) or video images (S-Video or composite video) are being projected. Images which have been recorded in digital video or onto DVDs can be viewed in 16:9 wide-screen format.

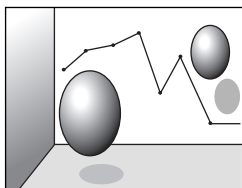

When images in squeeze mode are projected at 4:3

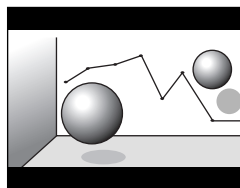

When images in squeeze mode are projected at 16:9


Procedure

- 1 Press the [Menu] button on the remote control, and then select "Aspect Ratio" from the "Video" menu.

For details on this operation, refer to "Using the Configuration Menus". (p.56)



- 2 Press the [◀] and [▶] buttons to set the aspect ratio to either "4:3" or "16:9", and then press the [Enter] button.

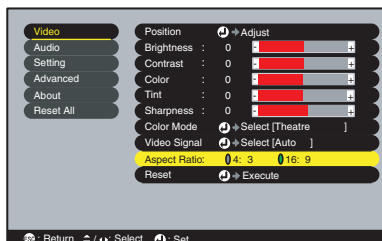

- 3 After making the adjustment, press the [Menu] button to exit the configuration menu.


E-Zoom

This function lets you enlarge and reduce a part of projected images such as graphs and tables.

Procedure

- 1 Press the [E-Zoom ⊕] button on the remote control.**


A cursor (cross) indicating the centre point for the area to be enlarged will appear on the screen.

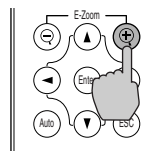

Remote control

- 2 Move the cross to the area of the image that is to be enlarged or reduced.**


Press the [▲], [▼], [◀] and [▶] buttons on the remote control to move the cross.

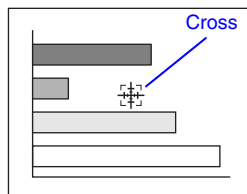

- 3 When [⊕] is pressed, the image is enlarged with the cross as its centre. When [⊖] is pressed, the enlarged picture is then reduced.**

The enlargement ratio will appear at the bottom-right of the screen.

You can scroll around the image by pressing the [▲], [▼], [◀] and [▶] buttons.

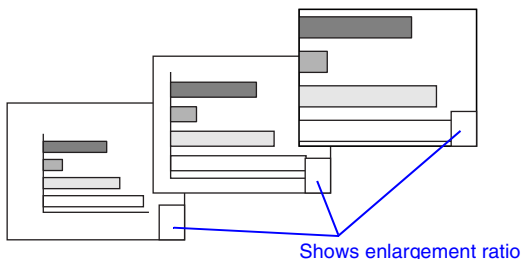

To cancel the E-Zoom, press the [ESC] button.

Tip :


The selected area can be enlarged to between 1–4 times, in 25 steps of x0.125.

Using the Configuration Menu Functions

The configuration menus can be used to carry out a variety of settings and adjustments.

The menus have a hierarchical structure, with a main menu that is divided into sub-menus, which are further divided into other sub-menus.

The remote control is used to operate the menus. Refer to "Using the Configuration Menus" (p.56) for details on using the menus.

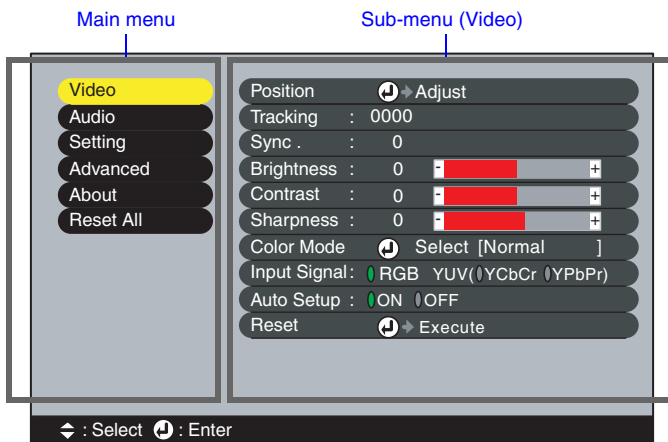

List of Functions

"Video" Menu

- The functions in the "Video" menu apart from "Input Signal", "Auto Setup" and "Video Signal" cannot be adjusted while no image signal is being input.
- The functions which appear in the "Video" menu will change depending on the type of input source being used for the image signal. Functions which are not available in the "Video" menu for a particular input source cannot be adjusted.

Computer (Analogue-RGB)/RGB video



"Video" Menu

Sub-menu	Function	Default
Position	Moves the image display position vertically and horizontally. <ul style="list-style-type: none"> • Press the [Enter] button and make the adjustment using the display position adjustment sub-menu that appears. 	Depends on connection
<u>Tracking</u> ▶▶	Adjusts computer images when vertical stripes appear in the images.	Depends on connection
<u>Sync</u> ▶▶	Adjusts computer images when flickering, fuzziness or interference appear in the images. <ul style="list-style-type: none"> • Flickering and fuzziness may also appear when the brightness, <u>contrast</u>▶▶, sharpness or keystone settings are adjusted. • You can obtain the best results if you adjust the tracking first and then adjust the sync. 	Depends on connection
Brightness	Adjusts the image brightness.	Median value (0)
<u>Contrast</u> ▶▶	Adjusts the difference between light and shade in the images.	Median value (0)
Sharpness	Adjusts the image sharpness.	Median value (0)
Color Mode	Corrects the vividness of the image colour. The settings can be saved separately for each type of source (computer or video source). You can select from six different quality settings depending on the surroundings. <ul style="list-style-type: none"> • <u>sRGB</u>▶▶ : Images conform to the sRGB standard.* • Normal : Brightness is emphasised. For presentation in bright rooms. • Meeting : Images are modulated using their original tints, with no colour enhancement. • Presentation: For presentations in dark rooms. • Theatre : Movie images are optimised using natural tints. • Game : Brightness is emphasised. Ideal for playing video games in bright rooms. 	Normal
Input Signal	Selects the input source to be used. <ul style="list-style-type: none"> • Select "RGB" when projecting computer images or RGB video images. 	Depends on connection
Auto Setup	Selects whether the automatic adjustment function for automatically optimising images when the input source is changed is turned ON or OFF.	ON



Sub-menu	Function	Default
Reset	<p>Resets all adjustment values for the "Video" menu functions except for the "Input Signal" setting to their default settings.</p> <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset All" to return all menu settings to their default settings. (p.55) 	-

* If set to sRGB, the colour temperature for the "Color Adjustment" command in the "Advanced" menu will be set to 6500K.

Component (YCbCr $\blacktriangleright\blacktriangleright$, YPbPr $\blacktriangleright\blacktriangleright$)



Video (S-Video, Composite video)



"Video" Menu

Sub-menu	Function	Default
Position	<p>Moves the image display position vertically and horizontally.</p> <ul style="list-style-type: none"> • Press the [Enter] button and make the adjustment using the display position adjustment sub-menu that appears. 	Depends on connection
Brightness	Adjusts the image brightness.	Median value (0)
<u>Contrast</u> $\blacktriangleright\blacktriangleright$	Adjusts the difference between light and shade in the images.	Median value (0)
Color	<p>(Not available for RGB video) Adjusts the colour intensity for the images.</p>	Median value (0)
Tint	<p>(Not available for RGB video) (Adjustment is only possible when <u>component video</u>$\blacktriangleright\blacktriangleright$ or NTSC signals are being input.) Adjust the image tint.</p>	Median value (0)
Sharpness	Adjusts the image sharpness.	Median value (0)



Using the Configuration Menu Functions

Sub-menu	Function	Default
Color Mode	<p>Corrects the vividness of the image colour. The settings can be saved separately for each type of source (computer or video source). You can select from six different quality settings depending on the surroundings.</p> <ul style="list-style-type: none"> • sRGB▶▶: Images conform to the sRGB standard.* • Normal : Brightness is emphasised. For presentation in bright rooms. • Meeting: Images are modulated using their original tints, with no colour enhancement. • Presentation: For presentations in dark rooms. • Theatre : Movie images are optimised using natural tints. The black & white extension function operates so that differences in colour gradations (darkness and lightness of colours) are accentuated even for images that are very dark or very bright, to make them easier to view. • Game : Brightness is emphasised. Ideal for playing video games in bright rooms. 	Theatre
Input Signal	<p>(Adjustment is only possible when component video signals are being input.) Selects the input source to be used.</p>	Depends on connection
Video Signal	<p>(Adjustment is only possible when composite video/S-Video signals are being input.) Sets the video signal format.</p> <ul style="list-style-type: none"> • Press the [Enter] button, and choose the setting from the video signal format selection sub-menu which appears. • When set to "Auto", the video signal format is set automatically. 	Auto
<u>Aspect Ratio▶▶</u>	Sets the aspect ratio for projected images.	Depends on connection
Reset	<p>Resets all adjustment values for the "Video" menu functions except for the "Input Signal" and "Video Signal" setting to their default settings.</p> <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset All" to return all menu settings to their default settings. (p.55) 	-

*If set to sRGB, the colour temperature for the "Color Adjustment" command in the "Advanced" menu will be set to 6500K.



"Audio" Menu




Sub-menu	Function	Default
Volume	Adjusts the volume.	Median value (10)
Tone	Adjusts the tone.	Median value (0)
Audio Input	<p>Selects the input source for audio signals. The default setting varies depending on the type of signal being input (for computer, component video and RGB video input signals: Computer; for video input signals: Video). Therefore, if audio signals are being input to a different port from the default port, you will need to select the audio signal input source.</p> <ul style="list-style-type: none"> • Computer: Audio signals will be input to the stereo mini jack (left side). • Video : Audio signals will be input to the RCA pin jack (left side). 	Depends on connection
Reset	<p>Resets all adjustment values for the "Audio" menu functions to their default settings.</p> <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset All" to return all menu settings to their default settings. (p.55) 	-

Tip :

The "Audio" menu settings are saved individually for each input signal source.




"Setting" Menu

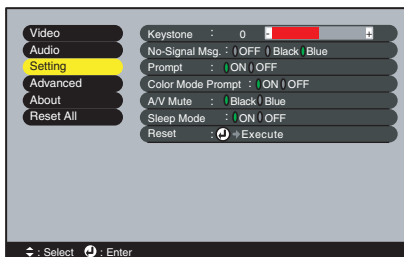

Sub-menu	Function	Default
Keystone	<p>Corrects vertical keystone distortion in images.</p> <ul style="list-style-type: none"> • When keystone correction is carried out, the projected image will become smaller. • If the images become uneven in appearance after keystone correction is carried out, decrease the sharpness setting. 	Median value (0)
No-Signal Msg.	<p>Sets the message status and background colour at times such as when no image signal is being input. When set to "OFF", the background colour becomes black and no message is displayed.</p>	Blue
Prompt	<p>Sets whether the input signal name is displayed on the screen or not when the input signal is changed.</p>	ON
Color Mode Prompt	<p>Sets whether the colour mode prompt is displayed on the screen or not when the colour mode is changed.</p>	ON
A/V Mute	<p>Sets the screen status when the [A/V Mute] button on the remote control is pressed.</p>	Black
Sleep Mode	<p>Sets the energy saving operation when no signal is being input.</p> <ul style="list-style-type: none"> • When set to "ON", projection stops automatically and then after the <u>cool-down</u> period is finished, the projector changes to sleep mode if no operations are carried out for 30 minutes while the "No-Signal." message is being displayed. (The Power indicator lights orange.) • Projection starts again when the [Power] button on the projector's control panel or the remote control is pressed. 	ON

Sub-menu	Function	Default
Reset	<p>Resets all adjustment values for the "Setting" menu functions to their default settings.</p> <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset All" to return all menu settings—including settings for the "Video" and "Audio" menus—to their default settings. (p.55) 	-

"Advanced" Menu

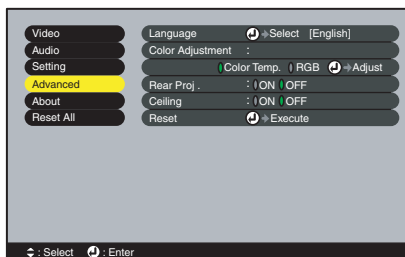

Sub-menu	Function	Default
Language	<p>Sets the language for message displays.</p> <ul style="list-style-type: none"> • Press the [Enter] button and select the language from the selection menu that appears. 	English
Color Adjustment	<p>Adjusts the <u>colour temperature</u> and intensity of each RGB colour for each input source.</p> <ul style="list-style-type: none"> • Color Temp.: Lets you adjust bright colours within a range from reddish tinges to bluish tinges. If the colour temperature is lower, colours appear reddish and colour tones appear softer. If the colour temperature is higher, colours appear bluish and colour tones appear sharper. Press the [Enter] button and make the adjustment in the colour adjustment sub-menu that appears. 	Color Temp.: Depends on connection



	<ul style="list-style-type: none"> •RGB : Sets the colour intensity for each RGB (red/green/blue) colour in the image. Press the [Enter] button, select "R" (red), "G" (green) or "B" (blue) and make the adjustment in the colour adjustment sub-menu that appears. You can adjust the colours while viewing the results on the screen. <p>(This item cannot be selected if "sRGB" has been selected as the "Color Mode" setting in the "Video" menu.)</p>	
Rear Proj.	Use when projecting images from behind a translucent screen. When set to "ON", the projected images are horizontally reversed.	OFF
Ceiling	Use when installing the projector to a ceiling. When set to "ON", the projected images are horizontally and vertically reversed.	OFF
Reset	Resets all adjustment values for the "Advanced" menu functions except for the "Language" setting to their default settings. <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset All" to return all menu settings including settings for the "Video" and "Audio" menus to their default settings. (p.55) 	-

"About" Menu

- The "About" menu shows the setting details for the current image source.
- The "Lamp" item appears as 0H for 0–10 hours, and after that, it appears in units of 1 hour.

Computer/RGB video/
Component video
(Analogue-RGB, YCbCr▶▶, YPbPr▶▶)


Video (S-Video, Composite video)

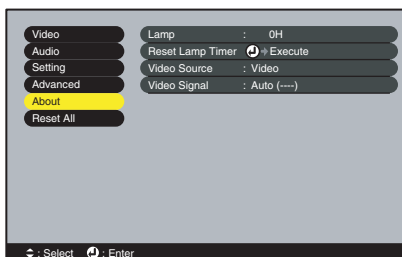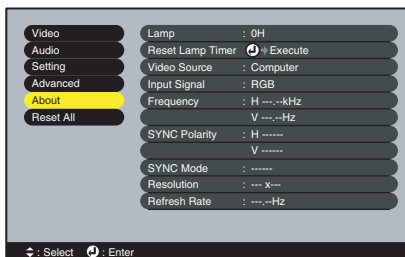

Sub-menu	Function	Default
Lamp	Displays the cumulative lamp operating time. • When the lamp warning period is reached, the display characters appear in red.	0H
Reset Lamp Timer	Initialises the lamp operating time. When this command is selected, the cumulative lamp operating time is reset to the initial default value.	-
Video Source	Displays the input source which is currently being projected.	
Input Signal	Displays the input signal settings. (Does not appear when the input source is composite video or S-Video.)	
Video Signal	Shows the video signal format. (Does not appear when the input source is computer, component video or RGB video.)	-
Frequency	Displays the horizontal and vertical scanning frequencies. (Does not appear when the input source is composite video or S-Video.)	-
<u>SYNC</u> ▶▶ Polarity	Displays the sync polarity. (Does not appear when the input source is composite video or S-Video.)	-

Sub-menu	Function	Default
SYNC Mode	Displays the sync attributes. (Does not appear when the input source is composite video or S-Video.)	-
Resolution	Displays the input resolution. (Does not appear when the input source is composite video or S-Video.)	-
<u>Refresh</u> <u>Rate</u> ▶▶	Displays the refresh rate. (Does not appear when the input source is composite video or S-Video.)	-

"Reset All" Menu

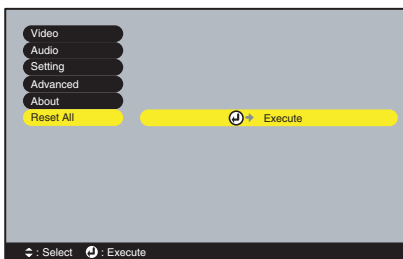

Sub-menu	Function	Default
Execute	Resets all items in all menus to their default settings. <ul style="list-style-type: none"> • Press the [Enter] button to display the confirmation screen, and select "Yes". • Select "Reset" in an individual menu to reset only the settings for the items in each sub-menu. • The "Input Signal", "Video Signal", "Lamp" and "Language" settings will not return to their default settings. 	-


Using the Configuration Menus

The configuration menus can be operated using the remote control only.

Procedure

1 Press the [Menu] button on the remote control.


The main menu will be displayed.

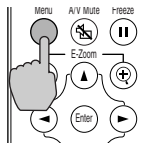

Remote control

2 Select a menu item.


Press the [▲] or [▼] button to move to an item to be selected.

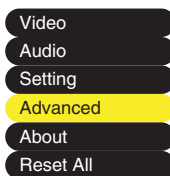

3 Confirm the selection.


Press the [Enter] button to confirm the selection of a menu item.

The selected sub-menu will then be displayed.

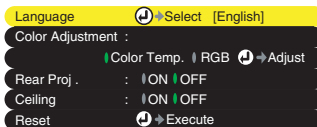

4 Select a sub-menu item.

Press the [▲] or [▼] button to move to an item to be selected.

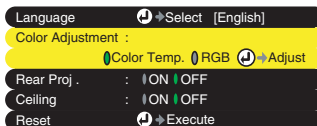


The items appearing in the "Video" menu and the "About" menu will vary depending on the type of input source being projected.



5 Select a setting value.

Press the [◀] and [▶] buttons to change the setting value.

For commands which have ON/OFF settings, use the [◀] and [▶] buttons to select the desired setting, and then press the [Enter] button.

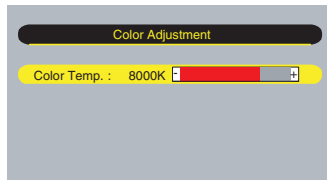

Tip :

- Sub-menu items which cause another sub-menu to be displayed when they are selected have Ⓢ after them. If you select such menu items and press the [Enter] button, you can then change the settings in the next sub-menu which appears.
- Refer to "List of Functions" for details on the functions of each menu item. (p.46)

6 Select other menu items in the same way.

Repeat steps 2 to 5 to change the setting for other menu items. To return to a previous menu, press the [ESC] button.

7 Close the menu.

Press the [Menu] button.





Troubleshooting

This section describes how to identify problems and what to do if a problem is found.

Using the Help	60
When Having Some Trouble	61
• Power Indicator.....	61
• ⚠ (Warning) Indicator	62
When the Indicators Provide No Help.....	64


Using the Help

If a problem occurs with the projector, the Help function uses on-screen displays to assist you in solving the problem. It uses a series of menus in a question and answer format.

Procedure

1 Press the [Help] button on the projector's control panel.

The help menu will be displayed.

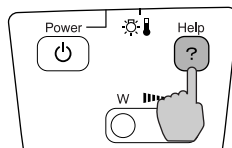


Projector

2 Select a menu item.


If using the control panel, the [▼ Select ▲] buttons function as the up and down keys.

If using the remote control, press the [▲] and [▼] buttons to select an item.

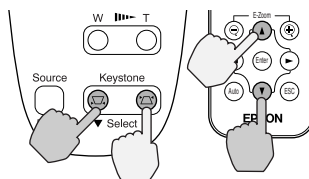


Projector

Remote control

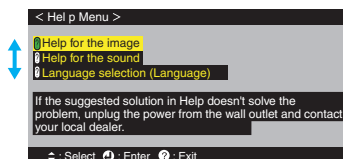

3 Confirm the selection.

Press the [Enter] button to confirm the selection of a menu item.

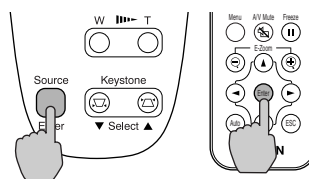


Projector

Remote control

4 Repeat the operations in steps 2 and 3 to proceed through the menu to more detailed items.

You can exit the help menu at any time by pressing the [Help] button.

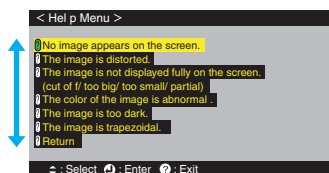

Tip :


If the Help function does not provide a solution to the problem, refer to "When Having Some Trouble" (p.61) or "When the Indicators Provide No Help" (p.64).



When Having Some Trouble

If you are having a problem with the projector, first check the projector's indicators.

The projector is provided with the following two indicators. These indicators alert you to problems with projector operation.

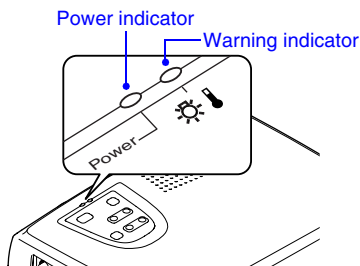

The following tables show what the indicators mean and how to remedy problems that they indicate.



Power Indicator

● : lit ☀ : flashing



Status	Cause	Remedy or Status	See Page
Orange ●	Standby status	(Not abnormal) The power cable should only be disconnected when the projector is in this condition. Press the [Power] button to start projection.	p.28
Orange ☀	Cool-down in progress	(Not abnormal) • Please wait. The <u>cool-down</u> period lasts for about 20 seconds. • The [Power] button does not work during cool-down. Press the button again after cool-down ends.	p.31
Green ●	Projection in progress	(Not abnormal)	p.29
Green ☀	Warm-up in progress	(Not abnormal) Please wait. Warm-up time is approximately 40 seconds. After warm-up is complete, the flashing green indicator changes to steady green.	p.29

(Warning) Indicator

 : lit  : flashing

Status	Cause	Remedy or Status	See Page
Red 	High internal temperature (overheating)	<p>The lamp will turn off automatically and projection will stop. Wait for about 5 minutes without operating the projector. After about 5 minutes have elapsed, unplug the power cable and then check the following two points.</p> <ul style="list-style-type: none"> • Check that the air inlet and air outlet are clear, and that the projector is not positioned against a wall. • If the air filter is dirty, it should be cleaned. <p>When the power cable is plugged back in, the projector will return to its previous state, so press the [Power] button on either the projector's control panel or the remote control to turn it back on. If the projector continues to overheat even after the above points have been checked, or if the indicators show a problem when the power is turned back on, stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at "International Warranty Conditions" in <i>Safety Instructions/World-Wide Warranty Terms</i>.</p>	p.16 p.73
Red  (0.5-second intervals)	Problem with lamp	<p>Disconnect the power cable from the electrical outlet and then remove the lamp and check if it is broken. If the lamp is not broken, reinstall it. Then reconnect the power cable and press the [Power] button on either the projector's control panel or the remote control to turn the power back on.</p> <p>If the indicators still show a problem, stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at "International Warranty Conditions" in <i>Safety Instructions/World-Wide Warranty Terms</i>.</p>	p.76



		<p>If the lamp is broken replace by a new lamp, or contact your local dealer for further advise. If replacing the lamp yourself, be careful to avoid pieces of broken glass. (Projection cannot be carried out until the lamp is replaced.)</p>	p.76
		<p>Check that the lamp and the lamp cover are securely installed. If the lamp or lamp cover is not securely installed, the lamp will not switch on.</p>	p.76
<p>Red  (1-second intervals)</p>	Internal problem	<p>Stop using the projector, disconnect the power cable from the electrical outlet, and contact your dealer or the nearest address provided at "International Warranty Conditions" in <i>Safety Instructions/World-Wide Warranty Terms</i>.</p>	
<p>Orange </p>	High-speed cooling in progress	<p>(This is not an abnormality, but if the temperature rises too high again, projection will stop automatically.)</p> <ul style="list-style-type: none"> • Set the projector up in a place which is well-ventilated, and so that the air filter and exhaust vents are clear. • Clean the air filter. 	p.16 p.73

Tip :

- *If the projector is not operating properly even though the indicators are all showing normal, refer to "When the Indicators Provide No Help" on the following page.*
- *If an indicator is showing a status which does not appear in the previous tables, contact your dealer or the nearest address provided at "International Warranty Conditions" in Safety Instructions/World-Wide Warranty Terms.*



When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

- No images appear (p.64, 65)
- Poor image quality (out of focus or distorted) (p.65, 66)
- Only part of the image is displayed (Large/small) (p.67)
- The image colours are not right (p.68)
- Images appear dark (p.68)
- Images appear greenish (p.69)
- Images appear purplish (p.69)
- No sound can be heard (p.69)
- The remote control does not work (p.69)
- The power does not turn off (p.70)


No images appear (Nothing at all appears)



No images appear

- Was the power turned off and then straight back on again?
After the power is turned off (during **cool-down**▶▶), the [Power] buttons on the projector's control panel and the remote control will not work. Wait until cool-down has finished. You can then use the [Power] buttons. (p.31)
- Is sleep mode active?
When sleep mode has been set to "ON", the lamp turns off automatically if no operations are carried out for 30 minutes while no image signal is being input. The Power indicator lights orange at this time. "Setting" - "Sleep Mode" (p.51)
- Have you pressed the [Power] button? (p.29)
- Has the image brightness been adjusted correctly?
"Video" - "Brightness" (p.47, 48)
- Is A/V Mute mode active? (p.42)
- Is the projected image completely black?
Some input images, such as screen savers, may be completely black.
- Is an image signal being input?
If "No-Signal Msg. " in the "Setting" menu has been set to "OFF", no messages will be displayed. Set it to "Black" or "Blue" for messages to be displayed. If a message is displayed, refer to the item indicated.
"Setting" - "No-Signal Msg. " (p.51)
- Try resetting all of the current settings.
"Reset All" - "Execute" (p.55)

No images appear (Messages do appear)

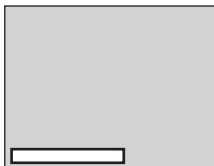

"Not Supported." is displayed


- Check the mode which corresponds to the frequency of the image signals being output from the computer. Refer to the documentation provided with your computer for details on changing the resolution and frequency of the image signals being output from the computer. (p.86)



"No-Signal." is displayed

- Are the cables connected correctly? (p.17–23)
- Does the input signal match the connected source? Use the [Source] button on the projector's control panel (or the [Computer] or [S-Video/Video] button on the remote control) to select the correct signal source. (p.30)
- Is the power for the computer or video source turned on? (p.29)
- If a laptop computer or a computer with a LCD screen has been connected to the projector, it is necessary to output the image signals to the projector rather than to the screen. Normally image signals are output to only the computer's LCD screen, so you need to change the output to an external destination. For some computer models, when the image signals are output externally, they no longer appear on the LCD screen. For details, refer to the section of the documentation provided with your computer under a heading such as "External output", "Connecting an external monitor" or similar. (p.30)


Poor image quality (out of focus or distorted)

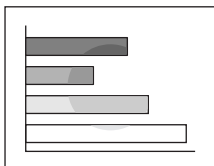

- The image is fuzzy
- Part of the image is out of focus
- The whole image is out of focus

- Has the focus been adjusted correctly? (p.37)
- Is the lens cover still attached?
- Has the front adjustable feet been adjusted so that the image angle is too big? If the image angle is too big, the image will be out of focus vertically. (p.34)
- Is the projector at the correct distance? The recommended distance from the projector to the screen is within 0.9–11.3 m (2.9–37.0 ft.). Set up the projector so that the projection distance is within this range. (p.16)

- Is the projector beam perpendicular to the screen?
(p.34)
- Is the lens dirty?
(p.72)
- Has condensation formed on the lens?
If the projector is suddenly taken from a cold environment to a warm environment, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room approximately one hour before it is to be used. If condensation forms on the lens, turn off the power and wait for the condensation to disappear.
- Have the "Sync▶▶", "Tracking▶▶" and "Position" been adjusted correctly?
If the "Auto Setup" command in the "Video" menu is set to "OFF", press the [Auto] button on the remote control to adjust these settings. If the images have not been correctly adjusted after using the automatic setup function and after pressing the [Auto] button, adjust the settings manually using the respective menus. (p.37, 47)
- Are the image signal format settings correct?
If a computer, component video▶▶ or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49)
If a composite video▶▶ or S-Video▶▶ source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49)

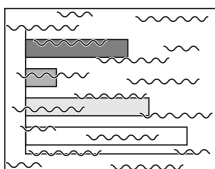


- Image is distorted
- Image contains interference


- Are the cables connected correctly?
(p.17–23)
- Has the correct resolution been selected?
Set the computer so that the signals that are output are compatible with this projector. Refer to the documentation provided with your computer for details on changing the settings. (p.86)
- Have the "Sync▶▶", "Tracking▶▶" and "Position" been adjusted correctly?
If the "Auto Setup" command in the "Video" menu is set to "OFF", press the [Auto] button on the remote control to adjust these settings. If the images have not been correctly adjusted after using the automatic setup function and after pressing the [Auto] button, adjust the settings manually using the respective menus. (p.37, 47)
- Is an extension cable being used?
If an extension cable is used, electrical interference may affect the signals. Use the accessory cables and check if this helps.

- Are the image signal format settings correct?
If a computer, component video or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49)
If a composite video or S-Video source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49)

Only part of the image is displayed (Large/small)

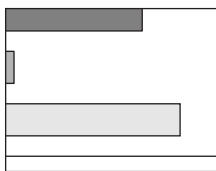


Only part of the image is displayed

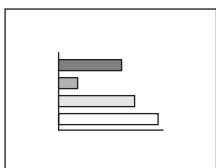

Small


- Is the [Zoom] button setting correct?
Use the [Zoom] button to adjust the size of the image. (p.33)
- Has the "Aspect Ratio" setting been selected correctly?
Use the "Aspect Ratio" command in the "Video" menu to set the aspect ratio to "4:3". (p.49)
- Is the E-Zoom function being used to enlarge the image?
Press the [ESC] button on the remote control to cancel E-Zoom. (p.45)
- Has the "Position" setting been adjusted correctly?
Use the "Position" command in the "Video" menu to adjust. (p.47, 48)
- Has the correct resolution been selected?
Set the computer so that the signals that are output are compatible with this projector. Refer to the documentation provided with your computer for details on changing the settings. (p.86)
- Change the resolution for the laptop computer or computer with a LCD screen.
Change the resolution so that the image is displayed in the whole of the projection area, or set the image signal to external output only. (p.30)
- Has the computer been set for dual display?
If dual display has been activated in the Display Properties of the connected computer's Control Panel, the projector will only display about half of the image on the computer screen. To display the whole of the image on the computer screen, turn off the dual display setting. Refer to the video driver manual for the computer's monitor for further details.

The image colours are not right

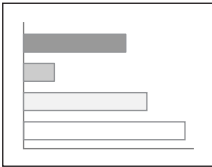


- Has the image brightness been adjusted correctly? "Video" - "Brightness" (p.47, 48)
- Are the cables connected correctly? (p.17–23)
- Are the image signal format settings correct?
If the "Input Signal" command in the "Video" menu is set to "YPbPr" or "YCbCr" when a computer is connected, the projected images will appear purplish.
If a computer, component video or RGB video source is connected to the projector, use the "Input Signal" command in the "Video" menu to select the signal format which matches the signal connected source. (p.47, 49)
If a composite video or S-Video source is connected to the projector, use the "Video Signal" command in the "Video" menu to select the video signal format. (p.49)
- Has the image contrast been adjusted correctly? "Video" - "Contrast" (p.47, 48)
- Has the colour been adjusted correctly? "Advanced" - "Color Adjustment" (p.52)
- Have the colour intensity and tint been adjusted correctly?
(The colours may not exactly match the colours in the image on the computer screen or LCD screen, but this is normal and is not the sign of a problem.)
"Video" - "Color", "Tint" (p.48)
- Is the lamp due for replacement?
When the lamp is nearly due for replacement, the image will become darker and the colour quality will become poorer. When this happens, the lamp should be replaced with a new one. (p.76)

Images appear dark

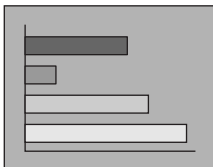


- Is the lamp due for replacement?
When the lamp is nearly due for replacement, the image will become darker and the colour quality will become poorer. When this happens, the lamp should be replaced with a new one. (p.76)
- Has the image brightness been adjusted correctly? "Video" - "Brightness" (p.47, 48)
- Has the image contrast been adjusted correctly? "Video" - "Contrast" (p.47, 48)

Images appear greenish/Images appear purplish

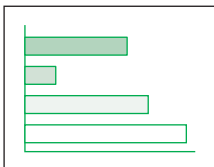

- Do the input signal settings match the signals from the connected device?
If the "Input Signal" command in the "Video" menu is set to "RGB" when a component video signal source is connected to the projector, the images will appear greenish. If the "Input Signal" menu command is set to "YCbCr" or "YPbPr" when a computer is connected, the projected images will appear purplish. Select the correct signal format for the connected source.
"Video" - "Input Signal" (p.47, 49)

No sound can be heard.

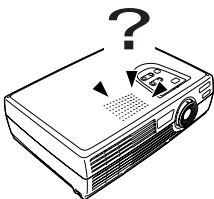

- Is the audio source connected correctly?
(p.18, 24)
- Has the correct audio input port been selected?
Use the "Audio Input" command in the "Audio" menu to set the port for audio signal input. (p.50)
- Is sound being output from the audio source?
Check the volume for the audio source.
- Has the volume been adjusted to the minimum setting?
(p.50)
- Is A/V Mute mode active?
The projector may be in A/V Mute mode. Press the [A/V Mute] button on the remote control to cancel the A/V Mute mode. (p.42)


The remote control does not work



- Is the remote control light-emitting area facing towards the remote control light-receiving area when it is operated?
The operating angle for the remote control is approximately $\pm 30^\circ$ horizontally and approximately $\pm 15^\circ$ vertically.
- Is the remote control too far from the projector?
The operating distance for the remote control is approximately 6 m (20 ft.). (p.14)
- Is direct sunlight or strong light from fluorescent lamps shining onto the remote control light-receiving area?
- Has the battery insulating tape been removed?
(p.13)

- Is there battery in the remote control?
(p.74)
- Is the battery dead?
- Has the battery been inserted correctly?
(p.74)

The power does not turn off (after the [Power] button is pressed)

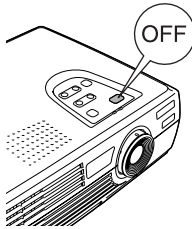

- The Power indicator remains orange.
This projector is designed so that the Power indicator remains lit even when after the power has been turned off. The Power indicator will switch off when the power cable is disconnected from the electrical outlet.
- The cooling fan does not stop.
After the [Power] button is pressed to turn off the power, the cool-down period starts. After this, the Power indicator changes to a steady orange, and you can then disconnect the power cable from the electrical outlet.
* The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.



Appendices

This chapter provides information on maintenance procedures to ensure the best level of performance for the projector for a long time.

Maintenance	72
• Cleaning	72
• Cleaning the Projector Case.....	72
• Cleaning the Lens.....	72
• Cleaning the Air Filter.....	73
• Replacing Consumables	74
• Inserting the Battery.....	74
• Lamp Replacement Period.....	75
• Replacing the Lamp.....	76
• Resetting the Lamp Operating Time.....	77
• Replacing the Air Filter.....	79
Optional Accessories	80
Glossary	81
List of ESC/VP21 Commands	84
• Command List	84
• Communication Protocol	84
• Cable Layouts	85
List of Supported Monitor Displays	86
• Computer.....	86
• Component Video Input/RGB Video Input.....	87
• Composite Video/S-Video Input.....	87
Specifications	88
Appearance	90
Index	91

Maintenance

This section describes maintenance tasks such as cleaning the projector and replacing consumable parts.

Cleaning

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

Caution :

Be sure to read the separate Safety Instructions/World-Wide Warranty Terms before cleaning.

Cleaning the Projector Case

Clean the projector case by wiping it gently with a soft cloth.

If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector case. Then wipe the case again with a soft, dry cloth.

Caution :

Do not use volatile substances such as wax, alcohol or thinner to clean the projector case. These can cause the case to warp and make the coating finish peel off.

Cleaning the Lens

Use a commercially-available air blower, or use a lens cleaning paper to gently wipe the lens.

Caution :


Do not rub the lens with harsh materials or subject the lens to shocks, as it can easily become damaged.



Cleaning the Air Filter

If the air filter becomes clogged with dust, it can cause overheating and damage the projector.

Turn the projector upside down and use a vacuum cleaner to remove the dust from the air filter.

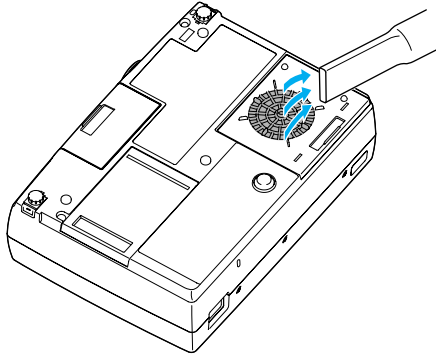

Tip :

- *If the air filter is difficult to clean or if it is broken, it should be replaced. Contact your dealer for a spare air filter.*
- *Spare lamps are provided with a spare air filter. The air filter should also be replaced when the lamp is replaced.*

Replacing Consumables

This section describes how to replace the remote control battery, the lamp and the air filter.

Inserting the Battery

Use the following type of battery as a replacement.

- 1 CR2025 lithium battery


Caution :

Be sure to read the Safety Instructions/World-Wide Warranty Terms before handling the battery.

Procedure


1 Remove the battery holder.

While pushing the catch of the battery holder inwards, pull the battery holder out.

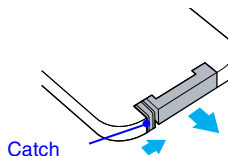


2 Remove the old battery and insert the new battery.

Check the position of the (+) mark inside the battery holder to ensure that that battery is inserted the correct way.

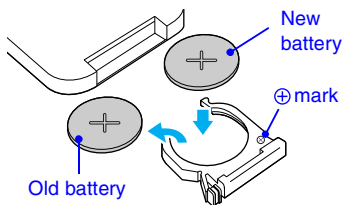

3 Insert the battery holder into the remote control.

Push the battery holder in until it clicks.

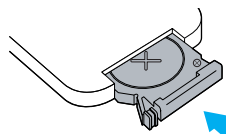


Tip :


Dispose of used batteries in accordance with local waste disposal regulations.


Lamp Replacement Period

It is time to replace the lamp when:

- The message "Lamp Replace" appears on the screen for 30 seconds when projection starts

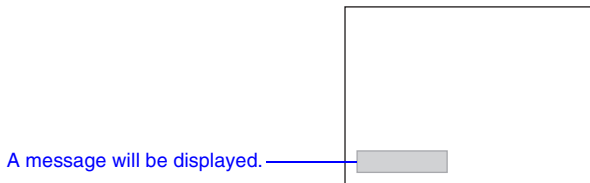

- When the  (Warning) indicator is flashing red at 0.5-second intervals

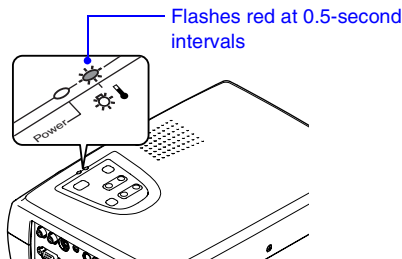

- The projected image gets darker or starts to deteriorate

Tip :

- *The replacement warning message is set to appear after about 1400 hours of lamp use in order to maintain the brightness and quality of the projected images. If you continue to use the lamp after this period, the possibility of the lamp breaking becomes greater. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.*
- *The warning message appears after about 1400 hours of use, but the actual life of each individual lamp will vary depending on the characteristics of the lamp and on the way it has been used. Some lamps may stop operating before 1400 hours of use, so you should always have a spare lamp ready in case.*
- *Contact your dealer for a spare lamp.*

Replacing the Lamp


Caution :

- If the lamp stops working and needs to be replaced, there is the danger that the lamp may break when handled.
If replacing the lamp of a projector that has been installed to the ceiling, you should always assume that the lamp is broken and remove the lamp cover very carefully.
- Wait until the lamp has cooled down sufficiently before opening the lamp cover. It takes a further one hour after the cool-down period has finished for the lamp to be cool enough.

Procedure

- 1 Turn off the projector power, wait for the cool-down period to end, and then disconnect the power cable.**


The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.

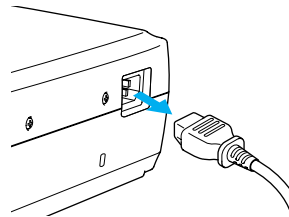

- 2 Wait until the lamp has cooled down, and then remove the lamp cover from the base of the projector.**


It takes approximately one hour for the lamp to cool down by itself after the cool-down period has finished.

Put your finger into the recess, and pull straight out to remove the lamp cover.

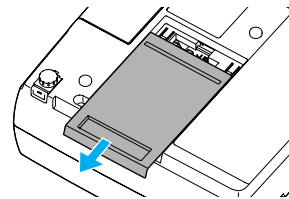


- 3 Loosen the two lamp fixing screws.**

Use the screwdriver that is supplied with the spare lamp or a Phillips screwdriver to loosen the two lamp fixing screws that are securing the lamp to the projector.

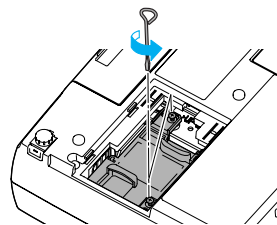


4 Take out the lamp.

Hold the lamp by the two tabs to lift it up and out from the projector.

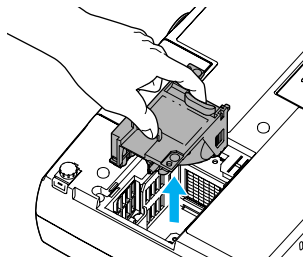


5 Install the new lamp.

Hold the lamp so that it faces the correct way to fit into the projector, and then insert the lamp and tighten the two lamp fixing screws.

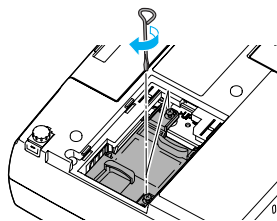

6 Install the lamp cover.

Slide the cover in from the outside, and then push it in until it clicks into place.

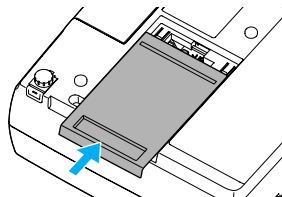

Tip :

- Install the lamp securely. If the lamp cover is removed, the lamp turns off automatically as a safety precaution. Moreover, the lamp will not turn on if the lamp or the lamp cover is not installed correctly.
- Spare lamps are provided with a spare air filter. The air filter should also be replaced when the lamp is replaced. (p.79)
- Dispose of used lamps properly in accordance with your local regulations.

Resetting the Lamp Operating Time

The projector has a built-in counter which keeps track of the lamp operating time. When the cumulative operating time reaches a certain point, it causes the replacement warning message to be displayed. Therefore, the counter needs to be reset after the lamp has been replaced with a new one. You can do this using the configuration menu.


Tip :

Do not reset the lamp operating time except after the lamp has been replaced, otherwise the lamp replacement period will not be indicated correctly.



Procedure


1 Connect the power cable, and then press the [Power] button on either the projector's control panel or the remote control to turn on the power for the projector.

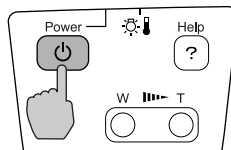

Projector


2 Press the [Menu] button on the remote control.

The configuration menu will be displayed.

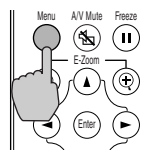


Remote control

3 Select "Reset Lamp Timer" from the "About" menu and then press the [Enter] button.

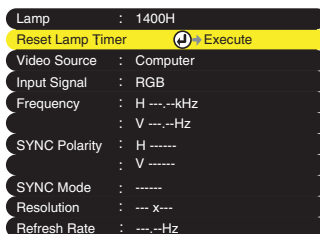

4 Select "Yes" and then press the [Enter] button.

The lamp operating time will then be reset.

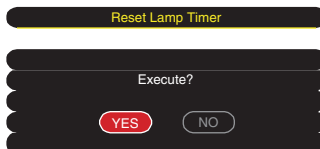


Replacing the Air Filter


Procedure

- 1 Turn off the projector power, wait for the cool-down period to end, and then disconnect the power cable.**

The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.

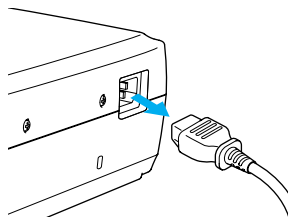


- 2 Put your finger into the recess, and pull straight out to remove the air filter.**

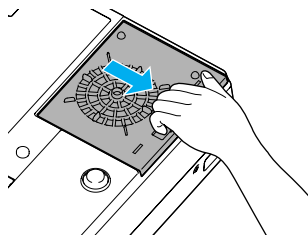

- 3 Install the new air filter.**

Slide the cover in from the outside, and then push it in until it clicks into place.

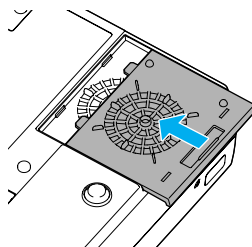

Tip :

Dispose of used air filters properly in accordance with your local regulations.



Optional Accessories

The following optional accessories are available for purchase if required. This list of optional accessories is current as of October 2002. Details of accessories are subject to change without notice.

Soft carry case ELPKS16

Use this case if you need to carry the projector by hand.

Spare lamp ELPLP19D

Use as a replacement for spent lamps.

50" portable screen ELPSC06

A compact screen which can be carried easily. (Aspect ratio▶▶ 4:3)

60" screen ELPSC07

80" screen ELPSC08

100" screen ELPSC10

A portable roll-type screen. (Aspect ratio 4:3)

VGA-HD15 PC cable ELPKC02

(1.8 m (6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

Use to connect the projector to a computer.

VGA-HD15 PC cable ELPKC09

(3 m (9.8 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

VGA-HD15 PC cable ELPKC10

(20 m (65.6 ft.) - for mini D-Sub 15-pin/mini D-Sub 15-pin)

Use this extension cable if the accessory computer cable is too short.

Component video cable ELPKC19

(3 m (9.8 ft) - for mini D-Sub 15-pin/RCA male x 3)

Use to connect a component video▶▶ source.

Remote control unit ELPST07

This is the same remote control as the projector's accessory remote control.

Ceiling mount * ELPMB11

Use when installing the projector to a ceiling.

Ceiling plate * ELPFC03

Pipe 370 (370 mm (14.57 inches)/silver)* ELPFP04

Pipe 570 (570 mm (22.44 inches)/silver)* ELPFP05

Pipe 770 (770 mm (30.31 inches)/silver)* ELPFP06

Use when installing the projector to a high ceiling or a ceiling with veneer panels.

Image presentation camera ELPDC02

ELPDC03

ELPDC04

Use when projecting books, OHP films and slides.

* A special method of installation is required in order to suspend the projector from the ceiling. Please contact the place of purchase if you would like to use this installation method.



Glossary

Following is an explanation of some of the terms used in this guide which may be unfamiliar or which were not explained in the text of this guide itself. Further information can be obtained by referring to other commercially-available publications.

Aspect ratio	The ratio between an image's length and its height. HDTV images have an aspect ratio of 16:9 and appear elongated. The aspect ratio for standard images is 4:3.
Colour temperature	The temperature of an object which is emitting light. If the colour temperature is high, the colours tend to take on a bluish tinge. If the colour temperature is lower, the colours tend to take on a reddish tinge.
Component video	Video signals which have the video brightness signals and colour signals separated, in order to provide better image quality. In high-definition TV (HDTV), it refers to images which consist of three independent signals: Y (luminance signal), and Pb and Pr (colour difference signals).
Composite video	Video signals which have the video brightness signals and colour signals mixed together. The type of signals commonly used by household video equipment (NTSC, PAL and SECAM formats). The carrier signal Y (luminance signal) and chroma (colour) signal which are contained in the colour bar are overlapped to form a single signal.
Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased in order to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called "contrast adjustment".
Cool-down	The cooling process for the projector's lamp unit continues even after the [Power] button on the projector's control panel or the remote control has been pressed to turn off the lamp. After the lamp turns off, the cooling fan continues operating, but all button operations are disabled. The length of time that this is happening is called the "cool-down period". The cool-down period lasts for about 20 seconds. The actual time will vary depending on the external air temperature.
Dolby Digital	A sound format developed by Dolby Laboratories. Normal stereo is a 2-channel format which uses two speakers. Dolby Digital is a 6-channel (5.1-channel) system which adds to this a centre speaker, two rear speakers and a sub-woofer.
HDTV	An abbreviation for High-Definition Television. It refers to high-definition systems which satisfy the following conditions. <ul style="list-style-type: none">• Vertical resolution of 750p or 1125i or greater (p = <u>progressive scanning</u>▶▶, i = <u>interlaced scanning</u>▶▶)• Screen <u>aspect ratio</u>▶▶ of 16:9• <u>Dolby Digital</u>▶▶ audio reception and playback (or output)



Interlaced scanning	A method of image scanning whereby the image data is divided into fine horizontal lines which are displayed in sequence starting from left to right and then from the top to the bottom of the screen. The even-numbered lines and odd-numbered lines are displayed alternately.
Progressive scanning	A method of image scanning whereby the image data from a single image is scanned sequentially from top to bottom to create a single image.
Refresh rate	The light-emitting element of a display maintains the same luminosity and colour for an extremely short time. Because of this, the image must be scanned many times per second in order to refresh the light-emitting element. The number of refresh operations per second is called the "refresh rate", and is expressed in hertz (Hz).
Resize display	This function is use to project computer images that have a resolution or more than or less than the projector's panel resolution to be projected so that they fill the whole of the projection area.
Security lock	A device consisting of a projector case with a hole in it that a commercially-available theft-prevention cable can be passed through in order to secure the device to a table or pillar. This projector is compatible with the Microsaver Security System manufactured by Kensington.
SDTV	An abbreviation for Standard Definition Television. It refers to standard television systems which do not satisfy the conditions for High-Definition Television.
sRGB	An international standard for colour intervals that was formulated so that colours which are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet.
SVGA	A type of video signal with a resolution of 800 (horizontal) x 600 (vertical) dots which is used by IBM PC/AT-compatible computers.
S-Video	A video signal which has the luminance component and colour component separated in order to provide better image quality. It refers to images which consist of two independent signals: Y (luminance signal), and C (colour signal).
Sync. (Synchronisation)	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the phases of these signals (the relative position of the crests and troughs in the signal) is called "synchronisation". If the signals are not synchronized, problems such as flickering, blurriness and horizontal interference can occur.
Tracking	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images will not be of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called "tracking". If tracking is not carried out correctly, wide vertical stripes will appear in the projected images.

VGA	A type of video signal with a resolution of 640 (horizontal) x 480 (vertical) dots which is used by IBM PC/AT-compatible computers.
XGA	A type of video signal with a resolution of 1024 (horizontal) x 768 (vertical) dots which is used by IBM PC/AT-compatible computers.
YCbCr	The carrier signal which is contained in the colour bar signal used in modern TV transmissions. The name comes from the Y (luminance) signal and the CbCr (chroma (colour)) signals.
YPbPr	The carrier signal which is contained in the colour bar signal used in high-definition TV (HDTV) transmissions. The name comes from the Y (luminance) signal and the PbPr (colour difference) signals.

List of ESC/VP21 Commands

Command List

When a power ON command is sent to the projector, the power for the projector turns on. When the projector is in a command ready state, it returns the "3Ah" (:.) code. Furthermore, when command processing is complete, the projector also returns a ":" code.

The ":" code status can be used to determine whether the projector is ready or busy. If command processing terminates with an error, an error message is output and then the ":" code is sent.

	Item	Command
Power ON/OFF	ON	PWR ON
	OFF	PWR OFF
Signal selection	Computer/Component Video (RGB)	SOURCE 11
	Computer/Component Video (YCbCr)	SOURCE 14
	Computer/Component Video (YPbPr)	SOURCE 15
	Video	SOURCE 41
	S-Video	SOURCE 42
A/V Mute ON/OFF	ON	MUTE ON
	OFF	MUTE OFF
A/V Mute Selection	Black	MSEL 00
	Blue	MSEL 01



Communication Protocol

- Standard baud rate : 9600 bps
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Flow control : None
- Connector shape : D-Sub 9-pin (male)
- Projector input port : Control (RS-232C)



Cable Layouts

- Connector shape : D-Sub 9 pin (male)
- Projector input connector : Control (RS-232C)

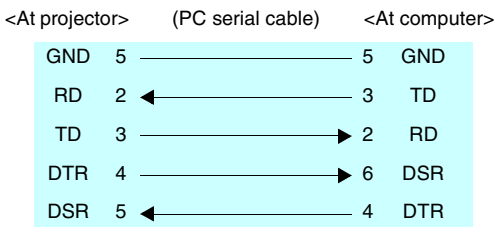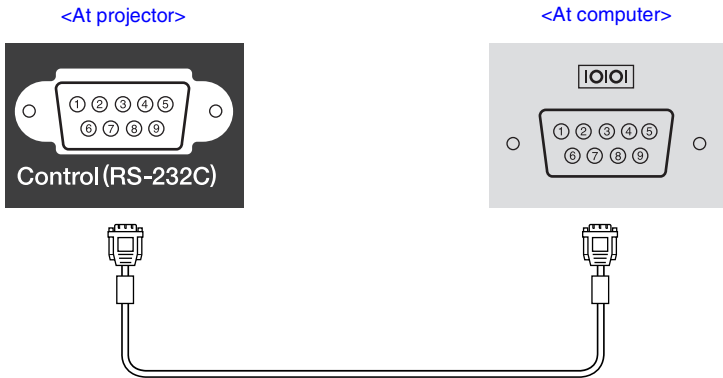

Signal	Function
GND	Signal wire ground
TD	Transmit data
RD	Receive data
DSR	Data set ready
DTR	Data terminal ready

List of Supported Monitor Displays

Computer

Signal	<u>Refresh rate</u> ▶▶ (Hz)	Resolution (dots)	<u>Resolutions for resized display</u> ▶▶ (dots)
PC98		640×400	800×500
EGA		640×350	800×438
<u>VGA</u> ▶▶	60	640×480	800×600
VGACGA		640×400	800×500
VGAEGA		640×350	800×438
VGA text		720×400	800×444
		720×350	800×388
VESA	60/72/75/85,iMac*	640×480	800×600
<u>SVGA</u> ▶▶	56/60/72/75/85,iMac*	800×600	800×600
<u>XGA</u> ▶▶	43i/60/70/75/85,iMac*	1024×768	800×600
MAC13"		640×480	800×600
MAC16"		832×624	800×600
MAC19"		1024×768	800×600
MAC21"		1152×870	800×600
NTSC		640×480	800×600
PAL/SECAM		720×540	800×600
<u>HDTV</u> ▶▶(525i)			800×600
HDTV(525p)			800×600
HDTV(750p)	60	1280×720	800×450
HDTV(1125i)	60	1920×1080	800×450

* Connection is not possible if the equipment does not have a VGA output port.

It may be possible to project signals which are not listed in the above table. However, not all functions may be supportable with such signals.



Component Video Input/RGB Video Input

Signal	<u>Refresh rate</u> ▶▶ (Hz)	<u>Aspect ratio</u> ▶▶ 4:3 Resolutions (dots)	Aspect ratio 16:9 Resolutions (dots)
<u>SDTV</u> ▶▶(525i) (D1)	60	800×600	800×450
SDTV (625i)	50	800×600	800×450
SDTV (525p) (D2)		800×600	800×450
<u>HDTV</u> ▶▶(750p) 16:9 (D4)		800×600	800×450
HDTV (1125i) 16:9 (D3)		800×600	800×450

Composite Video/S-Video Input

Signal	<u>Refresh rate</u> ▶▶ (Hz)	<u>Aspect ratio</u> ▶▶ 4:3 Resolutions (dots)	Aspect ratio 16:9 Resolutions (dots)
TV (NTSC)		800×600	800×450
TV (PAL, SECAM)		800×600	800×450

Specifications

Product name	Multimedia Projector EMP-52		
Dimensions	309 (W) x 93 (H) x 219 (D) mm (12.2 (W) x 3.8 (H) x 8.6 (D) in.) (not including feet and lens)		
Panel size	0.5 in.		
Display method	Polysilicon TFT active matrix		
Drive method	Full-line 6-phase block sequential writing		
Resolution	SVGA▶▶ 480,000 pixels (800 (W) x 600 (H) dots) x 3		
Focus adjustment	Manual		
Zoom adjustment	Electronic (approx. 1 : 1.2)		
Lamp (light source)	UHE lamp, 130 W, Model No.: ELPLP19D		
Max. audio output	1W monaural		
Speaker	1		
Power supply	100–120 V AC, 2.2A 200–240 V AC, 1.0A 50/60 Hz		
Operating temperature	+5°–+35°C (41°–95°F) (No condensation)		
Storage temperature	-10°–+60°C (14°–140°F) (No condensation)		
Weight	Approx. 2.9 kg (6.4 lbs)		
Connectors	Computer/Component Video:	1	Mini D-Sub 15-pin (female) Blue
	Monitor Out :	1	Mini D-Sub 15-pin (female) Black
	Audio:	1	Stereo mini jack
	Video:	1	RCA pin jack
	S-Video:	1	Mini DIN 4-pin
	Audio:	1	RCA pin jack
	Control (RS-232C) :	1	D-Sub 9-pin (male)

Safety

USA

UL1950 3rd Edition

Canada

CSA C22.2 No.950-95 (cUL)

European Community

The Low Voltage Directive (73/23/EEC)

IEC60950 2nd Edition, +Amd.1, +Amd.2, +Amd.3, +Amd.4

EMC

USA

FCC 47CFR Part15B Class B (DoC)

Canada

ICES-003 Class B

European Community

The EMC Directive (89/336/EEC)

EN55022, 1998 Class B

EN55024, 1998

IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5,

IEC61000-4-6, IEC61000-4-8, IEC61000-4-11,



IEC61000-3-2, IEC61000-3-3

Australia/New Zealand

AS/NZS 3548:1995, A1:1997, A2:1997 Class B

CISPR Pub.22:1993, A1:1995, A2:1996, Class B

Appearance

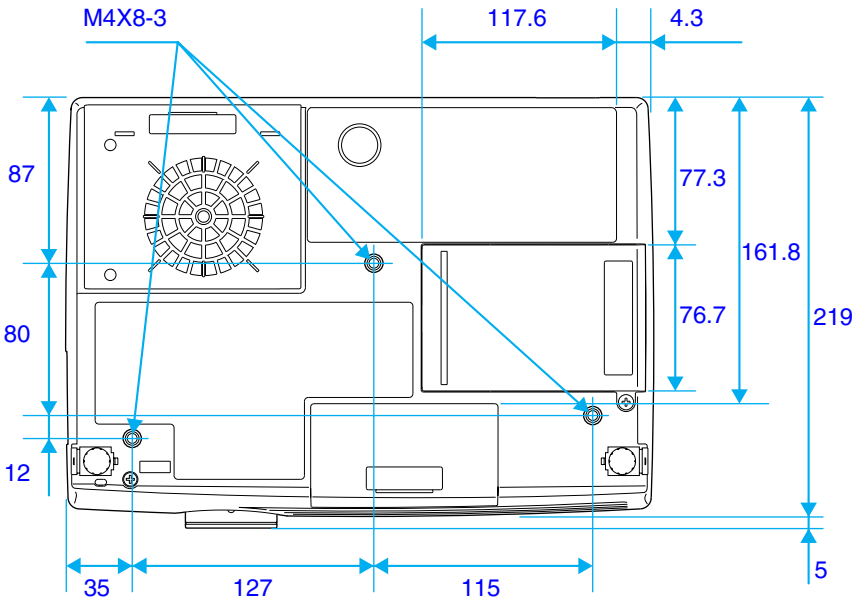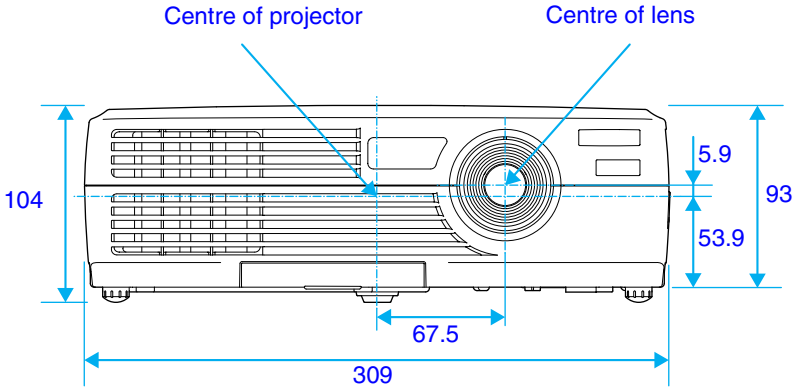

Units: mm



General Terms

A

A/V Mute	42, 51
"About" Menu	54
"Advanced" Menu	52
Air exhaust vent	8
Air filter	11
Air intake vent	11
Analogue-RGB	46, 54
Aspect ratio	44
"Audio" Menu	50
Audio port	9, 18, 24
Auto Setup	37, 47

B

Battery holder	74
Brightness	47, 48

C

Ceiling	15, 53
Cleaning the Air Filter	73
Cleaning the Lens	72
Cleaning the Projector Case	72
Color	48
Color Adjustment	52
Color Mode Prompt	51
Color Mode	40, 47, 49
Color temperature	52
Component video	22
Composite video	21
Computer/Component Video port	9
Connecting to a Computer	17
Connecting to a Video Source	21
Contrast	47, 48
Control (RS-232C) port	9
Control panel	10

Cool-down	31, 61
Correcting Keystone Distortion	35
Cross	45

E

Eligible computers	17
E-Zoom	45

F

Focus	37
Focus ring	8
Foot adjustment	34
Freeze	43
Frequency	54
Front adjustable foot	8

G

Glossary	81
----------------	----

H

HDTV	86
Help function	60

I

Image size	16, 33
Indicators	8, 61
Input Signal	47, 49, 54
Inserting the Battery	74

K

Keystone	35, 51
----------------	--------

L

Lamp	54
Lamp cover	11
Lamp replacement period	75
Language	52
Lens cover	8

M

Main menu 46
Menu 46
Monitor Out port 9

N

No-Signal Msg. 51

O

Operating distance (Remote control) 14
Operating range (Remote control) 14
Operating temperature 88
Optional accessories 80
Overheating 62

P

Part Names and Functions 8
Port 9, 30
Position 37, 47, 48
Power cable 1, 28
Power indicator 8
Power inlet 11
Projection angle 34
Projection distance 16
Projection 29
Prompt 51

R

RCA video cable 21
Rear Proj. 15, 53
Refresh Rate 55
Remote control 12
Remote control light-emitting area 12
Remote control light-receiving area
..... 8, 11
Replacing the Air Filter 79
Replacing the Lamp 76
"Reset All" Menu 55

Reset Lamp Timer 54, 77
Resized display 86
Resolution 55, 86
RGB 53

S

Screen size 16
Security lock 11
"Setting" Menu 51
Setting Up the Projector 15
Sharpness 47, 48
Sleep mode 51
Speaker 8, 18, 24
Specifications 88
Squeeze mode 44
sRGB 40, 47, 49
Stereo mini jack audio cable 19
Storage temperature 88
Sub-menu 46
Supported Monitor Displays 86
Suspension bracket fixing points 11, 90
S-Video 22, 48, 54
Sync 37, 39
SYNC Mode 55
SYNC Polarity 54

T

Tint 48
Tone 50
Tracking 37, 38, 47
Translucent screen 15
Turning off 31

U

Using the Configuration Menu Functions
..... 46



V

Video	48, 54
"Video" Menu	46
Video port.....	9
Video Signal.....	49, 54
Video Source	54
Volume	50

W

Warning indicator.....	8
When Having Some Trouble.....	61
Wide-screen Projection	44

Y

YCbCr	30, 48, 54
YPbPr	30, 48, 54

Z

Zoom	33
------------	----



DECLARATION of CONFORMITY

According to 47CFR, Part 2 and 15
Class B Personal Computers and Peripherals; and/or
CPU Boards and Power Supplies used with Class B
Personal Computers

We :EPSON AMERICA, INC.
Located at :3840 Kilroy Airport Way
MS: 3-13
Long Beach, CA 90806
Tel :562-290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name :EPSON
Type of Product :Projector
Model :EMP-52 / ELP-52



FCC Compliance Statement For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

General Notice:

EPSON is a registered trademark of SEIKO EPSON CORPORATION.
Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc.
IBM is a registered trademark of International Business Machines Corporation.
Windows and Windows NT are trademarks of Microsoft Corporation in the United States of America.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.



EPSON®