

**PowerLite® Home Cinema 705HD
Home Theater Projector**

User's Guide

Important Safety Information

WARNING: Never look into the projector lens when the lamp is turned on; the bright light can damage your eyes. Never let children look into the lens when it is on. Never open any cover on the projector, except the lamp and filter covers. Dangerous electrical voltages inside the projector can severely injure you. Except as specifically explained in this *User's Guide*, do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

WARNING: The projector and its accessories come packaged in plastic bags. Keep plastic bags away from small children to avoid any risk of suffocation.

Caution: When you replace the lamp, never touch the new lamp with your bare hands; the invisible residue left by the oil on your hands may shorten the lamp life. Use a cloth or glove to handle the new lamp.

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Software Copyright:

This product uses free software as well as software to which this company holds the rights.

The following is information on the free software used by this product.

Hereafter, each author, the conditions, and so on are described in the original. Furthermore, there is no guarantee for free software because of the characteristics of the free software that has already been used in this product; any problems in this product (including problems that originate with the free software concerned) do not influence the conditions of the guarantee (written guarantee) issued by this company.

(1) libjpeg

© 1991-1998 Thomas G. Lane.

This software is based in part on the work of the Independent JPEG Group.

(2) libpng

© 1998-2004 Glenn Randers-Pehrson

© 1996-1997 Andreas Dilger

© 1995-1996 Guy Eric Schalnat, Group 42, Inc.

(3) zlib

© 1995-2003 Jean-loup Gailly and Mark Adler

Trademarks

Epson and Instant Off are registered trademarks, and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

PowerLite, Accolade, and PrivateLine are registered trademarks, SizeWise and Duet are trademarks, and Extra Care is a service mark of Epson America, Inc.

Pixelworks, DNX, and the DNX logo are trademarks of Pixelworks, Inc.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2009 Epson America, Inc.

7/09
CPD-27620

C

Contents

<i>Welcome</i>	9
Using Your Documentation	10
Projector Parts	11
Projector Control Panel	12
Remote Control	13
Projector Dimensions	14
Registration and Warranty	15
Optional Accessories	15

1

<i>Setting Up the Projector</i>	17
Unpacking the Projector	18
Additional Components	18
Positioning the Projector	19
Determining Projection Distance	20
Connecting to Video Equipment	22
Connecting an HDMI Video Source	23
Connecting a Component Video Source	24
Connecting a Composite Video Source	25
Connecting an S-Video Source	25
Connecting an RGB Video Source	26
Connecting to a Computer	27
Playing Sound Through the Projector	28
Connecting a Digital Camera or Other USB Device	28
Turning the Projector On and Off	30
Using the Direct Power On Function	31
Shutting Down the Projector	32

2	<i>Displaying and Adjusting the Image</i>	33
	Selecting an Image Source	34
	Adjusting the Image	34
	Adjusting the Position of the Image	35
	Adjusting the Image Shape	35
	Focusing and Zooming the Image	36
	Selecting the Color Mode	37
	Resizing Video Images	38
3	<i>Using the Remote Control</i>	39
	Operating the Remote Control	40
	Controlling the Picture and Sound	40
	Turning Off the Picture and Sound	40
	Stopping Action	41
	Controlling the Volume	41
	Presenting a Slideshow	42
	Starting a Slideshow	42
	Selecting Slideshow Display Options	44
4	<i>Fine-Tuning the Projector</i>	45
	Using the Menu System	46
	Restoring the Default Settings	47
	Adjusting the Image	47
	Adjusting Signal Settings	49
	Customizing Projector Features	51
	Customizing Power and Operation	52
	Using the Projector Security Features	54
	Creating Your Own Startup Screen	54
	Disabling the Projector's Buttons	56
	Using Security Locking	57
5	<i>Maintaining the Projector</i>	59
	Cleaning the Lens	60
	Cleaning the Projector Case	60
	Cleaning the Air Filter	60
	Replacing the Air Filter	61

Replacing the Lamp	62
Resetting the Lamp Timer	65
Checking Lamp Usage	65
Replacing the Remote Control Batteries	66
Transporting the Projector	67

6 <i>Solving Problems</i>	69
Using On-Screen Help	70
Checking Projector Status	71
What To Do When the Lights Come On or Flash	71
Solving Projector Operation Problems	73
Solving Problems With the Image or Sound	74
Solving Problems With the Remote Control	80
Where To Get Help	81
Speak to a Support Representative	81

A <i>Technical Specifications</i>	83
--	----

B <i>Notices</i>	89
Important Safety Instructions	89
FCC Compliance Statement	92

<i>Index</i>	93
------------------------	----

W

Welcome

The PowerLite® Home Cinema 705HD lets you enjoy High-Definition, theater-quality images in the relaxing environment of your own home. You can connect it to a wide range of video sources and computers, so you can enjoy perfectly adjusted images from all your movies and games.

Your compact, lightweight projector offers these outstanding features:

- 720p High-Definition performance
- Native WXGA resolution (1280 × 800) with up to 2500 lumens of white and color light output (brightness)
- 3000:1 contrast ratio in Dynamic color mode with Auto Iris
- HDMI™ (High Definition Multimedia Interface™) port for superior, uncompressed digital video
- USB thumb drive port for PC-free JPEG slideshows
- Four color modes to optimize viewing for different environments and image content
- Flexible setup options, including front projection and ceiling mounted
- Instant Off®/On power modes for quick setup and take-down
- Auto Keystone correction and 1.2X optical zoom for easy picture adjustments
- Projector button lock and security cable attachments for parental control and security
- Integral lens cover that won't get lost
- Low power, long-lasting lamp with two Power Consumption modes

Using Your Documentation

This book contains all the information you need to set up and use your projector. Please follow these guidelines as you read through it:


- Warnings must be followed carefully to avoid bodily injury.
- Cautions must be observed to avoid damage to your equipment.
- Notes contain important information about your projector.
- Tips contain additional projection hints.

Here's where you can look for even more information:


- **Quick Setup sheet**
Provides information for connecting the projector to your equipment, displaying and adjusting the image, and solving display problems.
- **Built-in help system**
Provides assistance for common problems. Available from the ? Help button on the projector or the remote control. See page 70 for details.
- **epson.com/support**
Download FAQs and e-mail your questions to Epson support.
- **PrivateLine® support**
If you still need help after checking this *User's Guide* and the sources listed in this section, you can use the Epson PrivateLine Support service to get help fast. Call (800) 637-7661 and enter the PIN on the PrivateLine card. Or take advantage of Epson's automated support services 24 hours a day. See page 81 for more information.

Projector Parts


Front

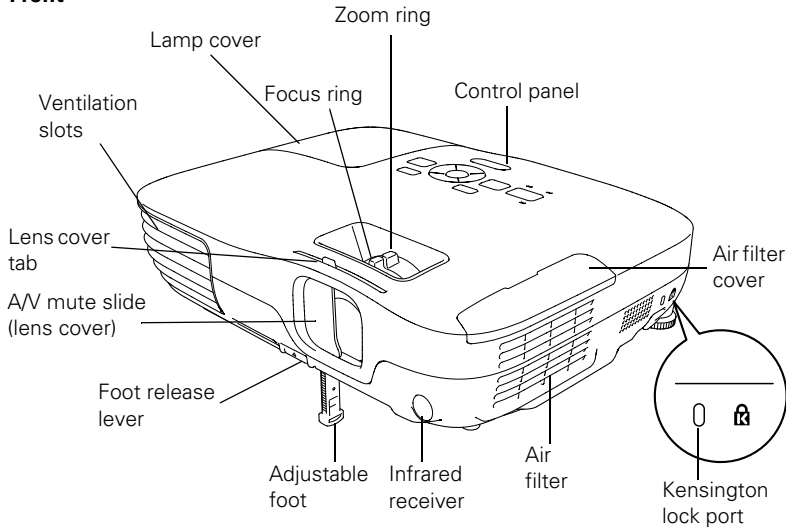


Back

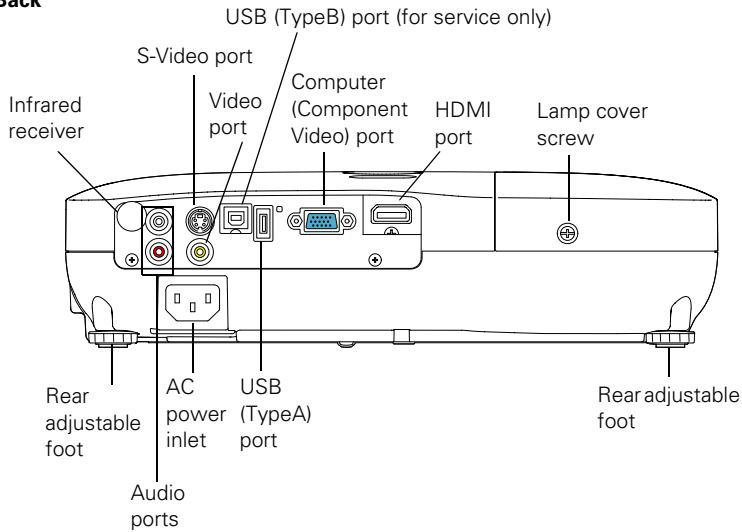

Projector Control Panel


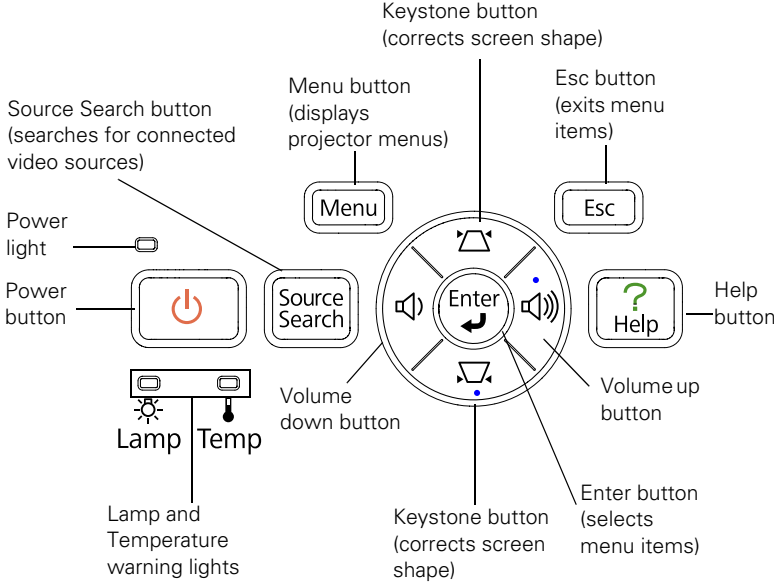


Remote Control

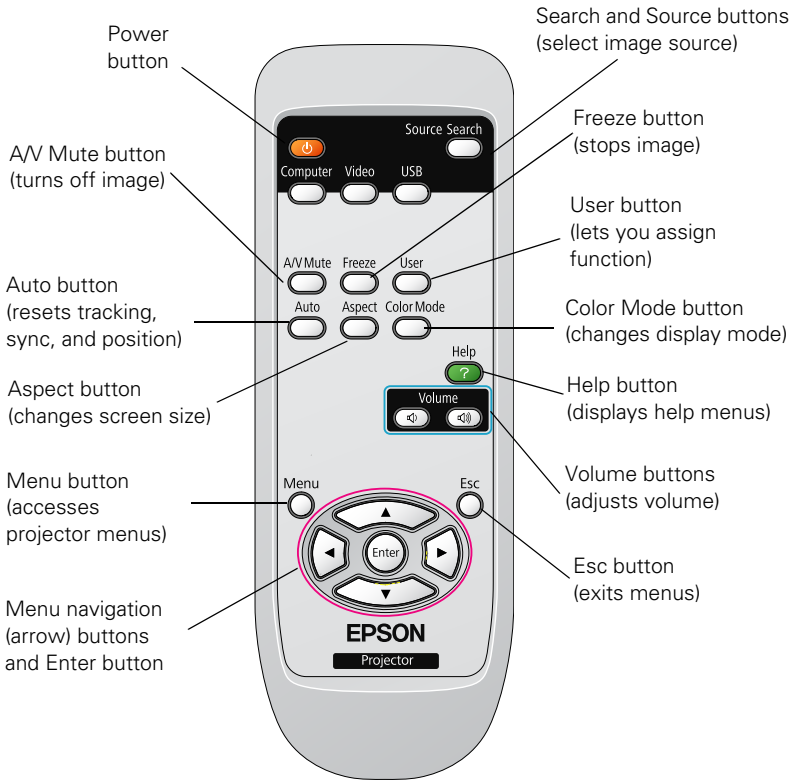

Projector Dimensions

Use the dimensions below to guide you in placing or installing the projector.

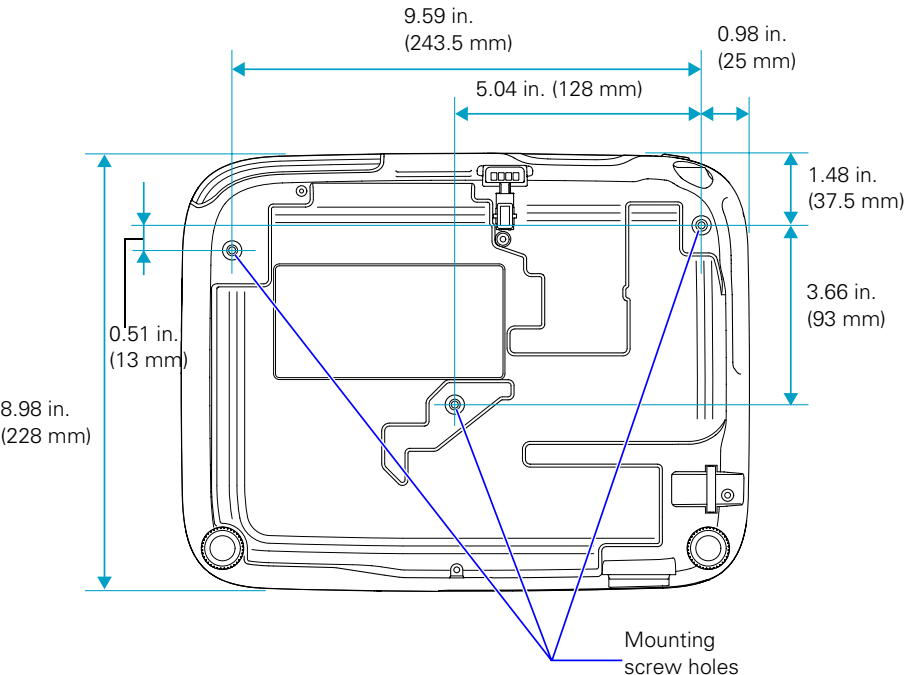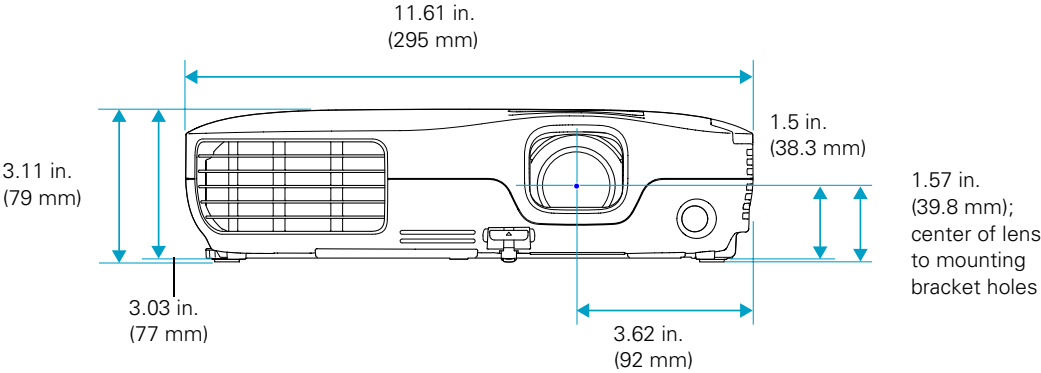

Registration and Warranty

Your projector comes with a basic warranty that lets you project with confidence. For details, see the warranty brochure included with your projector.

In addition, Epson offers free Extra CareSM Home Service. In the unlikely event of an equipment failure, you won't have to wait for your unit to be repaired. Instead, Epson will ship you a replacement unit anywhere in the United States or Canada. See the brochure included with your projector for details.

You can register using the included CD, or you can register online at epson.com/webreg. Registering also lets you receive special updates on new accessories, products, and service.

Optional Accessories

To enhance your use of the projector, Epson offers the following optional accessories:

Product	Part number
Replacement lamp	V13H010L54
Replacement air filter set	V13H134A25
Universal projector ceiling mount	ELPMBPJF
Adjustable suspended ceiling channel kit	ELPMBP01
False ceiling plate kit	ELPMBP02
Structural round ceiling plate	ELPMBP03
Adjustable extension column (pipe) 8" - 11"	ELPMBC01
Kensington security lock	ELPSL01
50-inch portable screen (4:3 aspect ratio)	ELPSC06
80-inch portable pop-up screen (4:3 aspect ratio)	ELPSC08
Accolade [®] Duet [™] Portable Projector Screen (4:3/16:9)	ELPSC80

Product	Part number
Component-to-VGA video cable S-Video cable	ELPKC19 ELPSV01
DC-06 document camera (ELPDC06) DC-10s document camera	V12H321001 ELPDC10S
Soft shoulder case for projector and notebook Wheeled soft carrying case Molded hard-shell wheeled carrying case Swiss Gear® backpack	ELPKS61 ELPKS62 ELPKS58 ELPKS63

You can purchase screens or other accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at www.epsonstore.com (U.S. sales) or www.epson.ca (Canadian sales).

1 *Setting Up the Projector*

This chapter tells you how to unpack the projector and connect it to video equipment, such as a VCR, DVD player, or video camera, or to a notebook or desktop computer.


You can also connect the projector to a USB storage device or digital camera.

Follow the instructions in this chapter on:


- Unpacking the projector
- Positioning the projector
- Connecting to video equipment
- Connecting to a computer
- Playing sound through the projector
- Connecting to a digital camera or other USB device
- Turning the projector on and off

Unpacking the Projector


After unpacking the projector, make sure you have all these parts:

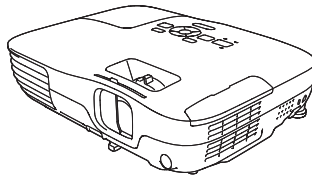


Projector

 


PDF manual and
registration CD-ROM

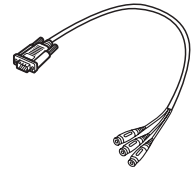


Component-to-VGA
video adapter

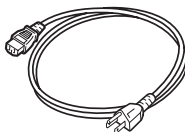

Power cord

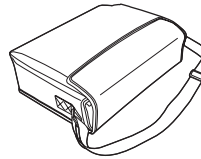

Carrying case

 

Remote control
and batteries

Save all packaging in case you need to ship the projector. Always use the original packaging (or the equivalent) when you need to send the projector to another location; see page 67 for instructions.

Additional Components


Depending on how you plan to use the projector, you may need additional components:

- To receive an HDMI signal from your video device, you'll need an HDMI cable. One may be provided with your video equipment.
- To receive a component video signal from a DVD player or other video device, you'll need a component video cable (one may be provided with your video equipment) and the component-to-VGA video adapter that came with the projector.
- To receive an S-Video signal, you'll need an S-Video cable. One may be included with your video equipment, or you can purchase one from Epson. See "Optional Accessories" on page 15.
- To receive an audio signal, you'll need an RCA-type audio cable with two male plugs, or a stereo mini-jack audio adapter cable (not necessary with HDMI connection).

Positioning the Projector


You can place the projector in a variety of viewing setups.

When projecting from the front, place the projector directly in front of the center of the screen, facing the screen squarely. The center of the lens should be about level with the bottom of the screen.

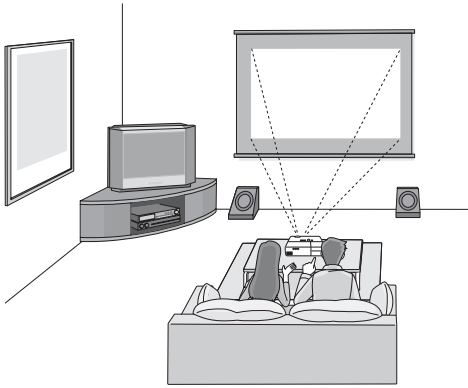

If you place the projector below screen level, you may need to tilt it up by extending the front adjustable foot (see page 35). Tilting the projector causes the image to become “keystone” shaped, but you can correct the distortion (see page 35).

You can also install the projector on the ceiling using the optional ceiling mounting hardware (see page 15). Use the projector dimensions on page 14 to assist you in installing the projector.

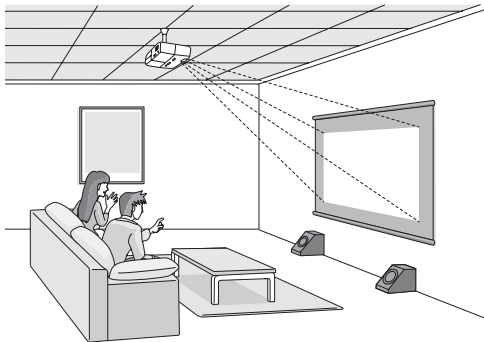

note

After positioning the projector, you may want to connect a Kensington MicroSaver® anti-theft device to the lock port on the projector. You can purchase this from Epson; see page 15.

You can also install the projector in two other viewing setups: rear projection onto a semi-transparent screen, or rear/ceiling projection.


If you project from overhead or the rear of the screen, you'll need to select the appropriate **Projection** setting in the projector's Extended menu to orient the image correctly (see page 52).

Keep these considerations in mind as you position the projector:

- Place the projector on a sturdy, level surface.
- Make sure there is plenty of space for ventilation around and under the projector.
- Make sure the projector is within 5.9 feet (1.8 meters) of a grounded electrical outlet or extension cord.

Determining Projection Distance

Image size increases with distance, but can vary depending on the aspect ratio (image shape), how you zoom into the image, and whether you've adjusted other image settings. Use the illustrations and tables below to help you determine the projection distance.

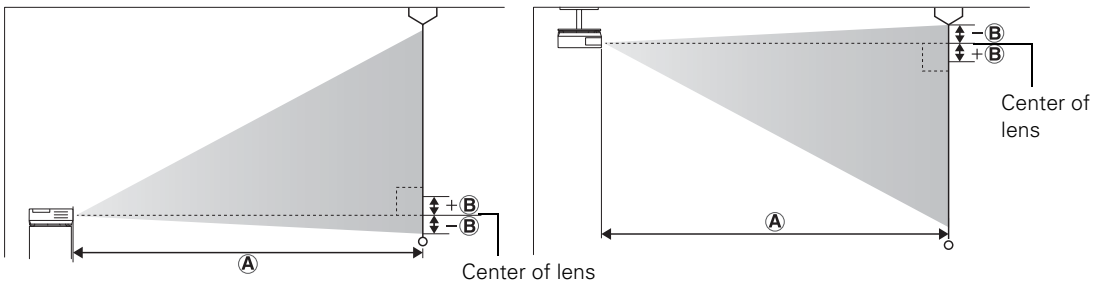

You can also use the [Image Size Calculator](#) on the Epson website.

16:10 image

Diagonal screen size	Projection distance (A) Wide to Tele	Offset (B)
40 inches (102 cm)	44 to 53 inches (111 to 134 cm)	-3 inches (-8 cm)
50 inches (127 cm)	55 to 66 inches (139 to 168 cm)	-3.8 inches (-10 cm)
60 inches (152 cm)	66 to 79 inches (168 to 202 cm)	-4.5 inches (-12 cm)
80 inches (203 cm)	88 to 106 inches (225 to 270 cm)	-6.1 inches (-15 cm)
100 inches (254 cm)	111 to 133 inches (281 to 338 cm)	-7.6 inches (-19 cm)
150 inches (381 cm)	167 to 200 inches (424 to 509 cm)	-11.4 inches (-29 cm)
200 inches (508 cm)	223 to 268 inches (566 to 680 cm)	-15.1 inches (-38 cm)
320 inches (813 cm)	357 to 429 inches (907 to 1089 cm)	-24.2 inches (-62 cm)

4:3 image

Screen size	Projection distance (A) Wide to Tele	Offset (B)
40 inches (102 cm)	50 to 60 inches (126 to 152 cm)	-3.4 inches (-9 cm)
50 inches (127 cm)	62 to 75 inches (158 to 190 cm)	-4.3 inches (-11 cm)
60 inches (152 cm)	75 to 90 inches (190 to 229 cm)	-5.1 inches (-13 cm)
80 inches (203 cm)	100 to 121 inches (255 to 306 cm)	-6.9 inches (-17 cm)
100 inches (254 cm)	126 to 151 inches (319 to 383 cm)	-8.6 inches (-22 cm)
150 inches (381 cm)	189 to 227 inches (480 to 577 cm)	-12.9 inches (-33 cm)
200 inches (508 cm)	252 to 303 inches (641 to 770 cm)	-17.1 inches (-44 cm)
280 inches (711 cm)	354 to 425 inches (898 to 1079 cm)	-24 inches (-61 cm)

16:9 image

Screen size	Projection distance (A) Wide to Tele	Offset (B)
40 inches (102 cm)	45 to 54 inches (114 to 137 cm)	-2 inches (-5 cm)
50 inches (127 cm)	56 to 68 inches (143 to 172 cm)	-2.5 inches (-6 cm)
60 inches (152 cm)	68 to 82 inches (172 to 208 cm)	-3 inches (-8 cm)
80 inches (203 cm)	91 to 109 inches (231 to 278 cm)	-4 inches (-10 cm)
100 inches (254 cm)	114 to 137 inches (289 to 348 cm)	-5.1 inches (-13 cm)
150 inches (381 cm)	171 to 206 inches (435 to 523 cm)	-7.6 inches (-19 cm)
200 inches (508 cm)	229 to 275 inches (582 to 699 cm)	-10.1 inches (-26 cm)
310 inches (787 cm)	356 to 427 inches (903 to 1084 cm)	-15.7 inches (-40 cm)

Connecting to Video Equipment

You can connect several video sources to the projector at the same time. Before starting, look at your video equipment to determine its available video output connections:

- If your video player has an HDMI connector, see “Connecting an HDMI Video Source” on page 23.
- If your video player has a component video port (three connectors labeled either Y/Cb/Cr or Y/Pb/Pr), see “Connecting a Component Video Source” on page 24.
- If your video player has a yellow RCA video output connector, see “Connecting a Composite Video Source” on page 25.
- If your video player has an S-Video connector, see “Connecting an S-Video Source” on page 25.
- If your video player has an RGB video port, see “Connecting an RGB Video Source” on page 26.


After connecting video cables, you may also want to connect an optional audio cable to play sound through the projector; see page 28.

If you connect using an HDMI cable, the video and sound are both transferred and you won't need to connect any additional cables for audio.

Connecting an HDMI Video Source

For the best image and sound quality, connect your video equipment to the HDMI (High-Definition Multimedia Interface) port, if possible.

Connect an HDMI cable to the HDMI connector on your player and the HDMI port on the projector.

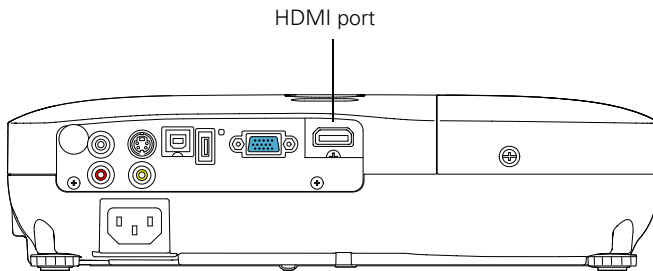

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.


note

If an HDMI cable was not provided with your video device, you can purchase one from an electronics dealer.

Connecting a Component Video Source

If your video equipment has component video connectors (three connectors labeled either Y/Cb/Cr or Y/Pb/Pr), you can use the component-to-VGA video adapter that came with your projector and a component video cable, or you can purchase a component-to-VGA video cable from Epson (see page 15) or an electronics dealer.

1. Connect one end of your component video cable to the Y/Cb/Cr (or Y/Pb/Pr) connectors on your player.
2. Connect the component end of the component-to-VGA video adapter to the free end of the component video cable.
3. Connect the VGA end of the adapter to the **Computer (Component Video)** port on your projector.

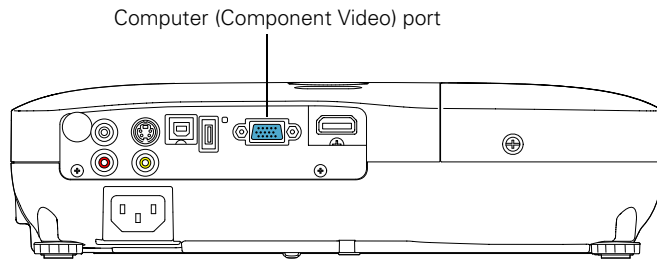


4. You may need to change the **Input Signal** setting in the projector's **Signal** menu to **Auto** (see page 50).
5. If you want to play sound through the projector, see page 28 for instructions on connecting an audio cable.

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.

Connecting a Composite Video Source

1. If your video cable has an RCA connector, connect it to the yellow video output connector on your player and the yellow Video port on the projector.

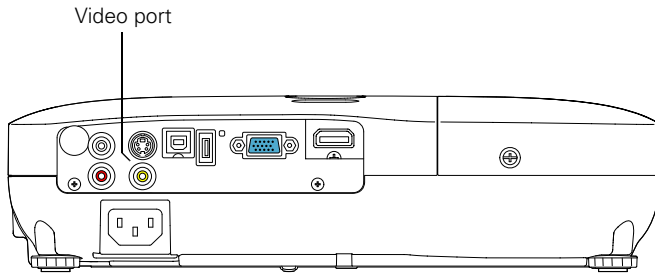


2. If you want to play sound through the projector, see page 28 for instructions on connecting an audio cable.

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.

Connecting an S-Video Source

1. Connect the S-Video cable to the S-Video connector on your player and the S-Video port on the projector.

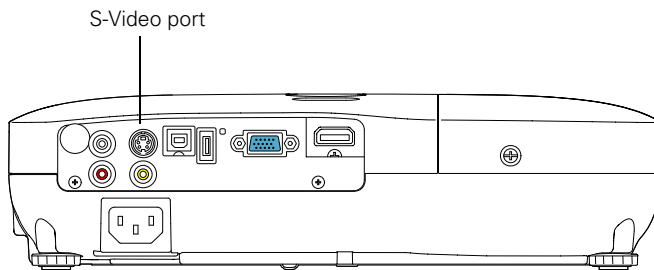

2. If you want to play sound through the projector, see page 28 for instructions on connecting an audio cable.

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.

note

If the video cable was not provided with your video device, you can purchase one from an electronics dealer.

note

If the S-Video cable was not provided with your video device, you can purchase one from Epson; see page 15.


note

You can purchase a VGA computer cable from an electronics dealer.

Connecting an RGB Video Source

You can connect to an RGB video source using a VGA computer cable.

1. Connect the cable to the RGB video port on your player and the Computer (Component Video) port on the projector.

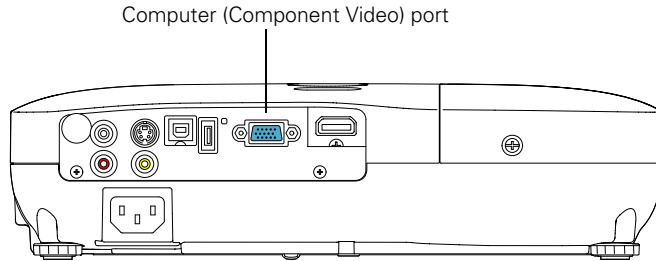

2. You may need to change the **Input Signal** setting in the projector's **Signal** menu to **RGB** (see page 50).
3. If you want to play sound through the projector, see page 28 for instructions on connecting audio cables.

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.


Connecting to a Computer

You can connect the projector to any computer that has a standard video output (monitor) port, including desktop models, PC notebook computers, Macintosh PowerBook® and iBook® computers, and hand-held devices.

To play sound through the projector, connect an audio cable (see page 28).

You can connect to the projector using a VGA computer cable.

1. Connect one end of a VGA computer cable to the projector's **Computer (Component Video)** port and the other end to your computer's monitor port.

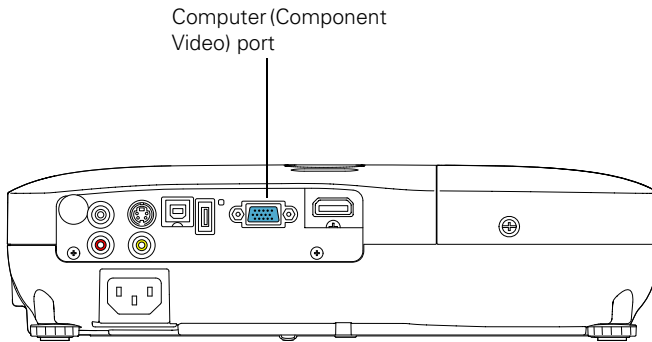

2. You may need to change the **Input Signal** setting in the projector's Signal menu to **RGB** or **Auto** (see page 50).
3. You can connect an optional audio cable to play sound through the projector (see page 28).

When you've finished making connections, see page 30 for instructions on turning on the projector and Chapter 2 for instructions on displaying and adjusting the image.

note

You can purchase a VGA computer cable from an electronics dealer.


caution

Don't try to force a connector to fit a port with a different shape or number of pins. You may damage the port or connector.

Playing Sound Through the Projector

You can play sound through the projector's speaker system.

1. Locate the appropriate cable and connect it to the **Audio** jacks on the projector.

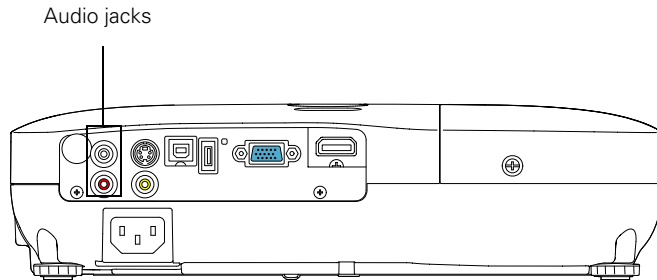

2. Connect the other end of the cable to the audio output connector(s) on your computer or video equipment.

Connecting a Digital Camera or Other USB Device

note

Use a cable less than 10 feet (3 meters) long and connect the camera or other device directly to the projector.


Your projector may not function correctly if you use a longer cable or connect to a USB hub.


If you connect a USB hard drive, make sure you use the AC adapter to power the hard drive.

You can connect your digital camera, USB thumb (flash memory) drive, USB hard drive, or multimedia storage viewer, such as the Epson P-7000 to the projector. Then you can use the projector's Slideshow function to display JPEG images or a presentation. See page 42 for details.

Use the USB cable specified for your device.

1. Follow the instructions beginning on page 30 to turn on the projector.

2. Connect the USB drive or the flat end of the USB cable to the  USB TypeA port on the projector, as shown.

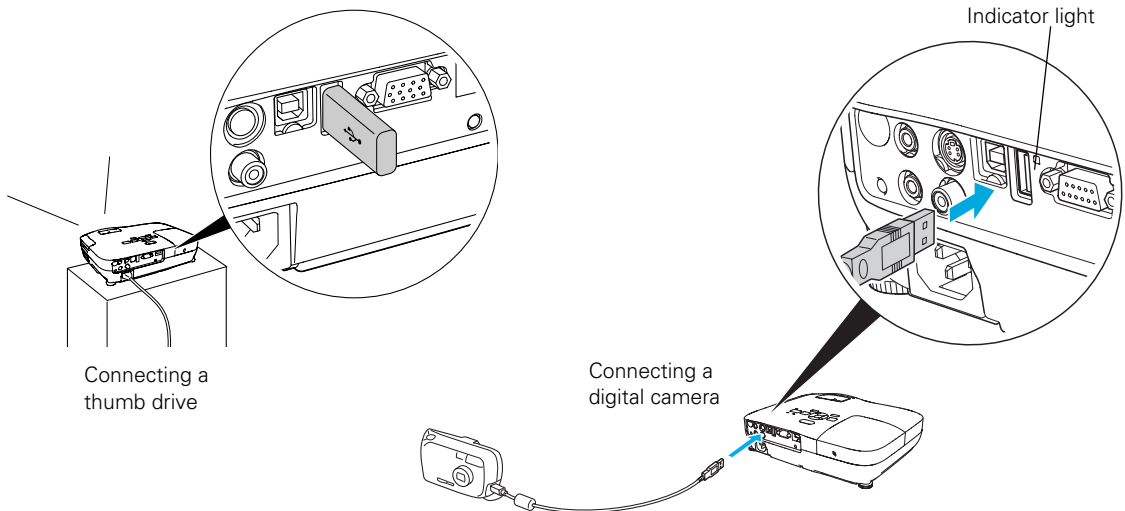

3. Connect the other end of the cable to your camera or other device, if necessary.

The indicator light on the projector turns orange and then green when a USB device is connected.

4. If you are not connected to another image source, the Slideshow program appears.

If you are connected to another image source, press the **USB** button on the remote control to go to the Slideshow program.

See page 42 for instructions on controlling the slideshow.

5. When you're finished, press **Esc** and select **Exit** to exit the Slideshow before turning off or removing the USB device.

Be sure to turn off your USB device (if necessary) before you remove the device or cable from the projector. Failure to do so may damage the device and/or the projector.

caution


Do not remove the device when the indicator light is flashing or on, or the Slideshow program is running, or you may damage the device or projector.

Turning the Projector On and Off


Turn on any connected computer or video equipment before starting the projector so it can automatically detect and display the image source. If you turn on the projector first, or have multiple pieces of connected equipment, you may have to select the image source manually (see page 34).

Follow these steps to turn on the projector:


1. Open the A/V Mute slide (lens cover).

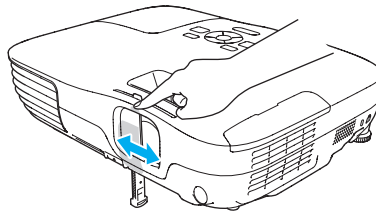


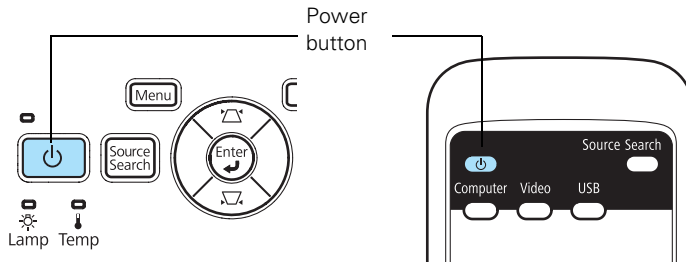
2. Plug one end of the power cord into the projector, and the other end into an electrical outlet.


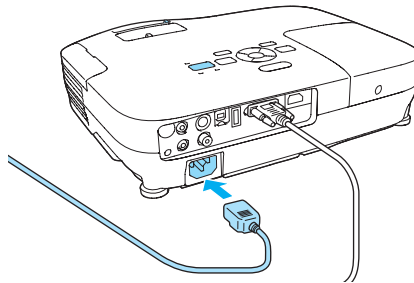


The  power light turns orange.

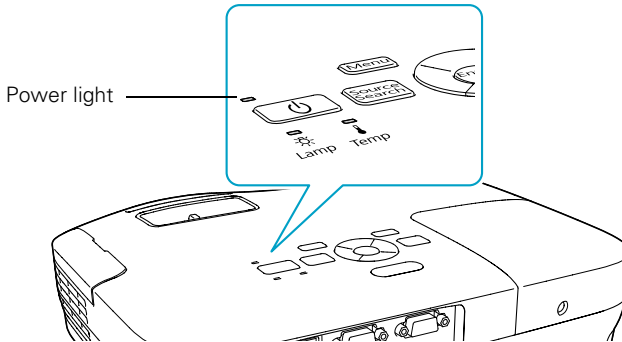


  3. Press the  power button on the projector or on the remote control.



The projector beeps once and the  power light flashes green as the projector warms up, then an image begins to appear. When the  power light stops flashing and remains green, the projector is ready for use.

 Using the Direct Power On Function

The Direct Power On function enables faster setup. The projector starts up automatically when you plug it in or turn it on with a wall switch. You don't have to press the  power button.

Follow these steps to enable Direct Power On:

1. Press the **Menu** button on the remote control or projector, then select the **Extended** menu and press **Enter**.
2. Choose **Operation** and press **Enter**.


warning

Never look into the lens when the lamp is on. This can damage your eyes, and is especially dangerous for children.

note

If a power outage occurs when Direct Power On is enabled and the projector is plugged in, the projector will restart when the power is restored.

3. Choose Direct Power On and press Enter.

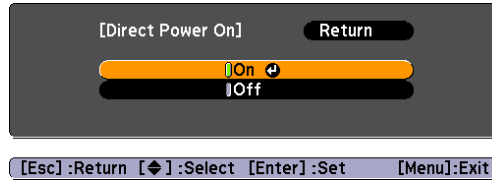


4. Highlight On and press Enter.
5. Press Menu to exit. The setting will take effect the next time you plug the projector into a power outlet.


note


Lamp life will vary depending upon mode selected, environmental conditions, and usage.

 Turn off this product when not in use to prolong the life of the projector.


You can set the projector to automatically turn off the lamp and enter "sleep mode" when it has not received any signals for 1 to 30 minutes (see page 53). This conserves electricity, cools the projector, and extends the life of the lamp. If you want to start projecting again, press the  power button. If you are done using the projector, unplug the power cord.


Shutting Down the Projector

 

This projector incorporates Instant Off technology. To turn it off, you can press its  power button as described below, unplug it, or turn off a power switch that supplies power to the projector. You don't have to wait for the projector to cool down first.

1. To turn off the projector, press the  power button on the remote control or projector.

  You see a confirmation message. (If you don't want to turn it off, press any other button.)



 2. Press the  power button again. The projection lamp turns off and the projector beeps twice. You can then unplug the power cord.

If you want to turn the projector on again, make sure the orange  power light is not flashing, then press the  power button.

2

Displaying and Adjusting the Image


Follow the guidelines in this chapter for:

- Selecting an image source
- Adjusting the image

Selecting an Image Source

You may need to select the image source if you have multiple image sources connected to the projector (such as a computer or DVD player). Selecting the image source lets you switch between images input from different pieces of connected equipment.

If you don't see the image you want, press the **Source Search** button or one of the **Source** buttons on the remote control, or press the **Source Search** button on the projector.

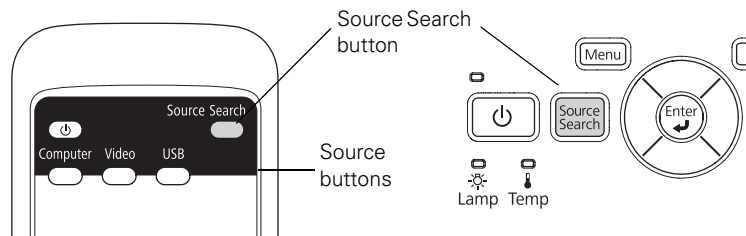

If you still can't see an image or can't project the same image that is on your notebook or computer screen, see page 74 for solutions.

Select **USB** to project from a USB device. See page 42 for instructions.

Adjusting the Image


Once you see your image, you may need to make certain adjustments:

- If the image is too high or too low, reposition it as described on page 35.
- If the image isn't square, see page 35.
- To focus or zoom your image, see page 36.
- To quickly adjust the color mode, see page 37.
- To change the image size (aspect ratio), see page 38.
- If you need to fine-tune the image and/or sound, see "Fine-Tuning the Projector" on page 45.


Adjusting the Position of the Image

If the image is too low on the screen, you can use the front adjustable foot to raise it.

1. Press the foot release lever up and lift the front of the projector.

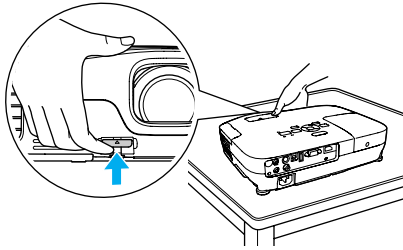

 
2. Once the image is positioned where you want it, release the lever to lock the foot in position.
3. If the image is tilted or you need to fine-tune the height of the image, you can turn the projector's adjustable rear feet.



Raising the projector may cause the image shape to distort or “keystone,” but you can correct the shape as described below.

Adjusting the Image Shape


You can maintain a rectangular image by placing the projector directly in front of the screen and keeping it level. This also produces the best picture quality. If the projector is tilted up or down (up to 30°), or placed at an angle, the shape may “keystone” and you may need to correct the image shape.

 

The projector's **Auto Keystone** function detects and corrects vertical keystone distortion. It takes about one second after the projector starts for the image to be corrected.

If your image is still distorted, do one of the following:


- Press the appropriate keystone correction button on the projector's control panel until the shape is evenly rectangular.

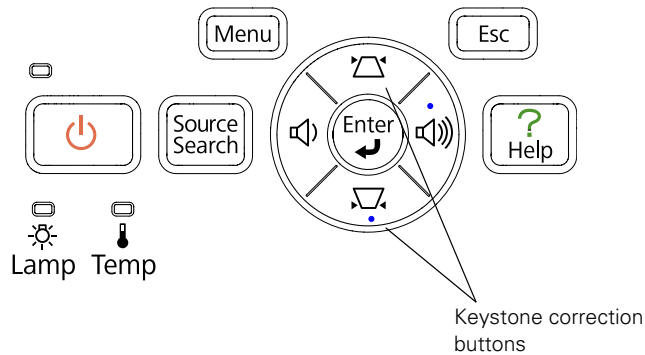


- Select the **Keystone** setting in the projector's **Settings** menu (see page 51). Then use the arrow buttons on the remote control to adjust the shape of the image.

Focusing and Zooming the Image

Turn the focus ring on the projector to sharpen the image.

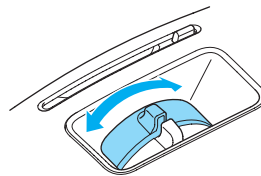

To enlarge or reduce the image, turn the zoom ring.

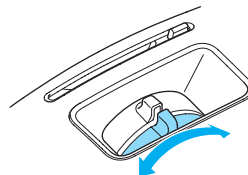


If the image still isn't large enough, you may need to move the projector farther away from the screen.

Selecting the Color Mode

The Color Mode adjusts the brightness, contrast, and color for various common viewing environments. Use this setting to quickly obtain a good picture.

Press the **Color Mode** button on the remote control until the option you want is projected in the upper right corner.

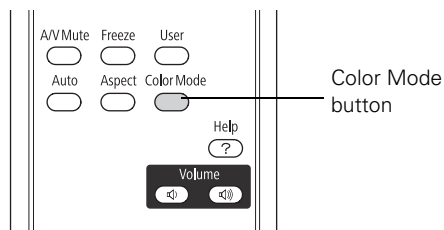

You can also select the **Color Mode** setting from the projector's Image menu. See page 47 for instructions.

Select from one of these **Color Mode** options:

- **Dynamic:** For projecting in a bright room.
- **Game:** For video games or TV in a bright room.
- **Living Room:** For projecting in a room with blinds closed.
- **Theatre:** For natural-toned movies in a darkened room.


note

You cannot change the aspect ratio when displaying from a USB device.

Resizing Video Images

You can resize your images by changing the aspect (width to height) ratio (depending on your input signal).

Press the **Aspect** button on the remote control repeatedly to cycle through the available options.

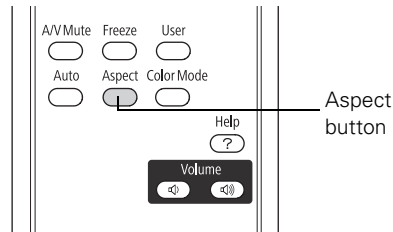

You can also select the **Aspect** setting from the projector's Signal menu. See page 49 for instructions.

Select from one of these **Aspect** options:

- **Auto** (HDMI images only): Automatically sets the best aspect ratio according to the input signal.
- **Normal** (for images sent through the **Computer (Component Video)** port only): Displays images using the full projection area and maintains the aspect ratio of the image. Choose this setting to automatically resize the image and make the best use of the display area.
- **16:9**: Converts the aspect ratio of the image to 16:9. 4:3 ratio images are elongated horizontally to fit.
- **Zoom**: Displays images using the full width of the projection area and maintains the aspect ratio of the image. The image may be cut off on the top and bottom depending on its aspect ratio.
- **Full**: Displays images using the full width of the projection area, but does not retain the aspect ratio. 4:3 ratio images are elongated horizontally.
- **Native**: Displays images as is (aspect ratio and resolution are maintained). Black bands may appear or images may be cut off, depending on the resolution.

3

Using the Remote Control

The projector includes a number of tools to enhance your video or presentation. All of them can be accessed using the remote control, which lets you operate the projector from anywhere in the room—up to 19.7 feet (6 meters) away.

This chapter covers:

- Operating the remote control
- Controlling the picture and sound
- Presenting a slideshow from a USB device

note

If a button is pressed for longer than 30 seconds, the remote control stops operating to conserve battery power. When you release the button, normal operation resumes.

Using the remote control under bright fluorescent lamps or in direct sunlight may affect projector response.

Operating the Remote Control

Make sure batteries are installed as described on page 66. Follow these tips for using the remote control:


- Point the remote control at the front or back of the projector, or at the screen.
- Stand within 19.7 feet (6 meters) of the projector.
- Aim the remote control within 30° to the side of, or 15° above or below, the remote control receivers on the projector.

Controlling the Picture and Sound

You can use the remote control to temporarily turn off the picture and sound, freeze the action, zoom in on the picture, and adjust the volume.

Turning Off the Picture and Sound

Press the **A/V Mute** button on the remote control or close the **A/V Mute** slide on the projector to turn off the image and sound, and darken your screen. This is useful if you want to temporarily re-direct your audience's attention without the distraction of a bright screen.

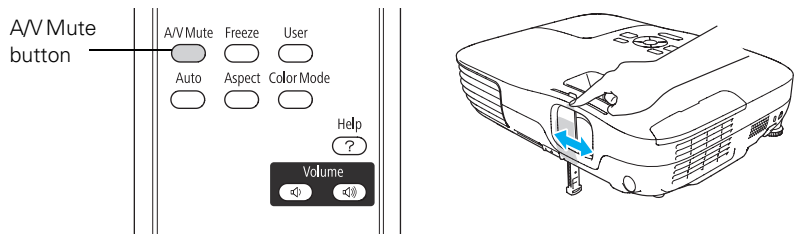

To turn the image and sound back on, press the button again, or open the **A/V Mute** slide.


You can create an image, such as a company logo or picture, to display on the screen whenever you press the **A/V Mute** button. See page 54 for more information.

You can also set the **Lens Cover Timer** setting to automatically turn off the projector after 30 minutes to protect the projector if the A/V Mute slide is closed for a long time. See page 52 for instructions.

Stopping Action

Press the **Freeze** button on the remote control to stop the action in your video or computer image. The image freezes but the sound continues.

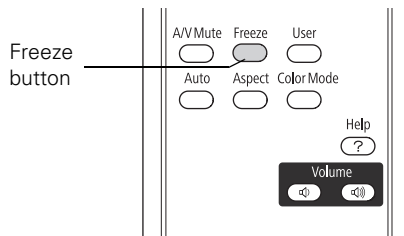

To restart the action, press the **Freeze** button again.




note

The Freeze function pauses the image, not the sound. Because the source continues to transmit signals, it will not resume at the same point.

Controlling the Volume

To change the volume, press the  or  button on the remote control or on the projector's control panel.

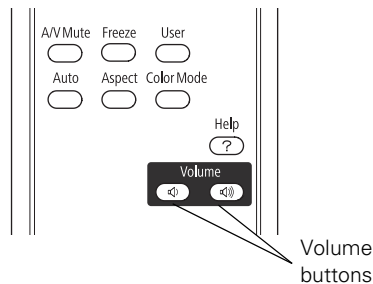

note

To temporarily shut off the sound and picture, press the A/V Mute button or close the A/V Mute slide.

Presenting a Slideshow

You can use your projector's Slideshow feature whenever you connect a USB device that contains .JPG image files. This lets you quickly and easily display individual images, or start a slideshow of all the images in a folder. You can control your slideshow using the projector remote control.

note

You can project .JPG files in resolutions up to 8176 × 6144, with pixel counts incrementing in multiples of 8.

If a .JPG file is highly compressed, your projector may not be able to display it correctly.

You cannot project movie files or progressive JPEG files using the Slideshow feature.

For an instant PowerPoint presentation, save your PowerPoint slides in JPEG File Interchange Format (.JPG) and store them in a folder. Copy that folder to a USB flash memory drive (thumb drive) or other USB device. Then connect the device to the projector and make sure the Slideshow **Display order** option is set to **Name order**; see page 44. Then you can start your presentation, as described below.

You can switch the display from the device displaying the slideshow to another source using the **Source Search** button or one of the specific **Source** buttons on the remote control. To return to the Slideshow source, press **Source Search** and select **USB**, or simply press the **USB** button.

Starting a Slideshow

1. Connect a USB device to the projector's USB TypeA port (see page 28).
2. If you are connected to another image source, press the **USB** button on the remote control to go to the Slideshow program.

If you are not connected to another image source, the Slideshow program appears automatically.



If necessary, press the arrow buttons on the remote control to highlight the device you want to present from, then press the **Enter** button.

3. If you need to select a subfolder on your device, press the arrow buttons to highlight the folder and press **Enter**.
4. To display an individual image, press the arrow buttons to highlight it and press **Enter**. To display additional image files, press the ◀ or ▶ arrow button.
5. To display a slideshow of all the images in the current folder, use the arrow buttons to highlight **Slideshow** on the bottom of the Slideshow screen and press **Enter**. The images display sequentially one time through. At the end, you see the folder display again.

Select the following as necessary to control your display or slideshow:

- To move back up a folder level, highlight **Back to Top** at the top of the Slideshow screen and press **Enter**.
- To select a different device, highlight **Select drive** in the upper right corner of the screen, press **Enter**, and select the device.
- If all the images in a folder do not fit on the Slideshow screen, highlight **Next page** at the bottom of the screen and press **Enter** to display the next screen full of images. Select **Previous page** at the top of the screen to display the previous screen.

note

To rotate a displayed image, press the ▲ or ▼ button on the remote control until it is displayed correctly.

note

*To display a slideshow from a folder that is not open, highlight the folder and press the Esc button on the remote control. Then select **Slideshow** from the menu that appears and press **Enter**.*


*To begin a slideshow from a particular image, use the arrow buttons to highlight that image, press **Enter**, then press **Enter** again.*

- To exit the slideshow, press **Esc**, select **Exit**, and press **Enter**.

Selecting Slideshow Display Options

To select slideshow options or add special effects, follow these steps:

1. Highlight **Option** at the bottom left corner of the slideshow screen and press **Enter**. You see this screen:

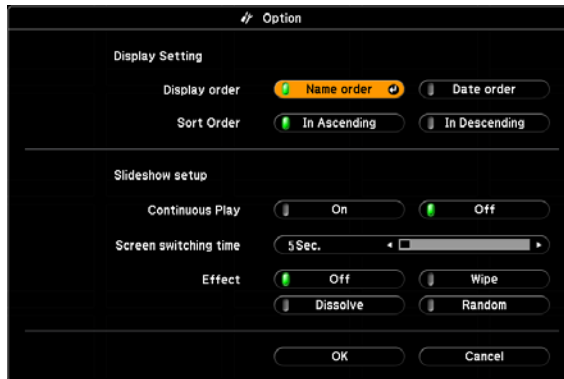

2. Highlight the options you want to use, and press **Enter**.

Option	Available settings
Display order	Name order displays files in name order Date order displays files in date order
Continuous play	On displays a slideshow continuously Off displays a slideshow one time through
Screen switching time	No does not switch file display automatically 1Sec. to 60Sec. displays files for the selected time and switches them automatically
Effect	Wipe transitions between images with a wipe effect Dissolve transitions between images with a dissolve effect Random transitions between images using a variety of effects in random order

3. When you are finished, highlight **OK** at the bottom of the screen and press **Enter**. (Highlight **Cancel** and press **Enter** to cancel your changes.)

4

Fine-Tuning the Projector


You can use the projector's on-screen menus to adjust the image, sound, and other features. This chapter covers the following information:

- Using the menu system
- Adjusting the image
- Adjusting signal settings
- Customizing projector features
- Customizing power and operation
- Using the projector security features

Using the Menu System

You can use the remote control or the projector's control panel to access the menus and change settings. Follow these steps:

1. To display the menu screen, press the **Menu** button on the remote control or on the projector. You see a menu screen similar to the one below:

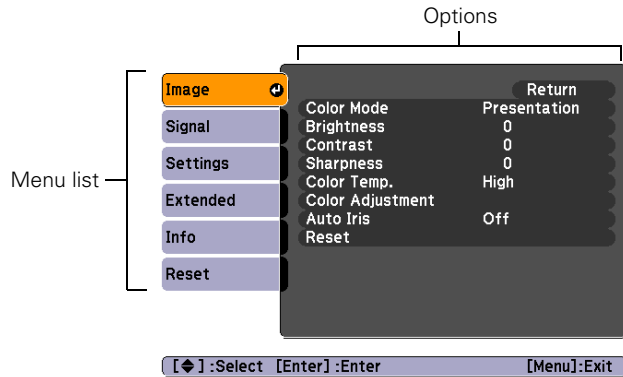

The menus are listed on the left and the options available for the highlighted menu are shown on the right.


2. Use the arrow buttons on the remote control or the projector to scroll through the menu list. When you've highlighted the desired menu, press the **Enter** button to select it.
3. Once you've selected the menu, use the arrow buttons to scroll through the list of options. (Some of the options may be grayed out or unavailable, depending on the selected source.)
4. After highlighting the option you want to adjust, use the arrow buttons to change the setting. In some cases, you may have to press the **Enter** button to view a sub-screen.
 - Press the left or right arrow button to adjust a slider bar.
 - To select from two or more settings, press the up or down arrow button to highlight the setting and press **Enter**.
5. After changing the settings, press the **Esc** button to save your changes and return to the previous menu (or press it again to exit the menu system). You can also press the **Menu** button to exit.



Restoring the Default Settings

You can use the Reset option on any menu to restore the factory-default settings for the settings in that menu.

To restore all the projector settings to their factory-default values, select the Reset menu, highlight Reset All, press Enter, and select Yes to confirm.

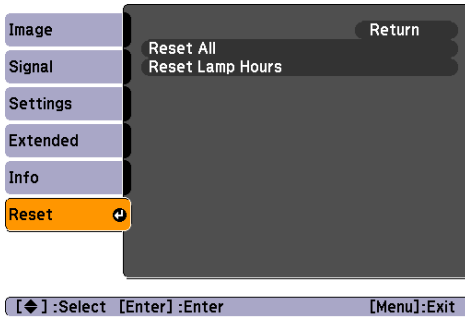


note

When you select Reset All in the Reset menu, it does not reset the Input Signal, User's Logo, Language, or Lamp Hours settings.


Adjusting the Image

You can use the Image menu to adjust the brightness, sharpness, color, tint, contrast, and Auto Iris settings.

1. Press the Menu button on the projector or remote control and select the Image menu. You see a screen similar to one of these:

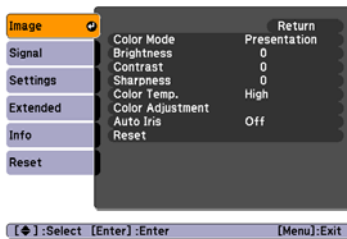

Computer/RGB video

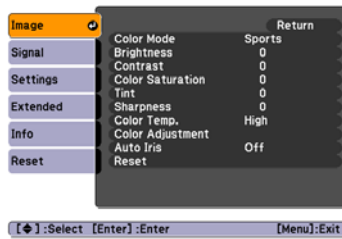

Component video/
Composite video/
S-Video

note

If you are using the HDMI port, you see the menu on the left if the current signal is digital RGB video, or the menu on the right if the signal is component video.

note

The available settings vary depending on the input source selected.

The Brightness setting changes the opacity of the projector's LCD panels. You can also change the lamp's brightness. Select Power Consumption in the Settings menu, then choose Normal or ECO (the default setting is Normal).


2. Adjust the desired options as needed:

- **Color Mode**
Lets you quickly adjust the color and brightness for various environments. You can save a different setting for each source. See page 37 for a description of each color mode.
- **Brightness**
Lightens or darkens the overall image.
- **Contrast**
Adjusts the difference between light and dark areas.
- **Color Saturation**
Adjusts the color depth of the image.
- **Tint**
Adjusts the balance of green to magenta in the image.
- **Sharpness**
Adjusts the sharpness of the image.
- **Color Temp.**
Sets the color temperature of the image. Select **High** to tint the image bluer or **Low** to tint it redder (default setting is **Medium**). (Not available if **sRGB** is selected as the Color Mode setting.)
- **Color Adjustment**
Adjusts the color values. Select **Red**, **Green**, **Blue** to adjust red, green, and blue hue and saturation values. (Not available if **sRGB** is selected as the Color Mode setting.)
- **Auto Iris**
Automatically adjusts the projected luminance according to the brightness of the image. (Available only when **Dynamic** or **Theater** is selected as the Color Mode for the current input source.)


Adjusting Signal Settings

Although the projector normally detects and optimizes the input signal automatically, you can use the Signal menu to make manual adjustments. In addition to changing the position of the projected image, you can correct tracking and sync for computer images, or change the aspect ratio.


1. Press the **Menu** button and select the **Signal** menu. You see a screen similar to one of those below. (The settings will be different depending on the source you are projecting from.)

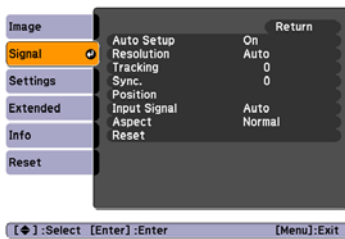


Computer/RGB video

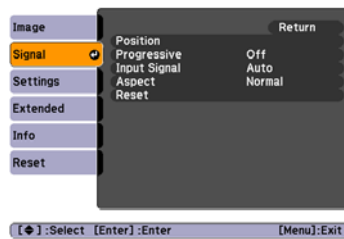

Component video

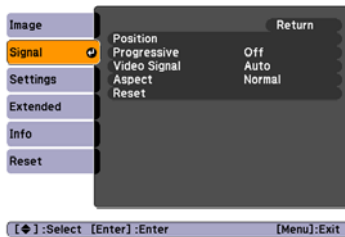

Composite video/S-Video

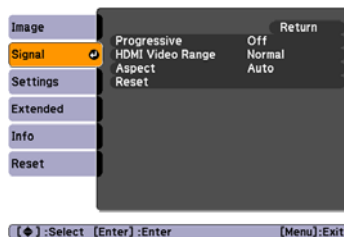

HDMI

2. Adjust the desired options as needed:

- **Auto Setup**

Leave this setting **On** to automatically optimize computer images. Turn it off if you want to save adjustments you have made to the Tracking, Sync, and Position settings.

- **Resolution**

Set to **Auto** to have the projector automatically identify the resolution of the input signal. If necessary, select **Wide** (for widescreen images) or **Normal** (for 4:3 ratio images).

note

You can also use the remote control's **Auto** button to automatically reset the projector's **Tracking**, **Sync**, and **Position** settings. See page 78 for details.

note


You can adjust the **Progressive** setting for signals from the HDMI input port (excluding digital RGB) or component video only when 480i/576i/1080i signals are being input.


The HDMI Video Range setting cannot be set for digital RGB signals.

- **Tracking**
Adjust this value to eliminate vertical stripes in computer images.
- **Sync**
Adjust this value if computer images appear blurry or flicker.
- **Position**
If the image is slightly cut off on one or more sides, it may not be centered exactly. Select this setting and use the arrow buttons to center it.
- **Progressive**
For composite video, S-Video, component video, and certain signals from the HDMI port only. Turn this setting on to convert interlaced signals into progressive signals (best for moving images). Leave the setting **Off** for still images.
- **HDMI Video Range**
When you connect to the HDMI input port, set the projector's video range to match the video range setting of your device.
- **Input Signal**
If the colors don't look right on the **Auto** setting, select the setting for the type of equipment you've connected to the **Computer (Component Video)** port. Choose **RGB** for a computer or RGB-video connection, or **Auto** for a video player that outputs a component video signal (with connectors labeled Y/Cb/Cr or Y/Pb/Pr).
- **Video Signal (composite or S-Video signals only)**
Select the setting for the type of equipment you've connected to the **Video** port. Leave this setting at **Auto** unless you are using a 60-Hz PAL system (then select **PAL60**).
- **Aspect**
Sets the image's aspect ratio (ratio of width to height). See page 38 for more information.

Customizing Projector Features

You can use the Settings menu to lock the buttons on the projector, adjust audio volume, and customize several other features.

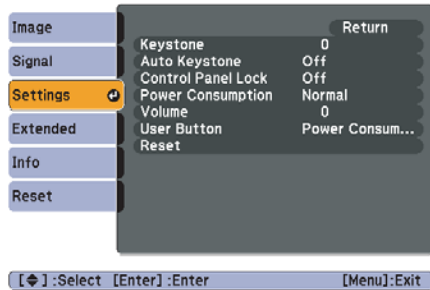


- **Keystone**
Adjusts the shape of the image if the projector has been tilted upward or downward. If you notice that lines or edge look jagged after adjustment, decrease the **Sharpness** setting (see page 47).
- **Auto Keystone**
Automatically compensates for keystone distortion when the projector is tilted upward or downward. This feature is available only when the projector is set for front projection (enabled by default).
- **Control Panel Lock**
Lets you disable all of the buttons on the projector, or all of the buttons except the  power button. See page 56 for more information.
- **Power Consumption**
Lets you select from two levels of brightness. The **ECO** setting reduces power consumption and projector noise, and extends the lamp's operating life.
- **Volume**
Raises or lowers the volume of the projector's speaker.

- **User Button**

Lets you create a shortcut to one of the following menu items: **Power Consumption, Info, Progressive, Resolution.** When you press the **User** button on the remote control, the assigned menu item is displayed.

Customizing Power and Operation

You can use the Extended menu to customize the way the projector displays images, enable Direct Power On, turn sleep mode on or off, and customize other projector operations.

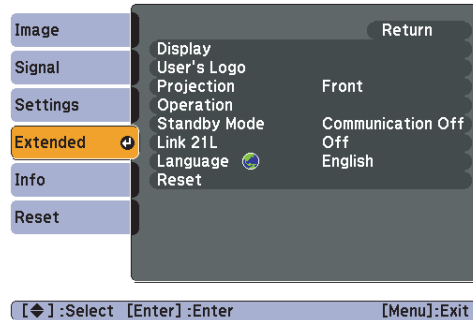

- **Display**

Messages: Lets you turn screen messages on or off.

Display Background: Sets the screen background to **Black, Blue, or Logo** when no image signal is available.

Startup Screen: Enables or disables display of the startup (User's Logo) screen when the projector is turned on.

A/V Mute: Sets the screen background to **Black, Blue, or Logo** when the **A/V Mute** button is pressed.

- **User's Logo**


Create a custom startup screen, as described on page 54.

- **Projection**

Select **Front** (to project onto the front of a screen), **Front/Ceiling** (when the projector is mounted upside-down from the ceiling),

Rear (to project from behind onto a transparent screen), or Rear/Ceiling (to project from behind onto a transparent screen when the projector is mounted upside-down from the ceiling).

■ Operation

Direct Power On: Enable if you want to be able to start the projector when you connect the power cord (without pressing the  power button).

Sleep Mode: Enable if you want the projector to turn off automatically if it is idle and no signal is received for 1 to 30 minutes (you can adjust the amount of time using the next setting).

Sleep Mode Timer: When Sleep Mode is on, you can set the period of time before the projector turns off automatically, from 1 to 30 minutes.

Lens Cover Timer: Enabled by default to turn the projector's power off automatically when the A/V Mute slide is closed for more than 30 minutes.

High Altitude Mode: Enable when you are using the projector above 4,900 feet (1,500 meters) to ensure that the temperature is regulated properly. Turn this setting off for lower elevations.

■ Standby Mode

Select **Communication On** to enable the projector to be monitored and controlled from a computer when it is in standby mode (the power light is orange).

■ Link 21L

Select **On** to enable the projector to be monitored and controlled from a computer using Link 21L software and the Epson USB Communication driver.

■ Language

Select a language to use for the projector menus.

note

If you hold down the A/V Mute button on the remote control for about five seconds, you switch between Front and Front/Ceiling or Rear and Rear/Ceiling.

If Direct Power On is enabled, the power cord is connected, and a power outage occurs, the projector will start when the power is restored.

note

Do not use the projector at altitudes above 7,500 feet (2,286 meters).

Using the Projector Security Features

To prevent unauthorized use of the projector, you can:

- Create a custom screen that is displayed at startup and/or when the **A/V Mute** button is pressed. The screen can be locked with a password to discourage theft and provides a way to identify the projector should it be stolen. See page 54.
- Disable the projector's buttons; this is useful, for example, in a classroom when you want to ensure that no one touches the projector's buttons while you're using the remote control. See page 56.
- Secure the projector to prevent theft using a cable locking system. See page 57.


Creating Your Own Startup Screen

You can transfer any image from your computer or video source to the projector and then use it as your startup screen. You can also use it as the screen displayed when the projector is not receiving a signal or when you press the **A/V Mute** button. The image can be a company logo, slogan, photograph, or any other image you want to use.

Capturing the Image

Start by displaying the image you want to use from either a computer or video source, such as a DVD player or digital camera. Then follow these steps to capture the image and transfer it to the projector:

1. Press the **Menu** button on the remote control, highlight the **Extended** menu, and press **Enter**.

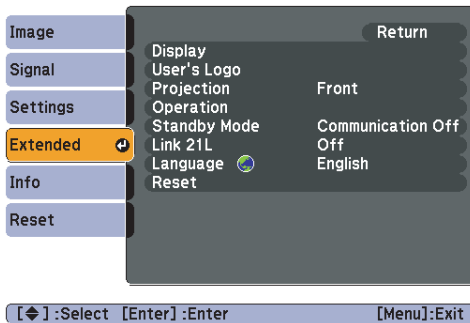

2. Highlight **User's Logo** and press **Enter**.
3. When you see a message asking **Choose this image as the User's Logo?**, select **Yes** and press **Enter**. A selection box displays over the image.
4. Use the arrow buttons to select the area of the image you want to use. Then press **Enter**.
5. When you see the message **Select this image?**, highlight **Yes** and press **Enter**.
6. Use the arrow buttons to select a zoom factor (display size) and press **Enter**.
7. When the message **Save this image as the User's Logo?** appears, select **Yes** and press **Enter**. Saving the logo may take a few moments. Do not use your projector, remote control, or video source while the logo is being saved.
8. When you see the message **Completed**, press **Menu** to exit.

note

When you choose an image for the user's logo, it erases any previously used image. You can save an image up to 300 × 400 pixels in size. Once you have saved a new user's logo, you cannot return to the factory default logo.

Choosing When to Display the Image


After your image is saved, you can set it to display as the startup screen, the screen you see when there's no signal, or the screen you see when you press the A/V Mute button (see page 40).

1. Press the **Menu** button, highlight the **Extended** menu, and press **Enter**.
2. Select **Display** and press **Enter**.
3. Choose from these display options:
 - Set **Display Background** to **Logo** to display your image when there is no signal.
 - Set **Startup Screen** to **On** to display your image when the projector is warming up.
 - Set **A/V Mute** to **Logo** to display your image when you press the **A/V Mute** button.
4. When you're finished, press **Menu** to exit.

Disabling the Projector's Buttons

When you enable the Control Panel Lock function, you can lock all of the projector's buttons, or all of the buttons except the **⏻** power button. The remote control can still be used to operate the projector.

1. Press the **Menu** button, highlight the **Settings** menu, and press **Enter**.
2. Select **Control Panel Lock** and press the **Enter** button.
3. Select **Full Lock** (to lock all projector buttons) or **Partial Lock** (to lock all buttons except the **⏻** power button) and press **Enter**.

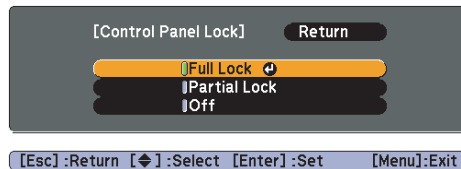

4. Select **Yes** and press **Enter** to confirm the setting.


5. Press the **Menu** button to exit.

To disable the Control Panel Lock function, select **Off** in the Control Panel Lock menu. Or press and hold the **Enter** button on the projector's control panel for seven seconds. A message is displayed and the lock is released.

Using Security Locking

The projector includes two security locking points to prevent its theft when installed or used in public locations:

- **Security cable attachment.** You can attach a commercially available security cable as shown below to secure the projector to a table or ceiling mount.

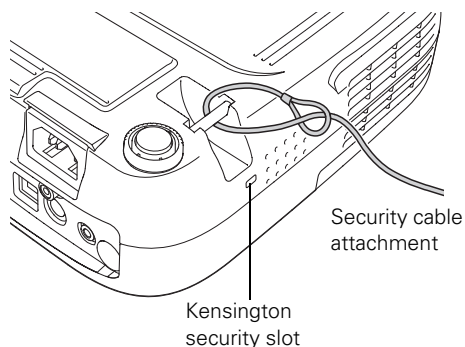

- **Kensington security slot.** The security slot (located on the side of the projector) is compatible with the MicroSaver security systems manufactured by Kensington. You can purchase this lock from Epson (see page 15).

5 *Maintaining the Projector*

Your projector needs little maintenance. All you have to do on a regular basis is clean the lens, and check that the air filter and vents are clean. A clogged air filter or vent can block ventilation needed to cool the projector.

warning

Before you clean any part of the projector, turn it off and unplug the power cord.

Never open any cover on the projector, except the lamp cover. Dangerous electrical voltages in the projector can injure you severely. Do not try to service this product yourself, except as specifically explained in this User's Guide. Refer all other servicing to qualified service personnel.

The only parts you should replace are the lamp and air filter. If any other part needs replacing, contact your dealer or a qualified servicer.

This chapter covers the following:

- Cleaning the lens
- Cleaning the projector case
- Cleaning the air filter
- Replacing the air filter
- Replacing the lamp
- Replacing the remote control batteries
- Transporting the projector

caution

Do not rub the lens with harsh materials or subject the lens to shocks, or you may damage it.

Do not use wax, alcohol, benzene, paint thinner, or other chemical detergents. These can damage the case.

note

To order replacement air filters, request part number V13H134A25. See page 15 for ordering information.

Cleaning the Lens

Clean the lens whenever you notice dirt or dust on the surface.

To remove dirt or smears on the lens, use a commercially available cloth for cleaning glasses.

Cleaning the Projector Case


Before cleaning, turn off the projector and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, dry, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent and firmly wring the cloth dry. Then wipe the case.

Cleaning the Air Filter

Your projector includes an air filter to ensure the best performance. If dust collects on the air filter, clean it as described here. Dust clogs prevent proper ventilation and can cause overheating, which can damage the projector.

1. Turn off the projector and unplug the power cord.
2. Remove dust from the air filter using a small vacuum cleaner designed for computer or office equipment, or gently clean the vent with a soft brush (such as an artist's paintbrush).

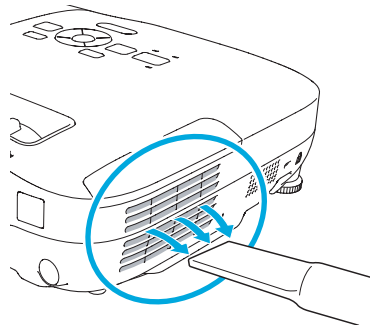

You can remove the air filter to clean both sides

If the filter is too dirty or broken, replace the filter as described below.


Replacing the Air Filter

You need to replace the air filter if:


- You cannot remove the dust from it
- The air filter is damaged or torn
- You repeatedly see a projected message telling you to clean or replace it

Contact your dealer or call Epson at 800-GO-EPSON (800-463-7766) to obtain a new air filter. Request part number V13H134A25.

1. Turn off the projector and unplug the power cord.
2. Open the air filter cover on the side of the projector.

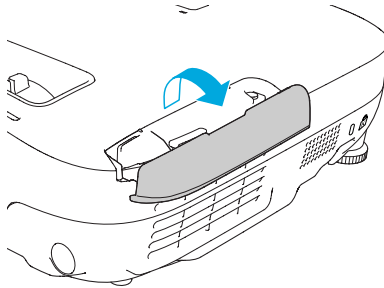


3. Lift the air filter out of its slot as shown.

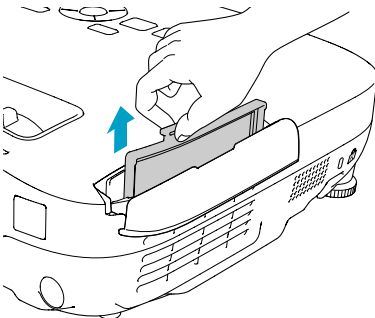

note

Air filters contain polycarbonate, ABS resin, and polyurethane foam. Dispose of used air filters according to local regulations.

- Slide the new air filter into the slot until it clicks into place.

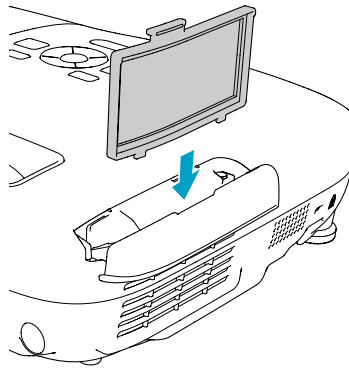


note


Turn off this product when not in use to prolong the life of the projector.


Replacing the Lamp

The life span of the projection lamp is about 4000 hours if **Power Consumption** in the Settings menu is **Normal** (default), and 5000 hours if this setting is **ECO**. See page 65 to check the lamp usage.

It is time to replace the lamp when:

- The projected image gets darker or starts to deteriorate.
- The message **Replace the lamp** appears on the screen and the  **Lamp** light flashes orange. To maintain projector brightness and image quality, replace the lamp as soon as possible.


You may also need to replace the lamp if the  **Lamp** light flashes red. See page 71.

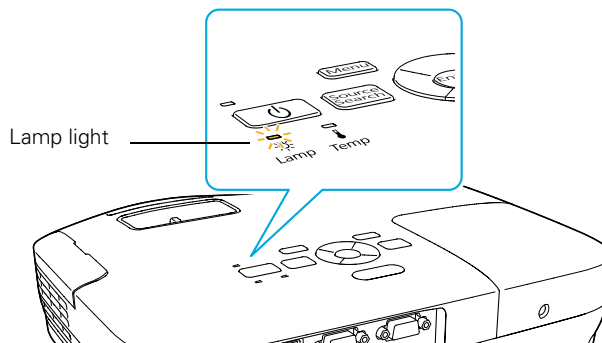


Contact your dealer or call Epson at 800-GO-EPSON (800-463-7766). Request part number V13H010L54.

Follow these steps to replace the lamp:

1. Turn off the projector and unplug the power cord.
2. Let the projector cool for at least an hour (if it has been on). The lamp is extremely hot immediately after use.
3. Loosen the lamp cover screw (you cannot remove it). Then slide the lamp cover off.

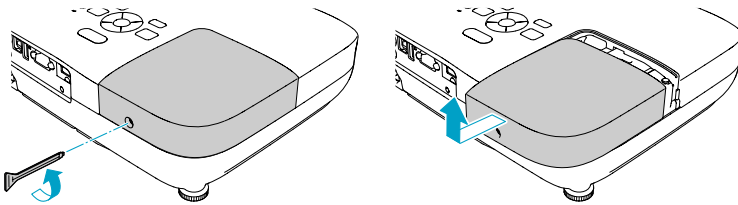

4. Loosen the two screws holding the lamp in place (you can't remove them).

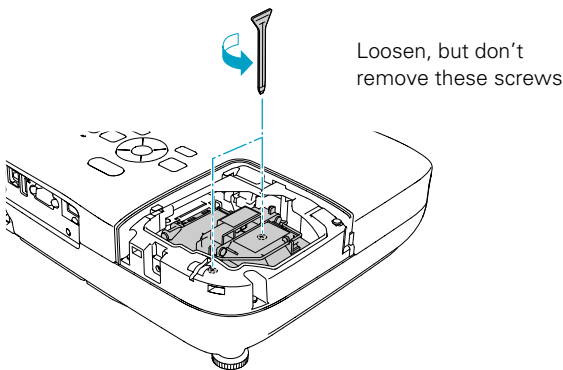

warning

Let the lamp cool fully before replacing it.


In the unlikely event that the lamp has broken, small glass fragments may be present and should be removed carefully to avoid injury. If the projector has been installed on the ceiling, you should stand to the side of the lamp cover, not underneath it.

If the lamp is used after the replacement period has passed, the possibility that the lamp may break increases. When a lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.


note

Ⓜ The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.

5. Hold the lamp as shown and pull it straight out.

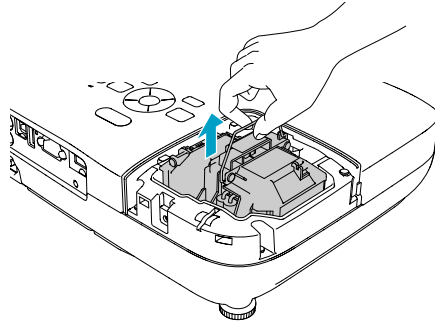


6. Gently insert the new lamp. (If it doesn't fit easily, make sure it is facing the right way.) Then tighten its screws.

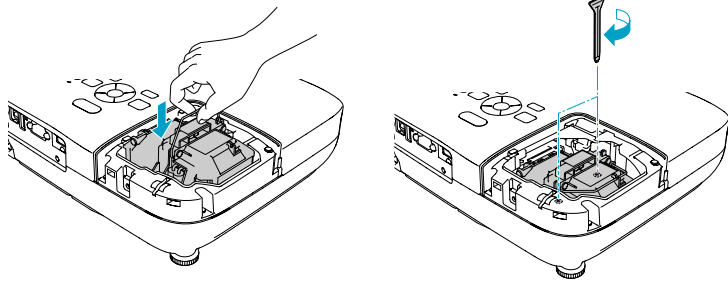

note

Tighten the lamp cover securely so you do not receive a lamp cover error when you turn the projector back on.

7. Replace the lamp cover, then tighten its screw.

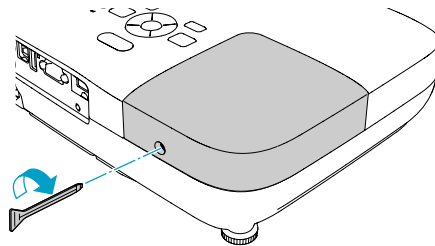


8. Reset the lamp timer as described in the next section.

Resetting the Lamp Timer

After you replace the lamp, you need to reset the lamp timer using the projector's menu system.


1. Press the **Menu** button on the remote control or on the projector's control panel. You see the main menu.
2. Select the **Reset** menu and press **Enter**. You see this screen:

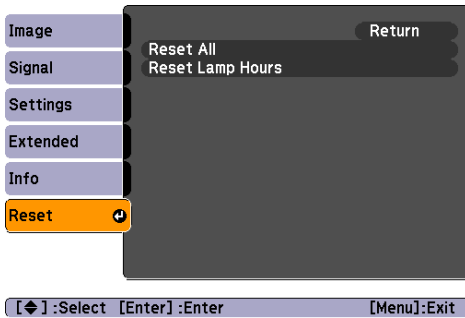

3. Select **Reset Lamp Hours** and press **Enter**.
4. When you see the prompt, select **Yes** and press **Enter**.
5. When you're finished, press **Menu** to exit.

Checking Lamp Usage

To check the number of hours the lamp has been used, press the **Menu** button and highlight the **Info** menu. You see a screen like this:

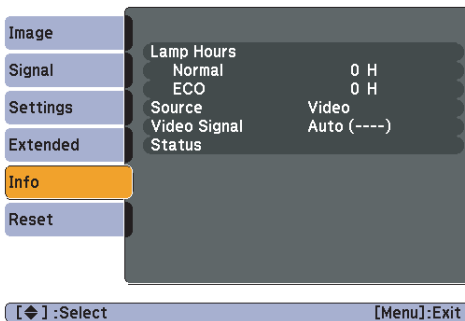

note

Do not reset the lamp timer if you have not replaced the lamp. Otherwise, you will receive incorrect lamp usage information on the Info menu; see page 65.

note

The information displayed depends on the input signal currently selected.

If you have used the projector for less than 10 hours, the hours are listed as 0H.

The life span of the lamp is about 4000 hours if **Power Consumption** in the Settings menu is **Normal** (default), and 5000 hours if this setting is **ECO**. Make sure you have a spare lamp handy if the usage hours on this menu are close to the life span of your lamp.

Replacing the Remote Control Batteries

caution

When replacing batteries, take the following precautions:

■ *Replace the batteries as soon as they run out. If the batteries leak, wipe away battery fluid with a soft cloth. If fluid gets on your hands, wash immediately.*

■ *Do not expose batteries to heat or flame.*


■ *Dispose of used batteries according to local regulations.*

■ *Do not use batteries other than those specified in this User's Guide and do not use batteries of different types or mix old and new batteries.*


■ *Keep these batteries out of the reach of children. Batteries are choking hazards and are very dangerous if swallowed.*

Replace the batteries in the remote control as described below:


1. Turn the remote control over.
2. Press in on the catch on the battery cover as you lift the cover off.

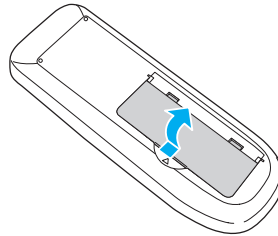

3. Install two AA alkaline batteries, inserting the + and – ends as shown.

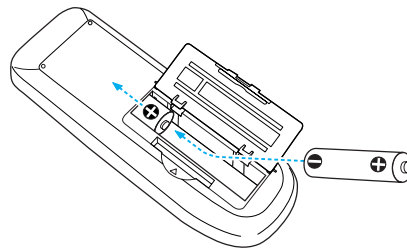

4. Replace the battery cover and press it down until it clicks into place.

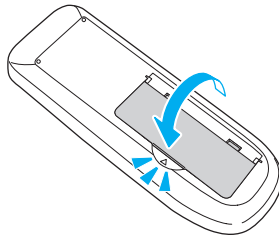

Transporting the Projector

The projector contains many glass and precision parts. When hand-carrying the projector, use the carrying case.

Follow these guidelines to prevent damage when transporting it:

- When shipping the projector for repairs, use the original packaging material if possible. If you do not have the original packaging, use equivalent materials, placing plenty of cushioning around the projector.
- When transporting the projector a long distance, first place it in a hard-shell shipping case, then pack it in a firm box with cushioning around the case.
- Close the **AV Mute** slide (lens cover).
- If a USB device is connected, remove it from the projector.
- Return the projector feet to their stored (highest) positions.

note

Epson shall not be liable for any damages incurred during transportation.

6 *Solving Problems*

This chapter helps you solve problems with your projector and tells you how to contact technical support for problems you can't solve yourself. The following information is included:


- Using the projector's on-screen help system
- What to do when the projector's status lights come on or flash
- Solving projector operation problems
- Solving problems with the image or sound
- Solving problems with the remote control
- Contacting technical support

Using On-Screen Help

If the image doesn't look right or your audio isn't working, you can get help by pressing the ? Help button on the projector or the remote control.

1. Press the ? Help button on the remote control or on the projector.

You see the Help menu:

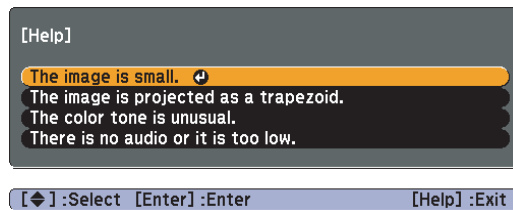

2. Use the arrow buttons on the remote control or the projector to highlight menu items.
3. Press the Enter button on the remote control or the projector to select the menu item and read the solutions.
4. To exit the help system, press the ? Help button or Esc button.


If none of the suggestions solve your problem, see additional solutions to problems in the following sections.

Checking Projector Status

If your projector isn't working correctly, first turn it off and unplug it. Then plug the power cord back in and turn on the projector. If this doesn't solve the problem, check the lights on top of the projector.



What To Do When the Lights Come On or Flash

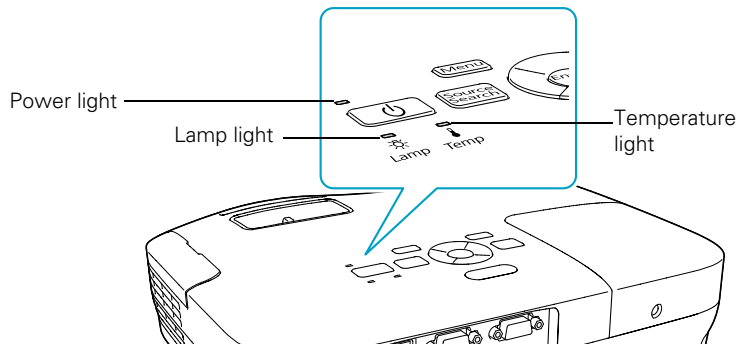The lights on top of the projector indicate the projector's status.


 


 


 

 
 

 
 

 




Refer to the following tables for a complete description of the projector's status lights:




Power light status

 power light status	Description
Flashing green	The projector is warming up. Wait for the image to appear.
Green	The projector is operating normally.
Orange	The projector is in sleep or standby mode. You can unplug it or press the  power button to turn it on.
Flashing orange	The projector is cooling down.
Red or flashing red	There is a problem with the projector. Check the next table to diagnose the problem.

Error light(s) status



Error light(s) status	Description
<p>  Green or orange  Flashing orange  Off </p>	<p>It's time to replace the lamp. See page 62 for instructions. If you continue to use the lamp after the replacement warning, there is an increased possibility that the lamp may break.</p>
<p>  Flashing red  Off  Flashing orange </p>	<p>Rapid cooling is in progress. Although this is not an abnormal condition, projection will stop automatically if the temperature rises higher. Make sure there is plenty of space around and under the projector for ventilation, and that the air filter and vents are clean.</p>
<p>  Red  Off  Red </p>	<p>The projector is overheating, which turns the lamp off automatically. Wait until the projector switches to standby mode (about 5 minutes). Make sure there is plenty of space around and under the projector for ventilation. The air filter may be clogged. Clean or replace the air filter as described on pages 60 to 62.</p> <p>If you're using the projector above an altitude of 4,900 feet (1,500 meters), turn on High Altitude Mode in the Operation menu (see page 53).</p> <p>If the projector continues to overheat after you clean the air filter, stop using the projector, disconnect the power cord, and contact Epson for help as described on page 81.</p> <p>Warning: Except as specifically explained in this <i>User's Guide</i>, do not attempt to service this product yourself.</p>
<p>  Red  Flashing red  Flashing red </p>	<p>The projector has an internal problem. Stop using the projector, disconnect the power cord, and contact Epson for help, as described on page 81.</p>
<p>  Red  Off  Flashing red </p>	<p>There is a problem with the fan or temperature sensor. Stop using the projector, disconnect the power cord, and contact Epson as described on page 81.</p>
<p>  Flashing red  Flashing red  Flashing red </p>	<p>The auto iris or ballast is malfunctioning. Unplug the power cord and contact Epson as described on page 81.</p>

Error light(s) status

Error light(s) status	Description
 Red  Flashing red  Off	<p>The lamp may be burnt out. First make sure the lamp cover is securely installed. If that's not the problem, the air filter may be clogged. Clean or replace the air filter as described on pages 60 to 62.</p> <p>If this does not resolve the problem, let the lamp cool and then remove it. If the lamp is cracked, replace it as described on page 62. If the lamp is not cracked, reinstall it. If reinstalling doesn't work, replace the lamp.</p> <p>If you're using the projector above an altitude of 4,921 feet (1,500 meters), turn on High Altitude Mode in the Operation menu (see page 53).</p> <p>If none of these suggestions resolves the problem, contact Epson as described on page 81.</p>

Solving Projector Operation Problems

 The power doesn't turn on.




 
 
- If the projector doesn't turn on when you press the  power button, make sure the power cord is connected to the projector and plugged into a working electrical outlet.
- The power cord may be defective. Disconnect the cord from the outlet and contact Epson as described on page 81.
- If you're using the Direct Power On function and you immediately plug the power cord back in after unplugging it, the power may not turn back on. Press the  power button to turn the projector back on.

The buttons on the projector don't work.

If the Control Panel Lock function has been enabled, you can't use the buttons on the projector. Try using the remote control instead, or press and hold the projector's **Enter** button for seven seconds to release the lock (see page 56).

Solving Problems With the Image or Sound


No image appears on the screen.


- Check that the  power light is green (not flashing) and that the A/V Mute slide is open. Also press the A/V Mute button on the remote control to make sure the picture has not been turned off temporarily.
- The projector may be in standby or sleep mode. If the  power light is orange, press the  power button to turn the projector on.
- If the power was switched off and then on again, the projector may be cooling down. Wait until the  power light stops flashing and remains orange; then press the  power button again.
- The attached computer may be in sleep mode or displaying a black screen saver. Try pressing a key on the computer.
- If you are projecting from a DVD player or other video source, make sure you turn it on and press its Play button.
- If you are projecting from a composite or S-Video video source, make sure the Video Signal setting is correct (see page 49).
- You can also try resetting all of the menu settings (see page 47).

You've connected a computer and see a blue screen with the message No Signal displayed.

- Make sure the cables are connected correctly, as described beginning on page 27.
- If you've connected a computer and one or more video sources, you may need to press the Source Search button to select the correct source. Allow a few seconds for the projector to sync up after pressing the button.
- Make sure the power for your connected equipment is turned on.

If you're using a PC notebook:

- Hold down the Fn key on the keyboard and press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labelled CRT/LCD. Allow a few seconds for the projector to sync up after pressing it. Check your notebook's manual or online help for details.

On most systems, the  key lets you toggle between the LCD screen and the projector, or display on both at the same time.

If you connect the notebook while the projector or computer are already turned on, the function Fn key that changes the computer's image signal to external output may not work. Turn the computer and the projector off and then back on again.

- Depending on your computer's video card, you might need to use the Display utility in the Control Panel to make sure that both the LCD screen and external monitor port are enabled. See your computer's documentation or online help for details.

If you're using Mac OS X:


1. Open System Preferences.
2. Click Display or Displays.
3. Click Detect Displays.
4. Select VGA Display or Color LCD.
5. Click Arrangement or Arrange.
6. Select Mirror Displays.

The message Not Supported is displayed.

- Make sure the correct input signal is selected in the Signal menu (see page 49).
- Make sure your computer's resolution and frequency or refresh rate is supported by the projector (see page 86). If necessary, change your computer's settings.

Only part of the computer image is displayed.

- Press the **Auto** button on the remote control or the **Enter** button on the projector.
- Make sure the image **Position** setting is correct in the Signal menu. See page 50 for more information.
- Press the **Aspect** button on the remote control or select the correct **Aspect** setting from the Signal menu. See page 38 for details on the available options.
- Press the **Esc** button on the remote control to cancel the E-Zoom function.
- Make sure your computer's resolution setting is correct. See the compatible video formats listed on page 86.
- You also may need to modify existing presentation files if you created them for a different resolution. See your software documentation for specific information.
- If you're projecting a widescreen computer image, adjust the **Resolution** setting (see page 49), if necessary.
- If you're projecting an image from a computer with dual display activated, turn dual display off.

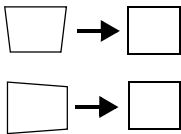

The image isn't square, but keystone-shaped.

If the image isn't evenly rectangular, adjust its shape as described on page 35.

The image contains static or noise.

- If you're using a computer cable longer than 6 feet (1.8 meters), or an extension cable, the image quality may be reduced.
- Keep your computer and video cables away from the power cord as much as possible to prevent interference.
- The video signal may be split between the computer and the projector. If you notice a decline in the projected image quality when the image is displayed simultaneously on your notebook computer and the projector, turn off the notebook's LCD display.

- Make sure the correct input signal is selected in the Signal menu (see page 50).
- If you're using a composite, S-Video, or component video source with 480i signals, turn on the **Progressive** setting on the Signal menu (see page 50).
- If you've used the Keystone adjustment, you may need to decrease the **Sharpness** setting in the Image menu (see page 48).
- If you're projecting from a computer, make sure its signal is compatible with the projector. See page 86.
- If you're projecting from a computer, press the **Auto** button on the remote control to reset the projector's Tracking, Sync, and Position settings

The image is blurry.


- There may be dirt or smears on the lens. Clean the lens as described on page 60.
- Adjust the focus using the focus ring (see page 36).
- If the projector is angled sharply toward the screen, it may not be possible to focus the entire image. Move the projector to position it more directly in front of the screen.
- Lower the projection angle to reduce the amount of keystone correction required.
- Make sure the projector is within the proper range (projection distance) from the screen (see page 19).
- Make sure the lens is not fogged by condensation. You may need to wait before using the projector after moving it from a cold environment to a warm environment.
- If you're projecting from a computer, you may need to adjust the tracking and sync settings as described in the next section.

note


*You must be projecting an image for the **Auto** button to have any effect. It works only with computer images projected through the Computer (Component Video) port.*

You see vertical bands or the image still looks blurry after trying the solutions in the previous section.

- If you're projecting from a computer and displaying an image that contains a lot of fine detail, you may notice vertical bands or some of the characters may look heavy or blurred. Press the **Auto** button on the remote control or the **Enter** button on the projector to reset the projector's Tracking, Sync, and Position settings.
- If further adjustment is needed, you can fine-tune the **Tracking** and **Sync** settings manually using the Signal menu, as described on page 50.
 1. Fill the screen with an image containing fine detail, such as a pattern to appear as your desktop background, or try projecting black text on a white background.
 2. Adjust the **Tracking** to eliminate vertical bands.

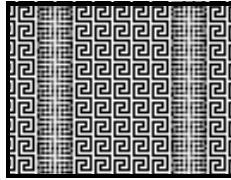

3. Adjust the **Sync** setting to increase the image sharpness.

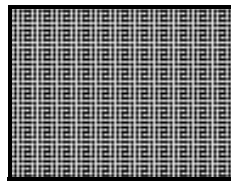

The image is too light or dark, or colors are incorrect.

- Press the **Color Mode** button or select a different **Color Mode** option in the Image menu. See page 37 for details on the available options.
- If you're displaying video, adjust the **Color Adjustment** and **Color Mode** settings on the Image menu. You can also try adjusting the **Color Saturation**, **Color Temp**, and **Tint** settings on the Image menu.
- Try adjusting the **Brightness** and **Contrast** settings on the Image menu.
- Try adjusting the **Power Consumption** setting (see page 51).
- Check your computer display settings to correct the color balance.
- The projector's lamp may need to be replaced. See page 62 for instructions.
- Make sure the correct input signal is selected in the **Signal** menu (see page 50).
- Make sure that all cables are connected to the proper ports and connected securely.

Nothing happens when you connect a computer to the USB Type B port.

This port is for service only. You can't use it for computer display.

There is no sound, or the sound is not loud enough.

- Use the **Volume** buttons to adjust the volume (see page 41), or adjust the **Volume** setting in the Settings menu.
- Make sure **A/V Mute** is not enabled. (Press the **A/V Mute** button to disable it.)
- If your presentation includes computer audio, make sure the volume control on your computer is not turned all the way down or muted. In Windows, you may be able to check this by clicking the volume control in your Windows system tray (lower right

note

Because of the different technologies used, your projected image may not exactly match the colors on your notebook or computer monitor.

corner of the screen). On a Mac, you may be able to adjust the volume from your menu bar (top right corner of the screen) or via the volume control function keys.

- If you're using a DVD player or other video source, make sure the cables are connected correctly, as described on page 28.

Solving Problems With the Remote Control

The projector doesn't respond to remote control commands.

- Point the remote control towards the projector's receiver. Make sure you are within 19.7 feet (6 meters) of the projector and within a 30° horizontal angle and a 15° vertical angle from the projector's front or back receiver.
- The remote control's batteries may not be installed correctly or may be low on power. To change the batteries, see page 66.
- Dim the room lights and turn off any fluorescent lights. Make sure the projector is not in direct sunlight. Strong lighting, especially fluorescent lights, may affect the projector's infrared receivers. Also, turn off any nearby equipment that emits infrared energy, such as a radiant room heater.
- If any buttons are held for longer than 30 seconds, the remote enters sleep mode. Release any button that is held to wake the remote.

Where To Get Help

Internet Support

Visit Epson's support website in the [U.S.](#) and [Canada](#) for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

To use the Epson PrivateLine Support service, call (800) 637-7661 and enter the PIN on the included Epson PrivateLine Support card. This is the fastest way of speaking to a live representative, and it's free. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

You may also speak with a projector support specialist by dialing one of these numbers:

- U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday.
- Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Before you call for support, please have the following information ready:

- Product name (PowerLite Home Cinema 705HD)
- Product serial number (located on the bottom of the projector)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer or video configuration
- Description of the problem

Purchase Supplies and Accessories

You can purchase screens and other accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at www.epsonstore.com (U.S. sales) or www.epson.ca (Canadian sales).

A *Technical Specifications*

General

Type of display	Poly-silicon TFT active matrix
Resolution (native format)	1280 × 800 pixels (WXGA)
Color reproduction	16.8 million colors
Light output (brightness)	Normal mode: White light output 2500 lumens (ISO 21118 standard) Color light output 2500 lumens ECO mode: White light output 1960 lumens (ISO 21118 standard) Color light output 1960 lumens
Contrast ratio	3000:1 (Dynamic color mode, Normal Power Consumption, with Auto Iris setting turned on in the Image menu; see page 47)
Image size (16:10 image)	33 to 320 inches (83.8 to 812.8 cm)
Projection distance (16:10 image)	36 to 429 inches (91 to 1089 cm)
Projection methods	Front, rear, upside-down (ceiling mount)
Internal sound system	1 W (monaural)
Optical aspect ratio	16:10 (horizontal:vertical)
Zoom ratio	Manual 1:1.2

Noise level	29 dB in ECO mode 37 dB in Normal mode
Keystone correction	Manual: $\pm 30^\circ$ vertical Auto Keystone: 0 to 11° vertical

Projection Lamp

Type	UHE (Ultra High Efficiency)
Power consumption	200 W
Lamp life	Approx. 4000 hours (Normal mode) Approx. 5000 hours (ECO mode)
Part number	V13H010L54

Remote Control

Range	19.7 feet (6 meters)
Batteries (2)	Alkaline AA

Dimensions

Height	3.0 inches (77 mm), not including feet
Width	11.6 inches (295 mm)
Depth	9.0 inches (228 mm)
Weight	5.1 lb (2.3 kg)

Electrical

Rated frequency	50/60 Hz AC
Power supply	100 to 240 VAC $\pm 10\%$, 2.8A to 1.2 A
Power consumption	228 W in ECO mode 280 W in Normal mode 0.3 W Standby (Communication Off) 2.6 W Standby (Communication On)

note

Lamp life will vary depending upon mode selected, environmental conditions, and usage. Brightness decreases over time.

Turn off this product when not in use to prolong the life of the projector.

Environmental

Temperature	Operating: 41 to 95 °F (5 to 35 °C) Storage: 14 to 140 °F (-10 to 60 °C)
Humidity (non-condensing)	Operating: 20 to 80% RH
Operating altitude	0 to 7500 ft (0 to 2286 m); over 4921 ft (1500 m), enable High Altitude mode in the Extended menu (see page 52)

Safety and Approvals

United States	FCC 47CFR Part 15B Class B (DoC) UL60950-1 First Edition (cTUVus Mark)
Canada	ICES-003 Class B CSA C22.2 No. 60950-1



Pixelworks™ DNX™ ICs are used in this projector.

Compatible Video Formats

These projectors support the high definition video and computer display formats listed here.

To project images output from a computer, the computer's video card must be set at a refresh rate (vertical frequency) that's compatible with the projector. Some images are automatically resized using Epson's SizeWize™ technology to display in the projector's native format. The frequencies of some computers may not allow images to display correctly; see your computer's documentation for details.

Computer, component video, composite video, and S-Video

Mode	Refresh rate (Hz)	Resolution
VGA EGA	85	640 × 350
VGA—60	60	640 × 480 (640 × 360*)
VESA—72	72	640 × 480 (640 × 360*)
VESA—75	75	640 × 480 (640 × 360*)
VESA—85	85	640 × 480 (640 × 360*)
SVGA—56	56	800 × 600 (800 × 450*)
SVGA—60	60	800 × 600 (800 × 450*)
SVGA—72	72	800 × 600 (800 × 450*)
SVGA—75	75	800 × 600 (800 × 450*)
SVGA—85	85	800 × 600 (800 × 450*)
XGA—60	60	1024 × 768 (1024 × 576*)
XGA—70	70	1024 × 768 (1024 × 576*)
XGA—75	75	1024 × 768 (1024 × 576*)
XGA—85	85	1024 × 768 (1024 × 576*)
SXGA1—70	70	1152 × 864
SXGA1—75	75	1152 × 864
SXGA1—85	85	1152 × 864
SXGA1—100	100	1152 × 864
WXGA—60	60	1280 × 800
WXGA—75	75	1280 × 800
WXGA—85	85	1280 × 800
SXGA2—60	60	1280 × 960
SXGA2—75	75	1280 × 960
SXGA2—85	85	1280 × 960
SXGA3—60	60	1280 × 1024
SXGA3—75	75	1280 × 1024
SXGA3—85	85	1280 × 1024

Computer, component video, composite video, and S-Video

Mode	Refresh rate (Hz)	Resolution
WXGA1—60 WXGA2—60	60 60	1280 × 768 1360 × 768
WSXGA—60 WSXGA—75 WSXGA—85	60 75 85	1440 × 900 1440 × 900 1440 × 900
SXGA+60 SXGA+75 SXGA+85	60 75 85	1400 × 1050 1400 × 1050 1400 × 1050
UXGA—60	60	1600 × 1200
WSXGA+—60**	60	1680 × 1050
iMAC VGA iMAC SVGA iMAC XGA MAC13 MAC16 MAC19 MAC19-60 MAC21	117 95 75 67 75 75 60 75	640 × 480 (640 × 360*) 800 × 600 (800 × 450*) 1024 × 768 (1024 × 576*) 640 × 480 832 × 624 1024 × 768 1024 × 768 1152 × 870
NTSC NTSC 4:43 PAL N-PAL M-PAL PAL—60 SECAM	60 60 50 50 60 60 50	720 × 480 (720 × 360*) 720 × 480 (720 × 360*) 720 × 576 (720 × 432*) 720 × 576 (720 × 432*) 720 × 576 (720 × 432*) 720 × 576 (720 × 432*) 720 × 576 (720 × 432*)
SDTV (480i) SDTV (576i) SDTV (480p) SDTV (576p) HDTV (720p) HDTV (1080i)	60 50 60 50 60/50 60/50	720 × 480 (720 × 360*) 720 × 576 (720 × 432*) 720 × 480 (720 × 360*) 720 × 576 (720 × 432*) 1280 × 720 1920 × 1080

* Letterbox signal

** Available only when you select **Wide** as the Resolution setting

HDMI signals

Mode	Refresh rate (Hz)	Resolution
VGA	60	640 × 480 (640 × 360*)
SVGA	60	800 × 600
XGA	60	1024 × 768
SXGA	60	1280 × 960
SXGA	60	1280 × 1024
SXGA+	60	1400 × 1050
UXGA	60	1600 × 1200
SDTV (480i)	60	720 × 480 (720 × 360*)
SDTV (576i)	50	720 × 576 (720 × 432*)
SDTV (480p)	60	720 × 480 (720 × 360*)
SDTV (576p)	50	720 × 576 (720 × 432*)
HDTV (720p)	60/50	1280 × 720
HDTV (1080i)	60/50	1920 × 1080

* Letterbox signal

B Notices

This appendix includes safety instructions and other important information about your projector.

Important Safety Instructions

Follow these safety instructions when setting up and using the projector:

- Do not look into the lens when the projector is on. The bright light can damage your eyes.
- Do not place the projector on an unstable cart, stand, or table.
- Do not operate the projector on its side, or while tilted to one side. Do not tilt the projector forward or back at a greater angle than that specified for keystone correction (see page 84).
- If the projector is mounted on a ceiling, it should be installed by qualified technicians using mounting hardware designed for use with this projector.
- If you use a ceiling mount and apply adhesives to the mount to prevent the screws from loosening, or if you use lubricants or oils on the projector, the projector case may crack and the projector may fall from its ceiling mount. This could cause serious injury to anyone under the mount and could damage the projector. When installing or adjusting a ceiling mount, do not use adhesives to prevent the screws from loosening and do not use oils or lubricants.
- Do not stand on the projector or place heavy objects on it.
- Do not use the projector where it may be exposed to rain, water, or excessive humidity.
- Unplug the projector from the wall outlet before cleaning. Use a dry cloth (or, for stubborn dirt or stains, a moist cloth that has been wrung dry) for cleaning. Do not use liquid or aerosol cleaners.
- Never spill liquid of any kind into the projector.
- Do not use the projector where it may be exposed to excessive dust or smoke.

- Never push objects of any kind through the cabinet slots.
- Do not use or store the projector or remote control in a hot location, such as near a heater, in direct sunlight, or in a closed vehicle.
- Do not block the slots and openings in the projector case. They provide ventilation and prevent the projector from overheating. Do not operate the projector on a sofa, rug, or other soft surface, or set it on top of loose papers, which could block vents underneath your projector. If you are setting up the projector near a wall, leave at least 7.9 inches (20 cm) of space between the wall and the air exhaust vent.
- Do not operate the projector in a closed-in cabinet unless proper ventilation is provided.
- If you are using two or more projectors side-by-side, leave at least 2 feet (60 cm) of space between the projectors to allow for proper ventilation.
- You may need to clean the air filter and vent. A clogged air filter or vent can block ventilation needed to cool the projector.
- Do not store the projector outdoors for an extended length of time.
- Do not use the projector outside the required temperature range of 41 to 95 °F (5 to 35 °C). Doing so may cause an unstable display and could lead to projector damage.
- Do not store the projector outside the required temperature range of 14 to 140 °F (–10 to 60 °C) or in direct sunlight for long periods of time. Doing so may cause damage to the case.
- Do not touch the plug during an electrical storm. Otherwise, you may receive an electric shock.
- Unplug the projector when it will not be used for extended periods.
- Unplug the projector from the wall outlet and refer servicing to qualified service personnel under the following conditions: If it does not operate normally when you follow the operating instructions, or exhibits a distinct change in performance; If smoke, strange odors, or strange noises come from the projector; If the power cord or plug is damaged or frayed; If liquid or foreign objects get inside the projector, or if it has been exposed to rain or water; If it has been dropped or the housing has been damaged.
- Except as specifically explained in this *User's Guide*, do not attempt to service this product yourself. Refer all servicing to qualified personnel. Opening or removing covers may expose you to dangerous voltages and other hazards.
- Never open any covers on the projector except as specifically explained in this *User's Guide*. Never attempt to disassemble or modify the projector. Refer all repairs to qualified service personnel.

- Use the type of power source indicated on the projector. Use of a different power source may result in fire or electric shock. If you are not sure of the power available, consult your dealer or power company.
- If you use the projector in a country other than where you purchased it, use the correct power cord for that country.
- Do not overload wall outlets, extension cords, or power strips. Do not insert the plug into a dusty outlet. This can cause fire or electric shock.
- Take the following precautions when handling the plug: Do not hold the plug with wet hands. Do not insert the plug into an outlet with dust present. Insert the plug firmly into the outlet. Do not pull the power cord when disconnecting the plug; always be sure to hold the plug when disconnecting it. Failure to comply with these precautions could result in fire or electric shock.
- Do not place the projector where the cord can be walked on.
- (Hg) The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.
- Do not place anything that can become warped or damaged by heat near the exhaust vents. Do not bring your hands or face close to the vents while projection is in progress.
- Before you move the projector, make sure its power is turned off, the plug is disconnected from the outlet, and all cables are disconnected.
- Never try to remove the lamp immediately after use because it will be extremely hot. Before removing the lamp, turn off the power and wait at least an hour to allow the lamp to cool completely.
- Do not place the source of an open flame, such as a lit candle, on or near the projector.
- Do not modify the power cord. Do not place heavy objects on top of the power cord or bend, twist, or pull it excessively. Keep the power cord away from hot electrical appliances.
- If the lamp breaks, ventilate the room to prevent gases contained in the lamp from being inhaled or coming in contact with the eyes or mouth.
- If the projector is mounted overhead and the lamp breaks, be careful to prevent pieces of glass from falling into your eyes when you open the lamp cover.

WARNING: The cords included with this product contain chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. *Wash hands after handling.* (This notice is provided in accordance with Proposition 65 in Cal. Health & Safety Code §25249.5 and following.)

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Index

A

- A/V Mute
 - button, 40
 - display settings, 52, 56
- A/V Mute slide
 - closing, 40, 53, 67
 - opening, 30, 40, 74
- Accessories, 15 to 16
- Air filter
 - cleaning, 60 to 61
 - ordering, 15
 - replacing, 61 to 62
- Altitude, 53, 72, 73, 85
- Anti-theft device, 15, 19, 57
- Aspect ratio, 38, 50, 83
- Audio
 - problems, troubleshooting, 79 to 80
 - turning off (using A/V Mute), 40
- Auto Iris setting, 48
- Auto Keystone setting, 36, 51
- Auto Setup setting, 49

B

- Background screen settings, 52, 56
- Bands, vertical, 78
- Batteries, replacing, 66 to 67
- Blurry image, 77
- Brightness, 83
- Brightness setting, 48

C

- Cables
 - component-to-VGA, 16, 22, 24
 - composite, 22, 25
 - HDMI, 23
 - illustrations, 18
 - ordering, 15 to 16
 - security, 57
 - S-Video, 16, 25
 - USB, 28 to 29
 - VGA, 26, 27
- Capturing image, 55
- Carrying cases, 16, 18, 67
- Ceiling mount, 15, 19 to 20
- Cleaning
 - air filter, 60 to 61
 - lens, 60
 - projector case, 60
- Color
 - correcting, 37, 47 to 48
 - problems, 79
 - saturation, 48
 - settings, 48
 - temperature, 48
- Color Mode, 37, 48
- Component-to-VGA video cable, 16, 22, 24
- Composite video cable, 22, 25
- Computer
 - connecting to, 27
 - selecting source, 34
- Connecting projector
 - to computer, 27
 - to digital camera, 28 to 29
 - to USB device, 28 to 29
 - to video equipment, 22 to 26
- Contrast ratio, 83
- Contrast setting, 48
- Control Panel Lock setting, 51, 56 to 57, 73
- Custom screen, *see* User's Logo

D

- Default settings, restoring, 47
- Digital camera, connecting, 28 to 29
- Dimensions, projector, 14, 84
- Direct Power On, 31
- Distance from projector to screen, 20 to 22, 83
- Documentation, 10
- DVD player, connecting, 22 to 26
- Dynamic color mode, 37

E

- Electrical specifications, 84
- Environmental specifications, 85
- Epson
 - accessories, 15 to 16
 - PrivateLine Support, 10
 - technical support, 10, 81 to 82
 - warranty, 15
- Error status lights, 72
- Extended menu, 52 to 53

F

- FCC compliance statement, 92
- Feet, projector, 35
- Filter, *see* Air filter
- Fn key, notebook, 75
- Focusing image, 36
- Freeze button, 41
- Full aspect setting, 38

G

- Game color mode, 37

H

- HDMI cable, 23
- HDMI Video Range setting, 50
- HDTV images, video formats, 88
- Height of image, adjusting, 35
- Help system, using, 70
- Help, Epson, 10, 81 to 82
- High Altitude mode, 53, 72, 85

I

- Image
 - adjusting, 34 to 38, 47 to 48
 - blurry, 77
 - capturing and saving in projector, 55
 - correcting shape, 36, 51, 76
 - fitting on screen, 49, 76
 - height, adjusting, 35
 - presentation cameras, 16
 - problems with, 74 to 79
 - raising, 35
 - selecting source, 34
 - shape, correcting, 36
 - size and projection distance, 20 to 22, 83
 - turning off (using A/V Mute), 40
 - turning off temporarily, 40 to 41
 - zooming, 36
- Image menu, 47 to 48
- Info menu, 65 to 66
- Input Signal setting, 24, 26, 27, 50
- Input signal, selecting, 34
- Installing projector, 19 to 20
- Instant Off, 32

K

- Kensington anti-theft device, 15, 19, 57
- Keystone correction, 36, 51, 76, 84

L

- Lamp
 - number of hours used, 65 to 66
 - ordering, 15
 - replacing, 62 to 65
 - specifications, 84
 - status light, 62, 71 to 73
- Lamp timer, resetting, 65
- Language setting, 53
- Laptop computer
 - connecting to, 27
 - display problems, 74 to 75
 - selecting source, 34
- Lens Cover Timer setting, 41, 53
- Lens, cleaning, 60

Light output specifications, 83
Lights, status, 71 to 73
Living Room color mode, 37
Locking
 buttons, 56 to 57
 projector, 57
Logo, saving on projector, 54 to 56

M

Macintosh display problems, 75
Manuals, 10
Menus
 changing settings, 46
 default settings, restoring, 47
 Extended, 52 to 53
 Image, 47 to 48
 Info, 65 to 66
 Reset, 47, 65
 Settings, 51
 Signal, 49 to 50
 User's Logo, 55

N

No Signal message, 74 to 75
Noise level, 84
Normal aspect setting, 38
Not Supported message, 75

O

Optical aspect ratio, 38, 83
Options for projector, 15 to 16

P

Picture source, selecting, 34
Picture, *see* Image
Position setting, 50, 76
Positioning
 image, 35
 projector, 19 to 20
Power
 button, 31
 specifications, 84
 status light, 31, 71 to 73

Power Consumption setting, 51, 62, 66
PowerPoint, 42
PrivateLine Support, 10

Problems

 color, 79
 image, 74 to 79
 no signal, 74 to 75
 remote control, 80
 sound, 79 to 80
 using on-screen help, 70

Progressive format, 50

Projection lamp, *see* Lamp

Projection setting, 53

Projector

 cleaning, 60
 disabling buttons, 56 to 57
 distance from screen, 20 to 22, 83
 installing, 19 to 20
 lamp specifications, 84
 options, 15 to 16
 parts, 11
 positioning, 19 to 20
 resolution, 83
 security features, 54 to 57
 specifications, 83 to 85
 transporting, 67
 troubleshooting, 69 to 82
 turning off, 32
 turning on, 30 to 31
 unpacking, 18
 viewing information about, 65 to 66

R

Raising image, 35
Rear-screen projection, 19 to 20, 53
Registration, 15

Remote control
A/V Mute button, 40
batteries used, 84
batteries, replacing, 66 to 67
correcting color, 37, 47 to 48
Freeze button, 41
problems, 80
range, 84
specifications, 84
troubleshooting, 80
USB button, 29, 34
using, 13, 40
Replacing lamp, 62 to 65
Resetting lamp timer, 65
Resetting menu options, 47
Resize image, 38
Resolution, 38, 75, 83
Resolution setting, 49

S

Safety
instructions, 89 to 91
specifications, 85
Saturation setting, 48
Screen
distance from projector, 20 to 22, 83
ordering, 15 to 16
startup screen, creating, 54 to 55
Screen image, *see* Image
Security
cables, 57
Control Panel Lock, 56 to 57
identifying logo, 55 to 56
Kensington lock, 15, 57
Settings menu, 51
Sharpness setting, 48
Signal menu, 49 to 50
Sleep mode, 32, 53, 71, 74
Slideshow
options, 44
running, 42 to 44
Sound, troubleshooting, 79
Source, selecting, 34
Speaker, specifications, 83

Specifications
brightness, 83
dimensions, 84
electrical, 84
environmental, 85
general, 83
lamp, 84
remote control, 84
resolution, 83
safety, 85
speaker, 83
video formats, 86 to 88

Startup screen
creating, 54 to 56
settings, 56
user's logo, *see* User's Logo

Status lights, 71 to 73
Support, *see* Technical support
S-Video cable, 16, 25
Switching picture source, 34
Sync, adjusting, 50, 78

T

Technical support, 10, 81 to 82
Temperature
requirements, 85
status light, 71 to 73
Temperature, color, 48
Theatre color mode, 37
Tint setting, 48
Tracking, adjusting, 50, 78
Transporting projector, 67
Troubleshooting
blank screen, 74 to 75
cut-off image, 76
distorted image, 36
image and sound problems, 74 to 80
no signal, 74 to 75
projector problems, 69 to 82
remote control problems, 80
tapered image, 36
Turning off picture (using A/V Mute), 40
Turning off projector, 32

U

Unpacking projector, 18

USB

 button, 29, 34

 cable, 28 to 29

 connecting external device, 28 to 29

User's Logo

 creating, 55

 display settings, 56

V

VCR, connecting, 22 to 26

VGA video cable, 26, 27

Video

 cables, 15 to 16, 18, 22

 connecting video equipment, 22 to 26

 formats, supported, 86 to 88

 selecting source, 34

Video Signal setting, 50

Volume, controlling, 51

W

Warning lights, 71 to 73

Warranty, 15

Windows display problems, 75

Z

Zoom aspect setting, 38

Zoom ratio, 83

Zoom ring, 36

Zooming image, 36

EPSON[®]
EXCEED YOUR VISION