

***myprojectorlamps.com***

**The most trusted, dependable name  
in projector lamp sales.**



<http://www.myprojectorlamps.com>



<http://www.myprojectorlamps.ca>



<http://www.myprojectorlamps.eu>

The following projector manual has not been modified or altered in any way.

# HITACHI

Liquid Crystal Projector

## CPSX5500W

### USER'S MANUAL

Please read this user's manual thoroughly to ensure correct usage through understanding.

### BEDIENUNGSANLEITUNG

Bitte lesen Sie diese Bedienungsanleitung zugunsten der korrekten Bedienung aufmerksam.

### MANUEL D'UTILISATION

Nous vous recommandons de lire attentivement ce manuel pour bien assimiler le fonctionnement de l'appareil.

### MANUALE D'ISTRUZIONI

Vi preghiamo voler leggere attentamente il manuale d'istruzioni in modo tale da poter comprendere quanto riportato ai fini di un corretto utilizzo del proiettore.

### MANUAL DE USUARIO

Lea cuidadosamente este manual del usuario para poder utilizar correctamente el producto.

### GEBRUIKSAANWIJZNG

Lees voor het gebruik alstublieft deze handleiding aandachtig door, om volledig profijt te hebben van de uitgebreide mogelijkheden.

### BRUKERHÅNDBOK


Vennligst les denne bruksanvisningen grundig for å være garantert driftssikker bruk.

### INSTRUÇÕES DO PROPRIETÁRIO

Para assegurar o uso correto do equipamento, por favor leia atentamente este manual do usuário.

### TECHNICAL

### REGULATORY NOTICES

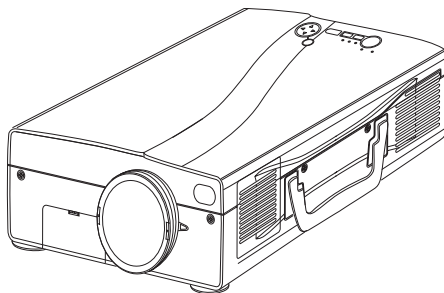

ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

ESPAÑOL

NEDERLANDS

NORSK

PORTUGÊS

TECHNICAL

# USER'S MANUAL

Thank you for purchasing this liquid crystal projector.

**WARNING** • Please read the accompanying manual "SAFETY INSTRUCTIONS" and this "USER'S MANUAL" thoroughly to ensure correct usage through understanding. After reading, store this instruction manual in a safe place for future reference.

**NOTE** • The information in this manual is subject to change without notice.

- The manufacturer assumes no responsibility for any errors that may appear in this manual
- The reproduction, transmission or use of this document or contents is not permitted without express written authority.

**TRADEMARK ACKNOWLEDGMENT** : PS/2, VGA and XGA are registered trademarks of International Business Machines Corporation. Apple, Mac and ADB are registered trademarks of Apple Computer, Inc. VESA and SVGA are trademarks of the Video Electronics Standard Association. Windows is a registered trademark of Microsoft Corporation. Carefully observe the trademarks and registered trademarks of all companies, even when not mentioned.

## CONTENTS

|   | Page      |   | Page      |
|---|-----------|---|-----------|
| <b>FEATURES</b> .....                         | <b>2</b>  | <b>TROUBLESHOOTING</b> .....  | <b>20</b> |
| <b>BEFORE USE</b> .....                       | <b>2</b>  | OSD Message .....   | 20        |
| Contents of Package .....                     | 2         | Indicators Message .....  | 21        |
| Part Names.....                               | 3         | Symptom .....   | 22        |
| Loading the Batteries.....                    | 5         | <b>SPECIFICATIONS</b> .....   | <b>23</b> |
| <b>INSTALLATION</b> .....                     | <b>6</b>  | <b>WARRANTY AND AFTER-SERVICE</b> .....                                 | <b>24</b> |
| Installation of the Projector and Screen..... | 6         | .....   |           |
| Angle Adjustment .....                        | 6         | <b>TABLES</b>   |           |
| Cabling .....                                 | 7         | Table 1. Installation Reference.....                                    | 6         |
| Power Connection .....                        | 8         | Table 2. Cabling .....  | 7         |
| Example of System Setup .....                 | 8         | Table 3. Basic Operations .....   | 10        |
| Plug & Play .....                             | 8         | Table 4. Setup Menu .....   | 12        |
| <b>OPERATIONS</b> .....                       | <b>9</b>  | Table 5. Input Menu.....  | 13        |
| Power On.....                                 | 9         | Table 6. Image Menu.....  | 14        |
| Power Off .....                               | 9         | Table 7. Options Menu .....   | 15        |
| Basic Operation .....                         | 10        | Table 8. No Signal Menu .....   | 16        |
| Setup Menu .....                              | 12        | Table 9. OSD Message .....  | 20        |
| Input Menu.....                               | 13        | Table 10. Indicator Message .....                                       | 21        |
| Image Menu.....                               | 14        | Table 11. Symptom .....   | 22        |
| Options Menu .....                            | 15        | Table 12. Specifications .....  | 23        |
| No Signal Menu .....                          | 16        | .....   |           |
| <b>MAINTENANCE</b> .....                      | <b>17</b> | For "TECHNICAL" and "REGULATORY<br>NOTICE", see the end of this manual. |           |
| Lamp.....                                     | 17        |   |           |
| Air Filter .....                              | 19        |   |           |
| Other Maintenance .....                       | 19        |   |           |

# FEATURES

---

This liquid crystal projector is used to project various computer signals as well as NTSC / PAL / SECAM video signals onto a screen. Little space is required for installation and large images can easily be realized.

## Outstanding Brightness

The UHB lamp and high-efficiency optical system assure a high level of brightness.

## Partial Magnification Function

Interesting parts of images can be magnified for closer viewing.

## Distortion Correction Function

Distortion-free images are quickly available.

## Extra-low Noise Function

Acoustic noise level from the unit can be reduced.


# BEFORE USE

---


## Contents of package

Make sure all of the following items are included in the package. If anything is missing, please contact your dealer.


**NOTE** • Keep the original packing material for future reshipment.

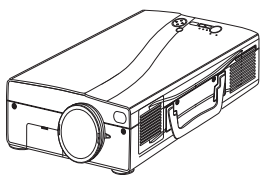

**Projector**

 

**Power Cord  
(US Type)**

 


**Power Cord  
(UK Type)**




**Power Cord  
(Europe Type)**



 
**User's Manual  
(this manual)**



**RGB Cable**

 

 
**Video/Audio Cable  
(with white lead)**



**Component  
Video Cable  
(with green lead)**



**Safety Instructions**

 

**Mouse cable  
(PS/2)**







**Batteries  
for Remote Control  
Transmitter**



**Remote Control  
Transmitter**


# BEFORE USE (continued)

## Part Names

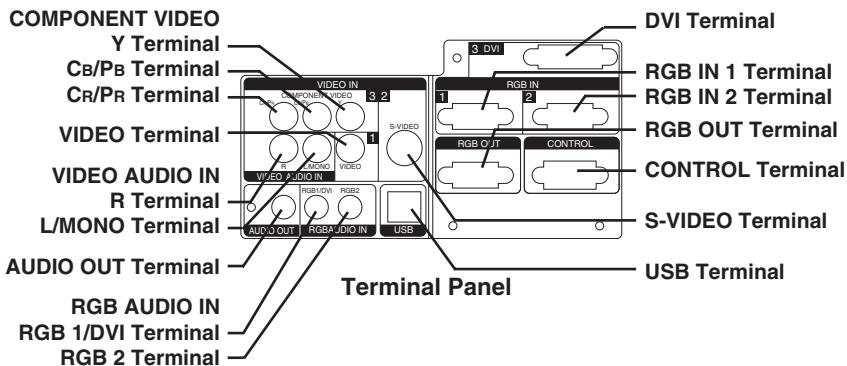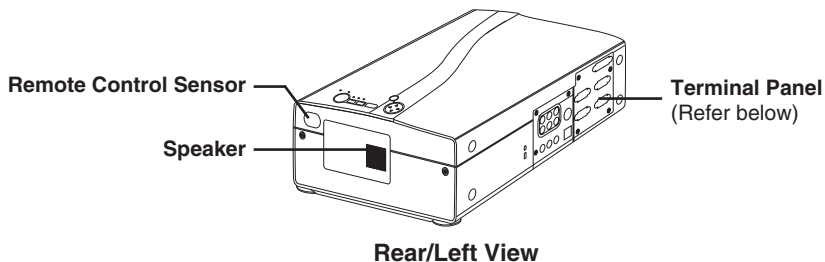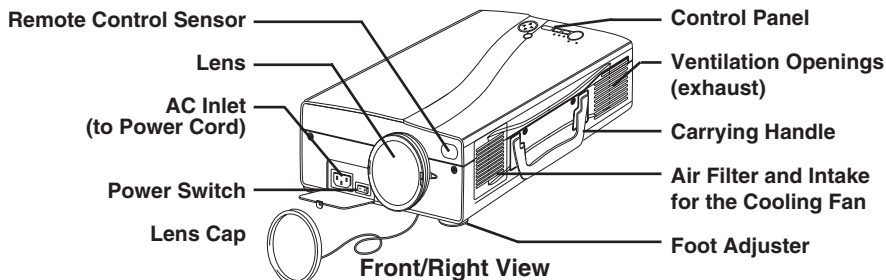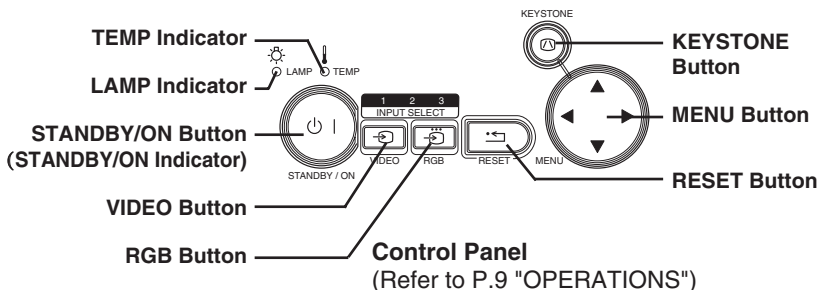

# BEFORE USE (continued)


## Part Names (continued)

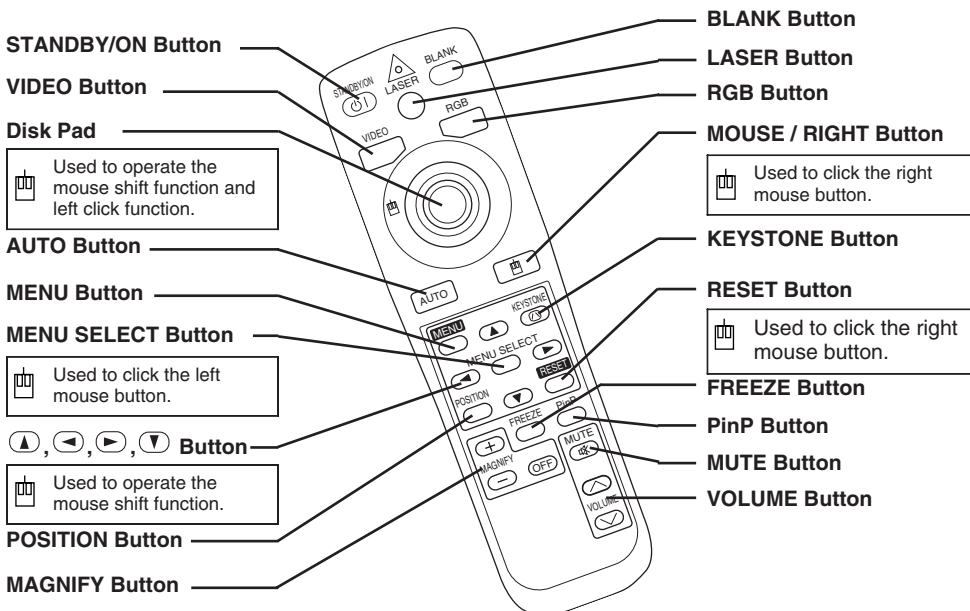

### REMOTE CONTROL TRANSMITTER (Refer to P.9 "OPERATIONS")

These functions work when the mouse control function is activated. Remember, the POSITION, BLANK ON and MENU ON functions disable the mouse control function.

**WARNING** • The laser pointer of the remote control transmitter is used in place of a finger or rod. Never look directly into the laser beam outlet or point the laser beam at other people. The laser beam can cause vision problems.

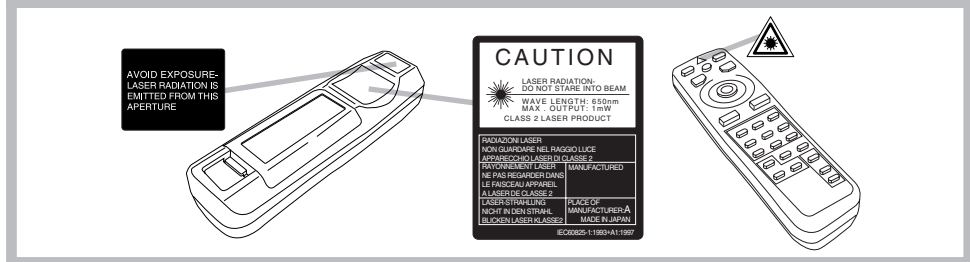


- NOTE** To prevent any malfunction;
- Do not give the remote control transmitter any physical impact. Take care not to drop.
  - Do not place the heavy objects on the remote control transmitter.
  - Do not wet the remote control transmitter or place it on any wet object.
  - Do not place the remote control transmitter close to the cooling fan of the projector.
  - Do not disassemble the remote control transmitter in case of malfunction. Please bring it to the service station.

# BEFORE USE (continued)

## Loading the Batteries

Install the AA batteries into the remote control transmitter.

1. Remove the battery cover.  
Push the knob while lifting up the battery cover.
2. Load the batteries.  
Make sure the plus and minus poles are correctly oriented.
3. Close the battery cover.

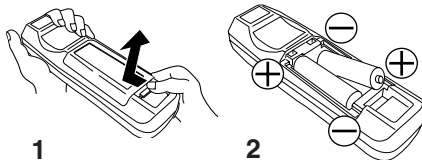

**CAUTION** • Use only the specified batteries with this remote control transmitter. Also, do not mix new and old batteries. This could cause in battery cracking or leakage, which could result in fire or personal injury.

- When loading the batteries, make sure the plus and minus terminals are correctly oriented as indicated in the remote control transmitter. Incorrect orientation could cause battery cracking or leakage, which could result in personal injury or pollution of the surrounding environment.
- When you dispose the battery, you should obey the law in the relative area or country.
- Keep the battery away from children and pets.
- When not to be used for an extended period, remove the batteries from the remote control transmitter.

### NOTE

Replace the batteries when remote control transmitter operation becomes difficult.

# INSTALLATION

## Installation of the Projector and Screen


Refer to the drawing and table below for determining of the screen size and projection distance.

The projection distances shown in the table below are for full size (1365 x 1024 dots).

a: Distance from the projector to the screen. ( $\pm 10\%$ )

**Table 1. Installation Reference**

| Screen size<br>[inches (m)] | a [inches (m)] |            |
|-----------------------------|----------------|------------|
|                             | Min.           | Max.       |
| 40 (1.0)                    | 65 (1.6)       | 85 (2.2)   |
| 60 (1.5)                    | 98 (2.5)       | 127 (3.2)  |
| 80 (2.0)                    | 131 (3.3)      | 170 (4.3)  |
| 100 (2.5)                   | 164 (4.2)      | 213 (5.4)  |
| 120 (3.0)                   | 196 (5.0)      | 255 (6.5)  |
| 150 (3.8)                   | 246 (6.2)      | 319 (8.1)  |
| 200 (5.0)                   | 328 (8.3)      | 426 (10.8) |

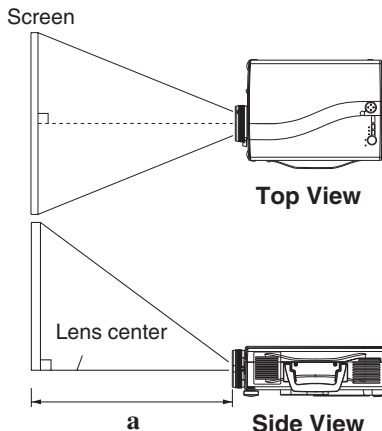


**CAUTION** • Install the projector in a suitable environment according to instructions of the accompanying manual “SAFETY INSTRUCTIONS” and this manual.

- When you fix this unit with a metal tool and the like, you must connect it with ground wire; otherwise, fire or electric shock can result. Connect the ground terminal of AC inlet of this unit with the ground terminal provided at the building using an optional three-core power-supply cord.
- Please basically use liquid crystal projector at the horizontal position. If you use liquid crystal projector by the lens up position, the lens down position and the side up position, this may cause the heat inside to build up and become the cause of damage. Be especially careful not to install it with ventilation holes blocked.
- Do not install LCD projector in smoke effected environment. Smoke residue may buildup on critical parts (i.e.LCD panel, Lens Assy etc.).

## Angle Adjustment

Use the foot adjusters on the bottom of the projector to adjust the projection angle. It is variable within  $0^\circ$  to  $8^\circ$  approximately.

1. Lift up the front side of the projector, and pressing the foot adjuster button, adjust the projection angle.
2. Release the button to lock at the desired angle.
3. Use the foot adjusters for fine adjustment, Do not force the foot adjuster screws. This could damage the adjusters or cause the lock to fail.

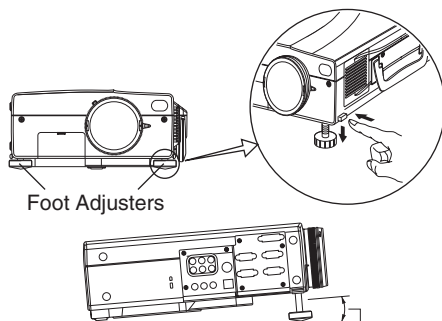

**CAUTION** • Do not release the foot adjuster button unless the projector is being held; otherwise, the projector could overturn or the fingers could get caught and cause personal injury.



# INSTALLATION (continued)

## Cabling

Refer to the table below for connecting each terminal of the projector to each device.

**Table 2. Cabling**

| Function                              | Terminal   | Cable  |
|---------------------------------------|--|--|
| Analog RGB input                      | RGB IN 1   | Accessory RGB cable or optional RGB cable with D-sub 15-pin shrink jack and inch thread screws |
|                                       | RGB IN 2   |  |
| Analog RGB output                     | RGB OUT  |  |
| DVI input                             | DVI  | Optional DVI cable with inch thread screws   |
| Audio input<br>(from the computer)    | RGB AUDIO IN [RGB 1 / DVI]<br>(interlocked with RGB IN 1 or DVI) | Optional audio cable with stereo mini jack   |
|                                       | RGB AUDIO IN [RGB 2]<br>(interlocked with RGB IN 2)              |  |
| PS/2 mouse control                    | CONTROL  | Accessory PS/2 mouse cable   |
| ADB mouse control                     |  | Optional ADB mouse cable   |
| Serial mouse control                  |  | Optional Serial mouse cable  |
| RS-232C communication                 |  | Optional RS-232C cable   |
| USB mouse control                     | USB  | Optional USB cable   |
| S-video input                         | S-VIDEO  | Optional S-video cable with mini DIN 4-pin jack  |
| Video input                           | VIDEO  | Accessory video/audio cable  |
| Component video input                 | COMPONENT VIDEO [Y]  | Accessory component video cable  |
|                                       | COMPONENT VIDEO [CB/PB]  |  |
|                                       | COMPONENT VIDEO [CR/PR]  |  |
| Audio input<br>(from video equipment) | AUDIO [L / MONO]   | Accessory video/audio cable or optional audio cable with RCA jack                              |
|                                       | AUDIO [R]  |  |
| Audio output                          | AUDIO OUT  | Optional audio cable with stereo mini jack   |



**CAUTION** • Incorrect connecting could result in fire or electrical shock.

Please read this manual and the separate “SAFETY INSTRUCTIONS”.

- Before connecting, turn off to all devices to be connected, except for the USB cable.
- The cables may have to be used with the core set to the projector side. Use the cables which are included with the projector or specified.

**NOTE** • Before connecting, read instruction manuals of the devices to be connected, and make sure that the projector is compatible with the device.


- Secure the screws on the connectors and tighten.
- For some RGB input modes, the optional Mac adapter is necessary.
- To select the DVI input, the computer may need some settings. See the manuals of the computer for details.
- Some computers may have multiple display screen modes. Use of some of these modes will not be possible with this projector.
- Refer to the “TECNICAL” section for the pin assignment of connectors and RS-232C communication data.
- When the DVI terminal is used, the RGB OUT terminal may not function.

# INSTALLATION (continued)


## Power Connection

Use the correct one of the enclosed power cords depending on the power outlet to be used. Connect the AC inlet of the projector to the power outlet firmly by the power cord.

- CAUTION** • Be careful in handling the power cord according to instructions of the accompanying manual "SAFETY INSTRUCTIONS" and this manual.
- Connect the power cord firmly. Avoid using a loose, unsound outlet or contact failure.

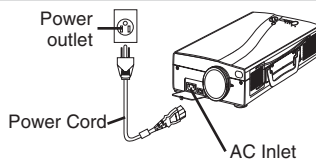

## Example of system setup

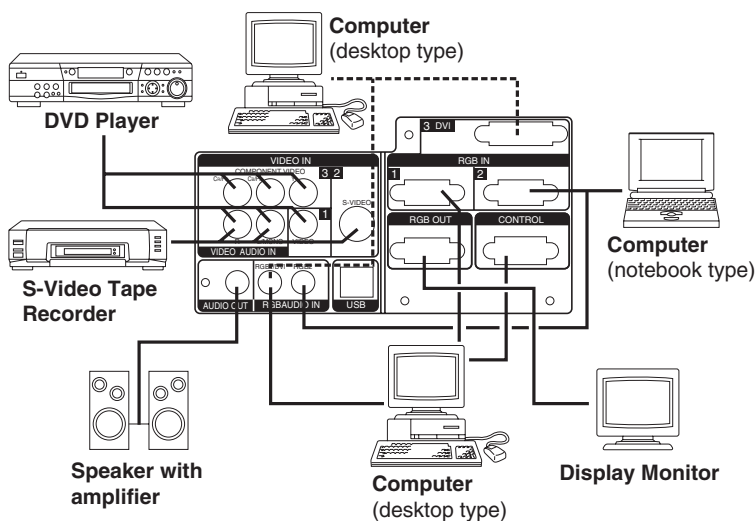

**NOTE** • When connecting with notebook computer, set to valid the RGB external image output (setting CRT display or simultaneous display of LCD and CRT). Please read instruction manual of the notebook for more information.

## Plug & Play


This projector is VESA DDC 1/2B compatible. Plug & play is possible by connecting to a computer that is VESA DDC (Display Data Channel) compatible.

Please use this function by connecting the accessory RGB cable with RGB IN 1 terminal (DDC 1/2B compatible), or by connecting an optional DVI cable with DVI terminal (DDC 2B compatible). Plug & play may not operate by other connecting.

**NOTE** • Plug & play is a system configured with peripheral equipment including a computer and display, and an operating system.

- This projector is recognized as a plug & play monitor. Use the standard display drivers.
- Plug & play may not operate by the computer to connect. Use the RGB IN 2 terminal if plug & play does not operate correctly.

# OPERATIONS

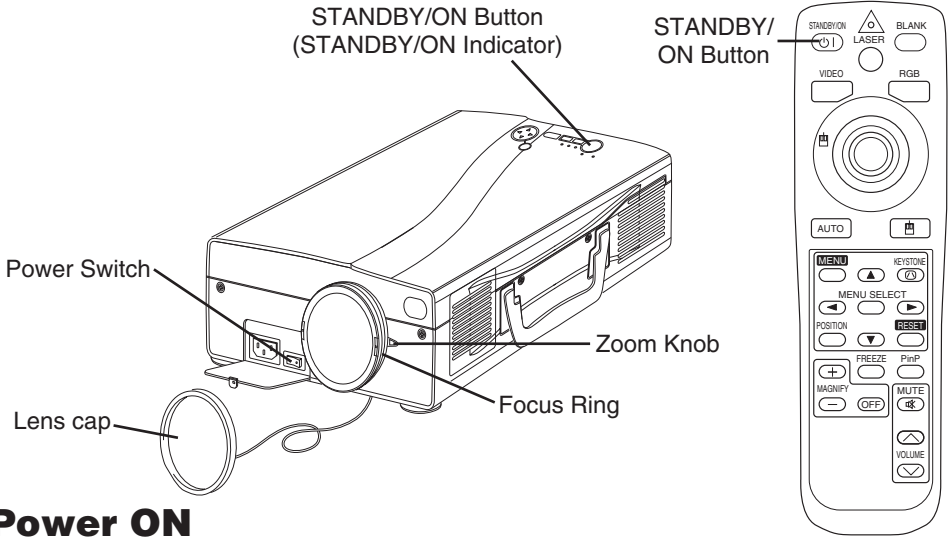

## Power ON

1. Check that the power cord is connected correctly.
2. Set the power switch to [ | ]. The standby mode is selected, and the STANDBY/ON indicator is turned to orange.
3. Press the STANDBY/ON button (Ⓜ) on the control panel or the remote control transmitter. Warm-up begins and the STANDBY/ON indicator blinks in green.
4. The STANDBY/ON indicator ceases blinking and turns to green when power is on. Remove the lens cap.
5. Adjust picture size using the Zoom Knob.
6. Adjust focus using the Focus Ring .

## Power OFF

1. Press the STANDBY/ON button (Ⓜ) on the control panel or the remote controller. Then, the message "Power off?" will appear on the screen, and the message will disappear by any operation or no operation for 5 seconds. During this message indication, press the STANDBY/ON (Ⓜ) button again. The projector lamp is extinguished and lamp cooling begins. The STANDBY/ON indicator blinks orange during lamp cooling. Pressing the STANDBY/ON button (Ⓜ) has no effect while the STANDBY/ON indicator is blinking.
2. The system assumes the Standby mode when cooling is complete, and the STANDBY/ON indicator ceases blinking and changes to orange. Check that the indicator is orange and set the Power switch to [ O ].
3. The STANDBY/ON indicator is extinguished when power is off. Attach the lens cap. Put the Lens cap to the lens properly. In order to do it, keep pushing two knobs on the lens cap, then fit it to the lens holding the cap in horizontal position.

**WARNING** • Please read this manual, and the separate "SAFETY INSTRUCTIONS" thoroughly before using the equipment. Always ensure that the equipment is used safely.

**NOTE** • Except in emergencies, follow the above-mentioned procedure for turning power off. Incorrect procedure will reduce the life of the projector lamp and LCD panel.

- To prevent any trouble, turn on/off the projector when the computer or video tape recorder is OFF. Providing a RS-232C cable is connected, turn on the computer before the projector.

# OPERATIONS (continued)

## Basic Operation

The basic operations shown in Table 3 is performed from the supplied remote control transmitter or the projector control panel. Items indicated by (\*) may be used from the control panel.

**Table 3 . Basic Operation**













| Item             | Description   |
|------------------|---|
| INPUT SELECT (*) | <p><b>Select RGB Input :</b> Press the RGB button.<br/>VIDEO/S-VIDEO/COMPONENT VIDEO → RGB IN 1/RGB IN 2/DVI<br/>RGB IN 1 → RGB IN 2 → DVI (→ RGB IN 1)</p> <p><b>Select Video Input :</b> Press the VIDEO button.<br/>RGB IN 1/RGB IN 2/DVI → VIDEO/S-VIDEO/COMPONENT VIDEO<br/>VIDEO → S-VIDEO → COMPONENT VIDEO (→ VIDEO)</p> <ul style="list-style-type: none"> <li>• The selected signal name is displayed for approximately 3 seconds when the input signal is changed.</li> </ul>  |
| POSITION         | <p><b>Set/Clear Position Adjustment Mode :</b> Press the POSITION button.<br/>The [ ] icon is displayed in the POSITION mode.</p> <p><b>Image Position Adjustment:</b> Press the ←, →, ▲ and ▼ buttons in the POSITION mode.</p> <ul style="list-style-type: none"> <li>• Valid only in the MAGNIFY mode with a video signal is input.</li> <li>• After approximately 10 seconds of inactivity the [ ] icon is extinguished and the POSITION mode is cleared automatically.</li> <li>• ←, →, ▲ and ▼ buttons may operate as the mouse control button. Refer to page 4.</li> </ul> |
| RESET (*)        | <p><b>Initialise Each Item :</b> Select an item and press the RESET button.</p> <p><b>Initialise Position Adjustment :</b> Press the RESET button and the POSITION mode. This function is valid only when RGB signal is input.</p> <ul style="list-style-type: none"> <li>• Valid except for the VOLUME, LANGUAGE, WHISPER and H PHASE.</li> <li>• The RESET button may operate as the mouse control button. Refer to page 4.</li> </ul>  |
| MAGNIFY          | <p><b>Set MAGNIFY Mode :</b> Press the MAGNIFY ⊕ button.</p> <p><b>Move Magnified Area :</b> Run the POSITION in the MAGNIFY mode.</p> <p><b>Adjust Magnification :</b> Press the MAGNIFY ⊕ / ⊖ button in MAGNIFY mode.</p> <p><b>Clear MAGNIFY Mode :</b> Press the MAGNIFY ⊖ button.</p> <ul style="list-style-type: none"> <li>• The MAGNIFY mode is cleared by running or setting the AUTO, ASPECT, INPUT SELECT or VIDEO, or by changing the input signal.</li> </ul>  |
| FREEZE           | <p><b>Set/Clear FREEZE Mode :</b> Press the FREEZE button. The [ ] icon is displayed, and the image frozen, in the FREEZE mode.</p> <ul style="list-style-type: none"> <li>• The FREEZE mode is cleared by running or setting POSITION, VOLUME, MUTE, Automatic Adjustment, BLANK ON/OFF, or MENU ON/OFF, KEYSTONE, or by changing the input signal.</li> <li>• Do not forget to clear frozen static images.</li> </ul>   |

**NOTE** • Use the remote control transmitter at a distance of approximately 5m from the sensor on the front of the projector, and within a range of 30° left-right. Strong light and obstacles will interfere with operation of the remote control transmitter.
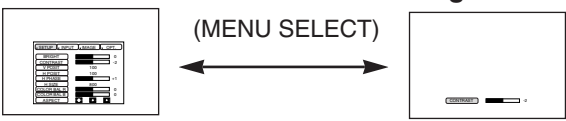
# OPERATIONS (continued)

Items indicated by (\*) may be used from the control panel.



**Table 3. Basic Operation (continued)**

| Item         | Description  |
|--------------|--|
| VOLUME       | <b>Volume Adjustment :</b> Press the VOLUME  /  button.  |
| MUTE         | <b>Set/Clear Mute Mode :</b> Press the MUTE button. No sound is heard in the MUTE mode.  |
| AUTO         | <p><b>Automatic Adjustment at RGB Input :</b> Press the AUTO button. Horizontal position(H.POSIT), vertical position (V.POSIT),clock phase (H.PHASE), and horizontal size(H.SIZE) are automatically adjusted. Use with the window at maximum size in the application display.</p> <p><b>Automatic Adjustment at Video Input :</b> Press the AUTO button. A signal type appropriate for the input signal is selected automatically. Valid only when AUTO is set for VIDEO on the menu.</p> <ul style="list-style-type: none"> <li>• This operation requires approximately 10 seconds. It may not function correctly with some input signals.</li> </ul>   |
| BLANK ON/OFF | <b>Set/Clear Blank Mode:</b> Press the BLANK button. No image is displayed in the Blank mode. The screen color is as set in BLANK on the Image menu.   |
| MENU ON/OFF  | <p><b>Menu Display Start/Stop:</b> Press the MENU button.</p> <ul style="list-style-type: none"> <li>• The menu display is terminated automatically after approximately 10 seconds of inactivity.</li> </ul>   |
| MENU SELECT  | <p><b>Select Menu Type:</b> Press the MENU SELECT button. Allows the user to select the normal menu or the single menu. Only the selected item is displayed on the single menu, and other items are displayed with the  and  buttons as with the normal menu.</p> <ul style="list-style-type: none"> <li>• Valid only when the Setup menu is used. Push the MENU SELECT button after selecting items such as "BRIGHTNESS".</li> <li>• The MENU SELECT button may operate as the mouse control button. Refer to page 4.</li> </ul> <div style="text-align: center;"> <p><b>Normal menu</b> <span style="margin: 0 50px;">(MENU SELECT)</span> <b>Single menu</b></p>  </div> |
| P.IN P. MODE | <p><b>Select Mode of P.IN P. Display :</b> Press the PinP button.</p> <p>Small → Large → P.IN P. off ( → Small)</p> <ul style="list-style-type: none"> <li>• Valid only at RGB IN 1, RGB IN 2 or DVI input.</li> </ul>   |
| KEYSTONE     | <p><b>Set / Clear KEYSTONE Mode :</b> Press the KEYSTONE  button.</p> <p><b>Select KEYSTONE Mode :</b> Press the  /  button in the KEYSTONE mode. Vertical  ↔  Horizontal</p> <p><b>Adjust KEYSTONE :</b> Press the  /  button.</p>   |

# OPERATIONS (continued)

## Setup Menu

The following adjustments and settings are possible when SETUP is selected at the top of the menu. Part of the Setup menu differs between RGB input and video input. Select an item with the  $\blacktriangle$  and  $\blacktriangledown$  buttons, and start operation. Use the Single menu to reduce menu size (see Table 3, MENU SELECT).

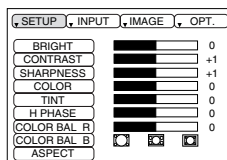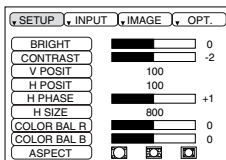

RGB IN 1  
RGB IN 2  
DIGITAL

VIDEO  
S-VIDEO  
COMPONENT VIDEO

**Table 4. Setup Menu**

| Item        | Description   | RGB IN 1<br>RGB IN 2 | DIGITAL | VIDEO<br>S-VIDEO<br>COMPONENT |
|-------------|---|----------------------|---------|-------------------------------|
| BRIGHT      | <b>Adjustment:</b> Dark $\blacktriangleleft$ $\leftrightarrow$ Light $\blacktriangleright$  | ✓                    | ✓       | ✓                             |
| CONTRAST    | <b>Adjustment:</b> Weak $\blacktriangleleft$ $\leftrightarrow$ Strong $\blacktriangleright$   | ✓                    | ✓       | ✓                             |
| V POSIT     | <b>Adjustment:</b> Down $\blacktriangleleft$ $\leftrightarrow$ Up $\blacktriangleright$   | ✓                    | -       | -                             |
| H POSIT     | <b>Adjustment:</b> Left $\blacktriangleleft$ $\leftrightarrow$ Right $\blacktriangleright$  | ✓                    | -       | -                             |
| H PHASE     | <b>Adjustment:</b> Left $\blacktriangleleft$ $\leftrightarrow$ Right $\blacktriangleright$<br>• Adjust to eliminate flicker.  | ✓                    | -       | ✓                             |
| H SIZE      | <b>Adjustment:</b> Small $\blacktriangleleft$ $\leftrightarrow$ Large $\blacktriangleright$<br>• The image may not be displayed correctly if the horizontal size is excessive. In such cases, press the RESET button, and initialize the horizontal size.   | ✓                    | -       | -                             |
| SHARPNESS   | <b>Adjustment:</b> Soft $\blacktriangleleft$ $\leftrightarrow$ Clear $\blacktriangleright$  | -                    | -       | ✓                             |
| COLOR       | <b>Adjustment:</b> Light $\blacktriangleleft$ $\leftrightarrow$ Dark $\blacktriangleright$  | -                    | -       | ✓                             |
| TINT        | <b>Adjustment:</b> Red $\blacktriangleleft$ $\leftrightarrow$ Green $\blacktriangleright$<br>• Valid only when NTSC or NTSC 4.43 signal is received.  | -                    | -       | ✓                             |
| COLOR BAL R | <b>Adjustment:</b> Light $\blacktriangleleft$ $\leftrightarrow$ Dark $\blacktriangleright$  | ✓                    | ✓       | ✓                             |
| COLOR BAL B | <b>Adjustment:</b> Light $\blacktriangleleft$ $\leftrightarrow$ Dark $\blacktriangleright$  | ✓                    | ✓       | ✓                             |
| ASPECT      | <b>Select Image Aspect Ratio :</b><br>Full [ $\square$ ] $\blacktriangleleft$ $\leftrightarrow$ $\blacktriangleright$ 16:9[ $\square$ ] $\blacktriangleleft$ $\leftrightarrow$ $\blacktriangleright$ Real [ $\square$ ]   | ✓                    | ✓       | -                             |
|             | <b>Select Position of Image:</b><br>Press the $\blacktriangledown$ button while 16:9[ $\square$ ] is selected.<br>Center $\rightarrow$ $\blacktriangledown$ Down $\rightarrow$ $\blacktriangledown$ Up ( $\rightarrow$ Center $\blacktriangledown$ )  |                      |         |                               |
| ASPECT      | <b>Select Image Aspect Ratio:</b><br>4:3[ $\square$ ] $\blacktriangleleft$ $\leftrightarrow$ $\blacktriangleright$ 16:9[ $\square$ ] $\blacktriangleleft$ $\leftrightarrow$ $\blacktriangleright$ 4:3 small[ $\square$ ]  | -                    | -       | ✓                             |
|             | <b>Select Position of Image :</b><br>Press the $\blacktriangledown$ button while 16:9[ $\square$ ] / 4:3 small[ $\square$ ] is selected.<br>Center $\rightarrow$ $\blacktriangledown$ Down $\rightarrow$ $\blacktriangledown$ Up ( $\rightarrow$ Center $\blacktriangledown$ )<br>• 4:3 small may not be displayed correctly with some input signals. |                      |         |                               |

# OPERATIONS (continued)

## Input Menu

The following functions are available when INPUT is selected on the menu. Select an item with the  $\blacktriangle$  and  $\blacktriangledown$  buttons, and start or stop operation with the  $\blackrightarrow$  and  $\blackleftarrow$  buttons. The function indicated (\*\*) are effective on video input mode only, not on RGB input mode, except in the P.IN P. window on RGB input mode.

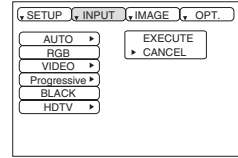



Table 5. Input Menu

| Item             | Description  |
|------------------|--|
| AUTO             | <p><b>Automatic Adjustment at RGB Input:</b> Select the EXECUTE with the <math>\blacktriangle</math> button. Horizontal position (H.POSIT), vertical position (V.POSIT), clock phase (H.PHASE), and horizontal size (H.SIZE) are automatically adjusted. Use with the window at maximum size in the application display.</p> <p><b>Automatic Adjustment at Video Input:</b> Select the EXECUTE with the <math>\blacktriangle</math> button. A signal type appropriate for the input signal is selected automatically when EXECUTE is selected automatically. Valid only when AUTO is set for VIDEO on the menu.</p> <ul style="list-style-type: none"> <li>• This operation requires approximately 10 seconds. It may not function correctly with some input signals. Pressing the AUTO button in this case may correct this problem.</li> <li>• This function is the same as for the AUTO function in Basic operation.</li> </ul>   |
| RGB              | <p><b>Displays RGB Input Frequency:</b> Displays the horizontal and vertical sync signal frequencies for RGB input.</p> <ul style="list-style-type: none"> <li>• Valid only at RGB input.</li> </ul>   |
| VIDEO (**)       | <p><b>Select Video Signal Type:</b> Select the signal type with the <math>\blacktriangle</math> and <math>\blacktriangledown</math> buttons. Select NTSC, PAL, SECAM, NTSC4.43, M-PAL, or N-PAL as appropriate for the input signal. The selection of AUTO enables and executes the function AUTO (Automatic Adjustment at Video Input), except for the N-PAL input.</p> <ul style="list-style-type: none"> <li>• Use this function when the image becomes unstable (eg. the image becomes irregular, or lacks color) at VIDEO/S-VIDEO input.</li> <li>• Automatic Adjustment requires approximately 10 seconds. It may not function correctly with some input signals. Pressing the AUTO button in this case may correct this problem except for the N-PAL input.</li> <li>• For the COMPONENT VIDEO input, this function is not effective and the signal type is distinguished automatically. Refer to the item HDTV of the OPT. Menu for the signal of HDTV.</li> </ul> |
| BLACK (**)       | <p><b>Set/Clear Black Enhancement Mode:</b> Select the TURN ON / TURN OFF with the <math>\blacktriangle</math> / <math>\blacktriangledown</math> button. When the TURN ON is selected, the black enhancement mode is active and the contrast ratio of the screen for the video input will be raised by making black level darker.</p>  |
| Progressive (**) | <p><b>Select Progressive Mode:</b> Select the mode suitable for the input signal with the <math>\blacktriangle</math> and <math>\blacktriangledown</math> buttons. The TV mode and the FILM mode convert the interlaced video signal into the progressive signal. The FILM mode is adaptable 2-3 Pull-Down system to the conversion.</p> <ul style="list-style-type: none"> <li>• Use this function to raise resolution, at the interlaced video input except HDTV signal.</li> </ul>  |
| HDTV             | <p><b>Select HDTV mode:</b> Select the 1035i mode or 1080i mode suitable for the input signal with the <math>\blacktriangle</math> / <math>\blacktriangledown</math> button.</p>   |

# OPERATIONS (continued)

## Image Menu

The following adjustments and settings are available when IMAGE is selected on the menu. Select an item with the **▲** and **▼** buttons, and start or stop operation with the **▶** and **◀** buttons.

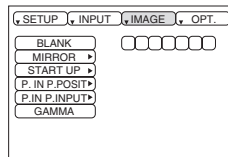

**Table 6. Image Menu**

| Item           | Description   |
|----------------|---|
| BLANK          | <p><b>Select Blank Screen Color:</b> Select color with the <b>◀</b> and <b>▶</b> buttons.</p> <ul style="list-style-type: none"> <li>The image is cleared and the entire screen is displayed in the selected color, when BLANK mode is set with BLANK ON, or when there is no signal for 5 minutes.</li> </ul>                |
| MIRROR         | <p><b>Select Mirror Status:</b> Select mirror status with <b>▲</b> and <b>▼</b> buttons.</p>  |
| START UP       | <p><b>Setup Initial Screen Display:</b> Select TURN ON with the <b>▲</b> button.</p> <p><b>Clear Initial Screen Display:</b> Select TURN OFF with the <b>▼</b> button.</p> <ul style="list-style-type: none"> <li>Note that if TURN OFF is selected the blank screen is displayed in blue when there is no signal.</li> </ul> |
| P. IN P. POSIT | <p><b>Select Position of P. in P. Display :</b> Press the <b>▲</b> or <b>▼</b> button.</p> <p>■ <b>▲</b>↔<b>▼</b> ■ <b>▲</b>↔<b>▼</b> ■ <b>▲</b>↔<b>▼</b> ■</p> <ul style="list-style-type: none"> <li>Valid only at RGB IN 1, RGB IN 2 or DVI input.</li> </ul>  |
| P. IN P. INPUT | <p><b>Select signal of P. in P. Display :</b> Press the <b>▲</b> or <b>▼</b> button.</p> <p>VIDEO <b>▲</b>↔<b>▼</b> S-VIDEO <b>▲</b>↔<b>▼</b> COMPONENT</p>   |
| GAMMA          | <p><b>Select Gamma mode:</b> Select the gamma mode with the <b>▲</b> / <b>▼</b> button.</p> <p>NORMAL <b>▲</b>↔<b>▼</b> CINEMA <b>▲</b>↔<b>▼</b> DYNAMIC</p>  |



# OPERATIONS (continued)

## Options Menu

The following adjustments and settings are available when OPT. is selected on the menu. Select an item with the **▲** and **▼** buttons, and start or stop operation with the **▶** and **◀** buttons. The function indicated (\*\*) are effective on video input mode only, not on RGB input mode, except in the P.IN P. window on RGB input mode.

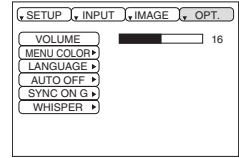



Table 7. Options Menu

| Item       | Description  |
|------------|--|
| VOLUME     | <b>Volume Adjustment:</b> Reduce VOLUME <b>◀</b> ↔ Increase VOLUME <b>▶</b>  |
| MENU COLOR | <b>Select Menu Background Color:</b> Select with the <b>▶</b> and <b>◀</b> buttons.  |
| LANGUAGE   | <b>Select Menu Display Language:</b> Select with the <b>▲</b> and <b>▼</b> buttons.  |
| AUTO OFF   | <b>Set AUTO OFF:</b> Set 1~99 minutes with the <b>▲</b> and <b>▼</b> buttons. The system automatically enters the standby mode when a signal is not received for the set time.<br><b>Clear AUTO OFF:</b> Select STOP (0 min.) with the <b>▼</b> button. When STOP is selected the system does not enter the standby mode even if no signal is received.    |
| SYNC ON G  | <b>SYNC ON G Valid:</b> Select TURN ON with the <b>▲</b> button.<br><b>SYNC ON G Invalid:</b> Select TURN OFF with the <b>▼</b> button.<br>• May not be displayed correctly with some input signals when SYNC ON G is valid. In such cases, remove the signal connector so that no signal is received, set SYNC ON G to invalid, and reconnect the signal. |
| WHISPER    | <b>Set / Crear WHISPER Mode:</b> Press the <b>▲</b> and <b>▼</b> button. When the WHISPER is selected, the WHISPER mode is active. In the WHISPER mode, acoustic noise level from the unit is reduced, and brightness level on screen is a little lower.   |

# OPERATIONS (continued)

## No Signal Menu

The same adjustments and settings are available as with the Image and Options menus when the MENU button is pressed during display of the “NO INPUT IS DETECTED ON \*\*\*” or “SYNC IS OUT OF RANGE ON \*\*\*” message while no signal is received.

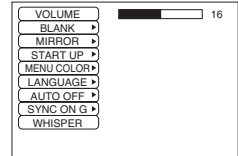

**Table 8. No Signal Menu**

| Item       | Description   |
|------------|---|
| VOLUME     | <p><b>Volume Adjustment:</b> Reduce VOLUME ◀ ↔ Increase VOLUME ▶</p> <ul style="list-style-type: none"> <li>When this function is used, audio input is automatically switched to video. The audio input can be switched by moving the DISK PAD left and right during the display of the volume adjustment bar. The volume adjustment bar is displayed by pressing VOLUME ▶ or VOLUME ◀ button.</li> </ul>   |
| BLANK      | <p><b>Select Blank Screen Color:</b> Select the color with the ◀ and ▶ buttons.</p> <ul style="list-style-type: none"> <li>The image is cleared and the entire screen is displayed in the selected color, when BLANK mode is set with BLANK ON, or when there is no signal for 5 minutes.</li> </ul>  |
| MIRROR     | <p><b>Operation Start/Stop:</b> Press the ▶ or ◀ button.</p> <p><b>Select Mirror Status:</b> Select the mirror status with the ▲ and ▼ buttons.</p>   |
| START UP   | <p><b>Operation Start/Stop:</b> Press the ▶ or ◀ button.</p> <p><b>Setup Initial Screen Display:</b> Select the TURN ON with the ▲ button.</p> <p><b>Clear Initial Screen Display:</b> Select the TURN OFF with the ▼ button.</p> <ul style="list-style-type: none"> <li>Note that if TURN OFF is selected the blank screen is displayed in blue when there is no signal.</li> </ul>  |
| MENU COLOR | <p><b>Select Menu Background Color:</b> Select the color with the ▶ and ◀ buttons.</p>  |
| LANGUAGE   | <p><b>Operation Start/Stop:</b> Press the ▶ or ◀ button.</p> <p><b>Select Menu Display Language:</b> Select the language with the ▲ and ▼ buttons.</p>  |
| AUTO OFF   | <p><b>Operation start/stop:</b> Press the ▶ or ◀ button.</p> <p><b>Set AUTO OFF:</b> Set 1~99 minutes with the ▲ and ▼ buttons. The system automatically enters the standby mode when a signal is not received for the set time.</p> <p><b>Clear AUTO OFF:</b> Select the STOP (0 min.) with the ▼ button. When the STOP is selected the system does not enter the standby mode even if no signal is received.</p>  |
| SYNC ON G  | <p><b>Operation Start/Stop:</b> Press the ▶ or ◀ button.</p> <p><b>SYNC ON G Valid:</b> Select the TURN ON with the ▲ button.</p> <p><b>SYNC ON G Invalid:</b> Select the TURN OFF with the ▼ button.</p> <ul style="list-style-type: none"> <li>May not be displayed correctly with some input signals when the SYNC ON G is valid. In such cases, remove the signal connector so that no signal is received, set the SYNC ON G to invalid, and reconnect the signal.</li> </ul> |
| WHISPER    | <p><b>Operation Start/Stop:</b> Press the ▶ or ◀ button.</p> <p><b>Set / Clear WHISPER Mode:</b> Press the ▲ and ▼ button. When the WHISPER is selected, the WHISPER mode is active. In the WHISPER mode, acoustic noise level from the unit is reduced, and brightness level on screen is a little lower.</p>  |

# MAINTENANCE

## Lamp



**HIGH VOLTAGE  
HIGH TEMPERATURE  
HIGH PRESSURE**

Contact your dealer before replacing the lamp.

For the optional lamp, see the item “Optional Parts” of the Table 12.


Before replacing the lamp, switch power OFF, remove the power cord from the power outlet, and wait approximately 45 minutes until the lamp has cooled. The lamp may explode if handled at high temperatures.



**WARNING** • For disposal of used lamp, treat according to the instruction of community authorities.

- Since the lamp is made of glass, do not apply shock to it and do not scratch it.
- Also, do not use old lamp. This could also cause explosion of the lamp.
- Premature lamp failure MAY be caused by an electronic component in the projector and not necessarily the lamp. If unsure contact your local service center.
- If it is probable that the lamp has exploded (explosive sound is heard), disconnect the power plug from the power outlet and ask your dealer to replace lamp. The lamp is covered by front glass, but, in rare cases, the reflector and the inside of the projector may be damaged by scattered broken pieces of glass, and broken pieces could cause injury when being handled.
- Do not use the projector with the lamp cover removed.

**Lamp**

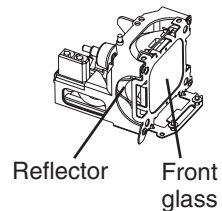

### Lamp Life

Projector lamps have a finite life. The image will become darker, and hues will become weaker, after a lamp has been used for a long period of time.




Replace the lamp if the LAMP indicator is red, or the CHANGE THE LAMP message appears when the projector is switched ON. See Table 9 of P.20 and Table 10 of P.21.

**NOTE** • The LAMP indicator is also red when the lamp unit reaches high temperature. Before replacing the lamp, switch power OFF, wait approximately 20 minutes, and switch power ON again. If the LAMP indicator is still red, replace the lamp.

# MAINTENANCE (continued)

## Replacing the Lamp

1. Switch the projector OFF, remove the power cord from the power outlet, and wait at least 45 minutes for the unit to cool.
2. Prepare a new lamp.
3. Check that the projector has cooled sufficiently, and gently turn it upside down.
4. Loosen the two screws as shown in the diagram, and remove the lamp cover.
5. Loosen the two screws, and gently remove the lamp while holding the grips. Touching the inside of the lamp case may result in uneven coloring.
6. Install the new lamp and tighten the two screws firmly. Also steadily push the opposite side of the screwed lamp into the unit.
7. Replace the lamp cover in position and tighten the screw firmly.
8. Gently turn the projector right-side up.

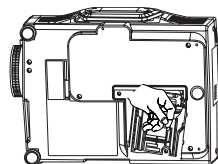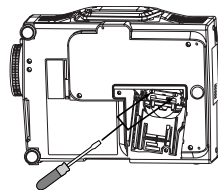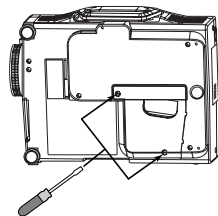


**CAUTION** • Ensure that screws are tightened properly. Screws not tightened fully may result in injury or accidents.

- Do not use the projector with the lamp cover removed.

## Resetting the Lamp Timer

Reset the lamp timer after replacing the lamp. When the lamp has been replaced after the LAMP indicator is red, or the CHANGE THE LAMP message is displayed, complete the following operation within ten minutes of switching power ON. The power will be turned off automatically in over 10 minutes.

1. Switch power ON, and press the RESET button, for approximately three seconds. The 'LAMP xxxx hr' message will appear on the lamp timer on the bottom of the screen.
2. Press the MENU button on the remote control transmitter, or the RESET button on the control panel, while the lamp timer is displayed. The 'LAMP xxxx □ → 0 ■ CANCEL' message will then appear.
3. Press the  and select 0, and wait until the timer display is cleared.

**NOTE** • Do not reset the lamp timer without replacing the lamp. Reset the lamp timer always when replacing the lamp. The message functions will not operate properly if the lamp timer is not reset correctly.

- An air filter is attached to the optional lamp. Replace the filter after replacing the lamp.


# MAINTENANCE (continued)

## Air Filter

### Replacing the Air Filter

Replace the air filter if contamination cannot be removed, or if it is damaged.

1. Remove the filter lid.
2. Pull and remove the old filter from the filter box.
3. Insert the new filter to the filter box. Push left and right edges of the filter with fingers in order to fit the filter to the box properly. Check that there is no gap between the filter and plastics at top, left and right side edge of the filter.
4. Set the filter lid.

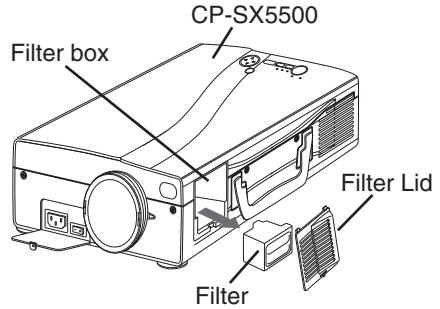

### Cleaning the air Filter

The air filter should be cleaned as described below at intervals of approximately 300 hours.

1. Switch the projector power supply OFF, and remove the power cord from the power outlet.
2. Clean the air filter with a vacuum cleaner.

**CAUTION** • Switch power OFF and remove the power cord from the power outlet before beginning maintenance work. Please read the separate “SAFETY INSTRUCTIONS” thoroughly to ensure that maintenance is performed correctly.

- Replace the air filter if contamination cannot be removed, or if it is damaged. Contact your dealer in such case. For the optional air filter, see the item “Option Parts” of the Table 12.
- Do not use the equipment with the air filter removed.
- When the air filter is clogged with dust etc. the power supply is switched OFF automatically to prevent the temperature rising inside the projector.

## Other Maintenance

### Maintenance Inside the Equipment

For safety reasons, ensure that the equipment is cleaned and checked by the dealer once every two years. Maintaining the equipment by yourself is dangerous.

### Cleaning the Lens

Gently wipe the lens with lens cleaning paper. Do not touch the lens with your hands.

### Cleaning the Cabinet and Remote control transmitter

Gently wipe with a soft cloth. If dirt and stains etc. are not easily removed, use a soft cloth dampened with water, or water and a neutral detergent, and wipe dry with a soft, dry cloth.

**CAUTION** • Switch power OFF and remove the power cord from the power outlet before beginning maintenance work. Please read the separate “SAFETY INSTRUCTIONS” thoroughly to ensure that maintenance is performed correctly.

- Do not use detergents or chemicals other than those noted above (e.g. benzene or thinners).
- Do not use cleaning sprays.
- Do not rub with hard materials, or tap the equipment.

# TROUBLESHOOTING

## OSD Message

The messages as described below may appear on the screen at power ON. Take the appropriate measures when such a message appears.

**Table 9. OSD Messages**

| Message  | Contents   |
|--|--|
| CHANGE THE LAMP<br>AFTER REPLACING LAMP,<br>RESET THE LAMP TIME.<br>*1)  | The message shown at left appears after the lamp has been used for more than 1300 hours.<br>The lamp is approaching the end of its life.<br>Power is switched OFF automatically when the lamp reaches the end of its life. Prepare a new lamp for installation.<br>Always reset the lamp timer after replacing the lamp. |
| CHANGE THE LAMP<br>AFTER REPLACING LAMP,<br>RESET THE LAMP TIME.<br>THE POWER WILL TURN OFF<br>AFTER ** hr.<br>*1) | The lamp will reach the end of its life in ** hours.<br>Power will be switched OFF automatically in ** hours.<br>Replace the lamp as shown in P.17~18 "Lamp".<br>Always reset the lamp timer after replacing the lamp.   |
| CHANGE THE LAMP<br>AFTER REPLACING LAMP,<br>RESET THE LAMP TIME.<br>THE POWER WILL<br>TURN OFF<br>AFTER 0 hr.      | The lamp has reached the end of its life. Power will be switched OFF in a few minutes.<br>Switch power OFF immediately and replace the lamp as shown in P.17~18 "Lamp".<br>Always reset the lamp timer after replacing the lamp.   |
| NO INPUT IS DETECTED<br>ON ***   | No input signal found.<br>Check signal input connections and signal sources.   |
| SYNC IS OUT OF RANGE<br>ON ***   | The horizontal or vertical frequency of the input signal is not within the specified range.<br>Check the specifications of the equipment and the signal source.  |

**NOTE** \*1) This message is cleared automatically after approximately three minutes, and appears every time power is switched ON.

# TROUBLESHOOTING (continued)

## Indicators Message

The POWER indicator, LAMP indicator, and TEMP indicator are lit and blank as follows. Take the appropriate measures.

**Table 10. Indicators Message**

| STANDBY/ON indicator | LAMP indicator | TEMP indicator | Contents  |
|----------------------|----------------|----------------|---|
| Lights orange        | Turns off      | Turns off      | The Standby mode has been set.  |
| Blinks green         | Turns off      | Turns off      | Warming up. Please wait.  |
| Lights green         | Turns off      | Turns off      | ON. Normal operation possible.  |
| Blinks orange        | Turns off      | Turns off      | Cooling. Please wait.   |
| Lights red           | Lights red     | Turns off      | Lamp is not lit.<br>The interior of the equipment may be too hot. Switch power OFF, wait 20 minutes until the equipment cools, and check whether the ventilation openings are blocked, whether the air filter is dirty, or whether the ambient temperature exceeds 35 °C. And switch power ON again. Replace the lamp if the same problem occurs. |
| Lights red           | Blinks red     | Turns off      | Lamp or lamp cover is not found, or hasn't been fitted in correctly.<br>Switch power OFF, and wait for 45 minutes until the equipment cools. Check fitting of the lamp and lamp cover, and switch power ON again. Contact your dealer if the same problem occurs again.   |
| Lights red           | Turns off      | Blinks red     | The cooling fan is not operating.<br>Switch power OFF, and wait for 20 minutes until the equipment cools. Check for foreign matters in the fan, and switch power ON again. Contact your dealer if the same problem occurs again.  |

**NOTE** \*1) When the internal temperature becomes excessive power is switched OFF automatically for safety reasons, and the indicator is extinguished. Set the power switch to [O] and wait for 20 minutes until the equipment has cooled sufficiently.

# TROUBLESHOOTING (continued)

## Symptom

Before requesting repair, check in accordance with the following chart. If the situation cannot be corrected, then contact your dealer.

**Table 11. Symptom**

| Symptom                                     | Possible cause   | Remedy   | Page  |
|---|--|--|-------|
| The power is not turned on.                 | The main power switch is not turned on.                      | Turn on the main power switch.   | 8,9   |
|   | The power cord is disconnected.                              | Plug the power cord into an AC power outlet.   |       |
| No video or audio.                          | The input is not correctly set.                              | Use the projector or remote control transmitter to set.  | 10    |
|   | No signal input.   | Connect correctly.   | 7,8   |
| Video is present but no audio.              | The projector is not correctly connected.                    | Connect correctly.   | 7,8   |
|   | The volume is set to minimum.                                | Press VOLUME $\triangleleft$ on the remote control or display the menu screen and adjust the volume. | 11,15 |
|   | Mute is turned on.   | Press the MUTE $\otimes$ button.   | 11    |
| Audio is present but no video.              | The projector is not correctly connected.                    | Connect correctly.   | 7,8   |
|   | The brightness adjustment knob is rotated fully clockwise.   | Select BRIGHT with the MENU button and the press the $\triangleright$ button.                        | 12    |
|   | The lens cap is still attached.                              | Remove the lens cap.   | 9     |
| Colors are pale and color matching is poor. | Color density and color matching are not correctly adjusted. | Adjust the video.  | 12    |
| Images are dark.                            | Brightness and contrast are not correctly adjusted.          | Adjust the video.  | 12    |
|   | The lamp is nearing the end of its service life.             | Replace with a new lamp.   | 17    |
|   | WHISPER mode is set.   | Clear WHISPER mode.  | 15    |
| Video is blurred.                           | Focus or H PHASE is out of adjustment.                       | Adjust the focus or H PHASE.   | 9,12  |



# SPECIFICATIONS

Table 12. Specifications

| Item                 |                 | Specification  |   |
|----------------------|-----------------|--|---|
| Product name         |                 | Liquid crystal projector   |   |
| Liquid crystal panel | Panel size      | 2.3 cm (0.9 type)  |   |
|                      | Drive system    | TFT active matrix  |   |
|                      | Pixels          | 1,397,760 pixels (1365 horizontal x 1024 vertical)                         |   |
| Lens                 |                 | Zoom lens F=2.7 ~ 3.1 f=38.0 ~ 49.0 mm                                     |   |
| Lamp                 |                 | 220 W UHB  |   |
| Speaker              |                 | 1W   |   |
| Power supply         |                 | AC100 ~ 120V, 4.0A / AC220 ~ 240V, 1.8A                                    |   |
| Power consumption    |                 | 360W   |   |
| Temperature range    |                 | 0 ~ 35°C (Operating)   |   |
| Size                 |                 | 250 (W) x 103 (H) x 335 (D) mm   |   |
| Weight (mass)        |                 | 5.6 kg   |   |
| RGB signal input     | RGB IN          | 1  | Video: Analog 0.7Vp-p, 75Ω terminator (positive)<br>H/V. sync.: TTL level (positive/negative)<br>Composite sync.: TTL level<br>D-sub 15-pin shrink jack       |
|                      |                 | 2  |   |
|                      | DVI             |  | TMDS, DC: 150~1200 mV / AC: 1.56 Vp-p<br>TTL Level (Positive/Negative)  |
|                      | AUDIO IN        | RGB1   | 200mVrms, 20 kΩ (max. 3.0Vp-p)<br>Stereo mini jack  |
| DVI                  |                 |  |   |
| RGB2                 |                 |  |   |
| Video signal input   | VIDEO           |  | 1.0Vp-p, 75Ω terminator<br>RCA jack   |
|                      | S-VIDEO         |  | Brightness signal: 1.0Vp-p, 75Ω terminator<br>Color signal: 0.286Vp-p (burst signal), 75Ω terminator<br>Mini DIN 4-pin jack                                   |
|                      | COMPONENT VIDEO | Y  | 1.0 Vp-p, 75 Ω Terminator (Positive)  |
|                      |                 | Cb/Cr  | 0.7 Vp-p, 75 Ω Terminator (Positive)  |
|                      |                 | Pb/Pr  | 0.7 Vp-p, 75 Ω Terminator (Positive)  |
|                      | AUDIO           | L  | 200mVrms, 20 kΩ (max. 3.0Vp-p)<br>RCA jack  |
| R                    |                 |  |   |
| Signal output        | RGB OUT         |  | Video: Analog 0.7Vp-p, 75Ω output impedance (positive)<br>H/V. sync.: TTL level (positive/negative)<br>Composite sync.: TTL level<br>D-sub 15-pin shrink jack |
|                      | AUDIO OUT       |  | 200mVrms, output impedance 1 kΩ (max. 3.0Vp-p)<br>Stereo mini jack  |
| Control functions    | CONTROL         |  | D-sub 15-pin shrink plug  |
|                      | USB             |  | USB jack (B type)   |
| Optional Parts       |                 | Lamp: DT00421<br>Air Filter: MN04291<br>* For others, consult your dealer. |   |

**NOTE** • This specifications are subject to change without notice.


# **WARRANTY AND AFTER-SERVICE**

---

If a problem occurs with the equipment, first refer to the P.20 “TROUBLESHOOTING” section and run through the suggested checks. If this does not resolve the problem contact your dealer or service company. They will tell you what warranty condition is applied.

# TECHNICAL

## Dimension Diagram

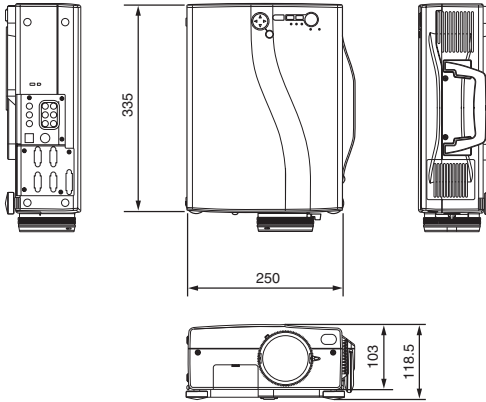

Unit : mm

## Signal Connector Pin Assignment

### 1. D-sub 15-pin Shrink Connector (RGB IN 1/RGB IN 2/RGB OUT)

 
| Pin No | Signal            | Pin No | Signal                    | Pin No | Signal             |
|--------|-------------------|--------|---------------------------|--------|--------------------|
| 1      | Video input Red   | 9      | -                         | 15     | RGB IN 1: SCL(DDC) |
| 2      | Video input Green | 10     | Ground                    |        | RGB IN 2: -        |
| 3      | Video input Blue  | 11     | -                         |        | RGB OUT: -         |
| 4      | -                 | 12     | RGB IN 1: SDA(DDC)        |        |                    |
| 5      | Ground            |        | RGB IN 2: -               |        |                    |
| 6      | Ground Red        |        | RGB OUT: -                |        |                    |
| 7      | Ground Green      | 13     | H. sync./ Composite sync. |        |                    |
| 8      | Ground Blue       | 14     | Vertical sync             |        |                    |

### 2. Digital Receptacle Connector (DIGITAL)

| Pin No | Signal                     | Pin No | Signal                         | Pin No | Signal                |
|--------|----------------------------|--------|--------------------------------|--------|-----------------------|
| 1      | T.M.D.S. Data 2 -          | 11     | T.M.D.S. Data 1 / 3 Shield     | 21     | -                     |
| 2      | T.M.D.S. Data 2 +          | 12     | -                              | 22     | T.M.D.S. Clock Shield |
| 3      | T.M.D.S. Data 2 / 4 Shield | 13     | -                              | 23     | T.M.D.S. Clock +      |
| 4      | -                          | 14     | +5V Power                      | 24     | T.M.D.S. Clock -      |
| 5      | -                          | 15     | Ground (+5V, Analog H/V Sync.) |        |                       |
| 6      | DDC Clock                  | 16     | Hot-Plug Sense                 |        |                       |
| 7      | DDC Data                   | 17     | T.M.D.S. Data 0 -              |        |                       |
| 8      | Analog V. Sync.            | 18     | T.M.D.S. Data 0 +              |        |                       |
| 9      | T.M.D.S. Data 1 -          | 19     | T.M.D.S. Data 0 / 5 Shield     |        |                       |
| 10     | T.M.D.S. Data 1 +          | 20     | -                              |        |                       |

### 3. Mini Din 4-pin Connector (S-VIDEO)

| Pin No | Signal  |
|--------|---|
| 1      | Color:0.286Vp-p (NTSC, burst signal),75Ω terminator<br>0.3Vp-p (PAL/SECAM, burst signal),75Ω terminator |
| 2      | Brightness:1.0Vp-p, 75Ω terminator  |
| 3      | Ground  |
| 4      | Ground  |



# TECHNICAL (continued)

---

## Example of computer signal

| Resolution<br>H × V | fH (kHz) | fV (Hz) | Rating | Signal mode |
|---------------------|----------|---------|--------|-------------|
| 720 × 400           | 37.9     | 85.0    | VESA   | TEXT        |
| 640 × 480           | 31.5     | 59.9    | VESA   | VGA (60Hz)  |
| 640 × 480           | 35.0     | 66.7    |        | Mac13"mode  |
| 640 × 480           | 37.9     | 72.8    | VESA   | VGA (72Hz)  |
| 640 × 480           | 37.5     | 75.0    | VESA   | VGA (75Hz)  |
| 640 × 480           | 43.3     | 85.0    | VESA   | VGA (85Hz)  |
| 800 × 600           | 35.2     | 56.3    | VESA   | SVGA (56Hz) |
| 800 × 600           | 37.9     | 60.3    | VESA   | SVGA (60Hz) |
| 800 × 600           | 48.1     | 72.2    | VESA   | SVGA (72Hz) |
| 800 × 600           | 46.9     | 75.0    | VESA   | SVGA (75Hz) |
| 800 × 600           | 53.7     | 85.1    | VESA   | SVGA (85Hz) |
| 832 × 624           | 49.7     | 74.5    |        | Mac16"mode  |
| 1024 × 768          | 48.4     | 60.0    | VESA   | XGA (60Hz)  |
| 1024 × 768          | 56.5     | 70.1    | VESA   | XGA (70Hz)  |
| 1024 × 768          | 60.0     | 75.0    | VESA   | XGA (75Hz)  |
| 1024 × 768          | 68.7     | 85.0    | VESA   | XGA (85Hz)  |
| 1152 × 864          | 67.5     | 75.0    | VESA   | SXGA (75Hz) |
| 1280 × 960          | 60.0     | 60.0    | VESA   | SXGA (60Hz) |
| 1280 × 1024         | 64.0     | 60.0    | VESA   | SXGA (60Hz) |
| 1280 × 1024         | 80.0     | 75.0    | VESA   | SXGA (75Hz) |
| 1280 × 1024         | 91.2     | 85.0    | VESA   | SXGA (85Hz) |
| 1600 × 1200         | 75.0     | 60.0    | VESA   | UXGA (60Hz) |



- NOTE** • Some computers may have multiple display screen modes. Use of some of these modes will not be possible with this projector.
- Be sure to check jack type, signal level, timing and resolution before connecting this projector to a computer.
  - Depending on the input signal, full-size display may not be possible in some cases. Refer to the number of display pixels above.
  - The image might be something wrong with computer by computer on the digital RGB mode. In the case, it is recommended to reduce the resolution and / or refresh rate.

# TECHNICAL (continued)

## Initial set signals

The following signals are used for the initial settings.

The signal timing of some computer models may be different. In such case, refer to adjust the V.POSIT and H.POSIT of the menu.

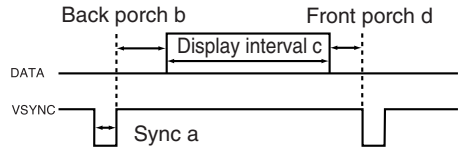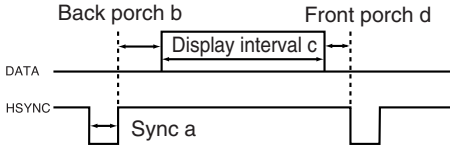

| Computer / Signal | Horizontal signal timing (μs) |     |      |     |
|-------------------|-------------------------------|-----|------|-----|
|                   | a                             | b   | c    | d   |
| TEXT              | 2.0                           | 3.0 | 20.3 | 1.0 |
| VGA (60Hz)        | 3.8                           | 1.9 | 25.4 | 0.6 |
| Mac 13"mode       | 2.1                           | 3.2 | 21.2 | 2.1 |
| VGA (72Hz)        | 1.3                           | 3.8 | 20.3 | 1.0 |
| VGA (75Hz)        | 2.0                           | 3.8 | 20.3 | 0.5 |
| VGA (85Hz)        | 1.6                           | 2.2 | 17.8 | 1.6 |
| SVGA (56Hz)       | 2.0                           | 3.6 | 22.2 | 0.7 |
| SVGA (60Hz)       | 3.2                           | 2.2 | 20.0 | 1.0 |
| SVGA (72Hz)       | 2.4                           | 1.3 | 16.0 | 1.1 |
| SVGA (75Hz)       | 1.6                           | 3.2 | 16.2 | 0.3 |
| SVGA (85Hz)       | 1.1                           | 2.7 | 14.2 | 0.6 |
| Mac 16"mode       | 1.1                           | 3.9 | 14.5 | 0.6 |
| XGA (60Hz)        | 2.1                           | 2.5 | 15.8 | 0.4 |
| XGA (70Hz)        | 1.8                           | 1.9 | 13.7 | 0.3 |
| XGA (75Hz)        | 1.2                           | 2.2 | 13.0 | 0.2 |
| XGA (85Hz)        | 1.0                           | 2.2 | 10.8 | 0.5 |
| 1152×864 (75Hz)   | 1.2                           | 2.4 | 10.7 | 0.6 |
| 1280×960 (60Hz)   | 1.0                           | 2.9 | 11.9 | 0.9 |
| 1280×1024 (60Hz)  | 1.0                           | 2.3 | 11.9 | 0.4 |
| 1280×1024 (75Hz)  | 1.1                           | 1.8 | 9.5  | 0.1 |
| 1280×1024 (85Hz)  | 1.0                           | 1.4 | 8.1  | 0.4 |
| 1600×1200 (60Hz)  | 1.2                           | 1.9 | 9.9  | 0.4 |

| Computer / Signal | Vertical signal timing (lines) |    |      |    |
|-------------------|--------------------------------|----|------|----|
|                   | a                              | b  | c    | d  |
| TEXT              | 3                              | 42 | 400  | 1  |
| VGA (60Hz)        | 2                              | 33 | 480  | 10 |
| Mac 13"mode       | 3                              | 39 | 480  | 3  |
| VGA (72Hz)        | 3                              | 28 | 480  | 9  |
| VGA (75Hz)        | 3                              | 16 | 480  | 1  |
| VGA (85Hz)        | 3                              | 25 | 480  | 1  |
| SVGA (56Hz)       | 2                              | 22 | 600  | 1  |
| SVGA (60Hz)       | 4                              | 23 | 600  | 1  |
| SVGA (72Hz)       | 6                              | 23 | 600  | 37 |
| SVGA (75Hz)       | 3                              | 21 | 600  | 1  |
| SVGA (85Hz)       | 3                              | 27 | 600  | 1  |
| Mac 16"mode       | 3                              | 39 | 624  | 1  |
| XGA (60Hz)        | 6                              | 29 | 768  | 3  |
| XGA (70Hz)        | 6                              | 29 | 768  | 3  |
| XGA (75Hz)        | 3                              | 28 | 768  | 1  |
| XGA (85Hz)        | 3                              | 36 | 768  | 1  |
| 1152×864 (75Hz)   | 3                              | 32 | 864  | 1  |
| 1280×960 (60Hz)   | 3                              | 36 | 960  | 1  |
| 1280×1024 (60Hz)  | 3                              | 38 | 1024 | 1  |
| 1280×1024 (75Hz)  | 3                              | 38 | 1024 | 1  |
| 1280×1024 (85Hz)  | 3                              | 44 | 1024 | 1  |
| 1600×1200 (60Hz)  | 3                              | 46 | 1200 | 1  |

# TECHNICAL (continued)

## Connection to the Mouse Control

### 1. PS/2, ADB or Serial Mouse


- (1) Turn off the projector and computer, and connect the two units with the appropriate cable. For PS/2 mouse control (for IBM and compatible), use the enclosed mouse cable. For others, consult your dealer.
- (2) Disconnect the USB cable from the projector if it is connected. Then turn on the projector.
- (3) Turn on the computer.
- (4) Start the mouse function. If the mouse has not been started, reboot the computer (soft reboot or reboot buttons). Refer to the descriptions of “DISC PAD” and “MOUSE/RIGHT button” of page 4.

### 2. USB Mouse

- (1) Connect the projector and computer with a suitable commercially available USB cable. Consult your dealer to get the cable, if you need.
- (2) Start the mouse function. Refer to the descriptions of “DISC PAD” and “MOUSE/RIGHT button” of page 4.

**NOTE** • Before connecting, read the instruction manuals of the devices to be connected.  
• In the case of notebook type computers with an internal pointing device, the mouse control function will not work unless the internal pointing device is disabled. In such case, disable the internal pointing device and change the BIOS setting to select an external mouse before the operations described in (1) to (5) above.  
Also, some computers may not have a utility program to operate a mouse.  
Refer to the computer hardware manual for detail.



### PS/2 Mouse

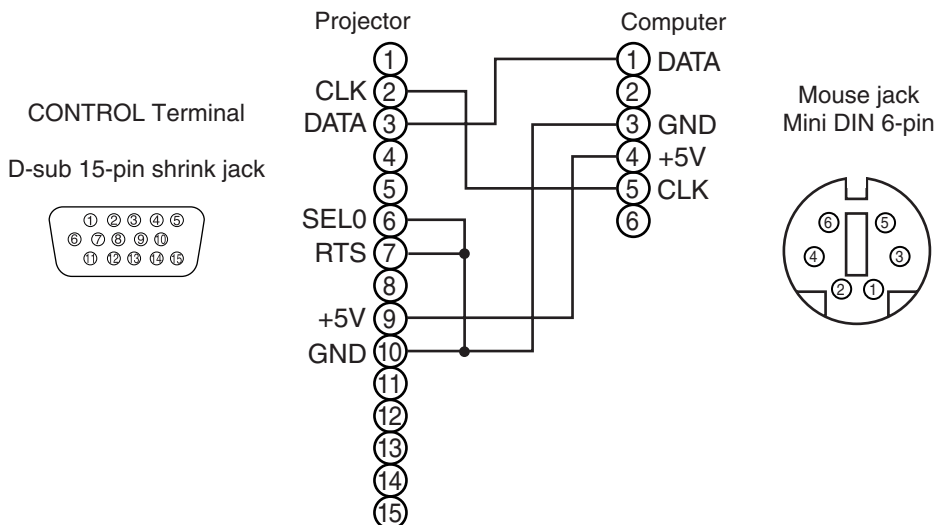


# TECHNICAL (continued)

## ADB Mouse

 CONTROL Terminal  
D-sub 15-pin shrink jack

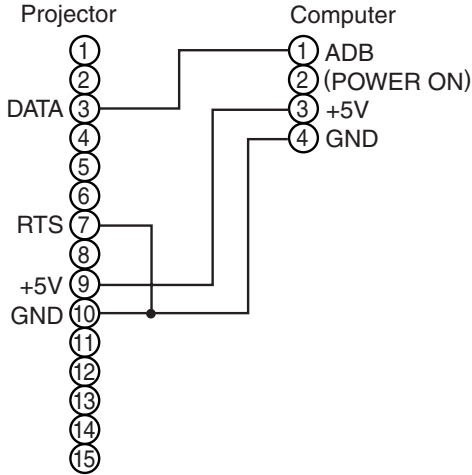


Mouse jack  
Mini DIN 4-pin

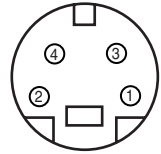


## Serial Mouse

CONTROL Terminal  
D-sub 15-pin shrink jack


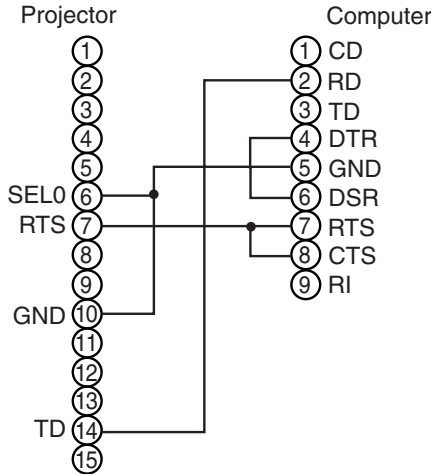


Mouse jack  
D-sub 9-pin

 


## USB Mouse

 USB jack  
(B type)

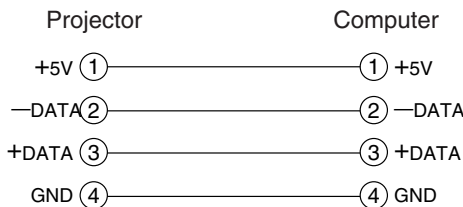

USB cable

 USB jack  
(A type)





TECHNICAL

# TECHNICAL (continued)
 
## RS-232C communication

- (1) Turn off the projector and computer power supplies and connect with the RS-232C cable.
- (2) Turn on the computer power supply and, after the computer has started up, turn on the projector power supply.

Control jack  
D-sub 15-pin shrink jack

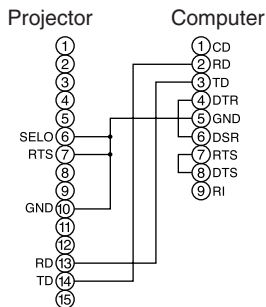

RS-232C jack  
D-sub 9-pin



## Communications setting

19200bps, 8N1

### 1 Protocol

Consist of header (7 bytes) + command data (6 bytes).

### 2 Header

BE + EF + 03 + 06 + 00 + CRC\_low + CRC\_high  
 CRC\_low : Lower byte of CRC flag for command data.  
 CRC\_high : Upper byte of CRC flag for command data.

### 3 Command data

Command data chart

| byte_0 | byte_1 | byte_2 | byte_3 | byte_4       | byte_5 |
|--------|--------|--------|--------|--------------|--------|
| Action |        | Type   |        | Setting code |        |
| low    | high   | low    | high   | low          | high   |

Action (byte\_0 - 1)

| Action | Classification | Content                              |
|--------|----------------|--------------------------------------|
| 1      | SET            | Change setting to desired value.     |
| 2      | GET            | Read projector internal setup value. |
| 4      | INCREMENT      | Increment setup value by 1.          |
| 5      | DECREMENT      | Decrement setup value by 1.          |
| 6      | EXECUTE        | Run a command.                       |



# TECHNICAL (continued)

---

## Requesting projector status (Get command)

- (1) Send the request code Header + Command data ('02H'+ '00H'+ type (2 bytes) + '00H'+ '00H') from the computer to the projector.
- (2) The projector returns the response code '1DH'+ data (2 bytes) to the computer.

## Changing the projector settings (Set command)

- (1) Send the setting code Header + Command data ('01H'+ '00H'+ type (2 bytes) + setting code (2 bytes)) from the computer to the projector.
- (2) The projector changes the setting based on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

## Using the projector default settings (Reset Command)

- (1) The computer sends the default setting code Header + Command data ('06H'+ '00H'+ type (2 bytes) + '00H'+ '00H') to the projector.
- (2) The projector changes the specified setting to the default value.
- (3) The projector returns the response code '06H' to the computer.

## Increasing the projector setting value (Increment command)

- (1) The computer sends the increment code Header + Command data ('04H'+ '00H'+ type (2 bytes) + '00H'+ '00H') to the projector.
- (2) The projector increases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

## Decreasing the projector setting value (Decrement command)

- (1) The computer sends the decrement code Header + Command data ('05H'+ '00H'+ type (2 bytes) + '00H'+ '00H') to the projector.
- (2) The projector decreases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

## When a command sent by the projector cannot be understood by the computer

When the command sent by the projector cannot be understood, the error command '15H' is returned by the computer. Some times, the projector ignores RS-232C commands during other works. If the error command '15H' is returned, please send the same command again.

## When data sent by the projector cannot be practice

When the command sent by the projector cannot be practiced, the the error code '1cH'+ 'xxxxH' is returned.

When the data length is greater than indicated by the data length code, the projector will ignore the excess data code.

Conversely, when the data length is shorter than indicated by the data length code, an error code will be returned to the projector.

**NOTE** • Operation cannot be guaranteed when the projector receives an undefined command or data.

- Provide an interval of at least 40ms between the response code and any other code.
- The projector outputs test data when the power supply is switched ON, and when the lamp is lit. Ignore this data.
- Commands are not accepted during warm-up.

# TECHNICAL (continued)

## Command data chart

| Names       | Operation type |             | Header   |          |       |       | Command data |       |              |
|-------------|----------------|-------------|----------|----------|-------|-------|--------------|-------|--------------|
|             |                |             |          |          |       | CRC   | Action       | Type  | Setting code |
| Blank Color | Set            | Red         | BE EF    | 03 06 00 | 3B D3 | 01 00 | 00 30        | 00 00 |              |
|             |                | Orange      | BE EF    | 03 06 00 | AB D2 | 01 00 | 00 30        | 01 00 |              |
|             |                | Green       | BE EF    | 03 06 00 | 5B D2 | 01 00 | 00 30        | 02 00 |              |
|             |                | Blue        | BE EF    | 03 06 00 | CB D3 | 01 00 | 00 30        | 03 00 |              |
|             |                | Purple      | BE EF    | 03 06 00 | FB D1 | 01 00 | 00 30        | 04 00 |              |
|             |                | White       | BE EF    | 03 06 00 | 6B D0 | 01 00 | 00 30        | 05 00 |              |
|             | Black          | BE EF       | 03 06 00 | 9B D0    | 01 00 | 00 30 | 06 00        |       |              |
|             | Get            | BE EF       | 03 06 00 | 08 D3    | 02 00 | 00 30 | 00 00        |       |              |
| Mirror      | Set            | Normal      | BE EF    | 03 06 00 | C7 D2 | 01 00 | 01 30        | 00 00 |              |
|             |                | H Inverse   | BE EF    | 03 06 00 | 57 D3 | 01 00 | 01 30        | 01 00 |              |
|             |                | V Inverse   | BE EF    | 03 06 00 | A7 D3 | 01 00 | 01 30        | 02 00 |              |
|             | H&V Inverse    | BE EF       | 03 06 00 | 37 D2    | 01 00 | 01 30 | 03 00        |       |              |
|             | Get            | BE EF       | 03 06 00 | F4 D2    | 02 00 | 01 30 | 00 00        |       |              |
| Freeze      | Set            | Normal      | BE EF    | 03 06 00 | 83 D2 | 01 00 | 02 30        | 00 00 |              |
|             |                | Freeze      | BE EF    | 03 06 00 | 13 D3 | 01 00 | 02 30        | 01 00 |              |
|             | Get            | BE EF       | 03 06 00 | B0 D2    | 02 00 | 02 30 | 00 00        |       |              |
| Menu Color  | Set            | Red         | BE EF    | 03 06 00 | 7F D3 | 01 00 | 03 30        | 00 00 |              |
|             |                | Orange      | BE EF    | 03 06 00 | EF D2 | 01 00 | 03 30        | 01 00 |              |
|             |                | Green       | BE EF    | 03 06 00 | 1F D2 | 01 00 | 03 30        | 02 00 |              |
|             |                | Blub        | BE EF    | 03 06 00 | 8F D3 | 01 00 | 03 30        | 03 00 |              |
|             |                | Purple      | BE EF    | 03 06 00 | BF D1 | 01 00 | 03 30        | 04 00 |              |
|             |                | Transparent | BE EF    | 03 06 00 | 2F D0 | 01 00 | 03 30        | 05 00 |              |
|             | Gray           | BE EF       | 03 06 00 | DF D0    | 01 00 | 03 30 | 06 00        |       |              |
|             | Get            | BE EF       | 03 06 00 | 4C D3    | 02 00 | 03 30 | 00 00        |       |              |
| Startup     | Set            | Turn ON     | BE EF    | 03 06 00 | 0B D2 | 01 00 | 04 30        | 00 00 |              |
|             |                | Turn OFF    | BE EF    | 03 06 00 | 9B D3 | 01 00 | 04 30        | 01 00 |              |
|             | Get            | BE EF       | 03 06 00 | 38 D2    | 02 00 | 04 30 | 00 00        |       |              |
| Language    | Set            | English     | BE EF    | 03 06 00 | F7 D3 | 01 00 | 05 30        | 00 00 |              |
|             |                | Français    | BE EF    | 03 06 00 | 67 D2 | 01 00 | 05 30        | 01 00 |              |
|             |                | Deutsch     | BE EF    | 03 06 00 | 97 D2 | 01 00 | 05 30        | 02 00 |              |
|             |                | Español     | BE EF    | 03 06 00 | 07 D3 | 01 00 | 05 30        | 03 00 |              |
|             |                | Italiano    | BE EF    | 03 06 00 | 37 D1 | 01 00 | 05 30        | 04 00 |              |
|             |                | Norsk       | BE EF    | 03 06 00 | A7 D0 | 01 00 | 05 30        | 05 00 |              |
|             |                | Nederlands  | BE EF    | 03 06 00 | 57 D0 | 01 00 | 05 30        | 06 00 |              |
|             |                | Português   | BE EF    | 03 06 00 | C7 D1 | 01 00 | 05 30        | 07 00 |              |
|             | Japanese       | BE EF       | 03 06 00 | 37 D4    | 01 00 | 05 30 | 08 00        |       |              |
|             | Get            | BE EF       | 03 06 00 | C4 D3    | 02 00 | 05 30 | 00 00        |       |              |

# TECHNICAL (continued)

## Command data chart

| Names                 | Operation type |   | Header   |          |       | Command data |        |       |
|-----------------------|----------------|---|----------|----------|-------|--------------|--------|-------|
|                       |                |   |          |          |       | CRC          | Action | Type  |
| Magnify               | Get            |   | BE EF    | 03 06 00 | 7C D2 | 02 00        | 07 30  | 00 00 |
|                       | Increment      |   | BE EF    | 03 06 00 | 1A D2 | 04 00        | 07 30  | 00 00 |
|                       | Decrement      |   | BE EF    | 03 06 00 | CB D3 | 05 00        | 07 30  | 00 00 |
| Auto off              | Get            |   | BE EF    | 03 06 00 | 08 86 | 02 00        | 10 31  | 00 00 |
|                       | Increment      |   | BE EF    | 03 06 00 | 6E 86 | 04 00        | 10 31  | 00 00 |
|                       | Decrement      |   | BE EF    | 03 06 00 | BF 87 | 05 00        | 10 31  | 00 00 |
| Brightness Reset      | Execute        |   | BE EF    | 03 06 00 | 58 D3 | 06 00        | 00 70  | 00 00 |
| Contrast Reset        | Execute        |   | BE EF    | 03 06 00 | A4 D2 | 06 00        | 01 70  | 00 00 |
| V.Position Reset      | Execute        |   | BE EF    | 03 06 00 | E0 D2 | 06 00        | 02 70  | 00 00 |
| H.Position Reset      | Execute        |   | BE EF    | 03 06 00 | IC D3 | 06 00        | 03 70  | 00 00 |
| H.Size Reset          | Execute        |   | BE EF    | 03 06 00 | 68 D2 | 06 00        | 04 70  | 00 00 |
| Color Balance R Reset | Execute        |   | BE EF    | 03 06 00 | 94 D3 | 06 00        | 05 70  | 00 00 |
| Color Balance B Reset | Execute        |   | BE EF    | 03 06 00 | D0 D3 | 06 00        | 06 70  | 00 00 |
| Sharpness Reset       | Execute        |   | BE EF    | 03 06 00 | C4 D0 | 06 00        | 09 70  | 00 00 |
| Color Reset           | Execute        |   | BE EF    | 03 06 00 | 80 D0 | 06 00        | 0A 70  | 00 00 |
| Tint Reset            | Execute        |   | BE EF    | 03 06 00 | 7C D1 | 06 00        | 0B 70  | 00 00 |
| Keystone Reset        | Execute        |   | BE EF    | 03 06 00 | 08 D0 | 06 00        | 0C 70  | 00 00 |
| Auto                  | Execute        |   | BE EF    | 03 06 00 | 91 D0 | 06 00        | 0A 20  | 00 00 |
| Blank on/off          | Set            | off   | BE EF    | 03 06 00 | FB D8 | 01 00        | 20 30  | 00 00 |
|                       |                | on  | BE EF    | 03 06 00 | 6B D9 | 01 00        | 20 30  | 01 00 |
|                       | Get            |   | BE EF    | 03 06 00 | C8 D8 | 02 00        | 20 30  | 00 00 |
| Error Status          | Get            |   | BE EF    | 03 06 00 | D9 D8 | 02 00        | 20 60  | 00 00 |
|                       |                | (Example of Return)<br>00 00    01 00    02 00    03 00<br>(Normal) (Cover-error) (Fan-error) (Lamp-error)<br>04 00    05 00    06 00<br>(reserved) (reserved) (Lamp-Time-over) |          |          |       |              |        |       |
| Power                 | Set            | OFF   | BE EF    | 03 06 00 | 2A D3 | 01 00        | 00 60  | 00 00 |
|                       |                | ON  | BE EF    | 03 06 00 | BA D2 | 01 00        | 00 60  | 01 00 |
|                       | Get            |   | BE EF    | 03 06 00 | 19 D3 | 02 00        | 00 60  | 00 00 |
| Input Source          | Set            | RGB1  | BE EF    | 03 06 00 | FE D2 | 01 00        | 00 20  | 00 00 |
|                       |                | RGB2  | BE EF    | 03 06 00 | 3E D0 | 01 00        | 00 20  | 04 00 |
|                       |                | DVI   | BE EF    | 03 06 00 | 0E D2 | 01 00        | 00 20  | 03 00 |
|                       |                | Video   | BE EF    | 03 06 00 | 6E D3 | 01 00        | 00 20  | 01 00 |
|                       |                | SVideo  | BE EF    | 03 06 00 | 9E D3 | 01 00        | 00 20  | 02 00 |
|                       | Component      | BE EF   | 03 06 00 | AE D1    | 01 00 | 00 20        | 05 00  |       |
|                       | Get            |   | BE EF    | 03 06 00 | CD D2 | 02 00        | 00 20  | 00 00 |
| Volume                | Get            |   | BE EF    | 03 06 00 | 31 D3 | 02 00        | 01 20  | 00 00 |
|                       | Increment      |   | BE EF    | 03 06 00 | 57 D3 | 04 00        | 01 20  | 00 00 |
|                       | Decrement      |   | BE EF    | 03 06 00 | 86 D2 | 05 00        | 01 20  | 00 00 |

# TECHNICAL (continued)

Command data chart

| Names                               | Operation type |           | Header |    |    |     | Command data |      |              |    |    |    |    |    |    |
|-------------------------------------|----------------|-----------|--------|----|----|-----|--------------|------|--------------|----|----|----|----|----|----|
|                                     |                |           |        |    |    | CRC | Action       | Type | Setting code |    |    |    |    |    |    |
| Mute                                | Set            | Normal    | BE     | EF | 03 | 06  | 00           | 46   | D3           | 01 | 00 | 02 | 20 | 00 | 00 |
|                                     |                | Mute      | BE     | EF | 03 | 06  | 00           | D6   | D2           | 01 | 00 | 02 | 20 | 01 | 00 |
|                                     | Get            | BE        | EF     | 03 | 06 | 00  | 75           | D3   | 02           | 00 | 02 | 20 | 00 | 00 |    |
| Brightness                          | Get            |           | BE     | EF | 03 | 06  | 00           | 89   | D2           | 02 | 00 | 03 | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | EF   | D2           | 04 | 00 | 03 | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 3E   | D3           | 05 | 00 | 03 | 20 | 00 | 00 |
| Contrast                            | Get            |           | BE     | EF | 03 | 06  | 00           | FD   | D3           | 02 | 00 | 04 | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 9B   | D3           | 04 | 00 | 04 | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 4A   | D2           | 05 | 00 | 04 | 20 | 00 | 00 |
| Color Balance R                     | Get            |           | BE     | EF | 03 | 06  | 00           | 01   | D2           | 02 | 00 | 05 | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 67   | D2           | 04 | 00 | 05 | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | B6   | D3           | 05 | 00 | 05 | 20 | 00 | 00 |
| Color Balance B                     | Get            |           | BE     | EF | 03 | 06  | 00           | 45   | D2           | 02 | 00 | 06 | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 23   | D2           | 04 | 00 | 06 | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | F2   | D3           | 05 | 00 | 06 | 20 | 00 | 00 |
| Keystone_V                          | Get            |           | BE     | EF | 03 | 06  | 00           | B9   | D3           | 02 | 00 | 07 | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | DF   | D3           | 04 | 00 | 07 | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 0E   | D2           | 05 | 00 | 07 | 20 | 00 | 00 |
| Keystone_H                          | Get            |           | BE     | EF | 03 | 06  | 00           | E9   | D0           | 02 | 00 | 0B | 20 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 8F   | D0           | 04 | 00 | 0B | 20 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 5E   | D1           | 05 | 00 | 0B | 20 | 00 | 00 |
| Aspect                              | Set            | 4:3, Full | BE     | EF | 03 | 06  | 00           | 9E   | D0           | 01 | 00 | 08 | 20 | 00 | 00 |
|                                     |                | 16:9      | BE     | EF | 03 | 06  | 00           | 0E   | D1           | 01 | 00 | 08 | 20 | 01 | 00 |
|                                     |                | Small     | BE     | EF | 03 | 06  | 00           | FE   | D1           | 01 | 00 | 08 | 20 | 02 | 00 |
|                                     |                | Real      | BE     | EF | 03 | 06  | 00           | 6E   | D0           | 01 | 00 | 08 | 20 | 03 | 00 |
|                                     | Get            | BE        | EF     | 03 | 06 | 00  | AD           | D0   | 02           | 00 | 08 | 20 | 00 | 00 |    |
| Display Position at 16 : 9 or Small | Set            | Default   | BE     | EF | 03 | 06  | 00           | 62   | D1           | 01 | 00 | 09 | 20 | 00 | 00 |
|                                     |                | Bottom    | BE     | EF | 03 | 06  | 00           | F2   | D0           | 01 | 00 | 09 | 20 | 01 | 00 |
|                                     |                | Top       | BE     | EF | 03 | 06  | 00           | 02   | D0           | 01 | 00 | 09 | 20 | 02 | 00 |
|                                     | Get            | BE        | EF     | 03 | 06 | 00  | 51           | D1   | 02           | 00 | 09 | 20 | 00 | 00 |    |
| V.Position                          | Get            |           | BE     | EF | 03 | 06  | 00           | 0D   | 83           | 02 | 00 | 00 | 21 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 6B   | 83           | 04 | 00 | 00 | 21 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | BA   | 82           | 05 | 00 | 00 | 21 | 00 | 00 |
| H.Position                          | Get            |           | BE     | EF | 03 | 06  | 00           | F1   | 82           | 02 | 00 | 01 | 21 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 97   | 82           | 04 | 00 | 01 | 21 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 46   | 83           | 05 | 00 | 01 | 21 | 00 | 00 |
| H.Size                              | Get            |           | BE     | EF | 03 | 06  | 00           | B5   | 82           | 02 | 00 | 02 | 21 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | D3   | 82           | 04 | 00 | 02 | 21 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | 02   | 83           | 05 | 00 | 02 | 21 | 00 | 00 |
| H.Phase                             | Get            |           | BE     | EF | 03 | 06  | 00           | 49   | 83           | 02 | 00 | 03 | 21 | 00 | 00 |
|                                     | Increment      |           | BE     | EF | 03 | 06  | 00           | 2F   | 83           | 04 | 00 | 03 | 21 | 00 | 00 |
|                                     | Decrement      |           | BE     | EF | 03 | 06  | 00           | FE   | 82           | 05 | 00 | 03 | 21 | 00 | 00 |

# TECHNICAL (continued)

Command data chart

| Names        | Operation type | Header    |          |          |       | Command data |       |              |
|--------------|----------------|-----------|----------|----------|-------|--------------|-------|--------------|
|              |                |           |          |          | CRC   | Action       | Type  | Setting code |
| Sharpness    | Get            | BE EF     | 03 06 00 | F1 72    | 02 00 | 01 22        | 00 00 |              |
|              | Increment      | BE EF     | 03 06 00 | 97 72    | 04 00 | 01 22        | 00 00 |              |
|              | Decrement      | BE EF     | 03 06 00 | 46 73    | 05 00 | 01 22        | 00 00 |              |
| Color        | Get            | BE EF     | 03 06 00 | B5 72    | 02 00 | 02 22        | 00 00 |              |
|              | Increment      | BE EF     | 03 06 00 | D3 72    | 04 00 | 02 22        | 00 00 |              |
|              | Decrement      | BE EF     | 03 06 00 | 02 73    | 05 00 | 02 22        | 00 00 |              |
| Tint         | Get            | BE EF     | 03 06 00 | 49 73    | 02 00 | 03 22        | 00 00 |              |
|              | Increment      | BE EF     | 03 06 00 | 2F 73    | 04 00 | 03 22        | 00 00 |              |
|              | Decrement      | BE EF     | 03 06 00 | FE 72    | 05 00 | 03 22        | 00 00 |              |
| Video Format | Set            | Auto      | BE EF    | 03 06 00 | 9E 75 | 01 00        | 00 22 | 0A 00        |
|              |                | NTSC      | BE EF    | 03 06 00 | FE 71 | 01 00        | 00 22 | 04 00        |
|              |                | PAL       | BE EF    | 03 06 00 | 6E 70 | 01 00        | 00 22 | 05 00        |
|              |                | SECAM     | BE EF    | 03 06 00 | 6E 75 | 01 00        | 00 22 | 09 00        |
|              |                | NTSC 4.43 | BE EF    | 03 06 00 | 5E 72 | 01 00        | 00 22 | 02 00        |
|              |                | M-PAL     | BE EF    | 03 06 00 | FE 74 | 01 00        | 00 22 | 08 00        |
|              |                | N-PAL     | BE EF    | 03 06 00 | 0E 71 | 01 00        | 00 22 | 07 00        |
|              | Get            | BE EF     | 03 06 00 | 0D 73    | 02 00 | 00 22        | 00 00 |              |
| Progressive  | Set            | off       | BE EF    | 03 06 00 | 4A 72 | 01 00        | 07 22 | 00 00        |
|              |                | TV        | BE EF    | 03 06 00 | DA 73 | 01 00        | 07 22 | 01 00        |
|              |                | FILM      | BE EF    | 03 06 00 | 2A 73 | 01 00        | 07 22 | 02 00        |
|              | Get            | BE EF     | 03 06 00 | 79 72    | 02 00 | 07 22        | 00 00 |              |
| Black        | Set            | off       | BE EF    | 03 06 00 | 5E 71 | 01 00        | 08 22 | 00 00        |
|              |                | on        | BE EF    | 03 06 00 | CE 70 | 01 00        | 08 22 | 01 00        |
|              | Get            | BE EF     | 03 06 00 | 6D 71    | 02 00 | 08 22        | 00 00 |              |
| HDTV         | Set            | 1080i     | BE EF    | 03 06 00 | F2 73 | 01 00        | 05 22 | 00 00        |
|              |                | 1035i     | BE EF    | 03 06 00 | 62 72 | 01 00        | 05 22 | 01 00        |
|              | Get            | BE EF     | 03 06 00 | C1 73    | 02 00 | 05 22        | 00 00 |              |
| PinP Size    | Set            | off       | BE EF    | 03 06 00 | FE 22 | 01 00        | 00 23 | 00 00        |
|              |                | Large     | BE EF    | 03 06 00 | 6E 23 | 01 00        | 00 23 | 01 00        |
|              |                | Small     | BE EF    | 03 06 00 | 9E 23 | 01 00        | 00 23 | 02 00        |
|              | Get            | BE EF     | 03 06 00 | Cd 22    | 02 00 | 00 23        | 00 00 |              |

# TECHNICAL (continued)

## Command data chart

| Names         | Operation type |              | Header |        |      |              | Command data |    |    |    |    |    |    |    |    |
|---------------|----------------|--------------|--------|--------|------|--------------|--------------|----|----|----|----|----|----|----|----|
|               |                |              | CRC    | Action | Type | Setting code |              |    |    |    |    |    |    |    |    |
| PinP Position | Set            | Upper left   | BE     | EF     | 03   | 06           | 00           | 02 | 23 | 01 | 00 | 01 | 23 | 00 | 00 |
|               |                | Upper right  | BE     | EF     | 03   | 06           | 00           | 92 | 22 | 01 | 00 | 01 | 23 | 01 | 00 |
|               |                | bottom left  | BE     | EF     | 03   | 06           | 00           | 62 | 22 | 01 | 00 | 01 | 23 | 03 | 00 |
|               |                | bottom right | BE     | EF     | 03   | 06           | 00           | F2 | 23 | 01 | 00 | 01 | 23 | 02 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | 31           | 23 | 02 | 00 | 01 | 23 | 00 | 00 |    |
| PinP Audio ch | Set            | RGB          | BE     | EF     | 03   | 06           | 00           | BA | 22 | 01 | 00 | 03 | 23 | 00 | 00 |
|               |                | Video        | BE     | EF     | 03   | 06           | 00           | 2A | 23 | 01 | 00 | 03 | 23 | 01 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | 89           | 22 | 02 | 00 | 03 | 23 | 00 | 00 |    |
| PinP Input    | Set            | Video        | BE     | EF     | 03   | 06           | 00           | D6 | 22 | 01 | 00 | 02 | 23 | 01 | 00 |
|               |                | S-Video      | BE     | EF     | 03   | 06           | 00           | 26 | 22 | 01 | 00 | 02 | 23 | 02 | 00 |
|               |                | Component    | BE     | EF     | 03   | 06           | 00           | 16 | 20 | 01 | 00 | 02 | 23 | 05 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | 75           | 23 | 02 | 00 | 02 | 23 | 00 | 00 |    |
| Sync on G     | Set            | off          | BE     | EF     | 03   | 06           | 00           | CB | D0 | 01 | 00 | 08 | 30 | 01 | 00 |
|               |                | on           | BE     | EF     | 03   | 06           | 00           | 5B | D1 | 01 | 00 | 08 | 30 | 00 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | 68           | D1 | 02 | 00 | 08 | 30 | 00 | 00 |    |
| WHISPER       | Set            | NORMAL       | BE     | EF     | 03   | 06           | 00           | 3B | 23 | 01 | 00 | 00 | 33 | 00 | 00 |
|               |                | WHISPER      | BE     | EF     | 03   | 06           | 00           | AB | 22 | 01 | 00 | 00 | 33 | 01 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | 08           | 23 | 02 | 00 | 00 | 33 | 00 | 00 |    |
| GAMMA         | Set            | NORMAL       | BE     | EF     | 03   | 06           | 00           | C7 | F0 | 01 | 00 | A1 | 30 | 00 | 00 |
|               |                | CINEMA       | BE     | EF     | 03   | 06           | 00           | 57 | F1 | 01 | 00 | A1 | 30 | 01 | 00 |
|               |                | DYNAMIC      | BE     | EF     | 03   | 06           | 00           | A7 | F1 | 01 | 00 | A1 | 30 | 02 | 00 |
|               | Get            | BE           | EF     | 03     | 06   | 00           | F4           | F0 | 02 | 00 | A1 | 30 | 00 | 00 |    |

# REGULATORY NOTICES


## FCC Statement Warning

**WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**INSTRUCTIONS TO USERS:** This equipment complies with the requirements of FCC (Federal Communication Commission) equipment provided that the following conditions are met.

The cables may have to be used with the core set to the projector side. Use the cables which are included with the projector or specified.

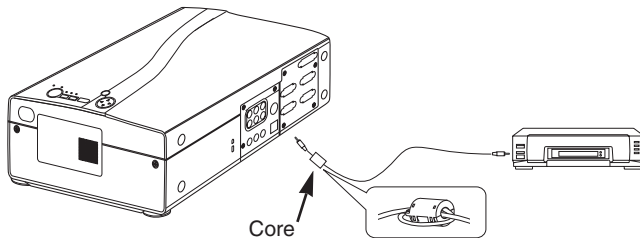

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## For the Customers in CANADA

**NOTICE:** This Class B digital apparatus complies with Canadian ICES-003.

## Pour les utilisateurs au Canada

**AVIS:** Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.





# HITACHI

Hitachi, Ltd. Tokyo, Japan  
International Sales Division  
**THE HITACHI ATAGO BUILDING,**  
No. 15-12 Nishi Shinbashi, 2-Chome,  
Minato-Ku, Tokyo 105-8430, Japan.  
Tel: 03 35022111

## HITACHI EUROPE LTD,

Whitebrook Park  
Lower Cookham Road  
Maidenhead  
Berkshire  
SL6 8YA

## UNITED KINGDOM

Tel: 01628 643000  
Fax: 01628 643400  
Email: [consumer-service@hitachi-eu.com](mailto:consumer-service@hitachi-eu.com)

## HITACHI EUROPE S.A.

364 Kifissias Ave. & 1, Delfon Str.  
152 33 Chalandri  
Athens

## GREECE

Tel: 1-6837200  
Fax: 1-6835964  
Email: [service.hellas@hitachi-eu.com](mailto:service.hellas@hitachi-eu.com)

## HITACHI EUROPE GmbH

Munich Office  
Dornacher Strasse 3  
D-85622 Feldkirchen bei München

## GERMANY

Tel: +49-89-991 80-0  
Fax: +49-89-991 80-224  
Hotline: +49-180-551 25 51 (12ct/min)  
Email: [HSE-DUS.service@hitachi-eu.com](mailto:HSE-DUS.service@hitachi-eu.com)

## HITACHI EUROPE S.A.

Gran Via Carlos III, 101-1  
08028 Barcelona

## SPAIN

Tel: 93 409 2550  
Fax: 93 491 3513  
Email: [atencion.cliente@hitachi-eu.com](mailto:atencion.cliente@hitachi-eu.com)

## HITACHI EUROPE srl

Via Tommaso Gulli N.39, 20147  
Milano, Italia

## ITALY

Tel: +39 02 487861  
Tel: +39 02 38073415 Servizio Clienti  
Fax: +39 02 48786381/2  
Email: [customerservice.italy@hitachi-eu.com](mailto:customerservice.italy@hitachi-eu.com)

## HITACHI Europe AB

Box 77 S-164 94 Kista

## SWEDEN

Tel: +46 (0) 8 562 711 00  
Fax: +46 (0) 8 562 711 13  
Email: [csgswe@hitachi-eu.com](mailto:csgswe@hitachi-eu.com)

## HITACHI EUROPE S.A.S

Lyon Office  
B.P. 45, 69671 BRON CEDEX

## FRANCE

Tel: 04 72 14 29 70  
Fax: 04 72 14 29 99  
Email: [france.consommateur@hitachi-eu.com](mailto:france.consommateur@hitachi-eu.com)

## HITACHI EUROPE LTD (Norway) AB

STRANDVEIEN 18

1366 Lysaker

## NORWAY

Tel: 67 5190 30  
Fax: 67 5190 32  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACH EUROPE AB

Egebækgård  
Egebækvej 98  
DK-2850 Nærum

## DENMARK

Tel: +45 43 43 6050  
Fax: +45 43 60 51  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACHI EUROPE AB

Neopoli / Niemenkatu 73  
FIN-15140 Lahti

## FINLAND

Tel : +358 3 8858 271  
Fax: +358 3 8858 272  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## Hitachi Europe Ltd

Bergensesteenweg 421  
1600 Sint-Pieters-Leeuw

## BELGIUM

Tel: +32 2 363 99 01  
Fax: +32 2 363 99 00  
Email: [sofie.van.bom@hitachi-eu.com](mailto:sofie.van.bom@hitachi-eu.com)

## HITACHI EUROPE LTD

Na Sychrove 975/8  
101 27 Praha 10 – Bohdalec

## CZECH REPUBLIC

Tel: +420 267 212 383  
Fax: +420 267 212 385  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

[www.hitachidigitalmedia.com](http://www.hitachidigitalmedia.com)