

***myprojectorlamps.com***

**The most trusted, dependable name  
in projector lamp sales.**



<http://www.myprojectorlamps.com>



<http://www.myprojectorlamps.ca>



<http://www.myprojectorlamps.eu>

The following projector manual has not been modified or altered in any way.



# DLP<sup>®</sup> HIGH-DEFINITION TELEVISION

## MODELS

---

### C Series

*WD-60C8, WD-65C8, WD-73C8*

### 735 Series

*WD-60735, WD-65735, WD-73735*

### 736 Series

*WD-65736, WD-73736*

### 835 Series

*WD-65835, WD-73835*

---

## OWNER'S GUIDE

- For questions:
  - Visit our website at [www.mitsubishi-tv.com](http://www.mitsubishi-tv.com).
  - E-mail us at [MDEAservice@mdea.com](mailto:MDEAservice@mdea.com).
  - Call Consumer Relations at 800-332-2119.
- For information on **System Reset**, please see the back cover.
- To order replacement or additional remote controls, lamp cartridges, or Owner's Guides, visit our website at [www.mitsuparts.com](http://www.mitsuparts.com) or call 800-553-7278.
- Guidelines for setting up and using your new widescreen TV start on page 11.



**x.v.Color**



### For Your Records

Record the model number, serial number, and purchase date of your TV. The model and serial numbers are on the back of the TV. Refer to this page when requesting assistance with the TV.

**MODEL NUMBER** \_\_\_\_\_

**SERIAL NUMBER** \_\_\_\_\_

**PURCHASE DATE** \_\_\_\_\_

**RETAILER NAME** \_\_\_\_\_

**LOCATION** \_\_\_\_\_



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**MAINS DISCONNECTION:** The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.

**TV WEIGHT:** This TV is heavy! Exercise extreme care when lifting or moving it. Lift or move the TV with a minimum of two adults. To prevent damage to the TV, avoid jarring or moving it while it is turned on. Always power off your TV, unplug the power cord, and disconnect all cables before moving it.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

### FCC Declaration of Conformity

Product: Projection Television Receiver  
Models: WD-60C8, WD-65C8, WD-73C8  
WD-60735, WD-65735, WD-73735  
WD-65736, WD-73736  
WD-65835, WD-73835

Responsible Party: Mitsubishi Digital Electronics  
America, Inc.  
9351 Jeronimo Road  
Irvine, CA 92618-1904

Telephone: (800) 332-2119

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Changes or modifications not expressly approved by Mitsubishi could cause harmful interference and would void the user's authority to operate this equipment.**

Features and specifications described in this owner's guide are subject to change without notice.

# Contents

## **Important Information About Your TV**

|   |   |
|---|---|
| Installation Notes, Operating Notes, Cleaning Recommendations . . . . . | 4 |
| Important Safety Instructions . . . . .                                 | 5 |

## **1 Television Overview**

|                                       |   |
|---------------------------------------|---|
| Package Contents . . . . .            | 6 |
| Special Features of Your TV . . . . . | 6 |
| TV Front Panel . . . . .              | 7 |
| TV Back Panel . . . . .               | 9 |

## **2 TV Setup**

|  |    |
|--|----|
| Guidelines for Setting Up and Using Your New Widescreen TV . . . . . | 11 |
| Initial TV Setup . . . . .   | 13 |
| Setting Up TV Inputs . . . . .                                       | 13 |
| Controlling A/V Receiver Sound Volume . . . . .                      | 15 |
| Using the TV with a Personal Computer . . . . .                      | 17 |

## **3 TV Connections**

|  |    |
|--|----|
| Before You Begin . . . . .   | 19 |
| HDTV Cable Box or Satellite Receiver, DVD Player, or Other Device with Component Video . . . . . | 19 |
| HDMI Device (Cable Box, Satellite Receiver, DVD Player, or Other Device) . . . . .               | 20 |
| DVI Video Device (Cable Box, Satellite Receiver, DVD Player, or Other Device) . . . . .          | 20 |
| Wall Outlet Cable (no cable box) . . . . .   | 21 |
| Antenna with a Single Lead . . . . .   | 21 |
| Antennas with Separate UHF and VHF Leads . . . . .   | 21 |
| Standard Cable Box, Satellite Receiver, or Other Device with S-Video . . . . .                   | 22 |
| VCR to an Antenna or Wall Outlet Cable . . . . .   | 22 |
| VCR to a Cable Box (Audio & Video) . . . . .   | 23 |
| Older Cable Box . . . . .  | 23 |
| A/V Receiver (Sound System) Using the TV's Audio Output . . . . .                                | 24 |
| A/V Receiver with HDMI Output . . . . .  | 24 |
| Camcorder . . . . .  | 25 |
| Audio-Only Device . . . . .  | 25 |

## **4 TV Operation and Features**

|  |    |
|--|----|
| Choosing a Viewing Source . . . . .    | 26 |
| Sleep Timer . . . . .                  | 26 |
| Remote Control . . . . .               | 27 |
| ChannelView Channel Listings . . . . . | 29 |

|  |    |
|--|----|
| Status Display . . . . .                             | 30 |
| Fav (Favorite Channels) . . . . .                    | 31 |
| TV Signals and Display Formats . . . . .             | 32 |
| Viewing Camera Files . . . . .                       | 33 |
| JPEG Photos and the USB Photo Port . . . . .         | 33 |
| Photos and Moving Video as Composite Video . . . . . | 34 |
| 3D Video . . . . .                                   | 35 |

## **5 TV Menus**

|  |    |
|--|----|
| Main Menu . . . . .                                  | 36 |
| Remote Control Keys for the TV Menu System . . . . . | 36 |
| AV Menu . . . . .                                    | 37 |
| Video Menu . . . . .                                 | 39 |
| Audio Menu . . . . .                                 | 41 |
| Captions Menu . . . . .                              | 42 |
| Setup Menu . . . . .                                 | 43 |
| Inputs Menu . . . . .                                | 48 |
| Lock Menu . . . . .                                  | 49 |
| Pass Codes . . . . .                                 | 49 |
| Parent Menu . . . . .                                | 49 |
| Other Menu (Alternate Rating System) . . . . .       | 49 |
| Bypassing TV Locks . . . . .                         | 49 |

## **6 NetCommand IR Control**

|  |    |
|--|----|
| About NetCommand IR Control . . . . .                            | 52 |
| IR Emitter Placement . . . . .                                   | 53 |
| Initial NetCommand Setup for Most Devices . . . . .              | 54 |
| Adding or Removing Device Keys from NetCommand Control . . . . . | 54 |
| NetCommand Specialized Device Keys . . . . .                     | 55 |
| Operating NetCommand-Controlled Devices . . . . .                | 56 |
| Setting Up NetCommand Control of an A/V Receiver . . . . .       | 58 |

## **Appendices**

|   |    |
|---|----|
| Appendix A: Specifications . . . . .                          | 64 |
| Appendix B: Bypassing the Parental Lock . . . . .             | 65 |
| Appendix C: Programming the Remote Control . . . . .          | 67 |
| Appendix D: Lamp-Cartridge Replacement and Cleaning . . . . . | 75 |
| Appendix E: NetCommand HDMI Control of CEC Devices . . . . .  | 77 |
| Appendix F: Troubleshooting . . . . .                         | 80 |

## **Trademark and License Information**

## **Mitsubishi TV Software**

## **Warranty**

## **Index**

# Important Information About Your TV

## Installation Notes

### Stand Requirement

CAUTION: Use these Mitsubishi TV models only with the Mitsubishi stand models shown here. Other stands can result in instability and possibly cause injury.

| TV Model   | Stand Model |
|--|-------------|
| WD-60C8, WD-60735,<br>WD-65C8, WD-65735,<br>WD-65736 | MB-S60/65   |
| WD-73C8, WD-73735<br>WD-73736                        | MB-S73      |

**835 Series Stands:** Mitsubishi does not design, manufacture or sell matching bases for 835 series model televisions (WD-65835, WD-73835). When selecting a stand, base or other furniture to support the TV, please make sure it is designed with the appropriate dimensions for stability and to support the TV's total weight as well as the weight of any additional equipment you plan to store.

**Custom cabinet installation must allow for proper air circulation around the television.**

**NOTE TO CATV SYSTEM INSTALLER:** THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR THE PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.

## Internal Fans

Internal cooling fans maintain proper operating temperatures inside the TV. It is normal to hear the fans when you first turn on the TV, during quiet scenes while viewing the TV, and for a short time after shutting off the TV. You may notice louder fan noise about 30 seconds after shutting off the TV and while using the **Bright Lamp Mode**.

## Lamp Replacement

For lamp-replacement instructions, see Appendix D.

### To Order a Replacement Lamp Under Warranty

Call (800) 553-7278. Please have model number, serial number, and TV purchase date available.

**Important: All lamps replaced under warranty must be returned to Mitsubishi where they will be inspected for defect verification.**

### To Purchase a Replacement Lamp After Warranty

Visit our website at [www.mitsuparts.com](http://www.mitsuparts.com) or call (800) 553-7278. Order new lamp part number **915B403001**.

## TV Software

Do not attempt to update the software of this TV with software or USB drives not provided by or authorized by Mitsubishi Digital Electronics America, Inc. Non-authorized software may damage the TV and will not be covered by the warranty.

## Cleaning Recommendations

Normally, light dusting with a dry, non-scratching duster will keep your TV clean. If cleaning beyond this is needed, please use the following guidelines:

First, turn off the TV and unplug the power cord from the power outlet.

Occasionally clean dust build-up from the air-intake grilles on the back and sides of the TV. Clean using a vacuum cleaner with a brush attachment.

### Top and Sides of the TV

- Gently wipe down your TV with a soft, non-abrasive cloth such as cotton flannel or a clean cloth diaper, lightly moistened with water. Dry with a second dry, soft, non-abrasive cloth.
- For oily dirt, add a few drops of mild liquid detergent, such as dishwashing detergent, to the water used to moisten the cloth. Rinse with a second cloth moistened only with water. Dry with a third dry, soft, non-abrasive cloth.

### Glossy Surfaces (835 series models)

Use the soft cleaning cloth supplied with the TV.

- Clean the cloth before each use by shaking or brushing to remove any residual dirt particles.
- Gently wipe down the glossy surfaces of your TV with the soft cloth. Do not apply pressure while wiping.
- If necessary, lightly dampen the soft cloth with water. Do not use chemical or abrasive cleaners.
- Wash the soft cloth by hand or machine. Use only mild soap.

### Screen

- Follow the instructions for the top and sides, wiping gently in an up and down motion.
- Clean the entire screen evenly, not just sections of the screen.
- Do not allow liquid to drip down the screen, as some liquid may enter the TV through the gap between the screen and screen frame.
- You may purchase Mitsubishi Screen Cleaner, part number CLEANER-VSS, by calling (800) 553-7278.

### General Cleaning Precautions

- DO NOT allow liquid to enter the TV through the ventilation slots or any crevice.
- DO NOT use any strong or abrasive cleaners, as these can scratch the surfaces.
- DO NOT use any cleaners containing ammonia, bleach, alcohol, benzene, or thinners, as these can dull the surfaces.
- DO NOT spray liquids or cleaners directly on the TV's surfaces.
- DO NOT scrub or rub the TV harshly. Wipe it gently.

# Important Safety Instructions

Please read the following safeguards for your TV and retain for future reference. Always follow all warnings and instructions marked on the television.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




## Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

## Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

EXAMPLE OF ANTENNA GROUNDING

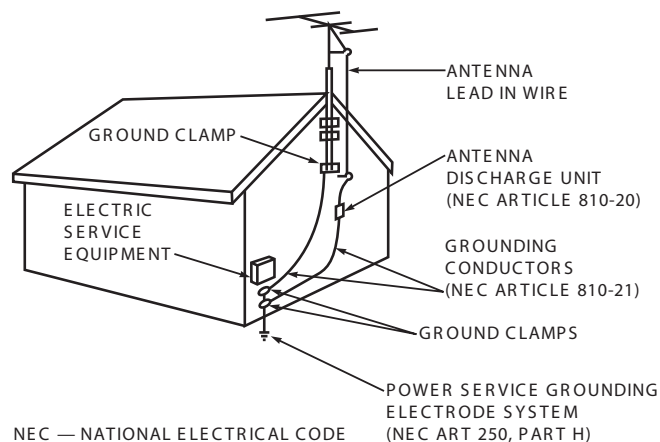




# 1 Television Overview

## Package Contents

Please take a moment to review the following list of items to ensure that you have received everything.

1. Remote Control
2. Two AA Batteries
3. Owner's Guide
4. Quick Reference Guide
5. Quick Connect Guide
6. Product Registration Card
7. 736 or 835 Series: Two-Ended IR Emitter
8. 835 Series: Cleaning Cloth for Glossy Surfaces. See instructions under "Cleaning Recommendations," page 4.

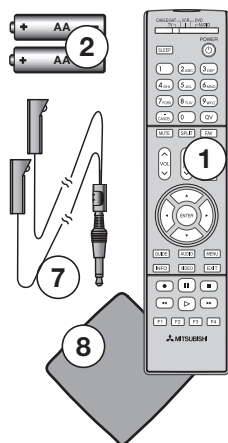

## Integrated HDTV Tuner

Your widescreen Mitsubishi HDTV has an internal HDTV tuner able to receive both over-the-air HDTV broadcasts (received via an antenna) and non-scrambled digital cable broadcasts, including non-scrambled HDTV cable programming.

## High-Definition Video Inputs

- **Component Video Inputs.** Also called Y/Pb/Pr inputs, these inputs receive standard analog video formats of 480i, 480p, 720p, and 1080i high-definition signals. This provides a high level of flexibility when connecting DVD players/recorders, cable boxes, and satellite receivers.
- **HDMI Inputs.** These inputs accept digital 480i, 480p, 720p, 1080i, and 1080p video signals plus PCM digital stereo signals. The HDMI™ inputs can also accept a variety of PC signals and resolutions. These inputs support HDMI 1.3 Deep Color (up to 36 bits) and the **x.v.Color** extended color gamut. Used with an adapter, these inputs also accept compatible digital DVI video signals. HDMI inputs provide additional high-performance, high-definition connections for maximum flexibility in your choice of home theater products. The HDMI inputs are HDCP copy-protection compatible.

## Special Features of Your TV

Your new high-definition widescreen television has many special features that make it the perfect center of your home entertainment system, including:

### 1080p High-Definition DLP Display System

Your Mitsubishi HDTV uses Texas Instruments Digital Light Processing™ technology for rear-projection TVs to create the picture you see on screen. All images are displayed at 1080p. The TV uses Plush 1080p® to convert lower-resolution signals to 1080p for display. The TV can also accept 1080p original signals and maintain them at 1080p through all processing until displayed.

### 3D Ready

All Mitsubishi 1080p DLP HDTV's are 3D Ready. This feature lets you experience the new 3D technologies applied to many recent movies and video games. Immerse yourself in your favorite video game, movie, or sporting event displayed in 3D.

### 16:9 Widescreen Picture Format

Enjoy a full theatrical experience in the comfort of your home. View pictures as film directors intended them. Digital TV broadcasts, DVDs and newer video game consoles support this widescreen format.

## Easy Connect Auto Input Sensing

Easy Connect™ Auto Input Sensing automatically recognizes when you plug in an input and prompts you to assign a name to it. The TV ignores any unused inputs, so the result is an uncluttered **Input Selection** menu where you can easily find and select connected devices by name.

## Home Theater Control

### NetCommand for HDMI

**Available for all models.** HDMI devices with Consumer Electronics Control (CEC) capabilities may be compatible with the TV's NetCommand for HDMI feature. Compatible devices can receive control signals through the HDMI connection. The TV's remote control may be able to operate some functions of these devices without any further setup.

 

## NetCommand with IR Learning

**736 or 835 Series TV.** Your Mitsubishi HDTV offers a new level of networking that seamlessly integrates selected older A/V products with new and future digital products. NetCommand® supports IR (infrared) control of products such as VCRs, DVD players, cable boxes, and satellite receivers. NetCommand can “learn” remote control signals directly from many devices, allowing you to create a customized NetCommand-controlled home-theater system.

## TV Front Panel

### Control Panel


Buttons on the front control panel duplicate commonly used keys on the remote control. The upper labels show control functions when no TV menus are displayed; the lower labels indicate functions when TV menus are displayed or when a special function has been activated. See “Remote Control,” page 27, for a full description of the functions of these buttons.

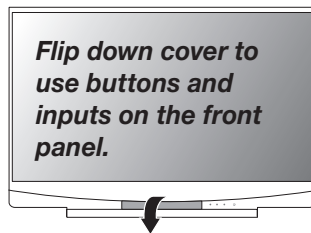

*Control Panel. Buttons on the control panel duplicate some keys on the remote control.*

### System Reset Button

If the TV fails to respond to the remote control, control panel buttons, or will not power on/off, press the **SYSTEM RESET** button on the control panel.

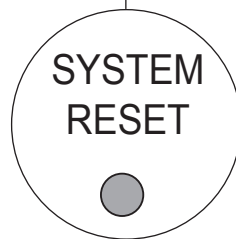

The green LED on the front panel will flash quickly for up to one and a half minutes. When the green LED stops flashing, you may turn on the TV. Recent setting changes you made before using **SYSTEM RESET** may be lost.

### A/V Reset

 
If you wish to reset the A/V (Audio/Video) settings back to the factory defaults:

- To reset all settings at once, press **GUIDE** and **FORMAT** on the control panel at the same time.
- To reset the defaults for individual inputs, use the **Reset** selection on the **AV** menu. See “AV Menu,” page 37.


## Front Inputs

**INPUT 4** is a readily accessible set of input jacks for a camcorder, game, or other audio/video device.

- To view NTSC/480i composite video signals, plug the single composite video cable (usually yellow) into the **VIDEO/Y** jack.
- To view Y Pb Pr component video in 480i, 480p 720p, or 1080i format, connect cables to the **VIDEO/Y**, **Pb** and **Pr** jacks.
- A convenient fourth HDMI input is provided on 736 and 835 series models.
- A USB photo port lets you view JPEG images.
- Plug stereo audio cables into the **AUDIO L** and **R** jacks for sound from connected devices. You can use the audio jacks for sound from a DVI device connected to the HDMI jack or from an audio device playing while viewing photos from the USB input.



Front inputs on C and 735 series models.

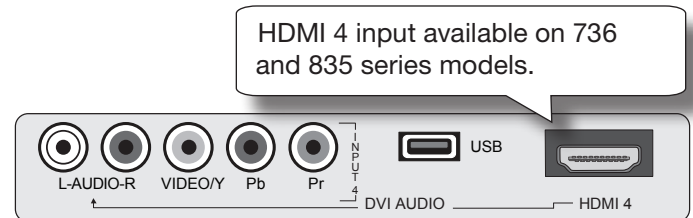


Front inputs on 736 and 835 series models.

## Front Panel Indicators and Power Button

1. **LAMP** indicator shows lamp condition (usually off during normal TV operation).
2. **STATUS** indicator. Off during normal TV operation.
3. **POWER/TIMER** indicator. Lit when TV is powered on; flashes when TV is powered off and the auto-on TV Timer is set.
4. **POWER** button. Turns TV on and off; works the same as the **POWER** key on the remote control.

See the next page for more on front-panel indicators.

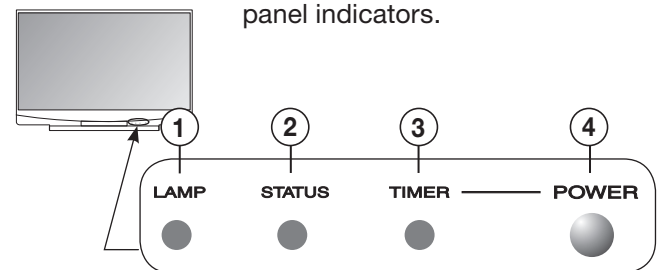


Indicator LED lights and **POWER** button



## Front-Panel Indicators

 ○ Off    ● Steady On    ◐ Slow Blinking    ⊙ Fast Blinking



### POWER/TIMER Indicator

| LED Color | TV Condition   | Additional Information   |
|-----------|--|--|
| None ○    | TV is powered off.   | Normal operation.  |
| Green ●   | TV is powered on.  | Normal operation.  |
| Green ◐   | TV powered off, auto-on timer is set.  | Normal operation. TV can be turned on at any time.                                       |
| Green ⊙   | <ul style="list-style-type: none"> <li>TV just plugged into AC outlet.</li> <li>AC just restored after power failure.</li> <li>TV is rebooting after System Reset used.</li> <li>TV is rebooting after power fluctuation or receiving abnormal digital signals from a digital channel or digital device.</li> <li>You have begun the procedure to update software from an authorized flash memory device.</li> </ul> | Wait approximately two minutes for blinking to stop before turning on. Normal operation. |


### STATUS Indicator

| LED Color | TV Condition                       | Additional Information   |
|-----------|------------------------------------|--|
| None ○    | Normal TV on or standby condition. | Normal operation.  |
| Yellow ◐  | TV is too hot.                     | <p>The TV will display a warning message and shut off if it overheats.</p> <ul style="list-style-type: none"> <li>Ambient room temperature may be too high. Turn off the TV and let the room temperature to drop.</li> <li>Clear blocked air vents. Ensure at least a four-inch clearance on all sides of the TV.</li> <li>Clean the lamp-cartridge air filter. See Appendix D.</li> </ul> |
| Red ●     | TV may require service.            | <p>Turn off the TV and unplug the set from the AC power source. Wait one minute and then plug the set back in. See Appendix F.</p> <p>If the LED is still on, contact your dealer or a Mitsubishi Authorized Service Center. Go to <a href="http://www.mitsubishi-tv.com">www.mitsubishi-tv.com</a> or call 1-800-332-2119 to receive Authorized Service Center information.</p>           |

### LAMP Indicator

| LED Color | TV Condition  | Additional Information  |
|-----------|---|---|
| None ○    | Normal TV on or standby condition.  | Normal operation.   |
| Green ⊙   | TV just powered off and lamp is cooling.  | Starts to blink 60 seconds after turning off TV. TV can be turned back on before blinking starts or after blinking stops, but not while the indicator is blinking. Normal operation.              |
| Yellow ◐  | <ol style="list-style-type: none"> <li>Lamp access door is open or not secure.</li> <li>No lamp installed.</li> </ol> | <p>TV will not operate until lamp access door is secure. See Appendix D for installation information.</p> <p>TV will not operate without a lamp. See Appendix D for installation information.</p> |
| Red ●     | Lamp no longer illuminates and has reached the end of the lamp life.  | Replace the lamp. The TV will not operate when the lamp no longer illuminates. See Appendix D for installation information.   |

## TV Back Panel

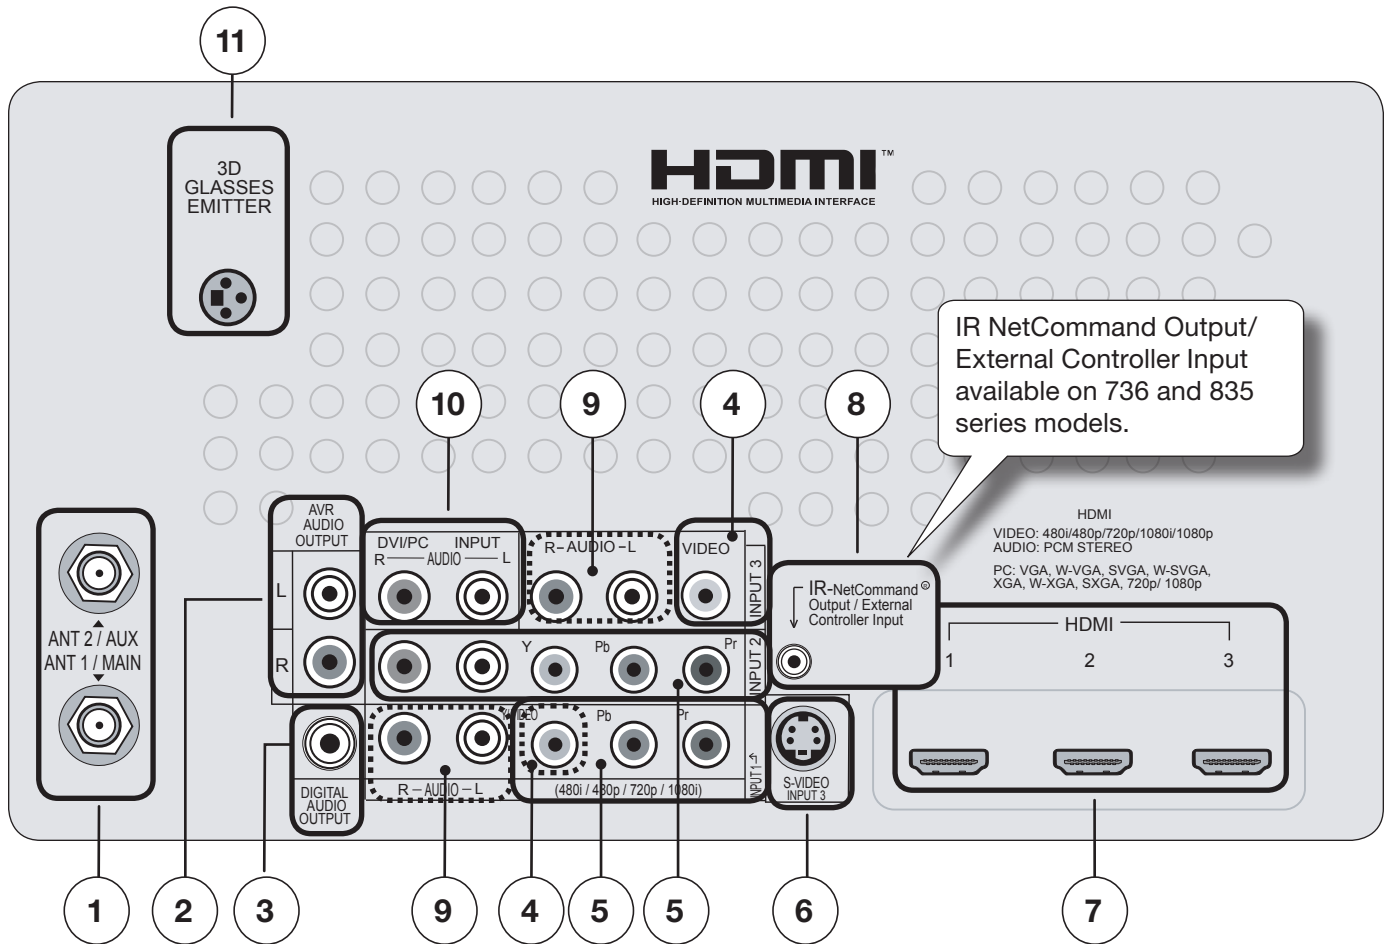

### 1. ANT 1/ANT 2 (Antenna)

If you are connecting an antenna or direct cable service without a cable box, connect the main antenna or cable source to **ANT 1**. Use **ANT 2** for a second source.

**ANT 1** and **ANT 2** can each receive digital and analog over-the-air channels from a VHF/UHF antenna or non-scrambled digital/analog cable source.

### 2. AVR AUDIO OUTPUT

Use **AVR AUDIO OUTPUT** to send analog audio of the program currently shown on the screen to an analog A/V surround sound receiver or stereo system. Digital audio from digital channels and HDMI devices is converted to analog audio by the TV. This is the only audio connection needed between it and the TV if using an analog A/V receiver or stereo system.

### 3. DIGITAL AUDIO OUTPUT

This output sends Dolby Digital or PCM digital audio to your digital A/V surround sound receiver. Analog audio from analog channels and devices and HDMI devices is converted by the TV to PCM digital audio. If you have a digital A/V receiver, in most cases this is the only audio connection needed between the TV and your A/V receiver.

### 4. Composite Video (INPUT 1, INPUT 3)

Use the **VIDEO** jacks to connect a VCR, DVD player, standard satellite receiver, or other A/V device to the TV. Use the adjacent **AUDIO R** and **L** inputs for **INPUT 1** or **INPUT 3** if you wish to send audio to the TV. Note that the **INPUT 3** composite video jack is automatically disabled when you connect to **S-VIDEO** (item 6).

### 5. Component Video (INPUT 1, INPUT 2)

**Y Pb Pr Component Video (480i/480p/720p/1080i)**  
Use these jacks to connect devices with component video outputs, such as DVD players, external HDTV receivers, or compatible video game systems. Use the adjacent **AUDIO R** and **L** jacks for **INPUT 1** or **INPUT 2** if you wish to send audio to the TV. See Appendix A specifications for signal compatibility.

### 6. S-VIDEO (INPUT 3)

Connect an S-Video device to this input. Use the **AUDIO R** and **L** jacks for **INPUT 3** (item 9) if you wish to send audio to the TV.

## TV Back Panel, continued

### 7. HDMI™ Inputs (High-Definition Multimedia Interface)

The HDMI inputs support uncompressed standard and high-definition digital video formats and PCM digital stereo audio.

Use the HDMI inputs to connect to CEA-861 HDMI compliant devices such as a high-definition receiver or DVD player. These inputs support 480i, 480p, 720p, 1080i, and 1080p video formats.

Mitsubishi recommends you use category 2 HDMI cables, also called high-speed HDMI cables, to connect HDMI 1.3 source devices. High-speed category 2 cables bring you the full benefits of Deep Color and **x.v.Color**.

These HDMI inputs can also accept digital DVI video signals. To connect a device's DVI output to the TV's HDMI input, use an HDMI-to-DVI adapter or cable plus analog audio cables. Connect the analog audio cables to the **DVI/PC INPUT AUDIO** jacks (item **10**) on the TV to receive left and right stereo audio from your DVI device.

The TV's HDMI inputs are compatible with many DVI-D and HDMI computer video signals. For additional information on PC compatibility, see "Using the TV with a Personal Computer," page 17, and Appendix A, "Specifications," page 64.

These inputs are HDCP (High-Bandwidth Digital Copy Protection) compliant.

These inputs are  **SimplifyHD** certified for proper interoperability with other products certified by Simplify™.

### 8. IR NetCommand Output/External Controller Input

**736 or 835 series TV.** IR emitters connected to this jack are used by the TV's NetCommand system to send control signals to external IR remote-controlled devices such as cable boxes, VCRs, DVD players, satellite receivers and audio receivers.

When NetCommand is not being used, this jack can be switched to receive wired IR control signals from external system controllers. To switch this jack for use as an input, connect the external controller's IR output to this jack, then:

1. Press **MENU** to display the TV menu.
2. Enter the number sequence 2, 4, 7, 0 to display the **Installer** menu.
3. Highlight the **WIRED IR** selection and press **ENTER** to change the setting from **OFF** to **ON**.

To revert to NetCommand control:

1. Disconnect the IR device.
2. Press **MENU** to display the TV menu.

### HDMI Cable Categories

HDMI cables are available as Category 1 and Category 2 types.

- **Category 2 Cables** (also called high-speed HDMI cables). Newer, HDMI 1.3-compliant DVD players, video games, and set-top boxes require Category 2 cables, suitable for clock frequencies up to 340 MHz or data rates of up to 10.2 gigabits per second. Use category 2 cables for high-speed 1080p HD signals carrying extended color encodings (i.e., 30 or more bits, also called Deep Color). Category 2 cables are also suitable for standard HDTV signals.
- **Category 1 Cables** (also called standard HDMI cables). Category 1 cables may be unmarked. They are suitable for standard HDTV 720p, 1080i, and 1080p signals with 8-bit color depth. Use category 1 cables for clock frequencies up to 74.25 MHz or data rates of up to 2.23 gigabits per second.

3. Enter the number sequence 2, 4, 7, 0 to display the **Installer** menu.
4. Highlight the **WIRED IR** selection and press **ENTER** to change the setting from **ON** to **OFF**.

**Note:** When the **WIRED IR** option is set to **ON** (control by an external device), the **Low Power** setting for Energy Mode is unavailable.

### 9. AUDIO L and R (INPUT 1, INPUT 3)

These are analog stereo inputs shared by more than one video input.

- **INPUT 1** stereo audio jacks are for use with **INPUT 1** composite video (single yellow cable) or component video (Y Pb Pr cables).
- **INPUT 3** stereo audio jacks are for use with **INPUT 3** composite video or S-Video.

### 10. DVI/PC INPUT AUDIO

Use the **DVI/PC INPUT AUDIO** jack when connecting a DVI device to one of the TV's HDMI inputs using a DVI-to-HDMI cable. These jacks allow you to send left and right analog audio from your computer or other DVI device to the TV.

### 11. 3D GLASSES EMITTER

Use this jack to connect the special IR emitter supplied with 3D glasses. The emitter will send a signal that synchronizes your 3D glasses with the screen display.

# 2 TV Set-Up

## Guidelines for Setting Up and Using Your New Widescreen TV

### Getting Started


1. Review the important safety, installation, and operating information at the beginning of this book.
2. Choose a location for your TV.
  - Allow at least four inches of space on all sides of the TV to help prevent overheating. Overheating may cause premature failure of the TV as well as shortened lamp life.
  - Avoid locations where light may reflect off the screen.
  - See the stand requirements under “Important Information About Your TV.”
3. Install the batteries in the remote control. See this page for instructions. See page 27 for more on use of the remote control.
4. Plug your TV into a power outlet. The green LED on the front of the TV will start blinking rapidly. After the green LED stops blinking, press the **POWER** key to power on the TV.
5. When the **Welcome** screen appears the first time you power on the TV, select a language for TV menus. You can later change the language through the **Setup** menu.
6. Connect your audio/video (A/V) devices to the TV and perform initial setup.
  - See chapter 3, “TV Connections,” for connection diagrams.
  - See the following pages for initial TV setup and use of the Auto Input Sensing feature.
  - To connect the TV to a personal computer, see “Using the TV with a Personal Computer,” page 17.

### When You First Power On the TV Choosing a Language for Menus


1. Power on the TV for the first time.
2. Press **▲▼** to select either **English** or **Spanish** for all menus. You can later change the language selection through the **Setup > Language** menu. See page 43.

### Installing the Remote Control Batteries

1. Remove the remote control’s back cover by gently pressing in the tab and lifting off the cover.
2. Load the batteries, making sure the polarities (+) and (-) are correct. For best results, insert the negative (-) end first.
3. Snap the cover back in place.

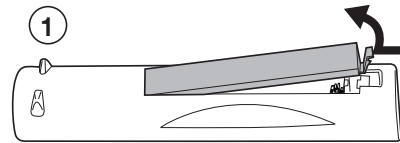

The remote control requires two AA alkaline batteries.

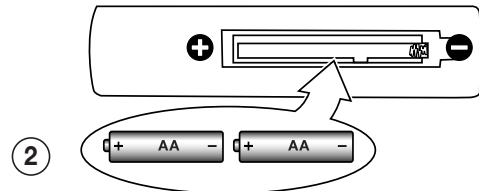

### Turning the TV On or Off

To turn the TV on or off, point the remote control at the front of the TV and press the **POWER** button. Alternatively, press the **POWER** button on the TV’s control panel.

### If You Turn Off the TV by Mistake

1. Press **POWER** again within about 60 seconds, while the lamp is still hot, to have the TV come back on immediately.
2. If the **LAMP** indicator starts blinking (about 60 seconds after you shut off power), wait a few moments for the **LAMP** indicator to stop blinking and press **POWER** to turn the TV on again.

## Guidelines for Setting Up and Using Your New Widescreen TV, continued

- **736 or 835 Series TV:** See chapter 6, “Net-Command IR Control,” to perform NetCommand IR “learning” to set up control of your home theater.
7. Mitsubishi recommends you perform a channel scan for channels received on **ANT 1** and **ANT 2**. See “Initial TV Setup” page 13.
  8. You can now start watching TV or you can perform additional setup and customization through the TV menus.

### Additional TV Setup

1. Review chapter 5, “TV Menus,” to customize TV operation. Press the **MENU** key to enter the menu system. Some examples of settings you may wish to change include:
  - **Fav.** Use an on-screen menu to create custom lists of your favorite channels from **ANT 1** and **ANT 2**. See **Setup > Edit**, page 44.
  - **Order.** Rearrange the device icons in the **Input Selection** menu to put frequently used icons near the front. See **Inputs > Order**, page 48.
  - **Name.** Change the device types that appear in the **Input Selection** menu. See **Inputs > Name** options, page 48.
  - **Parental Locks.** Restrict TV viewing by program rating, by channel, or by time of day. You can also disable the control-panel buttons if you have small children.
    - To restrict TV use by program rating, see the **Lock > Parent** menu, page 50.
    - To lock the control-panel buttons, use the **Lock > Control Panel** menu, page 51.
    - To restrict TV use by channel, see **Setup > Edit > Lock**, page 44.
  - **Video Settings.** Change video adjustments to get the best picture for your viewing conditions. See “AV Menu,” page 37.

**Note:** You may wish to change the Picture Mode from the default **Brilliant** to either **Bright** or **Natural**, which are suitable for most home viewing.

2. To program the remote control to operate A/V devices, see Appendix C, “Programming the Remote Control.”

### TV Operation

1. Review chapter 4, “TV Operation and Features,” for TV features including:
  - **Input Selection (viewing source).** Select a connected program source to watch, such as a VCR, DVD player, or antenna. Press **INPUT** on the

remote control to select from icons for the TV inputs. See “Choosing a Viewing Source,” page 26.

- **Program Listings.** Press **GUIDE** to see ChannelView™ listings for programs on **ANT 1** and **ANT 2**. See “ChannelView Channel Listings,” page 29
  - **Picture Formats.** Press **FORMAT** to cycle through picture sizes and shapes to find the one best suited to the current program. See “TV Signals and Display Formats,” page 32.
2. To view still and moving digital camera images on the TV, see page 33, “Viewing Camera Files.”
  3. **736 or 835 Series TV:** To control A/V devices with NetCommand IR control, see page 56, “Operating NetCommand-Controlled Devices.”

### TV Care

- **Lamp Cartridge.** When the lamp cartridge needs replacement, **replace the lamp yourself and save the cost of a service call.** See Appendix D for instructions.
- **General Cleaning.** See “Cleaning Recommendations,” page 4.

### Assistance

- For troubleshooting, service, and product support, see Appendix F.
- For warranty information, see the TV warranty on page 90.



## Initial TV Setup

Use the **Setup** menu for basic TV setup options.


1. Press **MENU** to open the **Main** menu.
2. Press **▼** to highlight the **Setup** icon and display the **Setup** menu.

### Memorizing Channels

For **ANT 1** and **ANT 2**

To start channel memorization

1. With the **Setup** menu displayed, press **▶** to highlight the **Scan** icon.

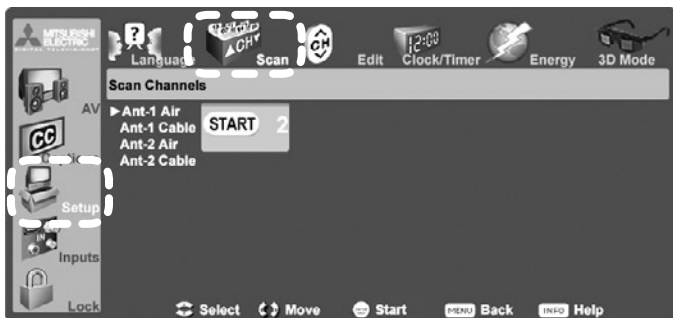

Start channel memorization from the **Setup** menu.

2. Press **▲▼** to highlight an input selection based on your connections:

| Input                                    | Condition                                      |
|--|--|
| <b>Ant 1 Air</b><br><b>Ant 2 Air</b>     | When connected to an indoor or outdoor antenna |
| <b>Ant 1 Cable</b><br><b>Ant 2 Cable</b> | When connected to direct cable (no cable box)  |

3. Press **▶** to highlight the on-screen **START** button.
4. Press **ENTER** to start automatic channel memorization.

To stop channel memorization before completion, press **CANCEL**.

5. When memorization is complete you can:
  - Press **MENU** once to return to the top row of icons.
  - Press **MENU** again to return to the **Main** menu.
  - Press **EXIT** to watch TV.

After channels have been memorized:

- To tune to memorized channels, press **CH ▲/▼** while watching TV on the **ANT 1** or **ANT 2** inputs.
- Use the **Setup > Edit** menu (page 44) for additional channel options, such as adding or deleting channels from memory, naming channels, and saving favorite channels in custom memory banks.

See chapter 5, “TV Menu Settings,” to:

- Set the TV clock (page 45)
- Set the TV Timer (page 46)
- Select an Energy Mode to manage power use while the TV is off (page 47)

- Select a lamp brightness mode (page 47)
- Enable 3D video (pages 35 and 47)

## Setting Up TV Inputs

### When You First Connect a Device

The TV’s Easy Connect™ Auto Input Sensing feature detects most connections automatically.

**Note:** For connection and setup of a personal computer, see the information on page 17.

### Auto Input/Auto Output Sensing for Most Devices

When you first connect a device, the TV will:

- a. Detect the connected device and automatically switch to it
- b. Prompt you to identify the device type
- c. **736 or 835 series TV.** Prompt you to perform NetCommand set-up for the device, if available.
- d. Repeat these steps for any additional newly detected devices

See below for connections which trigger Auto Sensing.

#### Auto Input Sensing Available

**Y/VIDEO** (detected as composite video)

**Y plus Pb** (detected as component video)

**S-VIDEO**

**HDMI \***

**USB** (USB photo port on front)

**INPUT 4 AUDIO** (for an audio-only device; see page 25.)

#### Auto Output Sensing Available

**DIGITAL AUDIO OUTPUT** (orange jack)

**AVR AUDIO OUTPUT** (red jack)

#### No Auto Sensing

**ANT 1** and **ANT 2**

\* If the device is powered off when connected, detection occurs when the device is next powered on.

### Auto Input/Auto Output Sensing for CEC Devices

When the TV’s NetCommand for HDMI feature is active, most CEC-enabled devices are recognized and identified automatically by the TV. NetCommand for HDMI may allow you to control functions of a CEC-enabled device. See Appendix E, “NetCommand HDMI Control of CEC Devices,” page 77.





## Controlling A/V Receiver Sound Volume

Use one of the methods below to control sound volume from an A/V receiver.

### With a Standard TV Setup

- **Recommended Method:** Program the TV's remote control for your A/V receiver and enable the Audio Lock feature. See page 68.
- Program the TV's remote control for your A/V receiver and set the TV remote's slide switch to the **AUDIO** position to control A/V receiver volume. Set the switch back to the **TV** position to control the TV.
- Use the remote control that came with the A/V receiver.

### With NetCommand IR Control

**736 or 835 Series TV.** Set up NetCommand control of the A/V receiver's volume functions in the **Inputs > AVR** menu. The TV's remote will then control A/V receiver volume. See page 58.

### With NetCommand for HDMI (CEC-Enabled HDMI A/V Receiver)

The TV's remote control may control some functions of the A/V receiver. See Appendix E, "NetCommand HDMI Control of CEC Devices," page 77.


## About Home-Theater Control Systems

This summary offers some examples of the control methods available using the **TV's remote control**. You may wish to use one or more of these methods in your home theater after completing Auto Input Sensing.

### Source device connected directly to the TV


#### Remote Control Programming with Any Connection Type

Program the remote control to operate the A/V device. To control the device, set the slide switch to the correct position for the device type. See Appendix C, "Programming the Remote Control." In the case of an A/V receiver, use the Audio Lock feature, page 68.

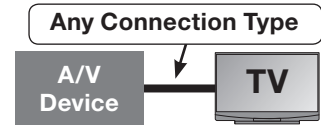


#### 736 or 835 Series TV: NetCommand IR Control with Any Connection Type

Set up NetCommand IR control of the device's keys as desired. See "IR Emitter Placement," page 53, and "Initial NetCommand Setup for Most Devices," page 54.

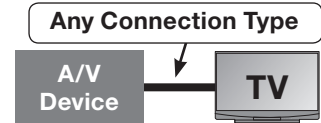

#### CEC-Enabled HDMI Device with HDMI Connection Only


1. Turn on the TV's NetCommand for HDMI feature. See the instructions in Appendix E, "NetCommand HDMI Control of CEC Devices," page 77.
2. Experiment with the TV's remote control (slide switch set to TV) to determine which device functions it can operate.

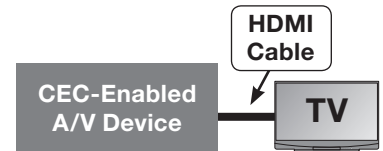

### Source device connected to an A/V receiver connected to the TV


#### 736 or 835 Series TV: A/V Receiver with HDMI Output (no CEC)

1. Assign the device to an A/V receiver input to allow you to set up NetCommand IR control of the **A/V receiver's** keys as desired. See "IR Emitter Placement," page 53, and "Setting Up NetCommand Control of an A/V Receiver," page 58.
2. Set up NetCommand IR control of the **source device's** keys as desired. See "Initial NetCommand Setup for Most Devices," page 54.

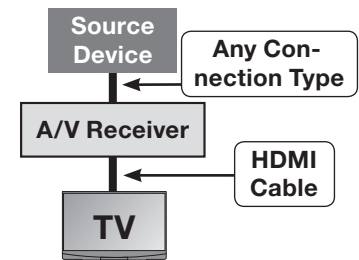

#### CEC-Enabled HDMI A/V Receiver

1. Turn on the TV's NetCommand for HDMI feature. See the instructions in Appendix E, "NetCommand HDMI Control of CEC Devices," page 77.
2. Try using the TV's remote control to operate the A/V receiver's volume and mute functions.
3. If the source device you want to connect also has CEC capability, see Appendix E for setup.
4. Try using the TV's remote control to determine which device functions it can operate. For example, on a CEC-enabled DVD player, check for a response to the **▶ (PLAY)**, **⏸ (PAUSE)**, and **■ (STOP)** keys. For a cable box, check for a response to **CH/PAGE** **^/∨**.

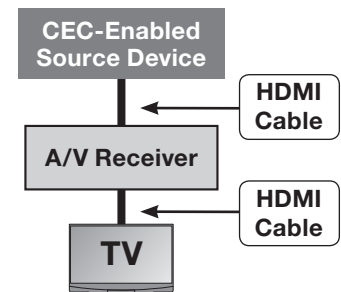

## Using the TV with a Personal Computer

### Connecting a Computer to the TV

Use one of the connection methods listed below based on your computer's video output.


| Computer Video Output | Video Connection  | Audio Connection                            |
|-----------------------|---|---|
| <b>Digital DVI</b>    | DVI-to-HDMI cable or an HDMI cable with an HDMI-to-DVI adapter  | Stereo audio cables                         |
|                       | <b>Note:</b> If the computer's audio output is a single mini jack, a mini audio-to-RCA-male "Y" adapter cable is also required. |   |
| <b>HDMI</b>           | HDMI-to-HDMI cable  | No additional audio connection is required. |

#### IMPORTANT


This TV accepts digital computer signals only.

1. See the TV specifications in Appendix A to confirm that your computer signal is compatible with the TV.
2. Connect the computer's digital signal output to one of the TV's **HDMI** jacks. See the connection diagrams for the method suited to your equipment.
3. Connect the computer's audio output using one of these options:
  - For digital DVI signals, connect analog left/right audio to the TV's **DVI/PC INPUT AUDIO** jacks.
  - For HDMI signals, no additional audio connection is required.
4. Power on the TV and computer. The TV will detect the connection and display the **Auto Input Sensing** screen.
5. In the **Auto Input Sensing** screen, press **▲ ▼** to highlight **PC** in the list of device types. It is important to use the name **PC** so that the TV can process the video signal correctly.
6. Press **EXIT** to close the **Auto Input Sensing** screen.


**Note:** If your computer provides digital audio output (coaxial or digital), you can connect it directly to a digital A/V receiver and bypass the TV.

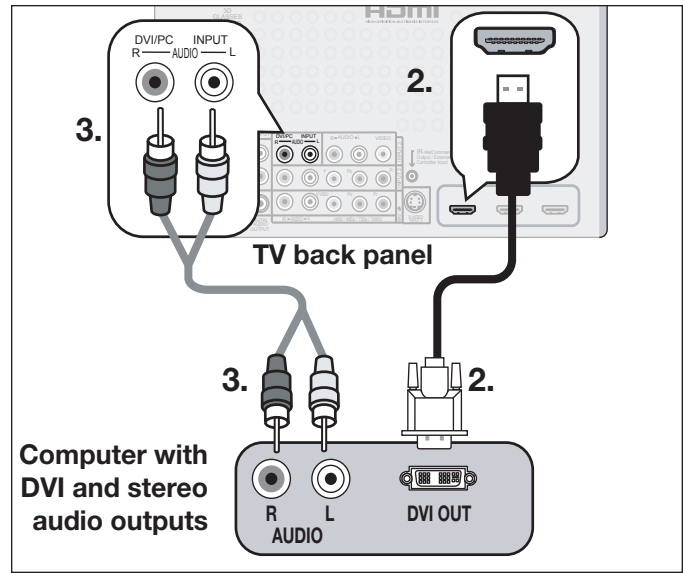

A DVI connection from a personal computer requires a separate audio connection. A computer connected to the TV back panel is shown above.

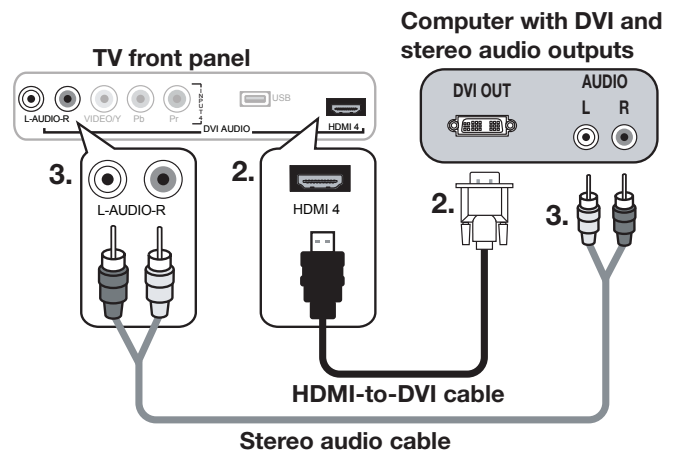

736 or 835 Series TV: Computer with DVI output connected to the TV front panel.

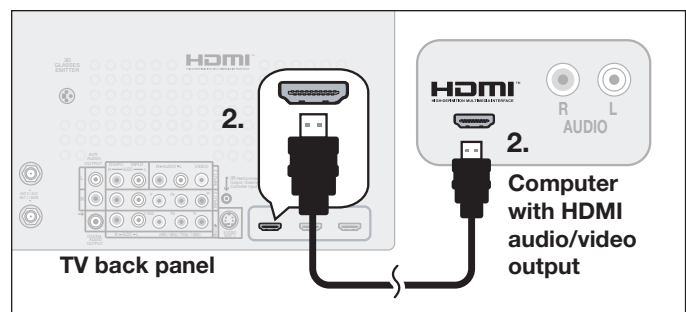

An HDMI-to-HDMI connection carries all video and audio on a single cable.

## Using the TV with a Personal Computer

### Computer Video Adjustments

1. Power on the computer if it is not already on.
2. Select **PC** from the **Input Selection** menu. To do this, press **INPUT** to open the **Input Selection** menu, move the highlight to the PC icon, and press **ENTER**.
3. Working from the computer, change the resolution of the computer image. View the computer image on the TV and maximize the computer resolution while maintaining a suitable aspect ratio for the image.
4. Perform TV video adjustments. Press **VIDEO** repeatedly to access video-adjustment options. The following additional adjustments are available for computer video:
 

**Horiz Position** (Horizontal Position). Manually adjust the horizontal position.

**Vert Position** (Vertical Position). Manually adjust the vertical position.
5. Press **FORMAT** repeatedly to find the picture format best suited to the image. See the chart on this page showing how different computer resolutions can be displayed on the TV.

#### Distortion in Computer Images

Computer images may show distortion when viewed on the TV, e.g., lines that should be straight may appear slightly curved.

### Image Resolution

Your Mitsubishi TV can display resolutions from standard VGA (640 x 480) through 1920 x 1080 signals at a refresh rate of 60 Hz. The resolution of 1920 x 1080 is supported at refresh rates of 24, 30, and 60 Hz. See Appendix A, "Specifications" (page 64) for more on compatible screen resolutions.

In most cases, the computer will select the best resolution match to display on the TV. You can override this setting if you wish. Refer to your computer operating system's instructions for information on changing the screen resolution.

You may need to restart the computer for changes to take effect.

#### Tip:

Set the computer's screen saver to display a pattern after several minutes of inactivity. This acts as a reminder that the TV is powered on and the lamp is in use. The lamp is in use whenever the TV is powered on, even if the screen appears dark.

### Computer Display Formats

Press the **FORMAT** key repeatedly to cycle through the TV displays available for your computer's video signal.

| Computer Signal     | As Displayed on TV Screen |                |                 |      |
|---------------------|---------------------------|----------------|-----------------|------|
|                     | Original Format           | 4 X 3 Standard | 16 X 9 Standard | Zoom |
| VGA<br>640 X 480    |                           |                |                 |      |
| WVGA<br>848 X 480   |                           |                |                 |      |
| SVGA<br>800 X 600   |                           |                |                 |      |
| WSVGA<br>1064 X 600 |                           |                |                 |      |

| Original Format       | Standard | Zoom |
|-----------------------|----------|------|
| XGA<br>1024 X 768     |          |      |
| PC 720p<br>1280 X 720 |          |      |
| WXGA<br>1360 X 768    |          |      |
| SXGA<br>1280 X 1024   |          |      |

| Original Format         | Standard | Reduce |
|-------------------------|----------|--------|
| PC 1080p<br>1920 X 1080 |          |        |

# 3 TV Connections

## Before You Begin

### Auto Input Sensing

The TV's Auto Input Sensing feature automatically recognizes most connections and prompts you to identify the type of device connected. See chapter 2, "TV Setup," for more on Auto Input Sensing.

### Connection Types

Review the connection types available on your input devices and use connections that will give the best video quality. For example, choose HDMI over component video, and choose component video over S-video or composite video.

### Picture Quality

For best picture quality, route signals directly from the input device to the TV; avoid routing video signals through an A/V receiver, for example.

### Surround Sound

For best surround sound audio quality, route audio-signal cables or HDMI cables from the source device directly to your A/V receiver or sound system.

### IMPORTANT

Accessory items such as cables, adapters, splitters, or combiners required for TV connections are not supplied with the TV. These items are available at many electronics stores.

## HDTV Cable Box or Satellite Receiver, DVD Player, or Other Device with Component Video

If your cable box or satellite receiver has an HDMI output, use the connections for HDMI devices described later in this chapter.

Required: RCA component video cables, left/right analog stereo audio cables.

1. Connect RCA-type cables from the **Y Pb Pr** outputs on the device to the **Y Pb Pr** inputs on the TV back panel, matching the colored green, blue, and red connections.
2. Connect left (white) and right (red) audio cables from the device to **AUDIO L** and **R** on the TV back panel.
3. **Cable Box or Satellite Receiver Only:** Connect the cable from the outside cable or satellite service to **CABLE IN** or **SATELLITE IN** on the cable box or satellite receiver. See your device's owner's guide for instructions and cable compatibility.

**Note:** To hear digital surround sound, connect the digital audio output from the device directly to your digital A/V receiver.

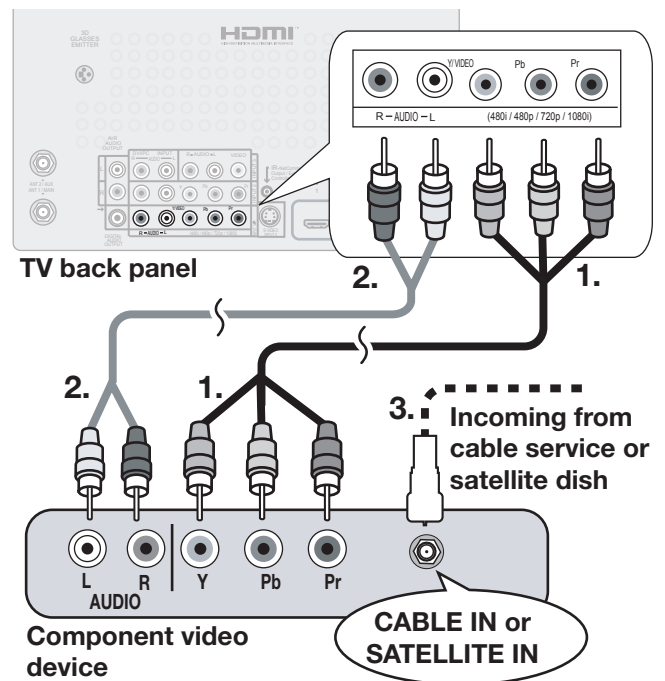


Figure 1. Connecting a device with component video outputs



### HDMI Device (Cable Box, Satellite Receiver, DVD Player, or Other Device)

Required: HDMI-to-HDMI cable.

Connect an HDMI cable from the TV back panel to the HDMI device output. HDMI devices provide video and audio through the single cable.

Mitsubishi recommends you use category 2 (high-speed) HDMI cables to connect HDMI 1.3 source devices. High-speed category 2 cables bring you the full benefits of Deep Color and **x.v.Color**. See "HDMI Cable Categories," page 10, for more on HDMI cable types.

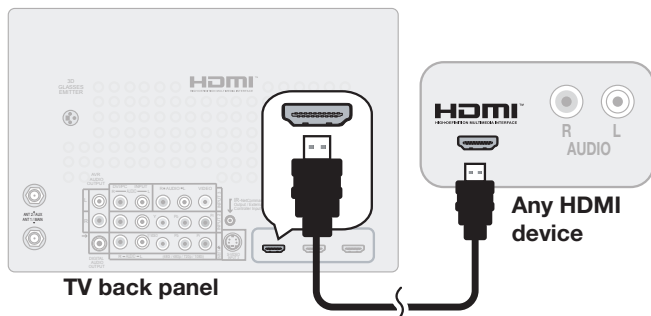


Figure 2. Connecting an HDMI device.

**Note:** HDMI inputs are *SimpleplayHD* certified for proper interoperability with other products certified by Simpleplay™.

#### IMPORTANT

##### HDMI and Audio Signals

Digital Surround Sound: The TV's HDMI inputs can receive digital stereo audio signals only. To hear digital surround sound from an HDMI device, connect the device's HDMI or digital audio output directly to your A/V receiver. See the Owner's Guides for those devices for instructions.

### DVI Video Device (Cable Box, Satellite Receiver, DVD Player, or Other Device)

Connect DVI devices (digital only) to the TV's HDMI input jacks.

Analog stereo audio cables and a DVI-to-HDMI cable or DVI/HDMI adapter and HDMI cable are required.

1. Connect the DVI-to-HDMI cable (recommended) or HDMI cable with DVI/HDMI adapter from the DVI device's back panel to the TV's HDMI jack.

**Note:** If you are using a DVI/HDMI adapter, it is important to connect the adapter to the DVI device for best performance.

2. Connect a set of audio cables from **AUDIO OUT** on the DVI device back panel to the **DVI/PC INPUT AUDIO** on the TV back panel. Connect the red cable to the **R** jack and the white cable to the **L** jack.

**Note:** The HDMI connection supports copy protection (HDCP).

Some devices require connection to an analog input first in order to view on-screen menus and to select DVI as the output. Please review your equipment instructions for DVI connectivity and compatibility.

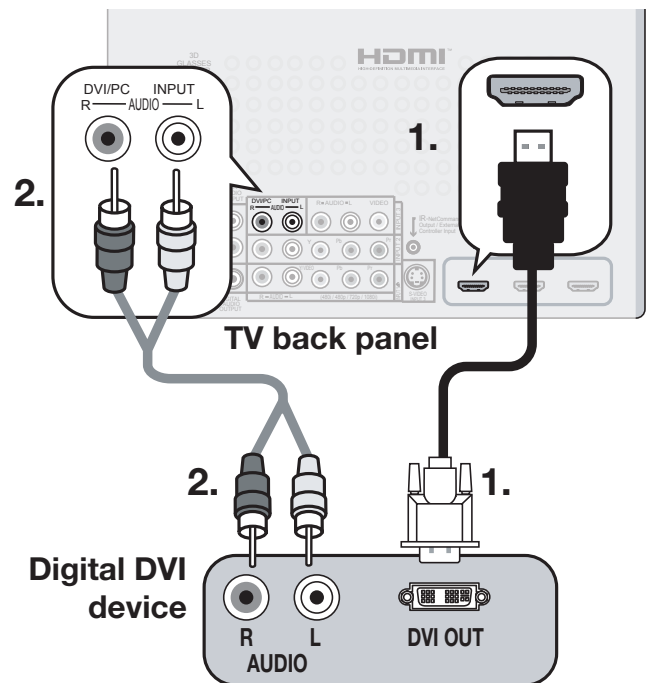


Figure 3. Connecting a digital DVI device

### Wall Outlet Cable (no cable box)

It is very important to connect the incoming cable for your primary viewing source to **ANT 1**.

1. Connect the primary incoming coaxial lead cable to **ANT 1** on the TV back panel.
2. For an optional secondary antenna source, connect an antenna (or cable) to **ANT 2**.

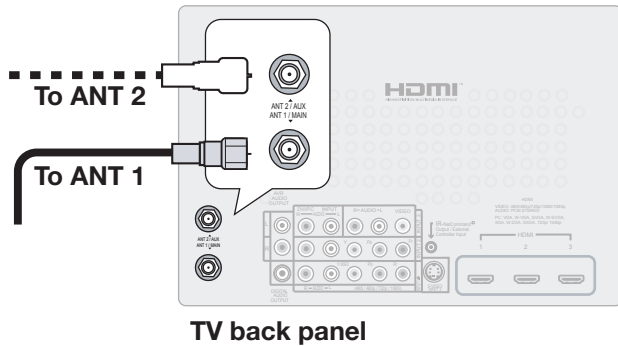


Figure 4. Wall Outlet Cable

### Antenna with a Single Lead

#### A. For an antenna with flat twin leads

Required: 300-ohm-to-75-ohm transformer.

- A1. For an antenna with flat twin leads, connect the 300-ohm twin leads to the 300-ohm-to-75-ohm transformer.
- A2. Push the 75-ohm side of the transformer onto **ANT 1** on the TV back panel.

#### B. For cable or antenna with coaxial lead

Connect the coaxial lead directly to **ANT 1** on the TV back panel.

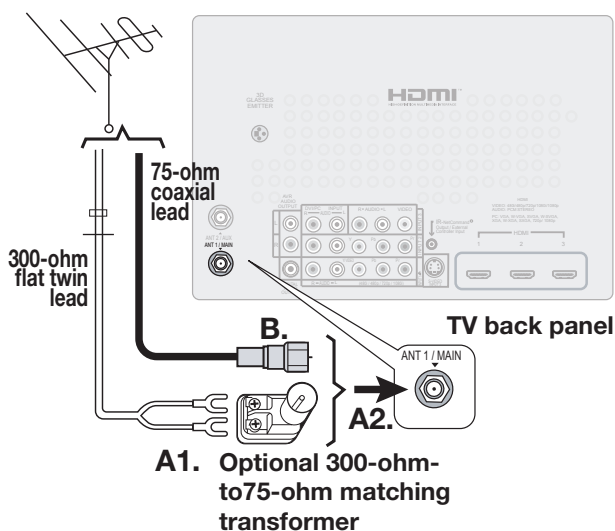


Figure 5. Connecting a Single Antenna Lead

### Antennas with Separate UHF and VHF Leads

Required: UHF/VHF combiner

1. Connect the UHF and VHF antenna leads to the UHF/VHF combiner.
2. Push the combiner onto **ANT 1** on the TV back panel.

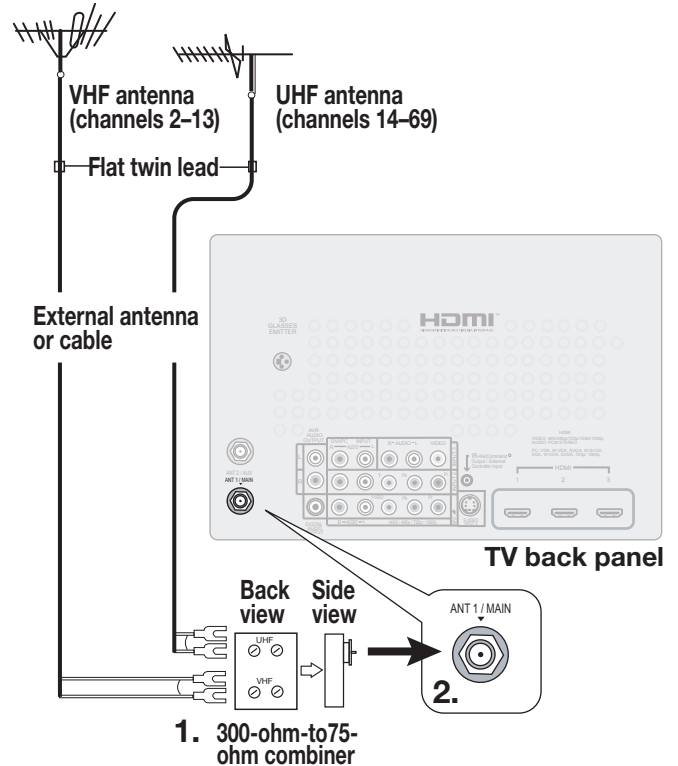


Figure 6. Connecting separate UHF and VHF Antennas

Mitsubishi strongly recommends you avoid using antennas with flat twin leads. Flat twin lead antenna wires are subject to interference which may adversely affect the performance of the TV. We recommend using coaxial antenna cable.

### Standard Cable Box, Satellite Receiver, or Other Device with S-Video

Required: S-Video cable and left/right analog stereo audio cables.

1. Connect the cable from the outside cable or satellite service to **CABLE IN** or **SATELLITE IN** on the cable box or satellite receiver.
2. Connect an S-Video cable from **S-VIDEO OUT** on the cable box or satellite receiver back panel to **INPUT 3 S-VIDEO** on the TV back panel.
3. Connect left (white) and right (red) audio cables from **AUDIO OUT** on the cable box or satellite receiver to **INPUT 3 AUDIO L** and **R** on the TV back panel.

**Note:** Refer to the cable box or satellite receiver Owner's Guide for cable or dish antenna connections to the receiver.

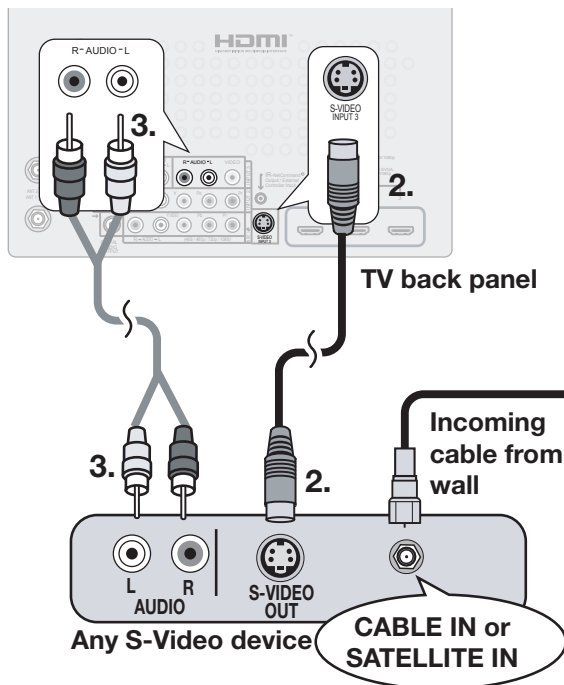


Figure 7. Connecting a device with S-Video

### VCR to an Antenna or Wall Outlet Cable

Required: Two-way RF splitter, two coaxial cables, right and left analog audio cables, either S-video or composite video cable.

1. Connect the incoming cable or antenna to **IN** on the RF splitter.
2. Connect one coaxial cable from **OUT** on the RF splitter to **ANTENNA IN** on the VCR back panel.
3. Connect one coaxial cable from **OUT** on the RF splitter to **ANT 1** on the TV back panel.
4. Connect either an S-Video or composite video cable from **VIDEO OUT** on the VCR back panel to a **VIDEO** composite or **S-VIDEO** jack on the TV back panel. **Connect only one type of video cable;** S-Video is recommended, if available.
5. To use the TV speakers with the VCR, connect left (white) and right (red) audio cables from **AUDIO OUT** on the VCR to the associated **AUDIO L** and **R** jacks on the TV back panel. If your VCR is mono (non-stereo), connect only the white (left) cable.

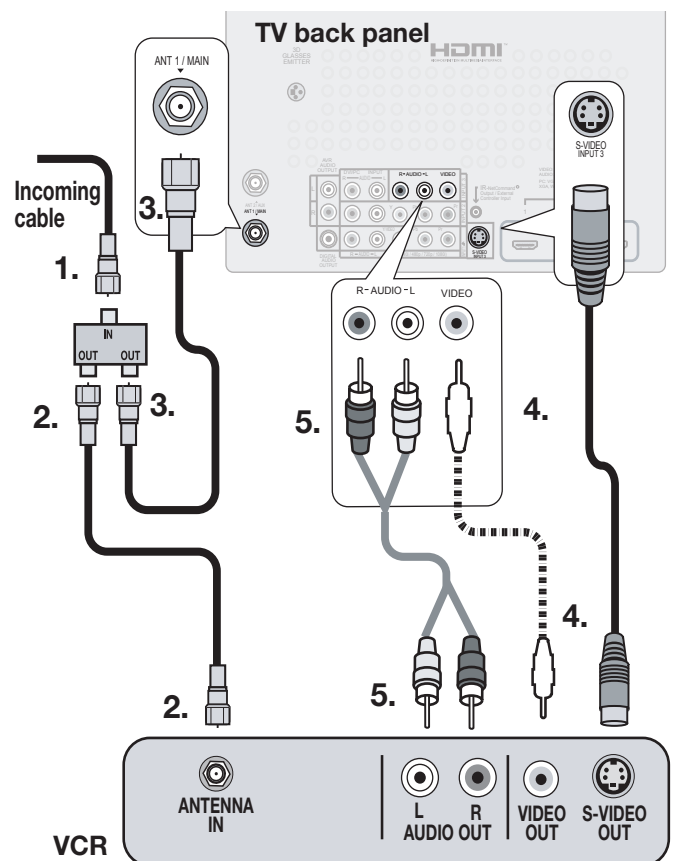


Figure 8. Connecting a VCR to an Antenna or Wall Outlet Cable

### VCR to a Cable Box (Audio & Video)

Required: Two-way RF splitter, three coaxial cables, right and left audio cables, S-Video or composite video cable, plus video and audio cables required to connect the TV to the cable box.

1. Connect the incoming cable to **IN** on the RF splitter.
2. Connect one coaxial cable from **OUT** on the RF splitter to **CABLE IN** on the cable box.
3. Connect one coaxial cable from **OUT** on the RF splitter to **ANT 1** on the TV back panel.
4. Connect one coaxial cable from **OUT** on the cable box to **ANTENNA IN** on the VCR back panel.

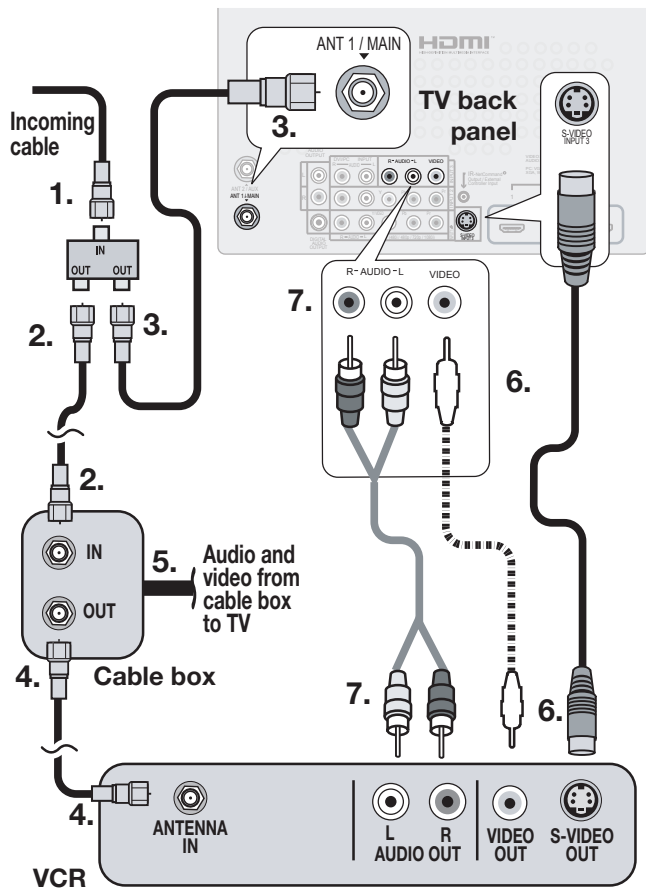


Figure 9. Connecting a VCR to a cable box

5. Connect the cable box outputs to the TV as shown in one of the options listed below. This connection allows the TV to receive the best available signal directly from the cable box.
  - **Figure 1, page 19:** Component video output to the TV's **Y Pb Pr** jacks; analog stereo audio to the associated **AUDIO** jacks.
  - **Figure 2, page 20:** HDMI output to the TV's **HDMI** jack.
  - **Figure 7, page 22:** S-Video output to the TV's **INPUT 3 S-VIDEO** jack; analog stereo audio to the **INPUT 3 AUDIO** jacks.

6. Connect either an S-Video or composite video cable from **VIDEO OUT** on the VCR back panel to a **VIDEO** composite or **S-VIDEO** jack on the TV back panel. Connect only one type of video cable. S-Video is preferable to composite video, if available.
7. To use the TV speakers with the VCR, connect left (white) and right (red) audio cables from **AUDIO OUT** on the VCR back panel to the associated **INPUT AUDIO L** and **R** on the TV back panel. If your VCR is mono (non-stereo), connect only the white (left) cable.

**Note:** When using this connection configuration with the connections used in step 5, it is possible to view live cable programs through the VCR Device. For best picture quality always view live cable programs directly from the TV input connected to the cable box device.

### Older Cable Box

Required: One coaxial cable.

**Note:** This connection is not recommended. The other connections described in this chapter provide better quality audio and video to the TV and allow NetCommand to work with the cable box.

1. Connect the incoming cable to **IN** on cable box.
2. Connect one coaxial cable from **OUT** on the cable box to **ANT 1** on the TV back panel.

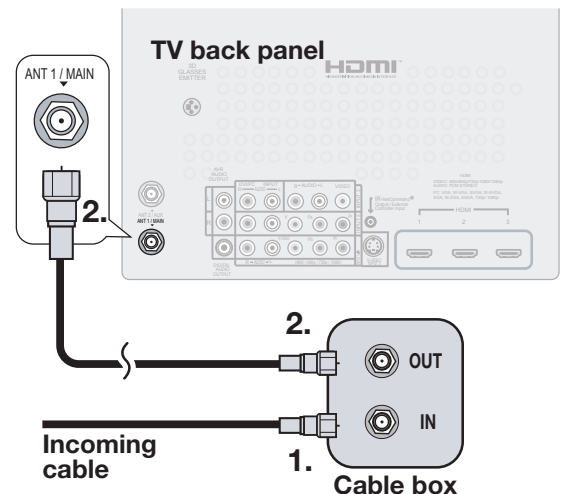


Figure 10. Connecting an older cable box

## A/V Receiver (Sound System) Using the TV's Audio Output

Most setups require either a digital audio cable or analog stereo audio cables. To send audio from TV channels received on **ANT 1**, **ANT 2**, or devices connected directly to the TV, you must use one of the connections shown below.

The TV makes all audio available in digital and analog formats:

- Analog audio coming into the TV is available as output in digital stereo format on the **DIGITAL AUDIO OUTPUT** jack.
- Digital incoming audio is available as analog output on the **AVR AUDIO OUTPUT L** and **R** jacks.

Usually, only one of the following audio connections is required:

- **To connect an analog A/V receiver**  
Connect left (white) and right (red) audio cables from **AVR AUDIO OUTPUT L** and **R** on the TV back panel to the **TV AUDIO INPUT** on the A/V receiver.
- **To connect a digital A/V receiver with Dolby Digital surround sound and PCM audio support:**  
Connect one end of the digital audio cable to **DIGITAL AUDIO OUTPUT** on the back of the TV. Connect the other end to the **COAXIAL DIGITAL INPUT** on the back of the A/V receiver.

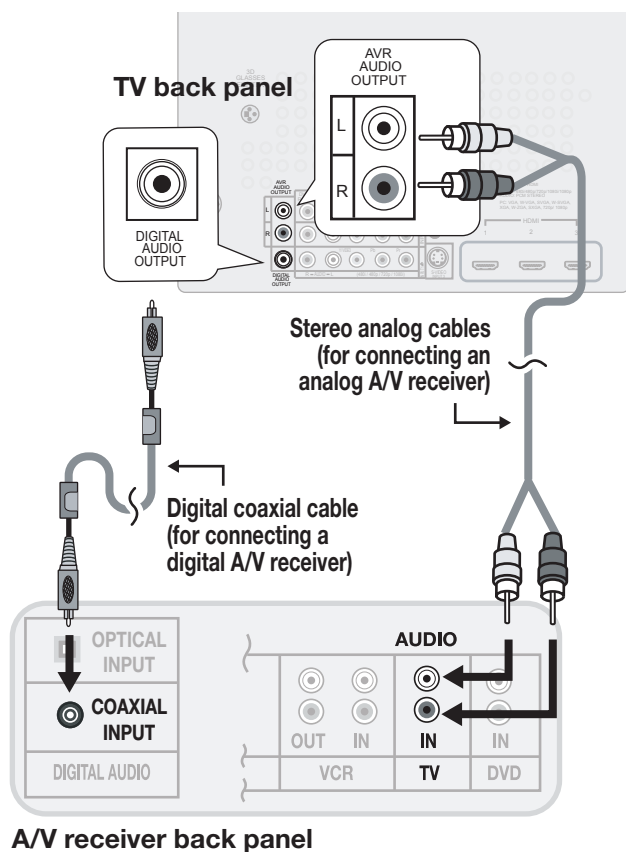


Figure 11. Connecting the TV to an A/V receiver

### Note:

- On rare occasions, an HDMI signal may be copy-protected and cannot be output from the TV as a digital signal. To hear these copy-protected signals through the A/V receiver, use the connection for an analog A/V receiver.
- Check the A/V receiver's Owner's Guide for information concerning use of the digital input and switching between digital sound and analog stereo sound from the TV.

## A/V Receiver with HDMI Output

Required: One HDMI-to-HDMI cable

This option allows you to view content from devices connected to an A/V receiver. The A/V receiver can send audio and video to the TV over a single HDMI cable. You can use an HDMI connection as described here in addition to an audio connection from the TV's audio output.

You may be able to use the TV's remote control (with slide switch set to TV) to operate connected CEC-enabled HDMI devices. Experiment with your equipment to determine which functions are available to the TV's remote control. See Appendix E, "NetCommand HDMI Control of CEC Devices" on page 77.

**736 or 835 Series TV:** This setup allows you to use NetCommand-controlled audio and video switching over the HDMI cable. See "A/V Receiver Control: Automatic Audio and Video Switching via HDMI" on page 61.

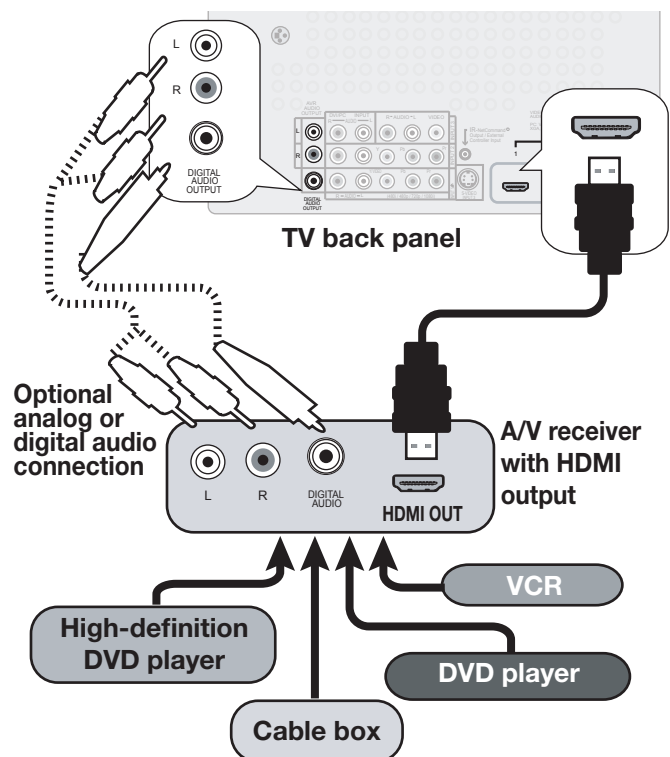



Figure 12. A/V receiver connected to the TV with an HDMI cable may offer special control capabilities.



## Camcorder

Inputs on the front of the TV (**INPUT 4**) offer the most convenient way to connect a camcorder, although you can use jacks located on the back panel instead. Three different connection options are described on this page.

Use jacks on the TV front panel to connect a camcorder

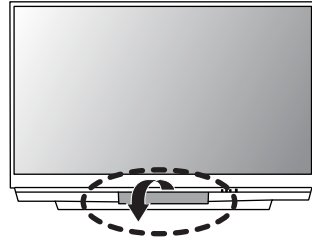

### A: Y Pb Pr Component Video Connection

Required: Component video and analog stereo audio cables supplied with the camcorder.

1. Connect component video cables from **VIDEO OUT** on the camcorder to the TV's **Y Pb Pr** component jacks on the front panel.
2. Connect left (white) and right (red) audio cables from **AUDIO OUT** on the camcorder to **AUDIO L** and **R** on the TV.

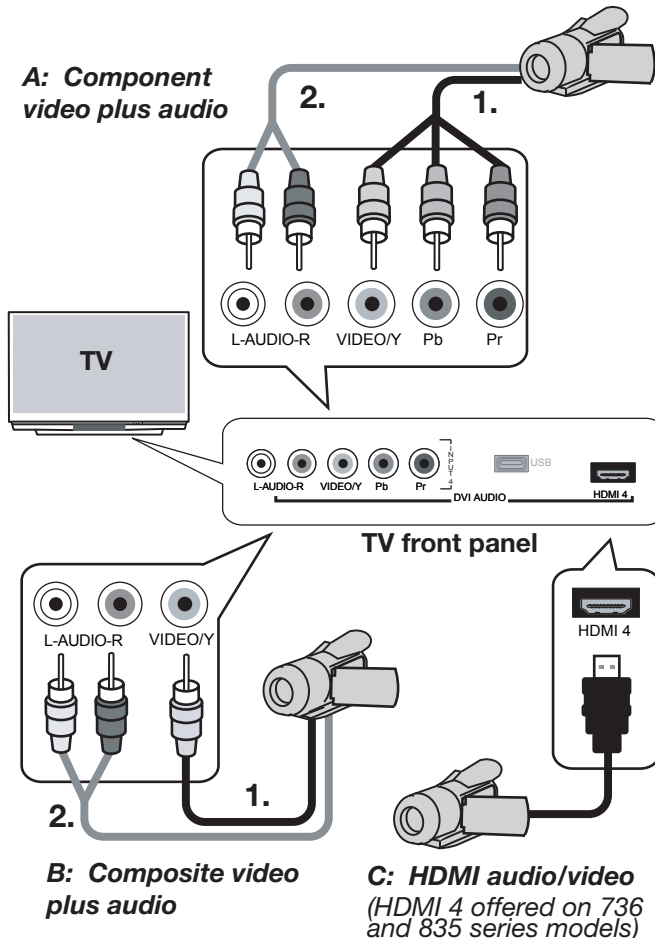


Figure 13. **INPUT 4** on the front of the TV offers up to 3 connection options for a camcorder.

### B: Composite Video Connection

Required: Composite video and analog stereo audio cables supplied with the camcorder.

1. Connect the composite video cable from **VIDEO OUT** on the camcorder to **VIDEO/Y** on the front of the TV.
2. Connect left (white) and right (red) audio cables from **AUDIO OUT** on the camcorder to **AUDIO L** and **R** on the front of the TV.

### C: HDMI Connection

Required: HDMI cable supplied with the camcorder.

**736 or 835 Series TV.** Connect the camcorder to the TV's **HDMI** jack on the front panel.

## Audio-Only Device

If you wish to connect an audio-only device to the TV, such as an audio CD player or an MP3 player, follow these instructions. The front panel offers the most convenient jacks for this purpose, but you can use the rear-panel jacks as well.

1. Insert an unused RCA-style connector into the **VIDEO/Y** jack. The presence of this connector activates the TV's auto input sensing feature.
2. Connect left (white) and right (red) audio cables from **AUDIO OUT** on the device to **AUDIO L** and **R** on the TV.
3. Keep the connector in the **VIDEO/Y** jack while using the audio-only device.

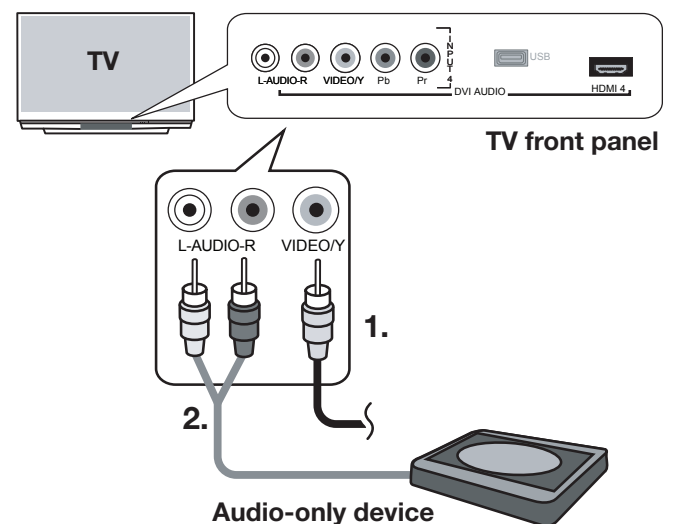


Figure 14. First insert an unused RCA-type connector into the **VIDEO/Y** jack on the TV front or back panel before connecting audio cables.



## 4

# TV Operation and Features

## Choosing a Viewing Source



### Input Selection menu

Choose a viewing source from the **Input Selection** menu. The current TV input appears as a full-color icon in this menu.

1. Press **INPUT** to display the **Input Selection** menu. If there are only two inputs to the TV, **INPUT** switches between them without displaying the menu.
2. Highlight an input icon using **▲ ▼ ◀ ▶**.
3. Press **ENTER** to switch to the input and close the menu.

### More About the Input Selection Menu

- To assign meaningful names to the icons, see the **Inputs > Name** menu, page 48.
- To rearrange the icons, see the **Inputs > Order** menu, page 48.

## Sleep Timer

The Sleep Timer turns the TV off after the length of time you set. To set the TV to turn on at a certain time, see the **Setup > Timer** menu on page 46.

### Setting the Sleep Timer

1. Press **SLEEP** on the remote control.
2. Press **SLEEP** additional times to increase the time in 30-minute increments up to the maximum of 120 minutes.
3. Press **EXIT** or wait five seconds without pressing any keys for the message to disappear.
4. Press **SLEEP** to view the time remaining before the sleep timer turns off the TV.

### Cancelling the Sleep Timer

1. Press **SLEEP** to display the on-screen message.
2. Press **SLEEP** repeatedly until **OFF** is displayed.

**Note:** After five seconds of inactivity, the message box will disappear.

## TV Tips

### Turning the TV On or Off

To turn the TV on or off, point the remote control at the front of the TV and press the **POWER** button. Alternatively, press the **POWER** button on the control panel of the TV.

### If You Turn Off the TV by Mistake

1. Press **POWER** again within about 60 seconds (while the lamp is still hot) to have the TV come back on immediately.
2. If the **LAMP** indicator starts blinking (about 60 seconds after you shut off power), **wait a few moments for the LAMP indicator to stop blinking and press POWER to turn the TV on again.**

### Controlling Sound Volume

- Press **VOL ▲/▼** to adjust the sound level.
- See also “Controlling A/V Receiver Sound Volume” on page 15.

### Changing Channels (antenna sources)

To change channels:

- Enter the channel number using the number keys on the remote control and press **ENTER**. For a two-part digital channel, such as 3-1, press 3 **CANCEL** 1 to enter a dash (separator).
- Press **CH/PAGE ▲/▼** to change channels one channel at a time.
- Press and hold **CH/PAGE ▲/▼** to move quickly through channels.
- Press **QV** (QuickView) to switch back to the previously tuned channel.
- Press **GUIDE** to display ChannelView channel listings, highlight a channel, and press **ENTER** to select.
- Use the Fav (Favorites) feature to set up lists of favorite channels and tune to them with the **FAV** key. See **Setup > Edit > Fav 1–Fav 6** on page 44.


**NOTE:** Perform channel memorization to make finding channels easier. See **Setup > Scan, page 43.**

## Remote Control

1. **POWER:** Turns TV power on and off.
2. **Slide Switch:** Selects the A/V device to be operated by the remote control. Set the slide switch to TV for operation of the TV, and NetCommand-controlled devices. Control of additional devices requires programming (see Appendix C, "Programming the Remote Control.")
3. **SLEEP:** Sets the TV to turn off within 2 hours in increments of 30 minutes.
4. **Digits/Letters:** Press digits for channel numbers, then press **ENTER** for faster tuning. Use numbers and the **CANCEL** key to enter digital sub-channel numbers. Use also for entering letters or names in menus.


To select letters when naming channels, repeatedly press the associated number key. Press **ENTER** to set the letter. Special characters are available with the **1** key (!, &, blank space) and **0** key (/ , \* , -).

5. **-/CANCEL (SUB-CHANNEL/CANCEL):** When entering digital channel numbers, adds a separator between main and sub-channel numbers. Clears Fav and some menu entries.
6. **QV (QuickView™):** Switches between the current channel and the last channel viewed.
7. **MUTE:** Turns TV sound on and off.
8. **SPLIT:** Not used in this model.
9. **FAV (Favorites):** Scans through memorized lists of favorite channels. See **Setup > Edit > Fav1-Fav6** on page 44.
10. **VOL ^/∨ (Volume Up/Down):** Changes sound level.
11. **CH/PAGE ^/∨ (Channel or Page Up/Down):** Scans up or down through memorized channels. Pages up and down through screens when used with ChannelView™.
12. **FORMAT:** Changes the shape and size of the TV picture.
13. **LIST (835 Series):** Works like the LIST key for a cable box or satellite receiver when "learned" for NetCommand or when the remote has been programmed for the device.
14. **INPUT:** Displays the **Input Selection** menu from which you can select an input source to view, such as an antenna input (**ANT 1/2**) or a connected device.
15. **▲ ▼ ◀ ▶ (Adjust Up/Down/Left/Right):** Navigate menus and change settings.
16. **ENTER:** Selects a channel number or menu item.

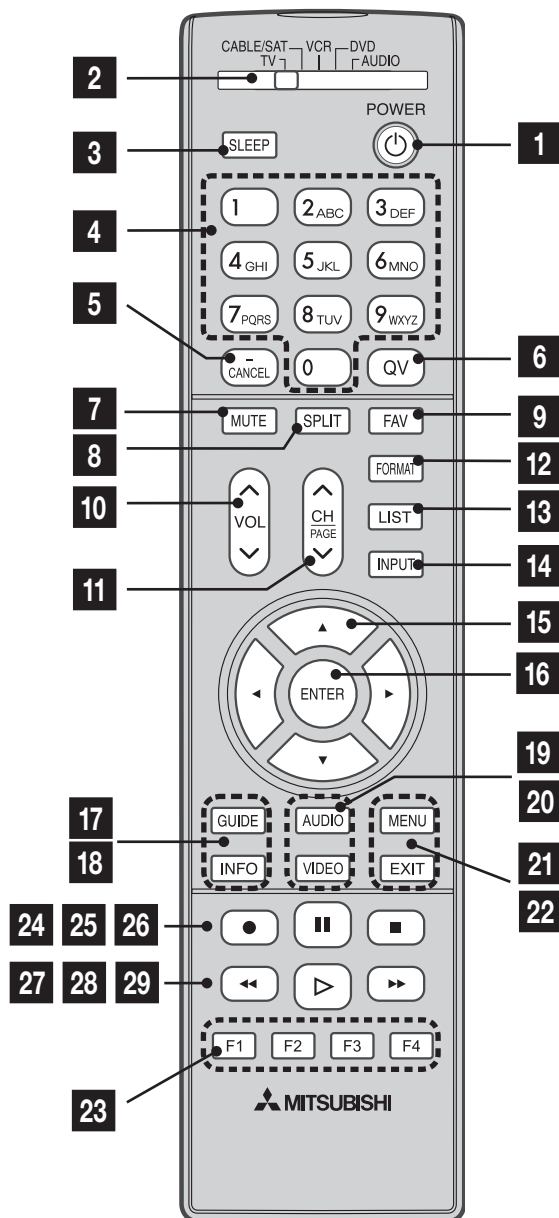







17. **GUIDE:** Displays or removes ChannelView™ channel listing for **ANT 1** and **ANT 2**. Displays DVD disc or top menu for a NetCommand-controlled DVD player. Displays the guide for a NetCommand-controlled cable box or satellite receiver.
18. **INFO:** Displays an on-screen summary of the current device in use and any broadcast information available, including current V-Chip ratings information. See "Status Display," page 30, for details.
19. **AUDIO:** Selects individual audio settings to adjust.
20. **VIDEO:** Selects individual video settings to adjust.

## Remote Control, continued

- 21. MENU:** Displays the main TV menu. When a sub-menu is open, backs up one menu level.
- 22. EXIT:** Closes TV on-screen menus/displays.
- 23. F1-F4**  
**For devices under NetCommand control:**  
 Perform NetCommand “Learning” to assign your choice of functions to the F1–F4 keys.  
**For devices operating independently of NetCommand:** The F1–F4 keys work like the A, B, C, D buttons on some cable boxes, satellite receivers, and DVD players. Program the remote control for your equipment and test the keys. See Appendix C, “Programming the Remote Control.”
- 25.  (PAUSE):** Freezes a broadcast TV picture from an antenna source, cable box, or satellite receiver (if key has not been reassigned for NetCommand use).

### Record/Playback Keys

Use any of these methods to enable the recording and playback commands of the TV’s remote control:

- Program the remote control for your DVR, VCR, or DVD player/recorder and set the slide switch to **VCR**, **DVD**, **CABLE/SAT**, or **AUDIO** as appropriate.
  - Check HDMI devices for compatibility with the TV’s NetCommand for HDMI feature (see Appendix E).
  - **736 or 835 Series TV:** Perform NetCommand IR “learning” for the device.
- 24.  (RECORD):** Records with a VCR or DVR.
- 25.  (PAUSE):** Pauses a VCR, DVR, or DVD. See above for use during TV viewing.
- 26.  (STOP):** Stops play of a VCR, DVR, or DVD.
- 27.  (REVERSE):** Rewinds a VCR. Reverse scans a DVR or DVD.
- 28.  (PLAY):** Plays a VCR, DVR, or DVD.
- 29.  (FORWARD):** Fast forwards a VCR. Forward scans a DVR or DVD.

**Note:** To operate other audio/video devices using the TV’s remote control:

- See Appendix C, “Programming the Remote Control.”
- For HDMI devices compatible with the TV’s NetCommand for HDMI feature, see Appendix E.
- **736 or 835 Series TV:** See chapter 6, “NetCommand IR Control,” for NetCommand IR “Learning” of device keys.
- For use of specific keys with NetCommand-controlled devices, see “Special Operation Methods,” page 56.

### Resetting the Remote Control

If the slide switch is set to **TV** and the TV does not respond properly, reset the remote control.

1. Press and hold **POWER** for several seconds until the button blinks twice and goes off.
2. Release the **POWER** button.
3. Press keys **0 0 9 3 5** and the **POWER** button will blink twice when you finish entering the code. While entering the code, pause for a moment between each key press to ensure it is recognized.

### Low-Battery Indicator

If you press a key and the **POWER** key blinks five times, replace the remote control’s batteries.

### Care of the Remote Control

- Use only alkaline batteries.
- Be within 20 feet of the equipment.
- Do not press two or more buttons at the same time unless instructed to do so.
- Do not allow unit to get wet or become heated.
- Avoid dropping on hard surfaces.
- Do not use harsh chemicals to clean. Use only a soft, lightly moistened cloth.
- Do not mix old and new batteries.

## ChannelView Channel Listings

| CHANNEL VIEW | ChannelView™ Ant-1             | 5:47 pm, Fri., July 25          |
|--------------|--------------------------------|---------------------------------|
| 2            | CBS                            | Programs for KCET-DT            |
| 2-1          | KCBS-DT CBS Local News         | 5:30 PM Nightly Business Re...  |
| 4            |                                | 6:00 PM NewsHour with Jim ...   |
| 4-1          | KNBC-DT NBC World News         | 7:00 PM Life and Times          |
| 7            | ABC                            | 7:30 PM California's Gold       |
| 7-1          | KABC-DT ABC World News         | 8:00 PM Washington Week         |
| 28           | PBS                            | 8:30 PM Wall Street Week wit... |
| 28-1         | KCET-DT The Rose Parade        | 9:00 PM Now with Bill Moyers    |
| 28-2         | KCET-DT Nightly Business Re... | 10:00 PM Culture of Hate: Wh... |
| 32           |                                | 11:00 PM Tavis Smiley           |

In addition to reporting on the day's breaking business, economic and market news, Nightly Business Report features commentators, special ...

### ChannelView screen

ChannelView™ shows memorized channels on **ANT 1** or **ANT 2**. It displays channel names and program information as sent by broadcasters or your local cable service provider and may be incomplete. No program information is displayed for analog channels. An analog channel name is displayed only if you assigned a name in the **Setup > Edit** menu (page 44).

To receive ChannelView updates:

- Keep the Energy Mode set to **Fast Power On**
- Set the TV clock
- Leave the TV powered off for a while each day to receive updates.


**Note:** Whenever you watch a digital channel, listings are updated for the channel you are watching.

## Using ChannelView

| Feature  | Press Key  |
|--|--|
| See ChannelView listings from <b>ANT 1</b> or <b>ANT 2</b> . | Press <b>GUIDE</b> .   |
| Close ChannelView  | Press <b>GUIDE</b> or <b>EXIT</b> .  |
| Scan channels one by one.                                    | Press and hold <b>▲</b> or <b>▼</b> .  |
| Scan channels quickly.                                       | Press and hold <b>PAGE ▲/▼</b> .   |
| Jump to listings for a specific channel.                     | <ol style="list-style-type: none"> <li>1. Enter the channel number (see numbers in upper left of screen).</li> <li>2. Press <b>ENTER</b>.</li> </ol> |
| See more of the program description (if available).          | Press <b>INFO</b> .  |
| Move navigation to the program listings.                     | Press <b>▶</b> .   |
| Move navigation to the channel listings.                     | Press <b>◀</b> .   |
| Tune to the highlighted channel.                             | Press <b>ENTER</b> .   |



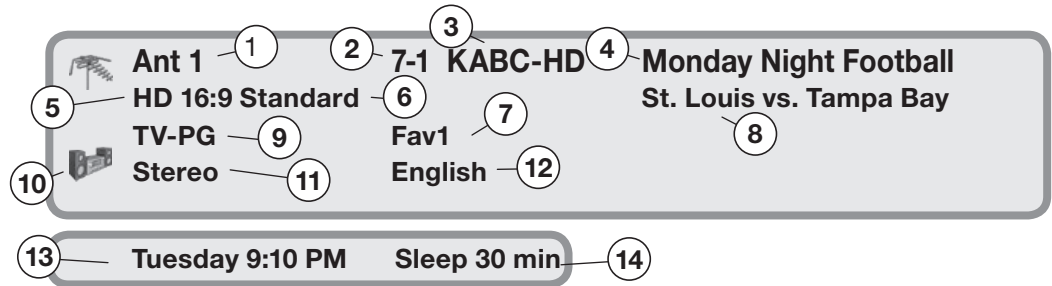

## Status Display

Press the **INFO** key to see the on-screen status display. The most common displays are shown here. You will rarely, if ever, see all status indicators at the same time.



On-screen status display sample information




| Analog Sources  | Digital Sources   |
|---|---|
| 1. Source antenna or input  | Source antenna or input   |
| 2. Analog channel being received (antenna sources only)   | Digital major and sub-channel numbers (antenna sources only)  |
| 3. Analog channel name (if named in the <b>Setup &gt; Edit</b> menu); antenna sources only.   | Digital Channel Name (if broadcast or if named in the <b>Setup</b> menu > <b>Edit</b> options; antenna sources only)  |
| 4. (Does not apply)   | Program name (if broadcast)   |
| 5. Signal Type Being Received. Possible:<br>On antenna sources or <b>VIDEO</b> composite or <b>S-VIDEO</b> jacks: 480i<br>On component jacks: 480i, 480p, 720p, 1080i   | Signal Type Being Received. Possible:<br>On antenna sources: SD 4:3, SD 16:9, HD<br>On HDMI: 480i, 480p, 720p, 1080i, 1080p, all supported PC resolutions   |
| 6. Screen Format in use. Possible:<br>Analog 480i /480p signals: Standard, Expand, Zoom, Stretch, Stretch Plus, Narrow<br>720p/1080i signals: Standard, Wide Expand, Zoom   | Screen Format in Use. Possible:<br>SD 4:3, 480i, or 480p: Standard, Expand, Zoom, Stretch, Stretch Plus, Narrow<br>SD 16:9 or HD 16:9, 720p, or 1080i: Standard, Wide Expand, Zoom<br>1080p: Standard, Wide Expand, Zoom                |
| 7. Current Fav bank number of channel (antenna sources only)  | Current Fav bank number of channel (antenna sources only)   |
| 8. (Does not apply)   | Program description (if broadcast); antenna sources only)   |
| 9. V-Chip rating (antenna sources or <b>VIDEO</b> composite and <b>S-VIDEO</b> jacks only)  | V-Chip rating (antenna sources only)  |
| 10. Audio Source. Possible:<br> TV speakers,  external sound system | Audio Source. Possible:<br> TV speakers,  external sound system |
| 11. Listen To indicator. Possible: Stereo, Stereo SAP, SAP (antenna sources only))  | Listen To indicator. Possible: Stereo, Surround 3.1, Surround 5.1, Surround 7.1, Dual Mono  |
| 12. (Does not apply)  | Current language (antenna sources only)   |
| 13. Day and time  | Day and time  |
| 14. Sleep Timer remaining time  | Sleep Timer remaining time  |
| 15. Mute indicator  | Mute indicator  |
| 16. (Does not apply)  | Signal strength indicator (antenna sources only)  |



## Fav (Favorite Channels)

Use the six Fav channel banks to store groups of your favorite channels from **ANT 1** and **ANT 2**. You can set up a Fav channel bank for each of your favorite program types or set up a bank for each TV user.

You may prefer to perform Fav channel setup from a menu. See the **Setup > Edit** options, page 44.

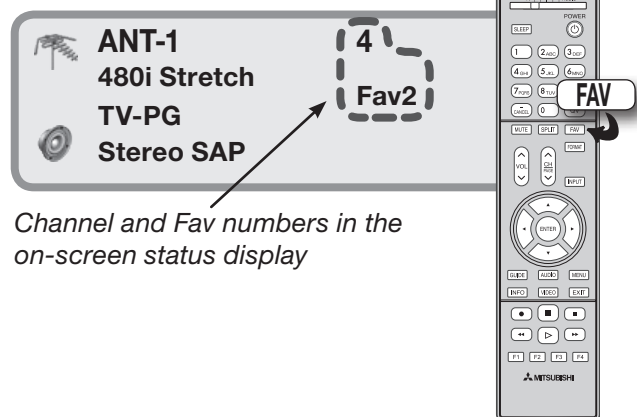

Channel and Fav numbers in the on-screen status display

### Using Fav Channels

**See the current Fav bank number** Press INFO.

**View channels in current Fav bank**

1. Press the **FAV** key. Wait for the TV to tune to a channel in the current Fav bank.
2. Press the **FAV** key repeatedly to cycle through the channels available in the current Fav bank.

**Change Fav banks**

1. Press the **FAV** key. Wait for the TV to tune to a channel in the current Fav bank.
2. When tuning is complete and while the TV status display is still visible on screen, press the number key for the desired bank (1–6).

**Note:** Wait for the channel change to finish before pressing the number key. Otherwise, the TV may ignore the Fav number.

**If no Fav banks are set up** The **FAV** key switches to the previously tuned channel; works like the **QV** key.

### Fav Setup Using Only the Remote Control

**Add Fav channels**

1. While watching TV, tune to the channel you want to add to the current Fav memory bank. The default bank is Fav1. See the instructions above if you need to change to a different Fav bank.
2. Press and hold the **FAV** key for about 2 seconds. When **Fav** and the memory bank number appear under the channel number, the channel has been successfully added.

**Remove Fav channels**

This procedure removes the channel only from the selected bank and leaves the other banks unchanged.

1. While watching TV, press the **FAV** key.
2. While the TV status display is still visible on screen, press the number key for the memory bank.
3. Press the **FAV** key repeatedly until you see the desired channel in the on-screen status display.
4. While the channel number and **Fav** indicator (with correct bank number) are still displayed on the screen, press **CANCEL**. You must press **CANCEL** while the indicator is displayed. When the **Fav** indicator disappears after pressing **CANCEL**, the channel has been successfully removed.

## TV Signals and Display Formats

This is a 16:9 widescreen TV suitable for images available from HDTV and many DVDs. You can view older-style squarish images (4:3 aspect ratio) using one of the display formats described on this page. Press the **FORMAT** key to cycle through the available display formats. The TV remembers the format you last used for each input.

### DVD Image Definitions

Image information may be stated on the DVD case. Some DVDs support both of the formats described below.

#### Anamorphic (or Enhanced for WideScreen TV)

Indicates DVDs recorded to show widescreen images properly on 16:9 TV sets using the TV's Standard format mode (recommended).

#### Non-Anamorphic (or 4:3, 1:33:1, Letter Box, or Full Screen)

Indicates DVDs recorded for viewing on squarish TV screens. They may be full screen (4:3 or 1:33:1) which crops movies to fit the narrow TV, or letter box, which adds black top and bottom bars.

### Signal Definitions

**480i:** Traditional interlaced signals from **ANT-1** and **ANT 2**, composite **VIDEO**, component **Y Pb Pr**, and **HDMI** jacks.

**480p:** Progressive-scan DVD signals on component **Y Pb Pr** and **HDMI** jacks.

**720p and 1080i:** High-definition signals received through component **Y Pb Pr** and **HDMI** jacks. These signals are always 16:9 (widescreen).

**SD 4:3:** Standard-definition squarish-screen-format signals from digital channels on **ANT 1** and **ANT 2**.

**SD 16:9:** Standard-definition widescreen-format signals from digital channels on **ANT 1** and **ANT 2**.













**HD 16:9:** High-definition 16:9 widescreen signals from digital channels on **ANT 1** and **ANT 2**.



### TV Display Format Definitions

**Standard:** This is the full-screen format used by HDTV signals. Use this format to display anamorphic DVDs with a 1.78:1 or 1.85:1 aspect ratio. Anamorphic DVDs with a 2.35:1 aspect ratio are displayed correctly but with top and bottom black bars. Narrow (4:3) images are stretched evenly from side to side. Available for all signals.

 **Expand:** Enlarges the picture to fill the screen by cropping the top and bottom; useful for reducing the letter box top and bottom bars of non-anamorphic DVD images.

**Zoom:** Enlarges the picture to fill the screen by cropping the sides, top, and bottom to eliminate black bars. 480i/480p and SD 4:3 signals: Eliminates top and bottom bars on anamorphic DVDs with a 2.35:1 aspect ratio. 720p, 1080i, SD 16:9, and HD signals: Eliminates bars added to 4:3 images.

| Original Signal     | Non-anamorphic or SD 4:3  | Anamorphic DVD  |
|---------------------|---|---|
| <b>Standard</b>     |  Distorted. Not recommended.                      |  Recommended   |
| <b>Expand</b>       |  Recommended for letterbox. See Note 1.           |  Distorted; not recommended. See Note 1.               |
| <b>Zoom</b>         |  Distorted. Not recommended. See Note 1.          |  Recommended for anamorphic 2.35:1 images. See Note 1. |
| <b>Stretch</b>      |  Recommended for standard broadcasts. See Note 1. |  Distorted; not recommended. See Note 1.               |
| <b>Stretch Plus</b> |  Recommended for standard broadcasts. See Note 1. |  Distorted; not recommended. See Note 1.               |
| <b>Narrow</b>       |  See Note 1                                      |  Distorted; not recommended. See Note 1.              |

| Original Signal  | Display Formats   |
|--|---|
| <b>SD 16:9 or HD Digital 720p, 1080i, 1080p Signal</b> |  <b>Wide Expand</b> Recommended to remove side bars.<br> <b>Zoom</b> Recommended to remove bars from the top, bottom, and sides. |

**TV Display Formats.** Press the **FORMAT** key repeatedly to see the displays available for the current program. Press the **INFO** key to see the name of the display format in use.

**Note 1:** Available for 480i, 480p, and digital SD 4:3 signals only.

**Stretch:** Stretches a narrow 4:3 image across the screen to display the entire image with less distortion than the Standard format.

**Stretch Plus:** Similar to Stretch, but minimizes distortion on the sides by expanding the picture to crop off portions of the top and bottom. You can adjust the vertical position of the picture. Press **VIDEO** repeatedly to show the **Vert Adjustment** option, then press **ENTER**. Use **▲ ▼** to move the picture.

**Narrow:** Displays narrow 4:3 images in their original shape. Adds black side bars to fill the screen.


**Wide Expand:** Enlarges the picture, cropping the image on both sides. Removes or reduces black side bars added to narrow images converted to 16:9 signals for digital broadcast.

**Note:** All high-definition channels send widescreen (16:9) signals, but not all such programming was created for this format. The broadcaster may stretch the image or add side bars to fill the widescreen area.

## Viewing Camera Files

### JPEG Photos and the USB Photo Port

1. Connect your USB card reader or USB drive to the TV's USB Photo port.

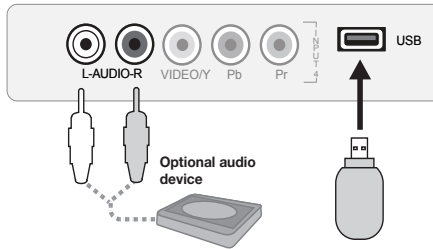


The **USB Photo** menu displays

while files are being read. Wait until you see the completion message on screen before continuing.

**Note:** Some manufacturers' devices may be incompatible with the TV. If the TV is unable to display your photos, you can:

- Transfer files to a different USB device.
- Use the camera's composite video output as described later in this chapter.

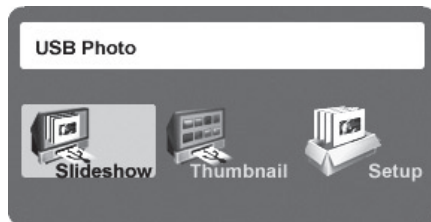

USB Photo menu

2. Refer to the table below for use of the **USB Photo** menu after files have been read.
3. **Optional:** Connect an audio device to the **AUDIO L** and **R** stereo jacks to play sound while viewing pictures

#### USB Photo Menu Options

|  |   |
|--|---|
| Start slide show.  | With the Slideshow icon highlighted, press  or <b>ENTER</b> .   |
| Activate menu options.   | Highlight an icon and press <b>ENTER</b> to: <ul style="list-style-type: none"> <li>• start the slide show</li> <li>• display picture thumbnails</li> <li>• open the <b>Media Setup</b> submenu.</li> </ul> |
| Display or close the <b>Main</b> menu.                         | Press <b>MENU</b> .   |
| Display status for the file source.                            | Press <b>INFO</b> .   |
| Select a different connected device                            | <ol style="list-style-type: none"> <li>1. Press <b>INPUT</b>.</li> <li>2. Highlight the icon for a different device.</li> <li>3. Press <b>ENTER</b>.</li> </ol>   |
| Clear status display or menu to show the <b>USB Photo</b> menu | Press <b>EXIT</b> .   |



#### JPEG Thumbnail Menu

Use these keys while viewing JPEG thumbnail images:

#### Keys for the JPEG Thumbnail Menu

|                 |  |
|-----------------|--|
|                 | Move the highlight from image to image.                                      |
| <b>FORMAT</b>   | Rotate the thumbnail clockwise in 90° increments                             |
| or <b>ENTER</b> | Play the slide show starting with the highlighted thumbnail.                 |
|                 | Highlight the last thumbnail on the current page.                            |
|                 | Highlight the first thumbnail on the current page.                           |
| <b>CH/PAGE</b>  | Display the next or previous page of thumbnails.                             |
| <b>EXIT</b>     | Close the <b>Thumbnail</b> menu and display the <b>USB Photo</b> menu.       |
| <b>MENU</b>     | Close the <b>Thumbnail</b> menu and display the <b>Main</b> menu.            |
| <b>INPUT</b>    | Close the <b>Thumbnail</b> menu and display the <b>Input Selection</b> menu. |

#### Notes on Viewing JPEG Files

- The TV ignores all commands while reading files. Wait for the completion message before continuing.
- Large files or high-capacity storage devices may take a long time to display. The screen will be blank while files are read.
- Use only one source device at a time.
- Back up the data on your USB drive before connecting it to the TV. Mitsubishi is not responsible for any file damage or data loss.






#### **IMPORTANT**

**Stop playback or change to a different TV input before disconnecting from the USB photo port.**

### Slide Show


Use these keys during the slide show:

#### Keys for JPEG Picture Slide Show

|   |   |
|---|---|
|              | Begin or resume slide show playback                       |
|              | Pause or resume playback while in automatic advance mode. |
|  or<br>ENTER | Advance to the next slide.                                |
|              | Go to the previous slide.                                 |
| FORMAT  | Rotate the slide clockwise in 90° increments.             |
|              | Stop slide show and display the <b>USB Photo</b> menu.    |
| INFO  | Display status for the viewing device and current image.  |
| INPUT   | Display the <b>Input Selection</b> menu.                  |
| MENU  | Display or remove the TV <b>Main</b> menu.                |


**Note:** Always press  (STOP) to stop slide show playback before disconnecting from the USB Photo port.

### Media Setup Menu

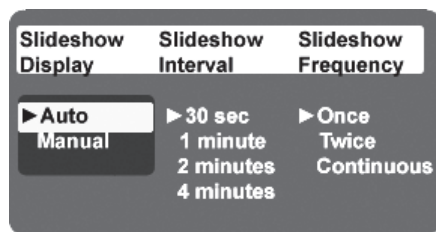

Media Setup menu

In the **Media Setup** menu you can adjust the slide show display, number of repetitions, or display interval.

- Select either **Auto** or **Manual** advance. During manual operation, press  or ENTER to advance to the next slide.
- For automatic advance, select the time interval for display of each slide. The interval you select here is the minimum time between slides; actual time may be longer for larger files.
- For automatic advance, select the number of times (frequency) to play the complete slide show: **Once**, **Twice**, or **Continuous**.
- Press EXIT to close the **Media Setup** menu and return to the **USB Photo** menu.

#### IMPORTANT

The TV can read JPEG files as created by the camera. If you edit a picture file on a computer and resave the image, the TV may be unable to read the resaved file.

### USB Photo Menu Compatible Picture Files

- Still images recorded on digital cameras using the Exchangeable Image File Format, version 2.1 (EXIF 2.1) standard for digital still cameras and Design Rules for Camera File Systems version 1.0 (DCF 1.0)
- Some images opened and resaved on a computer may not play back or may not display in the thumbnail list. This happens if the files were resaved in an incompatible format.
- Full path file names can be no longer than 50 characters and must end in a .jpg extension. Only the first 20 of the 50 characters will display.
- Images on storage devices with a capacity of over 256 MB can take a longer initial time to display.


### Photos and Moving Video as Composite Video

Connect the camera to the TV using a composite video cable if:

- You are unable to see images using the USB photo port.
- You wish to view moving video from the camera.

The TV's **USB Photo** menu will be unavailable and you must control the slide show through the camera. Display resolution is standard-definition (480i).

1. Refer to the owner's manual supplied with the camera for instructions needed for this setup.
2. Set the camera's output signal type to **NTSC** and put the camera into playback mode.
3. With the camera still turned on, connect your digital camera's composite video cable (usually yellow) to the **VIDEO/Y** jack on the front of the TV. To hear audio, connect the camera's audio output cable to the **AUDIO L** jack.
4. When the **Auto Input Sensing** screen displays, press EXIT or assign the name **Camcorder**.
5. Press INPUT to display the **Input Selection** menu.
6. Highlight the icon for the camera input and press ENTER.
7. If viewing photos, advance through the images manually or set the camera to advance automatically.

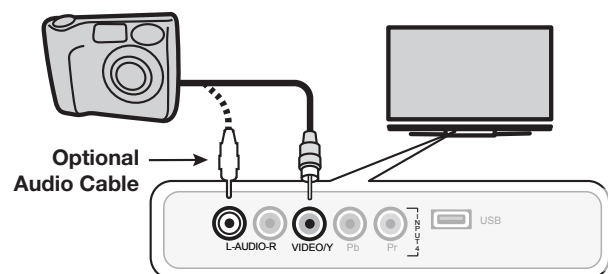

Camera connection using a composite video cable



## 3D Video

This section provides Instructions for viewing 3D video using the TV's **3D** feature. The **3D** options are found in the **Setup > 3D** menu described on page 47 .

### Initial Set-Up

1. Check if your HDMI 3D video source device outputs a 1080p 60 Hz signal. This information will be needed when you assign an input name in the **Auto Input Sensing** screen.
2. If your 3D glasses came with an emitter box, connect the emitter box to the **3D GLASSES EMITTER** jack on the back of the TV. See page 9 for the location of the jack.

3. Power on the TV and the source device.
4. Connect the source device to the TV's HDMI input.
5. When the **Auto Input Sensing** screen displays, name the input according to the table below.

The signal type and choice of name are important because the TV will process the video signal differently depending on the name you assign. If your source device is a high-definition disc system, such as Blu-Ray or HD DVD, or is a game console, the signal must be 1080p at 60 Hz.

6. Press EXIT to close the **Auto Input Sensing** screen.

| Source of 3D Video        | Type of 3D Video Signal  | Name to Assign to Video Input |
|---------------------------|--|-------------------------------|
| Computer                  | Recommended: 1080p 60 Hz (1920 X 1080). The image will fill the TV screen.<br>Other 60-Hz computer video signals compatible with the TV will display with black bars. See "Computer Display Formats" on page 18. | <b>PC</b>                     |
| Any other 3D video source | To see 3D video, signal must be 1080p 60 Hz  | Any name other than <b>PC</b> |


### To Watch 3D Video

1. Press INPUT to display the **Input Selection** menu.
2. Highlight the icon for the 3D video input and press ENTER.
3. Press MENU and select the **Setup > 3D Mode** menu.
4. Set **3D Mode** to **On**. The **On** setting will be memorized for the current input when you exit this menu.
5. Press EXIT to close the menu.

### To Watch Regular (non-3D) Video

The **3D Mode** setting is memorized for each input. When you want to watch non-3D video on the input selected above:

1. Select the input in the **Input Selection** menu.
2. Open the **Setup > 3D** menu and set **3D Mode** to **Off**.

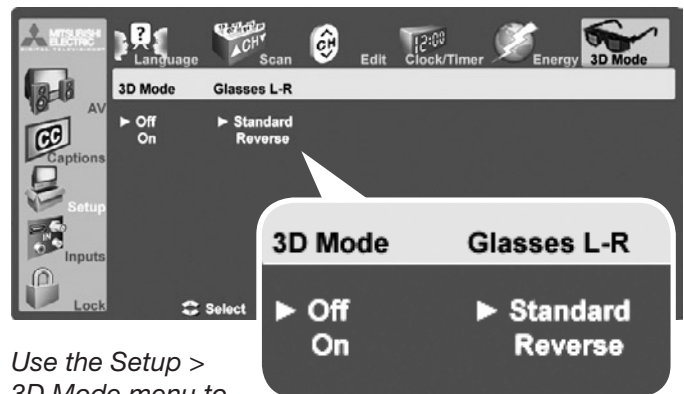

Use the **Setup > 3D Mode** menu to enable 3D video viewing.








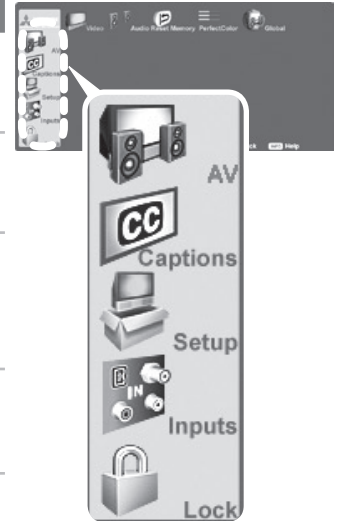
## 5

## TV Menus


**Main Menu**

Press **MENU** on the remote control to open the **Main** menu.

| Icon   | Menu Name and Description  | Page |
|--|--|------|
|   | <b>AV Menu</b><br>Customize picture and sound settings.  | 37   |
|   | <b>Captions Menu</b><br>Turn closed captions on and off; customize caption displays.   | 42   |
|   | <b>Setup Menu</b><br>Perform basic TV setup. Set language, scan (memorize) channels, set the TV clock, edit channel options, lock TV use by channel, set Energy Mode, Lamp Mode, auto-on TV Timer. | 43   |
|   | <b>Inputs Menu</b><br>Assign names to TV inputs, change icon order in the <b>Input Selection</b> menu, perform NetCommand IR "learning."   | 48   |
|  | <b>Lock Menu</b><br>Restrict TV use by program ratings and by time of day. Disable the control-panel buttons. Set a pass code.   | 49   |



Main menu

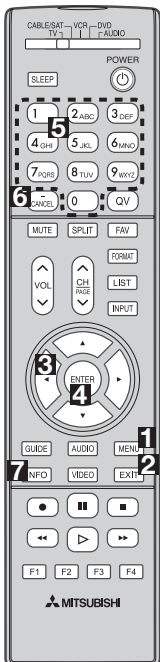
**Remote Control Keys for the TV Menu System**

| Key  | Function  |
|--|---|
| <b>1</b> MENU  | Display or close the <b>Main</b> menu or move back one menu level.  |
| <b>2</b> EXIT  | Close all menus and return to TV viewing.   |
| <b>3</b> (Adjust Left/Right Keys)<br>(Adjust Up/Down Keys) | <ul style="list-style-type: none"> <li>• Move through screens to select menu options.</li> <li>• Change settings.</li> <li>• Scroll through lists.</li> </ul> |
| <b>4</b> ENTER   | Start an automatic function or check/uncheck a check box. When setting time, move from hour digits to minutes digits and from month to day to year digits.    |
| <b>5</b> Numbers<br>Letters                                | <ul style="list-style-type: none"> <li>• Enter channel numbers.</li> <li>• Enter custom names in some text boxes.</li> </ul>                                  |
| <b>6</b> CANCEL  | <ul style="list-style-type: none"> <li>• Clear a setting or stop an automatic function.</li> <li>• Add a separator in a digital channel number.</li> </ul>    |
| <b>7</b> INFO  | Get context-sensitive help.   |





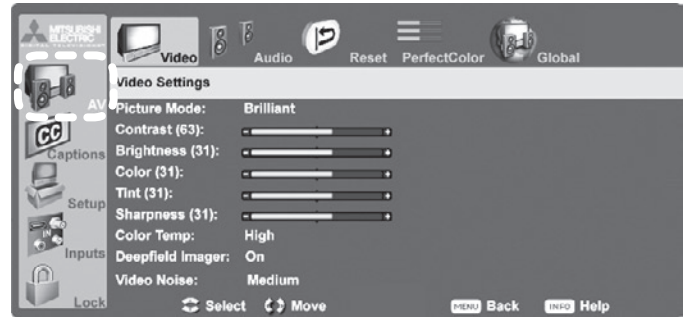

## AV Menu

An on-screen slider displays when making some audio and video adjustments. Numeric values represented on the slider range from 0 (minimum) to 63 (maximum), with 31 as the mid-point.




The AV menu contains sub-menus for audio and video adjustments

### AV Menu Options

|   |  |   |
|---|--|---|
|  <b>Video</b>          | See the description of video adjustments on page 39.   |   |
|  <b>Audio</b>          | See the description of audio adjustments on page 41.   |   |
|  <b>Reset</b>         | <ul style="list-style-type: none"> <li>To reset audio and video adjustments for the current input, highlight the Reset icon and press <b>ENTER</b>.</li> <li><b>Reset</b> has no effect on settings for <b>Balance</b>, <b>Listen To</b>, <b>Language</b>, and <b>Film Mode</b>.</li> </ul>  |   |
|  <b>PerfectColor</b> | <b>PerfectColor Sliders</b>  | Adjust the saturation (intensity) of six colors for the current image source. |
|   | <b>PerfectTint Sliders<br/>(835 series TVs)</b>  | Adjust six hues for the current image source                                  |
|   | <p>To use PerfectColor and PerfectTint:<br/>Highlight the PerfectColor™ icon and press <b>ENTER</b> to display the <b>PerfectColor</b> menu. Settings are retained in memory independently for each TV input.</p> <ul style="list-style-type: none"> <li>To switch between PerfectColor™ and PerfectTint™ adjustments, highlight <b>Adjust Mode</b> and press <b>◀ ▶</b>.</li> <li>Press <b>▲ ▼</b> to move from one color bar to the next.</li> <li>Press <b>◀ ▶</b> to change settings.</li> <li>Press <b>CANCEL</b> to restore default settings.</li> <li>Press <b>MENU</b> to return to the <b>Main</b> menu.</li> </ul> |   |



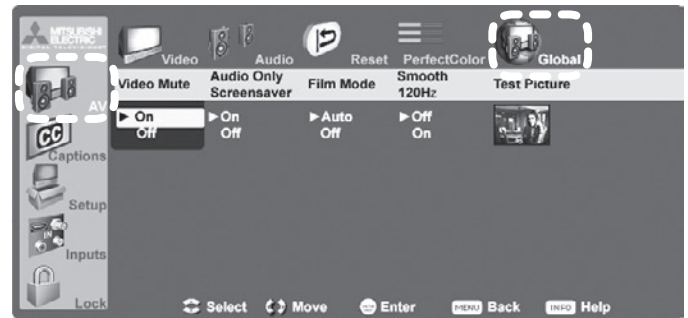

## AV Menu, continued



AV > Global menu

### AV Menu Options


|   |  |   |   |
|---|--|---|---|
|  <b>Global</b> | <b>Video Mute</b>  | <b>On, Off</b>                                | <ul style="list-style-type: none"> <li><b>On:</b> Displays a solid blue background when there is no video signal from the current input. Use the <b>On</b> setting to let the colored screen remind you that the TV is powered on at times when there is no picture. The TV will power off after five minutes if it detects no video signal.</li> <li><b>Off.</b> The screen appears black if there is no video signal from the current non-antenna input.</li> </ul> |
|   | <b>Audio Only Screensaver</b>  | <b>On, Off</b>                                | <ul style="list-style-type: none"> <li><b>On:</b> Select <b>On</b> to display a random screensaver pattern while playing an audio-only device. The device must be named <b>CD/Audio</b> or <b>MP3 Player</b> to use this feature.</li> <li><b>Off:</b> No screensaver pattern displays during play of an audio-only device.</li> </ul> <p><b>Note:</b> When playing an audio-only device, the TV will power off after 12 hours of inactivity.</p>                     |
|   | <b>Film Mode</b><br>(480i and 1080i signals only)  | <b>Auto, Off</b>                              | In <b>Auto</b> , the TV automatically detects and applies film-decoding correction to movies filmed at 24 frames per second. Try the <b>Off</b> setting if images show many jagged edges.   |
|   | <b>Smooth 120 Hz</b><br>(835 series TVs)   | <b>Off, On</b>                                | When <b>On</b> , Smooth 120Hz™ reduces motion blur in action scenes but may show pixel structure during slower motion or in still images. When <b>Off</b> , standard picture smoothing processing is employed.  |
|   | <b>Blue Glow</b><br>(835 series TVs)   | <b>On if TV off,<br/>On if TV on,<br/>Off</b> | Select one of the <b>On</b> settings to see decorative blue lighting on the TV.   |
|   | <br><b>Test Picture</b> |   | Displays a test picture. For use during troubleshooting under the direction of TV servicing personnel.  |

## Video Menu

Mitsubishi recommends you assign names to TV inputs before making video adjustments (use the **Inputs > Name** menu). Otherwise, adjustments will be reset to the defaults if you name inputs afterwards.

To make video adjustments:

- **From the Video menu:**
  1. Press ▲ ▼ to highlight an option.
  2. Press ◀ ▶ to display the submenu and adjust.
  3. Press MENU to return to the **AV** menu.
- **While watching TV:** Press the VIDEO key repeatedly to display the video option you want to change. Press ◀ ▶ to change settings.

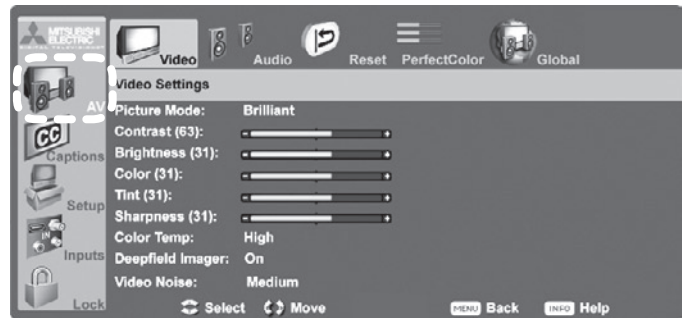

AV menu, Video options

**Note:** See “Computer Video Adjustments” on page 18 for additional adjustments for computer images.

### Video Menu Options

|                     |   |  |   |
|---------------------|---|--|---|
| <b>Picture Mode</b> | <b>Brilliant</b>  | For use under bright light; unavailable when the current input is named <b>Game</b> or <b>PC</b> .   | Set the Picture Mode first before changing other video settings, as some settings are stored independently for each Picture Mode. Use Picture Modes to get the best image under different viewing conditions. |
|                     | <b>Game</b>   | Optimizes picture and video processing for gaming consoles. Available only when the name of the input is <b>Game</b> or <b>PC</b> .  |   |
|                     | <b>Bright</b>   | For most daytime viewing and <b>x.v.Color</b> sources  |   |
|                     | <b>Natural</b>  | For most nighttime viewing and <b>x.v.Color</b> sources  |   |
| <b>Contrast</b>     | <ul style="list-style-type: none"> <li>• Adjusts the white-to-black level</li> <li>• Settings are stored independently for each Picture Mode.</li> <li>• Low contrast shows a variety of shades in darker images</li> <li>• In most home lighting situations, medium contrast looks best.</li> <li>• High contrast shows darker images more uniformly black and makes colors appear more vibrant. High contrast is good for brightly lit environments.</li> </ul> |  |   |
| <b>Brightness</b>   | <ul style="list-style-type: none"> <li>• Adjusts overall picture brightness</li> <li>• Settings are stored independently for each Picture Mode.</li> </ul>  |  |   |
| <b>Color</b>        | Adjusts overall color intensity from no color to fully saturated.   |  |   |
| <b>Tint</b>         | Adjusts the red-to-green ratio.   |  |   |
| <b>Sharpness</b>    | Adjusts picture detail and clarity.   |  |   |
| <b>Color Temp</b>   | Adjusts the white balance. Settings are stored independently for each Picture Mode.   |  |   |
|                     | <b>High</b>   | Gives white images a cool cast. May provide the most realistic picture under bright lighting.  |   |
|                     | <b>Low</b>  | Gives white images a warm cast. Natural/Color Temp at the low setting displays video at approximately the 6500K industry standard for NTSC pictures.   |   |
| <b>Video Noise</b>  | <b>High, Medium, Low, Off</b>   | Reduces minor noise (graininess) in the picture. Use <b>Low</b> with good-quality signals. Use <b>High</b> with poor-quality signals. Use <b>Off</b> to leave the picture unaltered. Saved by input. |   |



## Video Menu, continued

|   |   |   |
|---|---|---|
| <b>SharpEdge</b><br>(835 Series TVs)                | <b>On, Off</b>  | SharpEdge™ adds special edge enhancements to make the image appear sharper. Saved by input.   |
| <b>Deep Field Imager</b><br>(736 or 835 Series TVs) | <b>On</b>   | DeepField™ Imager dynamically enhances black levels in portions of the screen to provide strong contrast with detail over mixed screen content. |
|   | <b>Off</b>  | Contrast is adjusted uniformly across the entire screen.  |
|   | <b>Demo</b>   | For comparison, displays a split picture to show <b>On</b> (right side) and <b>Off</b> (left side).   |
| <b>Vert Adjustment</b><br>(Stretch Plus mode only)  | <ul style="list-style-type: none"> <li>• Press the <b>ENTER</b> key to enter adjustment mode (in Stretch Plus only).</li> <li>• Press <b>▲ ▼</b> to move the picture up or down.</li> </ul> |   |
| <b>Horiz position</b><br>(Computer image only)      |   | Press <b>◀ ▶</b> to display the adjustment slider. Press <b>◀</b> or <b>▶</b> to shift the image horizontally.                                  |
| <b>Vert position</b><br>(Computer image only)       |   | Press <b>◀ ▶</b> to display the adjustment slider. Press <b>◀</b> or <b>▶</b> to shift the image vertically.                                    |



## Audio Menu

To make audio adjustments:

- **From the Audio menu:**
  1. Press ▲▼ to highlight an option
  2. Press ◀▶ to display the submenu and adjust.
  3. Press MENU to return to the **AV** menu.
- **While watching TV:** Press the **AUDIO** key repeatedly to display the audio option you want to change. Press ◀▶ to change settings.



*AV menu, Audio options*

### Audio Menu Options

|  |   |  |
|--|---|--|
| <b>Speakers</b>  | The <b>Speakers</b> option displays only if an A/V receiver connection has been detected.                                 |  |
|  | <b>TV</b>   | Turns on the internal TV speakers.   |
|  | <b>AV Receiver</b>  | Turns off the TV speakers so you hear sound only from a connected A/V receiver.<br><b>Note:</b> When you disconnect an analog A/V receiver, be sure to manually change the <b>Speakers</b> setting to <b>TV</b> to hear sound from the TV speakers.  |
| <b>Bass</b>  | Controls volume of low-pitched sound from the TV speakers.  |  |
| <b>Treble</b>  | Controls volume of high-pitched sound from the TV speakers.   |  |
| <b>Balance</b>   | Controls audio balance between the right and left TV speakers   |  |
| <b>Sound Mode</b>  | <b>Normal</b>   | No special audio effects from the TV speakers (default)  |
|  | <b>Expand</b>   | Modifies audio from the TV speakers. <ul style="list-style-type: none"> <li>• For monaural (non-stereo) programs, creates a simulated stereo effect.</li> <li>• For stereo programs, creates a simulated surround sound effect.</li> </ul>   |
| <b>Listen To</b><br>Available for analog channels from <b>ANT1/ANT2</b> only | <b>Stereo</b>   | Default setting. The TV plays stereo broadcasts in stereo and mono broadcasts in mono. The word <b>Stereo</b> is displayed when you tune to a channel broadcasting in stereo.  |
|  | <b>Mono</b>   | Reduces background noise. Use when receiving a weak stereo audio signal. All audio is played as mono with this setting.  |
|  | <b>SAP</b><br>(Second Audio Program)  | Selects an additional monaural sound track not audible during normal TV viewing. The SAP signal might be related to the program (such as a sound track in a foreign language), or it might be unrelated (such as a weather report). If an SAP signal is broadcast, the letters <b>SAP</b> are displayed when you tune to the channel |
| <b>Language</b>  | <b>English</b><br><b>French</b><br><b>German</b><br><b>Italian</b><br><b>Portuguese</b><br><b>Spanish</b><br><b>Other</b> | Selects the current language for a digital program from <b>ANT1</b> or <b>ANT2</b> . Each digital program may include zero to seven language choices.<br><br>Available for digital channels from <b>ANT1/ANT2</b> only   |
|  | <b>Level Sound</b>  | <b>On, Off</b>   |



## Captions Menu

### Captions on Analog Channels


The TV can decode captions from **ANT 1/ANT 2** and the **VIDEO** composite and **S-VIDEO** jacks. Broadcasters can send either standard closed captions or text service. Standard closed captions follow the dialogue of the program and display in a small section of the screen. Text-service closed captions often contain information such as weather or news and cover a large portion of the screen.

#### IMPORTANT

- Analog text-service options display a large black or gray box on the screen when no signal is being broadcast.
- The content of captions is determined by the broadcaster. If captions show strange characters, misspellings, or odd grammar, it is not a malfunction of the TV.
- Closed caption signals are not available through HDMI or component jacks. See the menus for these devices for closed-caption decoding.

### Captions on Digital Channels

The TV can decode captions from **ANT 1/ANT 2** only. Broadcasters can send up to six different captioning selections or can send analog captions that match those sent by the analog station. A TV station may broadcast only one or two types of captions or none at all.

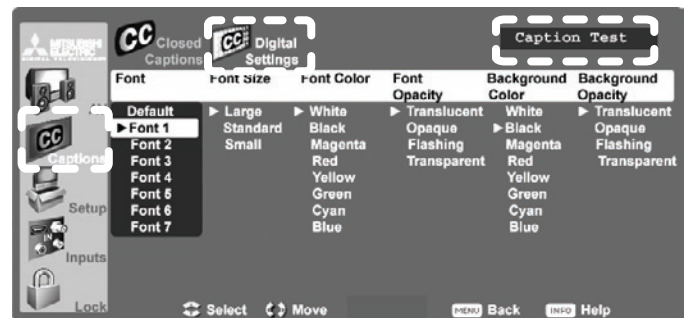

Digital Settings menu. Check the caption test area (upper right) to see how custom settings look.

#### Captions Menu Options


|                      |  |   |  |
|----------------------|--|---|--|
| <br>Closed Captions  | Analog Captions                            | On if Mute<br>CC 1–CC 4<br>Text 1–Text 4<br>Off | <ul style="list-style-type: none"> <li>• <b>On if Mute:</b> Displays analog closed captions signal CC 1 when audio from the TV speakers is muted. When watching TV, press MUTE to turn captions on/off.</li> <li>• <b>CC 1–CC 4:</b> Standard closed-caption signals</li> <li>• <b>Text 1–Text 4:</b> Text-service signals</li> </ul>                      |
|                      | Analog Background                          | Gray, Black                                     | Selects either a gray or black text background to make analog closed captions easier to read.  |
|                      | Digital Captions                           | On if Mute<br>Caption 1–<br>Caption 6<br>Off    | <ul style="list-style-type: none"> <li>• <b>On if Mute:</b> Displays digital closed caption signal Caption 1 when audio from the TV speakers is muted. When watching TV, press MUTE to turn closed captions on/off.</li> <li>• <b>Caption 1–Caption 6:</b> Caption signals sent by the broadcaster</li> </ul>  |
| <br>Digital Settings | Font                                       | Default<br>Font 1–Font 7                        | <b>Default</b> changes settings to those selected by the captions provider, or, if none, to the TV's own captions defaults. Use Fonts 1 through 7 to give captions a custom appearance.  |
|                      | Font Size                                  | Large<br>Standard<br>Small                      | <b>Large</b> is the recommended size.  |
|                      | Font Color                                 | White, Black, Magenta, etc.                     | Guidelines for setting digital captions: <ul style="list-style-type: none"> <li>• <b>A white font on a black translucent background makes an easy-to-read combination.</b></li> <li>• Use contrasting colors for captions and background.</li> <li>• Check readability of captions using the sample text in the upper right corner of the menu.</li> </ul> |
|                      | Font Opacity                               | Translucent, Opaque, Flashing, Transparent      |  |
|                      | Background Color                           | White, Black, Magenta, etc.                     |  |
| Background Opacity   | Translucent, Opaque, Flashing, Transparent |   |  |



## Setup Menu



Use the **Setup** menu to:

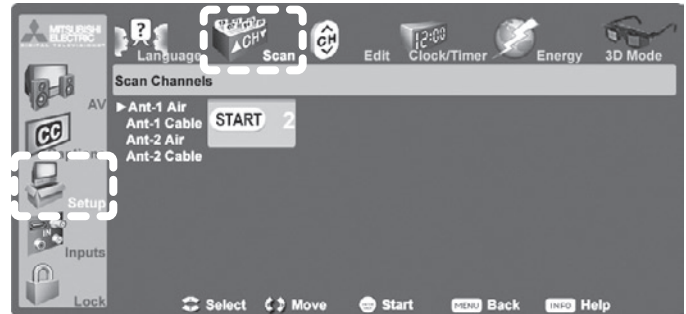- Select English or Spanish for menus and on-screen text.
- Scan the channels available for the antenna or cable service connected to the **ANT 1** or **ANT 2** jacks.
- Edit channel options, including channel locking.
- Set the TV's internal clock.
- Set the TV Timer to turn on the TV automatically at a designated time.
- Set the energy mode for power consumption when the TV is powered off.
- Set the TV Lamp Mode.
- Turn 3D mode on and off.



Setup menu, Scan option

### Setup Menu Options

|  |  |  |
|--|--|--|
| <br><b>Language</b> | <b>English</b><br><b>Spanish</b>   | Display on-screen menus in either English or Spanish.<br><br><b>Note:</b> To listen to audio in other languages (when available), see the section on the <b>AV</b> menu, <b>Audio</b> submenu, and refer to either Listen To > SAP (analog signal) or Language (digital signal).   |
| <br><b>Scan</b>   | <b>Ant-1 Air</b><br><b>Ant-1 Cable</b><br><b>Ant-2 Air</b><br><b>Ant-2 Cable</b> | <b>Scan</b> memorizes broadcast channels to make them easier to find. To start channel memorization: <ol style="list-style-type: none"> <li>1. Highlight one of the input selections based on your connection to <b>ANT 1</b> or <b>ANT 2</b>:               <ul style="list-style-type: none"> <li>• <b>Air</b> when connected to an indoor or outdoor antenna.</li> <li>• <b>Cable</b> when connected to direct cable (no cable box)</li> </ul> </li> <li>2. Press <b>▶</b> to highlight <b>START</b>.</li> <li>3. Press <b>ENTER</b> to start channel memorization for the selected input.</li> </ol> |

#### Notes on Scan and channel memorization:

- Channel memorization may take up to 15 minutes to complete.
- To stop channel memorization before completion, press **CANCEL**.
- When watching TV, press **CH ▲ ▼** to move through memorized channels.
- To add a digital channel that does not appear in the **Edit** menu without repeating channel memorization:
  1. Look up the physical channel number for the new digital channel. The website [www.antennaweb.org](http://www.antennaweb.org) can help you find the physical channel number.
  2. Tune to any channel on the **ANT 1** or **ANT 2** input your antenna is connected to.
  3. Use the number keys and **CANCEL** key to enter the physical channel number followed by “-1” and **ENTER**. For example, for physical channel 36, press **3 6 CANCEL 1 ENTER**.

The TV will search for a digital channel on the channel 36 frequency. When it finds the channel, it will:

  - a. Add the channel to memory.
  - b. Change the channel number to the virtual channel number sent by the broadcaster.
  - c. Add to memory any associated sub-channels.
- Rememorize channels if you move the TV to a different geographic area with a different channel line-up.



## Setup Menu, continued

### Edit

**Virtual Channel Number** (digital channels only). A channel number sent by a local broadcaster. Usually the virtual number is associated with the corresponding analog channel number. For example, a broadcaster may associate digital channel 2-1 with their analog channel 2.

**Physical Digital Channel Number.** The channel number officially assigned to the actual broadcast frequency; shown on screen in parentheses.



Setup menu, Edit channel options

### Setup Menu Options



#### Edit

Use the **Edit** menu to edit channel options when **ANT 1** or **ANT 2** is the current source. To highlight a channel number to edit:

- Press **CH**  $\wedge/\vee$  to jump to the next page of channel numbers. Press and hold **CH**  $\wedge/\vee$  to speed through pages.
- Press  $\blacktriangle/\blacktriangledown$  to move through all channel numbers, one at a time. Press and hold  $\blacktriangle/\blacktriangledown$  to speed through channel numbers.

The TV tunes to the highlighted channel on release of **CH**  $\wedge/\vee$  or  $\blacktriangle/\blacktriangledown$ .

|                  |   |
|------------------|---|
| <b>Channel</b>   | Channels marked with a check are in memory. To add or delete a channel from memory, highlight the channel number and press <b>ENTER</b> . To add a single digital channel not in the list, see the notes under <b>Scan</b> on the previous page.<br><br>Digital channels are listed by virtual channel number with the physical channel number shown in parentheses.  |
| <b>Name</b>      | Assign a custom name up to six characters long to memorized channels. You can name analog channels and digital channels if broadcast without pre-assigned names. <ol style="list-style-type: none"> <li>1. With the cursor in the <b>Name</b> field, press a number key repeatedly to cycle through the characters associated with the key, including !, &amp;, blank (1 key) and /, *, - (0 key).</li> <li>2. Press <b>ENTER</b> to set the letter and move to the next letter position. To delete the current character and move back one position, press <b>CANCEL</b>.</li> </ol>   |
| <b>Fav1–Fav6</b> | Use the six Fav channel banks to store groups of your favorite channels. For example, you can set up a Fav channel bank for each of your favorite program types (e.g., sports, news, children’s programs) or set up a bank for each TV user. <ul style="list-style-type: none"> <li>• Use <math>\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright</math> to move the highlight through the <b>Fav</b> area of the screen.</li> <li>• Press <b>ENTER</b> to insert a check mark to add the highlighted channel to one of the Fav banks.</li> <li>• The same channel can be added to multiple Fav banks</li> <li>• To remove a channel from a Fav bank, highlight the check mark and press <b>ENTER</b>.</li> </ul> <p><b>Note:</b> To set up Fav channel banks without using this menu, see “Fav (Favorite Channels)” on page 31.</p> |
| <b>Lock</b>      | Lock channels so that a pass code is required to view them. When you rememorize channels, all lock settings are cleared.<br><br>Highlight the <b>Lock</b> column and enter a pass code when prompted. If you previously set a pass code to open the main <b>Lock</b> menu, use the same pass code. See “Lock Menu,” page 49 for more on pass codes.<br><br>To lock or unlock a channel, highlight the lock icon for the channel and press <b>ENTER</b> to switch between the locked and unlocked versions of the icon.  |




## Setup Menu, continued

### Clock

Use either the manual or auto method to set the clock.  
Set the clock if you wish to:

- Use the TV's Timer function.
- Maintain accurate ChannelView listings.

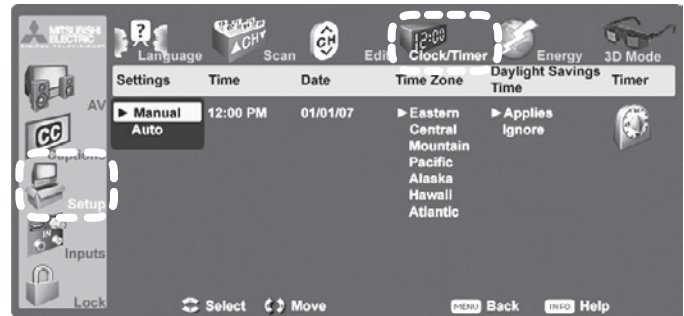

Setup menu, Clock options

### Setup Menu Options



#### Clock

#### Settings

**Manual.** To set the clock manually:

1. Select **Manual**.
2. Set the time of day.
3. Set the date.
4. Select your time zone.
5. Select either **Applies** or **Ignore** for **Daylight Savings Time**.

**Note:** If using **Manual**, each time the time change occurs, you must open this menu and set the TV's clock ahead or back.

**Auto.** To set the clock automatically:

1. Select **Auto**.
2. Select your time zone.
3. Select either **Applies** or **Ignore** for Daylight Savings Time.
4. After exiting the menus, tune the TV to an analog station on **ANT 1** or **ANT 2** carrying XDS data, typically a PBS station.

**Note:**

- With the **Auto** setting, the TV's clock adjusts automatically to daylight savings time.
- The TV's clock will be reset if you tune to a channel sending incorrect time data. To prevent unwanted clock resets, first use the **Auto** method to set the clock from a channel sending the correct time, then change the method to **Manual**.

#### Time (Manual option only)

1. With the hour highlighted, press ▲ ▼ repeatedly to change the hour and the **AM/PM** indicator. Press and hold to change the hour display quickly.
2. Press **ENTER** to set the hour.
3. With the minutes highlighted, press ▲ ▼ to change the minutes. Press and hold to change the minutes display quickly.

#### Date (Manual option only)

1. With the month highlighted, press ▲ ▼ to select. Press **ENTER** to set.
2. With the day highlighted, press ▲ ▼ to select. Press **ENTER** to set.
3. With the year highlighted, press ▲ ▼ to select the current year.

#### Time Zone

**Eastern, Central, Mountain, Pacific, etc.**

Required for both the **Manual** and **Auto** methods.

#### Daylight Savings Time

**Applies  
Ignore**

Required for both the **Manual** and **Auto** methods. Select the option for your area.




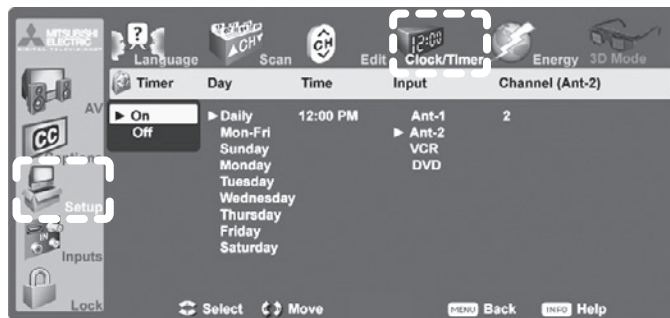


## Setup Menu, continued

### Timer


Use the Timer to set a time for the TV to turn on automatically. Use this menu to set a day, time, input, and channel for the Timer. If the TV is already on at the requested time, the TV will automatically tune to the designated channel.

- The TV clock must be set before you can use the Timer feature.
- To open the **Timer** menu, highlight the Timer icon  in the **Setup** menu and press **ENTER**.
- The **TIMER** indicator on the front of the TV flashes slowly when the TV is off to indicate the TV Timer has been set to turn on the TV automatically.
- When the Timer turns on the TV, press any key on the remote control to keep it on. Otherwise, the TV will turn off after five minutes.



Setup menu, Timer options

### Setup Menu Options

|   |                |  |
|---|----------------|--|
| <br><b>Timer</b> | <b>Timer</b>   | <b>On, Off</b>   |
|   | <b>Day</b>     | <b>Daily, Mon-Fri, (every) Sunday, (every) Monday, (every) Tuesday, etc.</b><br>Select the day or days of the week for the Timer to turn on the TV.  |
|   | <b>Time</b>    | To set the time for the TV to come on:<br><ol style="list-style-type: none"> <li>1. With the hour highlighted, press <b>▲ ▼</b> repeatedly to change the hour and the <b>AM/PM</b> indicator. Press and hold to change the hour display quickly.</li> <li>2. Press <b>ENTER</b> to highlight the minutes.</li> <li>3. Press <b>▲ ▼</b> to change the minutes. Press and hold to change the minutes display quickly.</li> </ol> |
|   | <b>Input</b>   | <b>Ant-1, Ant-2, DVD, VCR, etc.</b><br>Select the input you want displayed when the TV comes on. Choose from the defined and enabled inputs that appear in the <b>Input Selection</b> menu.  |
|   | <b>Channel</b> | If the input is an antenna ( <b>ANT 1, ANT 2</b> ), enter a channel number in any of three ways: <ul style="list-style-type: none"> <li>• Enter the number using the remote control's number keys.</li> <li>• Press <b>▲ ▼</b> repeatedly</li> <li>• Press and hold <b>▲ ▼</b> to scroll quickly through the available channel numbers.</li> </ul>   |

 


## Setup Menu, continued



Setup menu, Energy options

### Setup Menu Options



#### Energy Mode

##### Fast Power On

Use the Energy Mode option to select the level of power consumption while the TV is turned off.

The default setting is **Fast Power On**.

##### Low Power

**Low Power** uses less energy, but TV power-on takes longer and some TV features may be unavailable.

Keep Energy Mode set to **Fast Power On** if you need to:

- Have faster power on.
- Receive updates to ChannelView channel listings.
- Keep the TV Clock accurate for the TV Timer. With the **Low Power** setting, you must reset the TV Clock if the TV is left turned off for over 48 hours.

#### Lamp Mode

##### Standard

**Standard** is for most viewing conditions and may extend lamp life by using lower wattage. Use **Bright** in brightly lit rooms. You may notice increased fan noise when using the **Bright** setting.

##### Bright



#### 3D Mode

##### On, Off

Use the **On** setting for video games and movies that require 3-D glasses.

#### Glasses L-R

##### Standard, Reverse

Synchronizes the 3D glasses with the image on screen to provide the best 3D effect. **Standard** is the default; try **Reverse** if this seems incorrect.

**Note:** 3D options are available only for 1080p 60 Hz video sources connected to an HDMI input.



## Inputs Menu

### Inputs Menu Options

|  |             |   |  |
|--|-------------|---|--|
|  | <b>Name</b> | <p><b>Cable Box, Camcorder, CD/Audio, DVD (DVD, DVD2, Blu-Ray), DVR, Game (Game, PS, Xbox, Wii), MP3 Player, PC, Satellite, VCR, AVR</b></p> <p><b>On/Off (ANT 1 and ANT 2 only)</b></p> <p><b>Delete</b> (deactivated HDMI only)</p> <p><b>Control On, Control Off</b> (CEC-enabled HDMI devices; operates only when <b>Inputs &gt; NetCommand HDMI Control</b> is set to <b>On</b>)</p> | <ul style="list-style-type: none"> <li>Lets you assign or change names of inputs appearing in the <b>Input Selection</b> menu.             <ul style="list-style-type: none"> <li>Press ◀ ▶ to move between inputs.</li> <li>Press ▲ ▼ to select a name.</li> </ul> </li> <li>Lets you turn <b>Ant-1</b> and <b>Ant-2 On/Off</b> (to display/hide in <b>Input Selection</b> menu).</li> <li>Lets you delete unused HDMI inputs from the <b>Input Selection</b> menu.</li> <li>If you change the name of an input after performing NetCommand “learning,” the IR codes you “learned” are erased.</li> </ul> |
|--|-------------|---|--|

### General Notes

When you change an input name in the **Name** menu and then exit the **Name** menu:

- The name is changed
- The icon in the **Input Selection** menu is changed
- Audio and video settings are changed to the defaults for the new device type.
- 736 or 835 Series TV:** All previous NetCommand IR “learning” for the input is erased.

### Notes for HDMI devices

- Disconnecting an HDMI device:** When you disconnect an HDMI device, the icon remains in the **Input Selection** menu until you remove it. Select **Delete** in the **Inputs > Name** menu to remove an unwanted icon for an HDMI input.
- NetCommand for HDMI and CEC-Enabled Devices:** If CEC conflicts occur, turn off CEC signals in one of these ways: a) Turn off all NetCommand for HDMI signals from the TV (**Inputs > NetCommand HDMI Control** menu), b) Turn off NetCommand HDMI signals for specific devices (**Inputs > Name** menu), or c) Turn off each device’s internal CEC capability. See Appendix E for the TV’s NetCommand for HDMI Control or, to turn on/off a specific device’s response to CEC signals, see the device’s owner’s manual.
- Names of CEC-enabled devices:** CEC-enabled devices send their own predefined name to the TV. You cannot change the name of a CEC-enabled device; applies only when **Inputs > NetCommand HDMI Control** is set to **On**.

|                                |                    |   |
|--------------------------------|--------------------|---|
|                                | <b>Order</b>       | <p>Lets you put frequently used icons at the start of the <b>Input Selection</b> menu.</p> <ol style="list-style-type: none"> <li>Press ▲ ▼ ◀ ▶ to highlight the icon to move.</li> <li>Press ENTER to confirm the selection.</li> <li>Press ▲ ▼ ◀ ▶ to drag the icon to the desired position.</li> <li>Press ENTER to set the new position.</li> </ol> |
|                                | <b>Learn</b>       | <p><b>736 or 835 Series TV</b></p> <p>Sets up or changes NetCommand IR control of the current viewing device.</p> <p>See detailed instructions in chapter 6, “NetCommand IR Control.”</p>   |
|                                | <b>AV Receiver</b> | <p><b>736 or 835 Series TV</b></p> <p>Sets up or changes NetCommand IR control of an A/V receiver.</p> <p>See detailed instructions in chapter 6, “NetCommand IR Control,” starting on page 58.</p>   |
|                                | <b>On, Off</b>     | <p>Select <b>On</b> or <b>Off</b> to enable or disable the TV’s control of CEC-enabled devices. See Appendix E for details.</p>   |
| <b>NetCommand HDMI Control</b> |                    |   |



## Lock Menu

TV locks available from the **Lock** menu are:

|  |                      |  |
|--|----------------------|--|
|  | <b>Parent</b>        | <b>Lock by Ratings</b><br>Restricts access to programming based on V-Chip rating signals sent by the broadcaster.  |
|  | <b>Other</b>         |  |
|  | <b>Time</b>          | <b>Lock by Time</b><br>Restricts TV use by time of day.  |
|  | <b>Control Panel</b> | <b>Lock Control Panel</b><br>Disables the buttons on the TV's control panel. Use this option if small children in the home try to press control-panel buttons. |

**Note:** **Channel Lock** is an additional lock that blocks access to specific channels. Channel Lock is available under the **Setup** menu (**Setup** > **Edit** > **Lock**, page 44).

## Pass Codes

### Setting a Pass Code

You are prompted to enter a pass code whenever you select **Lock** on the **Main** menu. To set a pass code for the first time:


1. Press **MENU**, highlight **Lock**, then press **►**. A screen prompting you for a pass code will display.
2. Input a four-digit pass code using the number keys on the remote control.
  - Press **CANCEL** to delete a number and move back one space.
  - Press **MENU** or **EXIT** to close the menu without setting a pass code.
3. Press **ENTER** to set the pass code.

### Resetting a Pass Code

See the procedure in Appendix C.

#### Important Notes on Rating Locks

- **Parent** menu rating locks apply only to channels and signals received on **ANT 1**, **ANT 2**, and the **VIDEO** composite and **S-VIDEO** jacks.
- **Other** menu rating locks apply only to digital channels received on **ANT 1** or **ANT 2**.
- When viewing a cable box, satellite receiver, or other device connected to the component **Y Pb Pr** or **HDMI** inputs, check the device's owner's guide for use of parental locks.

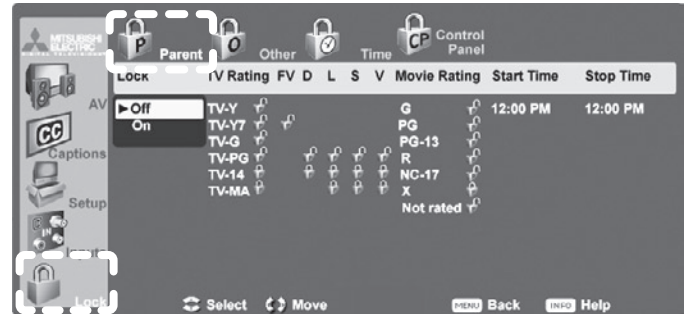

The **Lock** > **Parent** menu lets you set parental controls using V-Chip technology.

## Parent Menu

The TV comes from the factory with the rating locks turned off and with pre-set U.S. ratings TV-PG and movie rating PG. Turn on blocking for U.S. ratings to activate these rating restrictions. Use the **Lock** > **Parent** menu to change the level of blocking with U.S. ratings.

Any time you change the channel or device, it may take up to five seconds for the rating restrictions to take effect.

## Other Menu (Alternate Rating System)

This TV can recognize new rating systems that may come into effect in the future. The **Other** menu allows you to block digital programming when such systems come into effect.

The first time you tune to a channel broadcasting an alternate rating system, the TV defaults to the most restrictive setting if the **Lock** menu > **Other Lock** option is set to **On**. Use this menu to change the allowed rating if you are unable to watch a program broadcast with an alternate system.

## Bypassing TV Locks

- If you try to watch a blocked program or channel, or the TV is locked by time, a notice will appear prompting you for a pass code. To use the TV, input your four-digit pass code and press **ENTER**.
  - To reactivate the locks after using a pass code, power the TV off and then on.
  - To reactivate only the parent ratings lock, change to a different channel or device.
- If a program or channel is blocked, you can still use the TV without entering a pass code. The lock allows you to change to a channel airing an allowed program or change to another device.

**Lock Menu, continued****Parent Menu Options (U.S.-based rating system)**

| Option Name and Description   |  |   |
|---|--|---|
| <b>Lock</b>   | <b>Off, On</b>   | Disables or enables program blocking based on V-Chip signals and the U.S. rating system.            |
| <b>TV Rating</b>  | <b>TV-Y</b>  | <b>Youth.</b> For children under 7.   |
|   | <b>TV-Y7</b>   | <b>Youth 7 and older.</b>   |
|   | <b>TV-G</b>  | <b>General Audience.</b> For the entire family.   |
|   | <b>TV-PG</b>   | <b>Parental Guidance.</b> Parental Guidance recommended; may not be suitable for some children.     |
|   | <b>TV-14</b>   | <b>Adolescent 14 and older.</b> Not recommended for children under 14.                              |
|   | <b>TV-MA</b>   | <b>Mature Audience.</b> For adults only.  |
| <b>FV</b>   | <b>Fantasy Violence.</b> Applies to TV-Y7 only.  |   |
| <b>D</b>  | <b>Sexual Dialog.</b> Applies in differing degrees to TV-PG and TV-14.   |   |
| <b>L</b>  | <b>Adult Language.</b> Applies in differing degrees to TV-PG, TV-14, and TV-MA.  |   |
| <b>S</b>  | <b>Sexual Situations.</b> Applies in differing degrees to TV-PG, TV-14, and TV-MA.   |   |
| <b>V</b>  | <b>Violence</b> (graphic or realistic). Applies in differing degrees to TV-PG, TV-14, and TV-MA.   |   |
| <b>Movie Rating</b>   | <b>G</b>   | <b>General Audience.</b> Designed for the entire family to view.                                    |
|   | <b>PG</b>  | <b>Parental Guidance.</b> Parental Guidance is recommended, may not be suitable for some children.  |
|   | <b>PG-13</b>   | <b>Parental Guidance, 13 and Older.</b> Not recommended for children under the age of 13.           |
|   | <b>R</b>   | <b>Restricted.</b> Restricted in theaters to 17 years old and older unless accompanied by an adult. |
|   | <b>NC-17</b>   | <b>No Children 17 or Under.</b> Restricted in theaters to 18 years old and older.                   |
|   | <b>X</b>   | <b>Adult.</b> Designed for and restricted in theaters to adult audiences only.                      |
|   | <b>Not Rated</b>   | The program has not been assigned an MPAA rating.   |
| <b>Start Time</b>   | Allows you to set the time of day for enforcement of rating restrictions set in the <b>Parent</b> menu.  |   |
| <b>Stop Time</b>  | 1. Highlight the hour digits for <b>Start Time</b> .   |   |
|   | 2. Press ▲▼ repeatedly to change the hour and associated <b>AM/PM</b> indicator. You can also just press and hold to move quickly through the numbers.   |   |
|   | 3. Press ENTER to highlight the minutes.   |   |
|   | 4. With the minutes digits highlighted, press ▲▼ repeatedly to change the minutes. You can also just press and hold to move quickly through the numbers. |   |
|   | 5. Highlight the <b>Stop Time</b> digits and set the time as described above.  |   |
| <b>Note:</b> To make rating restrictions active 24 hours a day, make <b>Start Time</b> and <b>Stop Time</b> the same. |  |   |

**TV Content Categories**





## Lock Menu, continued



### Other Menu Options (alternate rating system)

This TV can recognize new rating systems that may come into effect in the future. The **Other** option remains grayed out until the TV receives a signal using an alternate rating system. Such alternate rating systems will apply only to digital programming received on the **ANT 1** and **ANT 2** inputs.

| Option Name and Description |   |
|-----------------------------|---|
| <b>Lock</b>                 | <b>On, Off</b> Enable or disable program blocking.  |
| <b>System Name</b>          | The rating system available for the channel   |
| <b>Group</b>                | Rating groups available in the rating system shown on the screen. Rating groups are defined by the rating system in effect.   |
| <b>Rating</b>               | Rating restrictions available in the selected rating system and group. Highlight the rating and press <b>ENTER</b> to check (block) or uncheck (allow) rated content. |



### Time

Blocks all use of the TV during the time period you specify. You must enter a pass code to use the TV when the time lock is in effect.

|                               |   |
|-------------------------------|---|
| <b>Lock by Time</b>           | <b>On, Off</b> Enable or disable Lock by Time.  |
| <b>Lock Time, Unlock Time</b> | <p>To set the lock and unlock times:</p> <ol style="list-style-type: none"> <li>1. Highlight the hour digits for the <b>Lock Time</b>.</li> <li>2. Press <b>▲▼</b> repeatedly to change the hour and associated <b>AM/PM</b> indicator. To move quickly through the numbers, just press and hold.</li> <li>3. Press <b>ENTER</b> to set the hour and highlight the minutes.</li> <li>4. With the minutes highlighted, press <b>▲▼</b> repeatedly to change the minutes. To move quickly through the numbers, just press and hold.</li> <li>5. Highlight the <b>Unlock Time</b> digits and set the time as described above.</li> </ol> <p><b>Note:</b> To make Lock by Time active 24 hours a day, make <b>Start Time</b> and <b>Stop Time</b> the same.</p> |



### Control Panel

|                |  |
|----------------|--|
| <b>On, Off</b> | <p><b>On</b> locks and <b>Off</b> unlocks the buttons on the TV's control panel. Use this option if small children may try to press TV buttons.</p> <ul style="list-style-type: none"> <li>• If the remote control is unavailable, use the TV's control panel to release the Control Panel Lock. Press and hold the <b>MENU</b> button for over eight seconds.</li> <li>• If the TV is powered off, release the lock as described above. The TV will power on.</li> <li>• To reactivate the lock, you must return to this menu and change the setting to <b>On</b>.</li> </ul> |
|----------------|--|

# 6

## NetCommand IR Control

### About NetCommand IR Control

**Note:** To learn about NetCommand for HDMI devices, available on all TV models, see Appendix E, “NetCommand HDMI Control of CEC Devices,” page 77.

- **NetCommand IR home-theater control is available on the following models:**
  - **WD-65736, WD-73736**
  - **WD-65835, WD-73835**
- NetCommand setup is optional.
- You may wish to use NetCommand IR control to supplement CEC control.
- You can perform NetCommand setup when the TV first recognizes a device during Auto Input Sensing or at any convenient time afterward.
- NetCommand operates by sending remote control signals from the TV to your other devices via the IR emitters, telling the devices to play, record, change

inputs, adjust volume, change channels, or perform other functions. All this is accomplished with the TV’s remote control and the slide switch left in the TV position.

- The IR “Learning” feature of NetCommand allows the TV to learn the IR control signals for your A/V devices.
- You can choose the level of NetCommand control for your home theater.
  - **Standard Setup.** Perform a standard setup if you want NetCommand to control only a few devices, such as the TV, a playback device (like a DVD player), and a cable box. With this setup, you can use the TV’s remote control to operate these devices.
  - **A/V Receiver Setup.** Perform A/V receiver setup if you want NetCommand to:
    - ◆ Control a surround sound A/V receiver.
    - ◆ Automatically change audio input selections on an A/V receiver when you change inputs on the TV.
    - ◆ Automatically change audio and video input selections on an A/V receiver with an HDMI output to the TV.

#### *Important Note on NetCommand*

**Be sure to connect the IR emitter cable to the TV and properly place the emitters so that NetCommand can control your devices. See the explanation on the opposite page.**

## IR Emitter Placement

An IR emitter cable is included with the TV.

The NetCommand system uses emitters connected to the **IR—NetCommand Output** jack to control other devices such as DVD players, cable boxes, satellite receivers, and VCRs.

1. Connect the plug end of the supplied IR emitter cable to the **IR—NetCommand Output** jack on the TV back panel.
2. Run the cable for each of the emitter ends under, alongside, or over each device to be controlled so that the emitter end is in front of the area where the remote control sensor is located.
3. Position the emitter end with the emitter bulb facing the remote control sensor. The bulb emits infrared light in a cone-shaped pattern. Place the bulb far enough from the sensor to allow the cone pattern to reach the sensor.

The IR sensor is usually behind the plastic window of the front display panel. It is sometimes visible with the aid of a flashlight and is normally a round or square cutout behind the plastic.


If you cannot see the sensor and the device's Owner's Guide does not specify the location, you can find it by following these steps using the device's remote control:

- a. Hold the device's remote about one-half inch from the front of the device. Starting from one end of the display window plastic, press the **POWER** button.
- b. If the device does not respond, move the remote control one inch toward the center and try again.
- c. Repeat this until the device responds.
- d. Note this location and then start over from the other end of the display window plastic, repeating until the device responds again.


The remote control sensor is somewhere between these two positions. This is usually enough accuracy for placement of the IR emitters.

In some cases, the emitter works better facing downward from the top of the device. Experiment to find what works best.

5. Secure the emitter ends in place using double-sided tape.
6. Place any unused ends behind the devices to prevent stray signals from reaching the IR sensors.

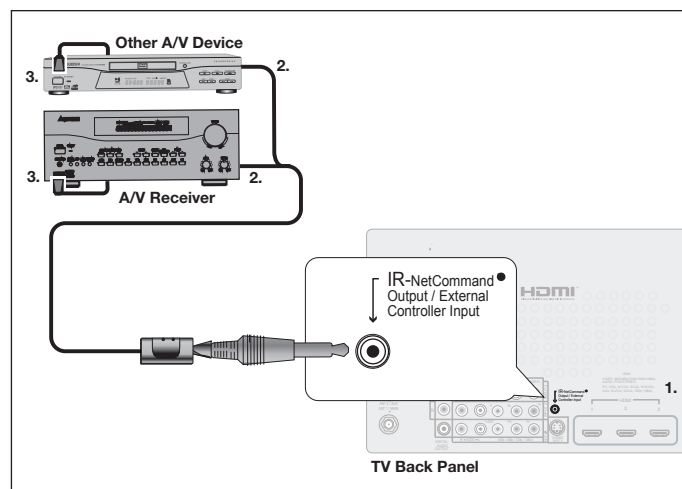

Connecting IR—NetCommand Output

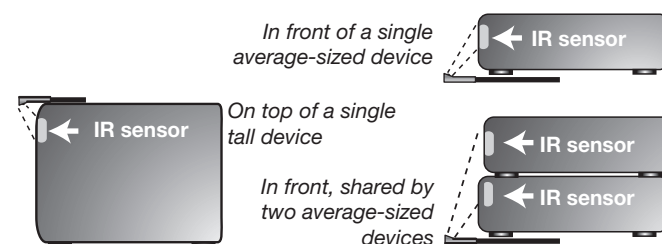

Place IR emitters so the signal can be “seen” by the IR sensor on each device.

### IMPORTANT

**Position IR emitters so that each device's sensor “sees” the signal from only one emitter. Otherwise, a device receiving signals from multiple sources (remote controls, IR emitters) may not respond at all.**

## Initial NetCommand Setup for Most Devices

To perform this procedure, you need:


- The remote controls for both the TV and the device you want to control.
- The IR emitter cable supplied with the TV.

**Note:** To set up an A/V receiver, see “Set Up NetCommand Control of an A/V Receiver” later in this chapter.


1. Connect and position the IR emitters for the devices you wish to control. See “IR Emitter Placement” on the previous page.
2. Set the **TV’s** remote control slide switch to the **TV** position and power on the TV if needed.
3. Open the NetCommand **Learn** screen in one of two ways:

- If working from the **Auto Input Sensing** screen for the device, highlight the **Learn** icon and press **ENTER** to open the **Learn** screen for the device.
- If performing NetCommand setup at any time after the device has been recognized through Auto Input Sensing:
  - a. Press **INPUT** to open the **Input Selection** menu.
  - b. Highlight the desired input icon and press **ENTER** to switch to that input.
  - c. Press **MENU**, highlight **Inputs**, and highlight **Learn** to open the **Inputs > Learn** screen for the device.

4. The first function highlighted in the **Learn** screen is always **Power On**. Aim the **TV’s** remote control at the TV and press **ENTER** to begin learning for that function.
5. When the **Power On** text starts flashing, aim the **device’s** remote control at the TV and press and hold the **POWER** key until a check mark appears next to **Power On**.
  - If the text stops flashing before the check mark appears, repeat the previous step.
  - To remove the key from NetCommand control, press the **CANCEL** key while the key name is highlighted.
6. Press the **▲▼◀▶** keys on the **TV’s** remote control to highlight other keys on the list. Repeat steps 4 and 5 for each additional function you wish to control through NetCommand.
7. If the device’s remote control has keys that are not in the list, you can associate up to any four keys with the **F1** through **F4** keys. Perform NetCommand setup for the **F** keys the same way you did for the named keys. For example, you can:
  - Assign your DVD player’s **CHAPTER SKIP FORWARD** and **CHAPTER SKIP BACK** keys to **F1** and **F2**.

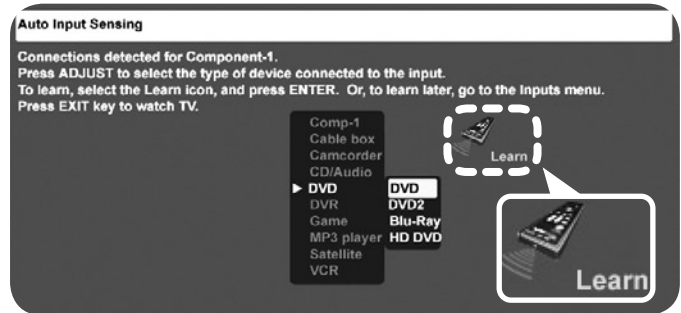

From the **Auto Input Sensing** screen, highlight the **Learn** icon and press **ENTER** to open the **NetCommand Learn** screen.

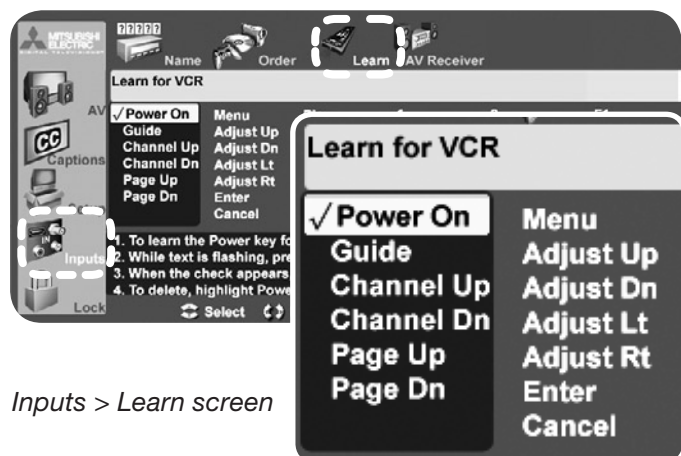

**Inputs > Learn** screen

- “Learn” your A/V receiver’s DSP options for the current device.
8. If the device has a separate **POWER OFF** key, press **▲▼◀▶** on the **TV’s** remote to highlight **Power Off**. Repeat the earlier steps to “learn” the **POWER OFF** key. **If the device has no POWER OFF key, skip this step.**
  9. Press **EXIT** to finish NetCommand “learning” for the current device.















## Adding or Removing Device Keys from NetCommand Control

1. Press **INPUT** to open the **Input Selection** menu, highlight the device’s icon and press **ENTER**.
2. Open the **Inputs** menu and highlight the **Learn** icon.
3. When the **Learn** screen displays:
  - To add keys: Continue as described earlier under “Initial NetCommand Setup for Most Devices” on this page.
  - To delete keys: Highlight the name of the key you wish to delete and press **CANCEL** on the **TV’s** remote control to clear the check mark.

## NetCommand Specialized Device Keys

Refer to this chart when “learning” device keys. “Learn” some, all, or none of the keys used for each device type. The chart has space for you to write in functions you assign to the F1–F4 keys.

See the following page for more on keys marked in the “Special Operation Method” column.

| Key Name in Learning Screen         | Function   | Name on TV Remote Control   | See Special Operation Method Table |
|-------------------------------------|--|---|------------------------------------|
| <b>Power On</b>                     | Power On or Power ON/OFF (toggle)  | POWER   | *                                  |
| <b>Guide</b>                        | On Screen Program Guide or DVD Disc Menus  | GUIDE   | *                                  |
| <b>Channel Up</b>                   | Next Channel Higher  | CH/PAGE  |                                    |
| <b>Channel Dn</b>                   | Next Channel Lower   | CH/PAGE  |                                    |
| <b>Page Up</b>                      | Page Up in Guides  | CH/PAGE  | *                                  |
| <b>Page Dn</b>                      | Page Down in Guides  | CH/PAGE  | *                                  |
| <b>Menu</b>                         | Setup menu for device  | MENU  | *                                  |
| <b>Adjust Up</b>                    | Adjust or arrow up   |          |                                    |
| <b>Adjust Dn</b>                    | Adjust or arrow down   |          |                                    |
| <b>Adjust Lt</b>                    | Adjust or arrow left   |          |                                    |
| <b>Adjust Rt</b>                    | Adjust or arrow right  |          |                                    |
| <b>Enter</b>                        | Enter or Select (menus)  | ENTER   | *                                  |
| <b>Cancel</b>                       | Cancel or erase (menus)  | -/CANCEL  | *                                  |
| <b>Play</b>                         | Start playback   |        |                                    |
| <b>Stop</b>                         | Stop playback  |        |                                    |
| <b>Forward</b>                      | Fast Forward   |        |                                    |
| <b>Rewind</b>                       | Rewind/Fast Reverse  |        |                                    |
| <b>Pause</b>                        | Pause playback   |        |                                    |
| <b>Record</b>                       | Start Recording  |        |                                    |
| <b>1, 2, 3, 4, 5, 6, 7, 8, 9, 0</b> | Digit functions  | 1, 2, 3, 4, 5, 6, 7, 8, 9, 0  |                                    |
| <b>Enter (digits)</b>               | Use after digits to directly access channels by number                           | ENTER   | *                                  |
| <b>- (separator)</b>                | Add digital channel separator between main channel number and sub-channel number | -/CANCEL  | *                                  |
| <b>Recall (QV)</b>                  | Last Channel Recall  | QV  |                                    |
| <b>Info</b>                         | On-screen status display or information display                                  | INFO  | May require two keypresses         |
| <b>F1</b>                           | <b>ASSIGN YOUR<br/>CHOICE OF<br/>SPECIALIZED<br/>FUNCTIONS</b>                   | F1  |                                    |
| <b>F2</b>                           |  | F2  |                                    |
| <b>F3</b>                           |  | F3  |                                    |
| <b>F4</b>                           |  | F4  |                                    |
| <b>Power Off</b>                    | Power Off  | POWER   |                                    |



## Operating NetCommand-Controlled Devices

### Controlling Most Device Types

As an example of NetCommand control, if you are watching your cable box and you wish to tune to the next channel higher, press **CH/PAGE**  $\wedge$ . NetCommand then sends the “learned” channel-up control signal to the cable box.

1. With an IR emitter properly positioned in front of the device, use the **Inputs > Learn** screen to perform NetCommand setup for the device.
2. When you wish to use the device, press **INPUT** to display the **Input Selection** menu.
3. Press  $\blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright$  to highlight the icon for the device.
4. Press **ENTER** to switch the TV to the device.

**Note:** if you have set up automatic input switching for the A/V receiver, the A/V receiver will automatically switch to the correct input for the device.

5. To operate the device using the **TV's** remote control, set the slide switch to the **TV** position.
6. Point the remote control at the **TV** (not the device) and press the key for the desired function.

### Special Operation Methods

| Key Name in Learning Screen         | Special Operation Description and Setup  | How to Use  |
|-------------------------------------|--|---|
| <b>Power On</b>                     | <b>Manual Power On/Off</b><br>Use for devices that have only one <b>POWER</b> key.   | <ol style="list-style-type: none"> <li>1. Press <b>INPUT</b> to display the <b>Input Selection</b> menu.</li> <li>2. Press <math>\blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright</math> to highlight the icon for the device to be powered on or off.</li> <li>3. With the <b>Input Selection</b> menu still displayed, press <b>POWER</b> to send the power signal; you may need to press <b>POWER</b> twice.</li> </ol> <p><b>Note:</b> If you press <b>POWER</b> without the <b>Input Selection</b> menu displayed, the TV will turn off.</p> <ol style="list-style-type: none"> <li>4. Press <b>ENTER</b> to switch the TV to the device.</li> </ol> |
| <b>Power On</b><br><b>Power Off</b> | <b>Automatic Power On/Off</b><br>This feature is only for devices that have separate <b>POWER ON</b> and <b>POWER OFF</b> keys on their original remote controls. If your device does not have a separate <b>POWER OFF</b> key, do not use the <b>Power Off</b> learning position; use only the Manual Power ON/OFF method described above.<br>In the NetCommand <b>Learn</b> screen: <ol style="list-style-type: none"> <li>a. “Learn” the <b>Power On</b> command in the <b>Power On</b> learning position.</li> <li>b. “Learn” the <b>Power Off</b> command in the <b>Power Off</b> learning position.</li> </ol> | <ul style="list-style-type: none"> <li>• <b>To Power On the Device</b> <ol style="list-style-type: none"> <li>1. Press <b>INPUT</b> to display the <b>Input Selection</b> menu.</li> <li>2. Press <math>\blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright</math> to highlight the icon for the device to be powered on or off.</li> <li>3. Press <b>ENTER</b> to switch the TV to the device and NetCommand will send the <b>Power On</b> command to the device.</li> </ol> </li> <li>• <b>To Power Off the Device</b><br/>           When you turn the TV off, the TV sends all learned <b>Power Off</b> commands to all devices.</li> </ul>              |
| <b>Menu</b>                         | <b>Displaying the Menu for a Device</b>  | <ol style="list-style-type: none"> <li>1. While watching a device, press <b>INPUT</b> to display the <b>Input Selection</b> menu with the device icon highlighted.</li> <li>2. Press <b>MENU</b> to send the menu signal to the device. The <b>Input Selection</b> menu will automatically clear from the screen.</li> </ol>  |

### Controlling an A/V Receiver

See page 58 to set up control of an A/V receiver.

#### Switching Audio to and from the A/V Receiver

1. Press **AUDIO**.
2. Press  $\blacktriangle$  to show the Speakers option.
3. Press  $\blacktriangleright$  to select either **AV Receiver** or **TV**.

#### Controlling A/V Receiver Power

1. Press **AUDIO**.
2. Press  $\blacktriangle \blacktriangledown$  to show the Speakers option.
3. Press  $\blacktriangleright$  to select **AV Receiver**.
4. Point the remote control at the **TV** (not the A/V receiver) and press **POWER** to power the A/V receiver on or off.

#### Controlling Other A/V Receiver Functions

With the A/V receiver powered on and selected, the TV's remote operates the volume and mute functions. Also, when you switch to a device in the **Input Selection** menu, the A/V receiver automatically switches to the correct audio input for the device.

## Operating NetCommand-Controlled Devices, continued

| Key Name in Learning Screen      | Special Operation Description and Setup   | How to Use   |
|----------------------------------|---|--|
| <b>Guide</b>                     | <p><b>Displaying the Disc Menu (DVD or high-definition disc format)</b></p> <p>“Learn” the <b>DISC MENU</b>, <b>TOP MENU</b>, or other key as named on the original remote in the <b>Guide</b> learning position.</p>   | While watching the device, press <b>GUIDE</b> to display the disc menu.  |
|                                  | <p><b>Displaying the On-Screen Program Guide (cable box or satellite receiver)</b></p> <ol style="list-style-type: none"> <li>“Learn” the <b>GUIDE</b> key on the original remote in the <b>Guide</b> learning position.</li> <li>Learn the <b>PAGE</b> <math>\wedge</math> and <b>PAGE</b> <math>\vee</math> keys of the original remote in the <b>Page Up</b> and <b>Page Dn</b> learning positions.</li> </ol>   | <ol style="list-style-type: none"> <li>While watching the device, press <b>GUIDE</b> to display the guide.</li> <li>Press <b>CH/PAGE</b> <math>\wedge/\vee</math> to send the <b>Page Up/Dn</b> commands for the guide.</li> </ol>   |
| <b>Page Up</b><br><b>Page Dn</b> | <p><b>Using Page Up/Down</b></p> <p>If the device’s original remote control has separate keys for <b>Channel Up/Dn</b> and <b>Page Up/Dn</b>, the TV remote control’s <b>CH/PAGE</b> <math>\wedge/\vee</math> key can work like the two separate keys.</p> <ol style="list-style-type: none"> <li>“Learn” <b>CHANNEL</b> <math>\wedge/\vee</math> in the <b>Channel Up/Dn</b> positions.</li> <li>“Learn” <b>PAGE</b> <math>\wedge/\vee</math> in the <b>Page Up/Dn</b> positions.</li> </ol> | <ul style="list-style-type: none"> <li><b>Inside the Guide</b><br/>Press <b>CH/PAGE</b> <math>\wedge/\vee</math> to send the <b>Page Up/Dn</b> commands.</li> <li><b>Outside the Guide</b><br/>Press <b>CH/PAGE</b> <math>\wedge/\vee</math> to send the <b>Channel Up/Dn</b> signal.</li> </ul> |
| <b>Enter</b>                     | <p><b>Enter Functions (cable boxes, satellite receivers, etc.)</b></p> <p>Some devices have two keys that have “enter” functions. One key is for menus and is often labelled <b>SELECT</b> or <b>OK</b>. A second key is for use with number keys for direct channel selection. NetCommand uses the same <b>ENTER</b> key for both operations.</p>  |  |
|                                  | <p>When <b>ENTER</b> has a menu or guide function or when the original remote control uses the same key for menus and channel selection:</p> <p>Learn the <b>ENTER</b>, <b>SELECT</b>, or <b>OK</b> key in the NetCommand <b>Enter</b> learning position.</p>   | <ol style="list-style-type: none"> <li>Press <b>MENU</b> or <b>GUIDE</b> to display the device’s menu or guide.</li> <li>Press <b>ENTER</b> within the menu and NetCommand will send the <b>Enter</b> signal for menus.</li> </ol>   |
| <b>Enter (digits)</b>            | <p>When <b>ENTER</b> is for channel changes, i.e., the original remote control has a separate <b>ENTER</b> key for this function):</p> <p>Learn the <b>ENTER</b> key for channel selection in the NetCommand <b>Enter (digits)</b> learning position. Use this learning position only if the original remote control has separate keys for <b>Enter</b> in menus and <b>Enter</b> for channel selection.</p>  | Press digit key(s) and then press <b>ENTER</b> . NetCommand will send the <b>Enter</b> signal for channel selection.   |
| <b>Cancel</b>                    | <p><b>CANCEL as the Cancel or Exit Function</b></p> <p>“Learn” the <b>Cancel</b> or <b>Exit</b> function in the NetCommand <b>Cancel</b> learning position</p>  | <ol style="list-style-type: none"> <li>Press <b>MENU</b> or <b>GUIDE</b> to display the menu or guide.</li> <li>Press <b>CANCEL</b> and NetCommand will send the <b>Cancel</b> or <b>Exit</b> signal.</li> </ol>   |
| <b>– (separator)</b>             | <p>The symbol “–” can serve as the separator between a digital channel’s main and sub-channel digits, e.g., digital channel 12-1 (main channel is 12, sub-channel is 1).</p> <p>“Learn” the channel separator function in the NetCommand <b>– (separator)</b> learning position.</p>  | Press digit key(s) and press <b>CANCEL</b> . NetCommand will send the channel-separator signal.  |

## Setting Up NetCommand Control of an A/V Receiver

Several types of A/V receiver control are described here using the **Inputs > AV Receiver** menu.

- Controlling power and volume is described on this page.
- For most equipment setups, see “A/V Receiver Control: Automatic Audio Switching” on the opposite page.
- If your A/V receiver has an HDMI output, you have the option of sending both audio and video through the A/V receiver over a single HDMI cable to the TV. See “A/V Receiver Control: Automatic Audio and Video Switching via HDMI,” page 61.

**Note:** To set up control of other device types, see “Initial NetCommand Setup for Most Devices,” page 54.

### A/V Receiver Control: Power and Volume

Perform this setup to operate the A/V receiver’s power and volume functions with the TV’s remote control.

To perform this setup you need:


- The remote controls for both the TV and the A/V receiver.
- The IR emitter cable supplied with the TV.

#### Before You Begin

- Connect your A/V receiver to the TV and any additional devices. See chapter 3, “TV Connections,” for suggestions.
- Connect the IR emitter cable to the TV and position the IR emitter where it can send signals to the A/V receiver. See “IR Emitter Placement,” page 53.
- Set the **TV’s** remote control slide switch to the TV position and power on the TV if not already on.

#### Setup to Control A/V Receiver Power and Volume

- Open the **AV Receiver** screen in one of two ways:
  - If using the **Auto Output** or **Auto Input Sensing** screen for the A/V receiver, highlight the **Learn** icon and press **ENTER** to open the **AV Receiver** screen.
  - If performing NetCommand setup at any time after the A/V receiver has been recognized through Auto Output/Auto Input Sensing: Press **MENU**, highlight **Inputs**, and highlight **AV Receiver** to open the **AV Receiver** screen.
- The first function highlighted in the **AV Receiver** screen is always **Power On**. Aim the **TV’s** remote control at the TV and press **ENTER** to begin learning for **Power On**.

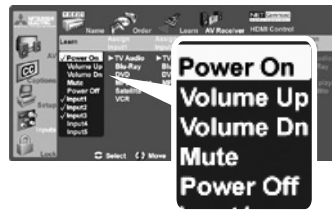

AV Receiver screen. Perform NetCommand IR “learning” for A/V receiver power and volume keys.

- When the **Power On** text starts flashing, aim the **A/V receiver’s** remote control at the TV and press and hold the **POWER** or **POWER ON** key until a check mark appears next to **Power On**.
  - If the text stops flashing before the check mark appears, repeat this step.
  - To remove the key from NetCommand control, press the **CANCEL** key while the key name is highlighted.
- Press the **▼** key on the **TV’s** remote control to highlight other keys in the list. Repeat steps 2 and 3 for each additional function you wish to control through NetCommand.
- If the A/V receiver has a separate **POWER OFF** key, press **▼** on the **TV’s** remote to highlight **Power Off**. Repeat steps 2 and 3 to “learn” the **POWER OFF** key.
- When finished “learning” the power and volume keys, either press **EXIT** to watch TV or leave the **AV Receiver** screen open to continue with NetCommand setup to control switching of A/V receiver inputs.

#### IMPORTANT

To hear audio sent from the TV to the A/V receiver, you must have:

- Physically connected the TV to the A/V receiver via the analog or digital audio output.
- Assigned, if needed, the name **AVR** if using an HDMI A/V receiver.
- Selected the A/V receiver as the audio source. Press **AUDIO**, then **▲▼** to show the **Speakers** option, then **▶** to select the **A/V Receiver**.
- “Learned” the IR codes for the A/V receiver inputs.
- Assigned the TV’s audio output to the correct input in the NetCommand A/V Receiver Learn screen.

## Setting Up NetCommand Control of an A/V Receiver, continued

### A/V Receiver Control: Automatic Audio Switching


Perform one of these setups to enable the A/V receiver to switch automatically to the correct audio input when you select a device in the TV's **Input Selection** menu.

To set up control of an A/V receiver you need:

- The remote controls for both the TV and the A/V receiver.
- The IR emitter cable supplied with the TV.
- Connecting cables

Two different setups are described here. Review the descriptions to find the setup needed for your equipment.

#### Audio Switching Setup 1: Audio from TV's Audio Output

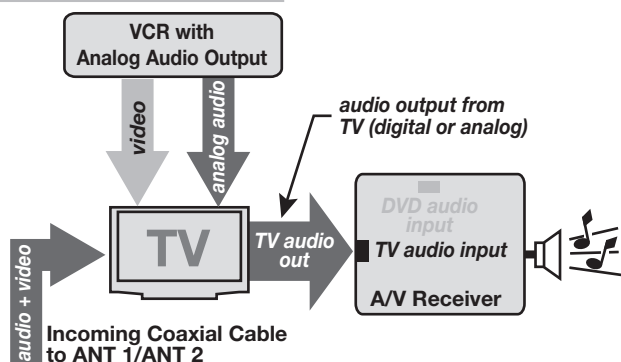

**Audio Switching Setup 1:** Audio to the A/V receiver from the TV's digital or analog audio output


- **Audio Available from TV only**  
Audio from **ANT 1** and **ANT 2** must be sent to the A/V receiver from the TV's **DIGITAL AUDIO OUTPUT** or analog **AVR AUDIO OUTPUT**.  
Use Setup 1 to make the A/V receiver switch to its designated TV audio input when viewing these sources.
- **Analog Stereo Audio**  
Audio from sources with only analog stereo output (such as a VCR) can be sent either directly to the A/V receiver or through to the TV and then on to the A/V receiver.  
Mitsubishi recommends you send audio through the TV as shown in the example. Setup 1 causes the A/V receiver to switch to its input designated for TV audio.  
If you have a digital A/V receiver, the TV makes the audio available by converting analog audio to a digital output.
- **HDMI Digital Stereo Audio**  
Digital stereo audio from an HDMI connection is available both in digital format (from the TV's **DIGITAL AUDIO OUTPUT** jack) and in analog format (from the TV's **AVR AUDIO OUTPUT** jack).

**Audio Switching Setup 1:** Automatic A/V Receiver Switching to TV Audio Input

**Audio Switching Setup 2:** Automatic A/V Receiver Switching to a device sending audio directly to the A/V receiver. **You must use setup 2 to hear digital surround sound from the source device.**

**Note:** Automatic audio and video switching over an HDMI cable is covered on page 61.

#### Audio Switching Setup 2: Audio from Source Device

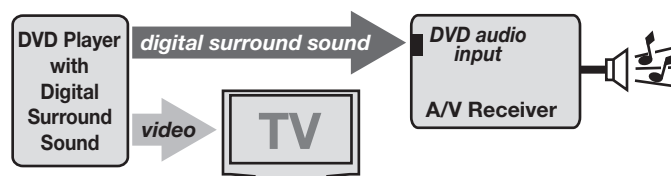

**Audio Switching Setup 2:** Audio from a device providing surround sound is sent directly to the A/V receiver.

**Note:** This setup is required to hear digital surround sound

A device can send digital surround sound such as Dolby Digital or DTS directly to the A/V receiver, bypassing the TV entirely. The device might be a DVD player, cable box, or satellite receiver, and could have HDMI output. A DVD player is used in this example.

Your setup may include additional devices with digital surround sound connected directly to the A/V receiver. These devices might be a DVD player plus a cable box or satellite receiver.




## Setting Up NetCommand Control of an A/V Receiver, continued

### Before You Begin

1. Connect your A/V devices to the TV and connect your A/V receiver to the audio outputs on the TV and the DVD player. See chapter 3, “TV Connections,” for suggestions. **Important:** To use Setup 1, you must connect the A/V receiver to the TV’s audio output; i.e., the TV’s **AVR AUDIO OUTPUT** or **DIGITAL AUDIO OUTPUT** jack.
2. Position NetCommand IR emitters as described in “IR Emitter Placement,” page 53.
3. Open the **Inputs > AV Receiver** menu.

**Note:** The terms **Input1–Input5** used in the **AV Receiver** menu are arbitrary names used by the TV to uniquely identify A/V receiver inputs.

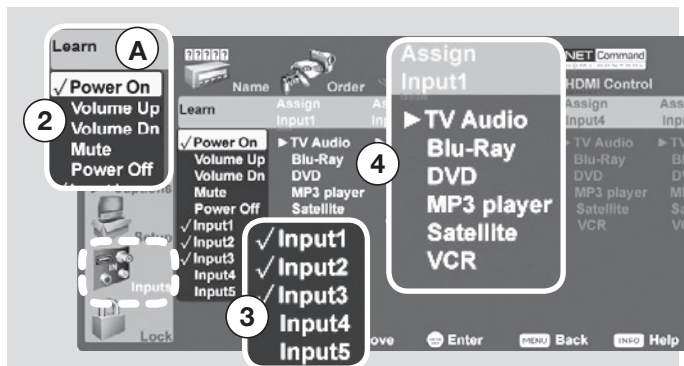

### AV Receiver menu to set up audio switching

- A** The **Learn** column lists “learnable” input keys on the A/V receiver’s remote control.
- B** A check mark next to a key name indicates it has been “learned” by NetCommand.
- C** **Input1** through **Input5** are arbitrary names the TV uses to uniquely identify A/V receiver inputs.
- D** After “learning” IR codes for A/V receiver inputs, use the **Assign Input** column to identify the device connected to the TV and the associated A/V receiver input.

For the given example:

1. Connect the TV’s audio output to the A/V receiver’s TV audio input.
2. Using this screen, “learn” the IR code for the A/V receiver’s TV audio input as **Input1** (item 3 above).
3. In the **Assign Input1** column (item 4 above), assign the name **TV Audio** (the default) to the A/V receiver IR code previously learned as **Input1**.
4. Connect the DVD player’s audio output to the A/V receiver’s DVD input.
5. Using this screen, “learn” the IR code for the A/V receiver’s DVD audio input as **Input2**.
6. In the **Assign Input2** column, assign the name **DVD** to the A/V receiver IR code previously learned as **Input2** in this screen.

### Audio Switching Setup 1: Automatic A/V Receiver Switching to the TV Audio Input

Most devices are set up to use the TV’s audio output like the VCR in this example; analog audio from the device is sent through the TV to the A/V receiver’s TV audio input.

Use this setup for:

- Sources providing only analog stereo output, such as a VCR.
- Audio from **ANT 1** and **ANT 2**

1. Under **Learn**, highlight **Input1**.

In this example, the IR code for the A/V receiver’s **TV Audio** input will be “learned” as **Input 1**.

2. Press **ENTER** on the **TV’s** remote control.
3. While the text **Input1** is flashing, press and hold the **TVINPUT** key on the **A/V receiver’s** remote control.
4. When a check appears next to **Input 1**, release the **TVINPUT** key.
  - If the text stops flashing before the check mark appears, repeat this step.
  - To erase the IR code just “learned,” press **CANCEL** while the name is highlighted.

5. Press **▶** once to highlight **TV Audio** (TV audio output) in the **Assign Input1** column. The triangular marker is always next to the assigned sound source.
6. Press **EXIT** if finished or continue with setup for another TV audio source.



Completed NetCommand setup described for controlling A/V receiver switching to the A/V receiver’s audio input from the TV’s **AUDIO OUTPUT**.

### IMPORTANT

**All audio from what you are watching on the TV is always available from both the TV’s AVR AUDIO OUTPUT and DIGITAL AUDIO OUTPUT jacks.**

**To use the digital surround sound capabilities of your A/V receiver however, you must connect your DVD player, satellite receiver, or cable box directly to the A/V receiver, as surround sound may not be available from the TV’s audio output.**



## Setting Up NetCommand Control of an A/V Receiver, continued


### Audio Switching Setup 2: Automatic A/V Receiver Switching to a Surround Sound Device

Use this setup to send digital surround sound directly from a device to an A/V receiver.

1. Under **Learn**, highlight **Input2**.

In this example, the IR code for the A/V receiver's **DVD Audio** input will be "learned" as **Input2**.

2. Press **ENTER** on the **TV's** remote control.

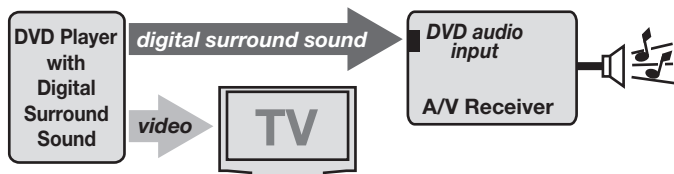

**Setup 2:** A/V receiver audio from a device providing surround sound directly to the A/V receiver



Completed NetCommand setup described for controlling A/V receiver switching to an A/V receiver input "learned" as **Input2**.

3. While the text **Input2** is flashing, press and hold the **DVD INPUT** key on the **A/V receiver's** remote control.
4. When a check appears next to **Input2**, release the **DVD INPUT** key.
  - If the text stops flashing before the check mark appears, repeat this step.
  - To erase the IR code just "learned," press **CANCEL** while the name is highlighted.
5. Press **▶** once to move the highlight to the **Assign Input2** column.
6. Use **▲ ▼** to highlight **DVD** in the list of devices recognized by the TV. The triangular marker always shows the assigned sound source.
7. Press **EXIT** if finished or continue for additional TV sources.

### A/V Receiver Control: Automatic Audio and Video Switching via HDMI

If your A/V receiver has an HDMI output, you can use this procedure to set up control of the A/V receiver's audio and video switching. The HDMI connection allows you to route video signals from multiple devices over a single cable to the TV. See the diagram on the next page. The connected devices can be analog, digital, or a mixture of the two.

#### More About Using an HDMI Connection

- Audio from devices connected directly to the TV can be heard from the TV speakers only. This is because audio signals are sent on the HDMI cable in one direction only—through the A/V receiver to the TV speakers.

To send audio to the A/V receiver from a device connected directly to the TV, use one of the optional audio connections shown in the diagram. For example, use an optional audio connection if you wish to use the A/V receiver speakers to hear audio from:


- The **ANT 1** or **ANT 2** inputs
  - A device connected to the convenience input (**INPUT 4**), such as a game or camcorder.
- In some circumstances, audio from a device connected to the A/V receiver may not be passed over the HDMI cable to the TV speakers. You must use the A/V receiver speakers to hear audio in these cases.

#### Before You Begin

To complete these steps you will need:

- The remote controls for both the TV and the A/V receiver.
  - The IR emitter cable supplied with the TV.
  - An HDMI-to-HDMI cable to connect the A/V receiver to the TV and cables necessary to connect devices to the A/V receiver.
1. Connect your audio/video devices to the A/V receiver. Note the name of the device connected to each A/V receiver input. This information will be needed later to set up NetCommand's automatic input switching.
  2. Connect the A/V receiver to the TV with an HDMI-to-HDMI cable.
  3. Connect the IR emitter cable to the TV and position the IR emitter where it can send signals to the A/V receiver. See "IR Emitter Placement," page 53.

## Setting Up NetCommand Control of an A/V Receiver, continued

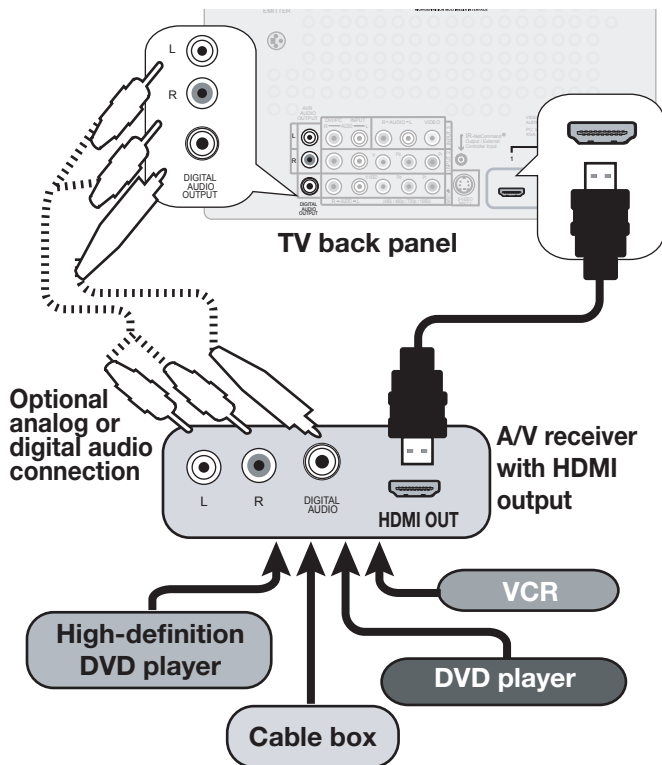

Multiple video inputs on a single HDMI cable. You can connect multiple video devices to an A/V receiver that has an HDMI output. The optional audio connection allows you to hear, through the A/V receiver, devices connected to the TV only.

- Power on the A/V receiver.
- Set the TV's remote control slide switch to the TV position and power on the TV if needed.
- When the **Auto Input Sensing** screen displays, select device name **AVR**.

### Setup to Control A/V Receiver Power and Volume

Perform the steps under "A/V Receiver Control: Power and Volume," page 58.

### Setup to Control Switching to the TV's Audio Output

If you have used one of the optional audio connections to the TV's **AVR AUDIO OUTPUT** or **DIGITAL AUDIO OUTPUT** jacks, set up NetCommand to control switching to the TV audio input. Perform the steps under "Audio Switching Setup 1: Automatic A/V Receiver Switching to the TV Audio Input," page 60.

### Setup to Control Automatic Audio and Video Switching via HDMI

Follow these steps if you wish NetCommand to control switching of A/V receiver video as well as audio inputs over an HDMI cable. When this setup is complete, you can use the TV's **Input Selection** menu to select a video device connected to the A/V receiver. You can also perform additional NetCommand setup to control devices connected to the A/V receiver.


- Display the **Inputs > AV Receiver** menu.

**Note:** The labels **Input1** through **Input5** in the **Learn** column are names used by the TV to uniquely identify A/V receiver inputs.


- With the highlight in the **Learn** column, highlight one of the **Input** labels **Input2** through **Input5**; it is recommended you leave **Input1** reserved for **TV Audio**.

### AV Receiver menu for audio and video switching with HDMI output

- The **Learn** column lists "learnable" keys from the A/V receiver's remote control.
- Input1** through **Input5** are arbitrary names used by the TV to uniquely identify "learnable" A/V receiver inputs.
- A check mark next to a key name indicates it has been "learned" by NetCommand.
- The **Assign Input** column provides a list of possible device types. Use this list to select the device type connected to the associated A/V receiver input. The assigned device name will appear in the **Input Selection** menu.

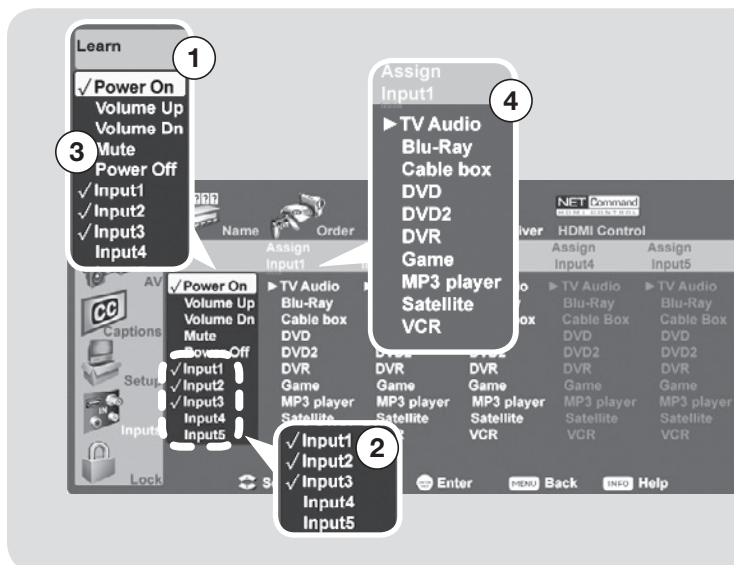

## Setting Up NetCommand Control of an A/V Receiver, continued

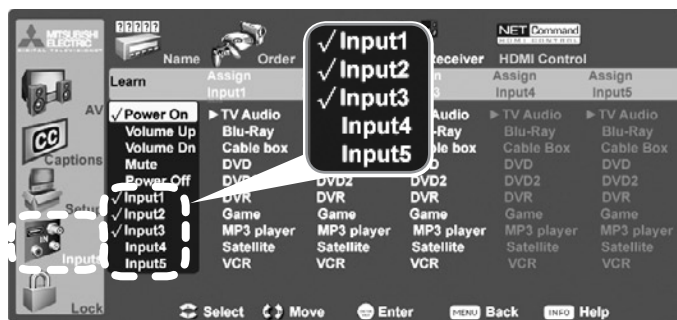

3. Press ENTER and the highlighted **Input** label will start flashing to indicate readiness for “learning.”
4. While the **Input** text is flashing, press and hold the key on the **A/V receiver's** remote control for the input you wish to associate with the selected **Input** label.
5. When a check appears next to the **Input** label, release the remote control key.
  - If the text stops flashing before the check mark appears, repeat this step.
  - To erase the IR code just “learned,” press CANCEL while the name is highlighted.



6. On the **TV's** remote control, press ► once. The highlight will move automatically to the associated **Assign Input** column (**Assign Input1** through **Assign Input5**).
7. Use ▲ ▼ to highlight the device type connected to the A/V receiver input just “learned.” The **Assign Input** column contains a list of possible device types.

In the example above, a DVD player is connected to the A/V receiver input the TV knows as **Input2**.


The device type you select here will appear as an icon in the TV's **Input Selection** menu. You can assign each device type in the list only once.

8. Press EXIT if finished or repeat these steps for additional video sources connected to the A/V receiver.

### NetCommand IR Control: Device Connected to an A/V Receiver

Use this setup to have NetCommand control a device sending audio and video through the A/V receiver to the TV via HDMI.

1. Set up NetCommand control of A/V receiver audio/video switching via HDMI as described on the opposite page.

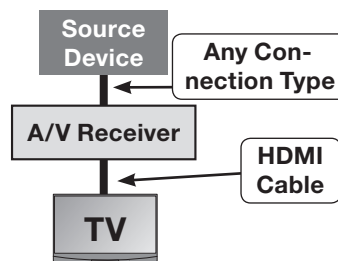

2. Press EXIT to close any open menus and return to normal TV viewing.
3. Press INPUT to open the **Input Selection** menu.
4. Highlight the icon for the A/V receiver input you wish to control.

The A/V receiver's remote control key for the input must have been “learned” previously using “Setup to Control Automatic Audio and Video Switching via HDMI” on the opposite page.

5. Press ENTER to switch the TV to the A/V receiver and the A/V receiver to the device.
6. Open the **Inputs > Learn** menu.
7. Perform NetCommand “learning” for the device by following the steps in “Initial NetCommand Setup for Most Devices,” page 54.

## Appendix A: Specifications

| Size, Weight, and Power Consumption |                     |       |       |               |               |
|-------------------------------------|---------------------|-------|-------|---------------|---------------|
| Model                               | Dimensions (inches) |       |       | Weight (lbs.) | Power (watts) |
|                                     | Height              | Width | Depth |               |               |
| WD-60C8,<br>WD-60735                | 36.7                | 53.8  | 14.4  | 68.3          | 265           |
| WD-65C8<br>WD-65735                 | 39.5                | 58.2  | 15.4  | 75.4          | 265           |
| WD-73C8,<br>WD-73735                | 43.6                | 65.2  | 17.5  | 95            | 265           |
| WD-65736                            | 39.5                | 58.2  | 15.4  | 75.4          | 270           |
| WD-73736                            | 43.6                | 65.2  | 17.5  | 95            | 270           |
| WD-65835                            | 39.5                | 58.2  | 15.4  | 78            | 270           |
| WD-73835                            | 43.6                | 65.2  | 17.5  | 98            | 270           |

| Inputs  |         |   |
|---|---------|---|
| Type  | Qty.    | Input Specifications  |
| Antenna/Cable input   | 2       | <b>RF</b><br>F connector, 75-ohm  |
| <b>HDMI (digital video/audio)</b>                                 |         | <b>CEA-861D standard for digital audio and video via HDMI</b><br>HDMI standard connector  |
| WD-60C8<br>WD-65C8<br>WD-73C8<br>WD-60735<br>WD-65735<br>WD-73735 | 3       | Video: 60 Hz: 480i, 480p, 720p, 1080i<br>24 Hz, 30 Hz, 60 Hz: 1080p<br>Audio: PCM stereo<br>HDMI inputs are compliant with CEA-861D standards for standard, extended, and high-definition video; digital audio, and HDCP copy protection.   |
| WD-65736<br>WD-73736<br>WD-65835<br>WD-73835                      | 4       | PC (digital signals only):<br>VGA (640 x 480, 60 Hz)<br>W-VGA (848 x 480, 60 Hz)<br>SVGA (800 x 600, 60 Hz)<br>W-SVGA (1064 x 600, 60 Hz)<br>XGA (1024 x 768, 60 Hz)<br>1280 x 720, 60 Hz<br>SXGA (1280 x 1024, 60 Hz)<br>1920 x 1080 (24 Hz, 30 Hz, 60 Hz)<br>WXGA (1360 x 768, 60 Hz) |
| <b>Composite Video</b>  | up to 3 | <b>NTSC 480i only</b><br>Video: RCA Pin Plug, 1.0 V p-p, 75 ohm<br><br>1 dedicated composite video jack; 2 shared with component video Y  |
| <b>S-Video</b>  | 1       | Four-Pin DIN Plug<br>Y: 1.0 Vp-p 75-ohm<br>C: 0.286 Vp-p (burst signal), 75-ohm   |

|                                  |              |  |
|----------------------------------|--------------|--|
| <b>Component Video (Y/Pr/Pb)</b> | up to 3 sets | <b>CEA-770.1 &amp; CEA 770.2 480i, 480p, CEA 770.3 720p and 1080i (TV analog component video standards)</b><br>RCA Pin Plug<br>Y: 1.0 Vp-p (includes sync), 75-ohm<br>Pr: 700 mV p-p, 75-ohm<br>Pb: 700 mV p-p, 75-ohm<br><br>1 dedicated set of component video jacks; 2 sets share a jack with composite video |
| <b>USB Photo Port</b>            | 1            | For transfer of JPEG files only.   |
| <b>Audio Inputs</b>              | 5 pairs      | <b>Analog left and right audio</b><br>RCA Pin Plug 500 mV (full scale), 43-k ohm   |

| Outputs                      |        |  |
|------------------------------|--------|--|
| Description                  | Qty.   | Output Specifications  |
| <b>Audio Speakers</b>        | 2      | 5.75" x 2.4"   |
| <b>Analog Audio (Signal)</b> | 1 pair | RCA Pin Plug, 500 mV rms $\pm$ 200 mV (full scale) for analog sources, 1.5 Vrms $\pm$ 0.5 Vrms (full scale) for digital sources. |
| <b>Digital Audio Output</b>  | 1      | RCA Pin Plug, Signal Type Dolby Digital, PCM stereo  |
| <b>3-D Glasses Emitter</b>   | 1      | VESA 1997-11 Connector and Signal Standards for Stereoscopic Display Hardware  |

| Image Technology   | Lamp              |
|--|-------------------|
| DLP, 0.65" chip, 1920 x 1080 pixels with Smooth Picture™ | 180-watt VIP type |

|                                    |  |   |
|------------------------------------|--|---|
| <b>Channel Frequency Reception</b> | Over-the-Air: VHF 2–13, UHF 14–69<br>Analog Cable: 1–125<br>Digital Cable: 1–135 |   |
| <b>Channel Type*</b>               | Over the Air:  | Analog NTSC, Digital ATSC with sub-channels (all 18 video formats)                      |
|                                    | Cable:   | Analog NTSC (non-scrambled)<br>Digital QAM 64 and 256 with sub-channels (non-scrambled) |

\* Note for Digital Channels: The channel numbers displayed on screen are determined by the broadcaster or cable company and can vary from the standard frequency number. If there is no channel-number information provided by the broadcaster or cable company, the TV creates a channel number. The created channel number uses the frequency number as the main channel number and the program number as the sub-channel number.

## Appendix B: Bypassing the Parental Lock

### Lock Bypass Instructions Have Been Filed for Future Reference

#### **IMPORTANT**

Cut along the dotted line and file bypass instructions in a safe place for future reference.

### Bypassing the Parental Lock

After you set the lock, you must use your pass code to view a locked program, view the locked TV, view a locked channel, cancel the lock, or enter the **Lock** menus.

If you forget your pass code, you can view the locked TV without entering your pass code. When you are prompted for your pass code, press the number **9** and **QV** keys on the TV remote control at the same time. This process temporarily unlocks the TV.

When entering the **Lock** menu, this process deletes your old pass code and prompts you to enter a new pass code.

- You can either enter a new pass code to open the **Lock** menu and make changes or press **EXIT** to close the menu.
- If any of the locks are turned on and you exit the menus when prompted for a new code, the old code and all lock settings are retained.
- If all locks are turned off and you exit the menus when prompted for a new code, then the previous code is erased.

#### **IMPORTANT**

When changing or deleting your pass code, you must use the remote control included with this TV. You cannot use a Mitsubishi remote control from another component or a “universal” remote.



***This page intentionally left blank***


## Appendix C: Programming the Remote Control

This appendix explains programming the TV's remote control to operate other A/V devices. This is distinct from NetCommand control. The TV's remote control can operate other devices by three different methods:

- Remote Control Programming: You must move the slide switch to the position specific to the type of device.
- **736 or 835 Series TV.** NetCommand® IR "learning": You can operate other devices with the slide switch in the TV position.
- NetCommand for CEC devices (all TV models): You may be able to operate compatible HDMI devices with the slide switch in the TV position. See the device's Owner's Guide and Appendix "E," page 77.

### Functions Available for Other A/V Devices

The TV's remote control can be programmed to operate other types and brands of A/V products. To use the remote when programmed, **set the slide switch to the position labelled for the product type.** The functions performed in each switch position can vary depending on the product. Not all functions work for all models. The most common functions available are listed on this page.

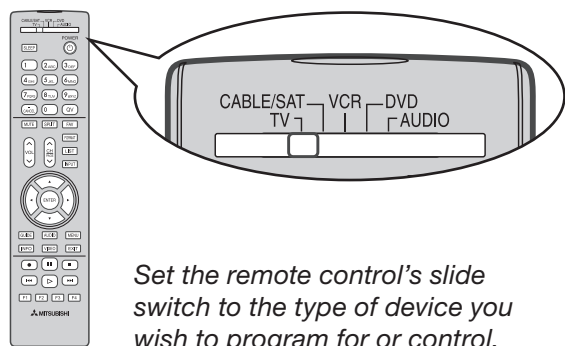

Set the remote control's slide switch to the type of device you wish to program for or control.

#### IMPORTANT

Some manufacturers may change their products or they may use more than one remote control system. The TV's remote control may be unable to operate your A/V equipment in these cases.

#### VCRs and DVRs

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• CH <math>\wedge/\vee</math></li> <li>• POWER</li> <li>• SLEEP</li> <li>• <math>\blacktriangleright</math> (FAST FORWARD)</li> <li>• <math>\parallel</math> (PAUSE)</li> <li>• <math>\blacktriangleright</math> (PLAY)</li> </ul> | <ul style="list-style-type: none"> <li>• <math>\bullet</math> (RECORD)</li> <li>• <math>\blacktriangleleft</math> (REVERSE)</li> <li>• <math>\blacksquare</math> (STOP)</li> <li>• GUIDE (DVR only)</li> <li>• MENU (DVR only)</li> <li>• 0-9 Number Buttons</li> </ul> |
|---|---|

Mitsubishi VCRs are compatible with some additional buttons.

#### Cable Boxes and Satellite Receivers

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• AUDIO (PAGE UP)</li> <li>• CANCEL (on some models)</li> <li>• CH <math>\wedge/\vee</math></li> <li>• ENTER (on some models)</li> <li>• GUIDE (on some models)</li> <li>• LIST</li> <li>• POWER</li> <li>• <math>\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright</math> (on some models)</li> <li>• VIDEO (PAGE DOWN)</li> <li>• QV (ENTER; for channels on some models)</li> </ul> | <ul style="list-style-type: none"> <li>• 0-9 Number Buttons (on some models)</li> <li>• F1-F4 (A, B, C, D keys on some models)</li> </ul> <p>The record/playback keys (on some models):</p> <ul style="list-style-type: none"> <li>• <math>\blacktriangleright</math> (FAST FORWARD)</li> <li>• <math>\parallel</math> (PAUSE)</li> <li>• <math>\blacktriangleright</math> (PLAY)</li> <li>• <math>\bullet</math> (RECORD)</li> <li>• <math>\blacktriangleleft</math> (REVERSE)</li> <li>• <math>\blacksquare</math> (STOP)</li> </ul> |
|---|--|

#### A/V Receivers

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• MUTE</li> <li>• POWER</li> <li>• SLEEP</li> <li>• VOLUME</li> <li>• 0-9 Number Buttons</li> </ul> | <ul style="list-style-type: none"> <li>• Direct Input Selection buttons: numbers, FAV and QV (on some Mitsubishi models)</li> </ul> |
|--|---|

#### CD Players

(not all functions for all models)

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• SLEEP</li> <li>• <math>\blacktriangleright</math> (FAST FORWARD)</li> <li>• <math>\parallel</math> (PAUSE)</li> <li>• <math>\blacktriangleright</math> (PLAY)</li> </ul> | <ul style="list-style-type: none"> <li>• <math>\blacktriangleleft</math> (REVERSE)</li> <li>• <math>\blacksquare</math> (STOP)</li> <li>• 0-9 Number Buttons</li> </ul> |
|---|---|

#### DVD and Laser Disc Players

(not all functions for all models)



 
- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• CANCEL (on some models)</li> <li>• CH <math>\wedge/\vee</math> (for track skip on some models)</li> <li>• ENTER</li> <li>• MENU</li> <li>• POWER</li> <li>• SLEEP</li> <li>• <math>\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright</math> (on some models)</li> </ul> | <ul style="list-style-type: none"> <li>• <math>\blacktriangleright</math> (FAST FORWARD)</li> <li>• <math>\parallel</math> (PAUSE)</li> <li>• <math>\blacktriangleright</math> (PLAY)</li> <li>• <math>\bullet</math> (RECORD)</li> <li>• <math>\blacktriangleleft</math> (REVERSE)</li> <li>• <math>\blacksquare</math> (STOP)</li> <li>• 0-9 Number Buttons (on some models)</li> </ul> |
|--|---|

## Appendix C: Programming the Remote Control, continued

### Programming the Remote Control

1. Move the slide switch at the top of the remote to the position for the product you want to control. Refer to the table below. Only one of each device type can be controlled in each slide-switch position.

| Switch Position | Affected Device  |
|-----------------|--|
| CABLE/SAT       | Cable Box<br>DTV Receiver<br>Satellite Receiver        |
| VCR             | VCR<br>DVR<br>Laser Disc Player<br>DVD Player/Recorder |
| DVD             | DVD Player/Recorder<br>DVR<br>Laser Disc Player<br>VCR |
| AUDIO           | A/V Receiver<br>Audio Amplifier<br>CD Player           |

2. Press and hold **POWER** on the remote control for several seconds until the button blinks twice and goes off.
3. Release the **POWER** button.
4. Enter the first five-digit code listed for your equipment.
  - The **POWER** button blinks twice when you start to enter the code and then once for each additional keypress.
  - The **POWER** button blinks twice when you finish entering a valid code.
  - Move the slide switch to another position if you need to start over or wish to exit programming mode.
5. Point the remote control at the equipment and press **POWER**. If the product has no power on/off function, press a different key, such as  (**PLAY**),  (**STOP**), **VOL** , or **MUTE**.
  - If the equipment responds, the remote control is properly programmed to operate the equipment.
  - If the equipment does not respond, repeat steps 2–4 with the next five-digit code listed for your equipment.

6. Once you have found the correct code, write it in the space below for future reference.

| Switch Position | Device Type | Code |
|-----------------|-------------|------|
| CABLE/SAT       |             |      |
| VCR             |             |      |
| DVD             |             |      |
| AUDIO           |             |      |

#### Code Verification

To determine the code programmed for any position of the slide switch:

 
1. Move the slide switch to the position you wish to verify.
2. Press and hold **POWER** on the remote control for several seconds until the button blinks twice and goes off.
3. Press keys **9 9 0**
4. Press **1** and count the blinks of the power button. Write down the number of blinks as the first digit of the code.
5. Repeat step 4 for the second, third, fourth, and fifth digits of the code.

#### Audio Lock: Universal A/V Receiver Control

With Audio Lock active, the remote control operates the volume and mute functions of the A/V receiver in all positions of the slide switch. Activate Audio Lock if you normally use an A/V receiver with your TV and other A/V equipment.

1. Program the **AUDIO** position for your A/V receiver as described earlier in this section.
2. With the slide switch in the **AUDIO** position, press and hold **POWER** on the remote control for several seconds until the button blinks twice and goes off.
3. Press keys **9 9 3 ENTER**  
The **POWER** button will blink twice to indicate Audio Lock is active.

#### To Reset the Remote Control to Operate Volume and Mute for the TV Speakers

1. Press and hold **POWER** for several seconds until the key blinks twice and goes off.
2. Press keys **9 9 3 VOL** .  
The **POWER** key will blink four times to indicate Audio Lock has cleared.

#### IMPORTANT

You may need to reprogram the remote control after changing the batteries.

## Appendix C: Programming the Remote Control, continued

### Programming Codes

| Audio Amplifiers  |                            |
|-------------------|----------------------------|
| Make              | Code                       |
| Acurus            | 30765                      |
| Adcom             | 31100, 30577               |
| Altec Lansing     | 31742                      |
| Aragon            | 30765                      |
| Bel Canto Design  | 31583                      |
| Bose              | 30674                      |
| Carver            | 30892                      |
| Cary Audio Design | 31879                      |
| Classe            | 31461                      |
| Curtis Mathes     | 30300                      |
| Durabrand         | 31561                      |
| Flextronics       | 31879                      |
| GE                | 30078                      |
| Halcro            | 31934                      |
| Harman/Kardon     | 30892                      |
| JVC               | 30331                      |
| Klipsch           | 30765                      |
| Krell             | 31837                      |
| Left Coast        | 30892                      |
| Lenoxx            | 31561                      |
| Lexicon           | 31802, 31145               |
| Marantz           | 30892                      |
| Mark Levinson     | 31483                      |
| McIntosh          | 30251                      |
| Modulaire         | 30395                      |
| Mondial           | 30765                      |
| Optimus           | 30823, 30395, 30300, 30013 |
| Parasound         | 31934                      |
| Philips           | 30892                      |
| Pioneer           | 30823, 30300, 30013        |
| Polk Audio        | 30892                      |
| Primare           | 31395                      |
| RadioShack        | 30395                      |
| RCA               | 30823, 30300, 30013        |
| Realistic         | 30013, 30395               |
| Soundesign        | 30078                      |
| Technics          | 30372                      |
| Victor            | 30331                      |
| Wards             | 30078, 30013               |
| Yamaha            | 30354                      |

| Cable Boxes     |  |
|-----------------|--|
| Make            | Code                                     |
| A-Mark          | 10144, 10008                             |
| ABC             | 10237, 10014, 10011, 10008, 10007, 10003 |
| Accuphase       | 10014, 10011, 10007, 10003               |
| Acorn           | 10237                                    |
| Action          | 10237                                    |
| Active          | 10237                                    |
| Americast       | 10899                                    |
| Archer          | 10237                                    |
| BCC             | 10276                                    |
| Bell & Howell   | 10014                                    |
| Bell South      | 10899                                    |
| British Telecom | 10003                                    |
| Century         | 10008                                    |
| Clearmaster     | 10883                                    |

| Cable Boxes        |  |
|--------------------|--|
| Make               | Code   |
| ClearMax           | 10883  |
| Comtronics         | 10040  |
| Cool Box           | 10883  |
| Coolmax            | 10883  |
| Digeo              | 11187  |
| Digi               | 10637  |
| Director           | 10476  |
| Dumont             | 10637  |
| Emerson            | 10014  |
| Everquest          | 10040  |
| Fosgate            | 10276  |
| GC Electronics     | 10040  |
| GE                 | 10144  |
| General Instrument | 10810, 10476, 10276, 10020, 10014, 10012, 10011, 10003 |
| Gibraltar          | 10003  |
| GMI                | 10883  |
| GoldStar           | 10144, 10040   |
| Hamlin             | 10273, 10259, 10020                                    |
| Hitachi            | 10011, 10008, 10003                                    |
| Houston            | 10011  |
| Hytex              | 10007  |
| Hytex              | 10007  |
| Insight            | 10476, 10810   |
| Jebsee             | 10014  |
| Jerrold            | 10810, 10476, 10276, 10020, 10014, 10012, 10011, 10003 |
| Memorex            | 10000  |
| Mitsubishi         | 10003  |
| Motorola           | 11376, 11254, 11187, 11106, 10810, 10476, 10276, 10014 |
| Multitech          | 10883  |
| Nova Vision        | 10008  |
| Novaplex           | 10008  |
| NSC                | 10637, 10012   |
| Oak                | 10007  |
| Pace               | 11877, 10877, 10237, 10008                             |
| Panasonic          | 10144, 10107, 10008, 10000                             |
| Panther            | 10637  |
| Paragon            | 10525, 10008, 10000                                    |
| Penney             | 10637, 10000   |
| Philips            | 11305, 10317, 10259                                    |
| Pioneer            | 11877, 10877, 10533, 10144                             |
| Prism              | 10012  |
| Pulsar             | 10040, 10000   |
| Pulser             | 10040  |
| Quasar             | 10000  |
| R-Line             | 10040  |
| RadioShack         | 10883  |
| RCA                | 11256  |
| Regal              | 10279, 10276, 10273, 10259, 10020                      |
| Regency            | 10020  |
| Rembrandt          | 10040, 10011   |
| Runco              | 10000  |

| Cable Boxes        |  |
|--------------------|--|
| Make               | Code   |
| Samsung            | 10144, 10040, 10003                                    |
| Scientific Atlanta | 11877, 10877, 10477, 10237, 10012, 10008, 10003, 10000 |
| Signal             | 10040, 10011   |
| Signature          | 10011  |
| SL Marx            | 10040  |
| Sony               | 11006  |
| Sprucer            | 10144  |
| Starcom            | 10014, 10003   |
| Stargate           | 10040, 10014   |
| Storm              | 10637  |
| Supercable         | 10276  |
| Supermax           | 10883  |
| Teleavia           | 10040  |
| Television         | 10040  |
| Thomson            | 11256  |
| Timeless           | 10040  |
| Tocom              | 10012  |
| Torx               | 10003  |
| Toshiba            | 10000  |
| Tristar            | 10883  |
| TV86               | 10040  |
| United Artists     | 10007  |
| United Cable       | 10276, 10014, 10011, 10003                             |
| US Electronics     | 10276, 10008, 10003                                    |
| V2                 | 10883  |
| Videoway           | 10000  |
| Viewmaster         | 10883  |
| Vision             | 10883  |
| Vortex View        | 10883  |
| Zenith             | 10899, 10525, 10000                                    |

| CD Players            |                     |
|-----------------------|---------------------|
| Make                  | Code                |
| Acoustic Research     | 30420               |
| Aiwa                  | 30157               |
| Akai                  | 30083               |
| Arcam                 | 30157               |
| Audio Pro             | 30437               |
| Audio Research        | 30157               |
| Burmester             | 30420               |
| Cairn                 | 30157               |
| California Audio Labs | 30303, 30029        |
| Cambridge Soundworks  | 30157               |
| Carver                | 30437, 30179, 30157 |
| Cary Audio Design     | 31876               |
| Classic               | 31297               |
| Curtis Mathes         | 30032               |
| Denon                 | 30766, 30034, 30003 |
| DKK                   | 30000               |
| DMX Electronics       | 30157               |
| Fisher                | 31325, 30179, 30000 |
| Garrard               | 30420               |
| Genexxa               | 30032               |
| GPX                   | 31296               |

## Appendix C: Programming the Remote Control, continued

### Programming Codes, continued

| CD Players    |  |
|---------------|--|
| Make          | Code   |
| Grundig       | 30157  |
| Hafler        | 30173  |
| Harman/Kardon | 31202, 30173, 30157, 30100, 30083                                    |
| Hitachi       | 30032  |
| Inkel         | 30180, 30157   |
| Integra       | 30101  |
| Jerrold       | 30003  |
| JVC           | 31294, 30072, 30032  |
| Kenwood       | 30626, 30190, 30037, 30029, 30028, 30000                             |
| KLH           | 31711, 31318   |
| Koss          | 31317  |
| Krell         | 30157  |
| LG            | 31208  |
| Linn          | 30157  |
| LXI           | 30179  |
| Magnavox      | 30274, 30157, 30038  |
| Marantz       | 30626, 30435, 30180, 30157, 30038, 30029                             |
| Mark Levinson | 31484  |
| Matsui        | 30157  |
| McIntosh      | 31703, 30660, 30290, 30256   |
| MCS           | 30029  |
| Memorex       | 30468, 30437, 30420, 30179, 30032, 30000                             |
| MGA           | 30083  |
| Micromega     | 30157  |
| Miro          | 30000  |
| Mission       | 30157  |
| Mitsubishi    | 30098, 30083   |
| Modulaire     | 30468, 30437, 30420, 30180, 30179, 30145, 30087, 30032, 30000        |
| MTC           | 30420  |
| Myryad        | 30157  |
| NAD           | 31208  |
| NSM           | 30157  |
| Onkyo         | 31327, 30101   |
| Optimus       | 31075, 30468, 30437, 30420, 30179, 30145, 30087, 30037, 30032, 30000 |
| Panasonic     | 30752, 30388, 30303, 30029   |
| Parasound     | 30420  |
| Penney        | 30029  |
| Philips       | 30626, 30274, 30157  |
| Pioneer       | 31087, 31062, 30468, 30032   |
| Polk Audio    | 30157  |
| Primare       | 31852  |
| Proceed       | 30420  |
| Proton        | 30157  |
| QED           | 30157  |
| Quad          | 30157  |
| Quasar        | 30029  |
| RadioShack    | 31075, 30468, 30437, 30420, 30180, 30179, 30032, 30000               |

| CD Players      |   |
|-----------------|---|
| Make            | Code  |
| RCA             | 30032, 30053, 30179, 30420, 30468, 31062                      |
| Realistic       | 30468, 30437, 30420, 30180, 30179, 30145, 30087, 30032, 30000 |
| Revox           | 30157   |
| Roksan          | 30435   |
| Rotel           | 30420, 30157  |
| SAE             | 30157   |
| Sansui          | 30157, 30000  |
| Sanyo           | 30179, 30087, 30000   |
| Sears           | 30179   |
| Sharp           | 30180, 30037  |
| Sherwood        | 31950, 30180  |
| Sonic Frontiers | 30157   |
| Sony            | 31364, 30490, 30185, 30100, 30000                             |
| Soundesign      | 30145   |
| Sugden          | 30157   |
| Sylvania        | 30157   |
| Symphonic       | 30180   |
| TAG McLaren     | 30157   |
| Tandy           | 30032   |
| Tascam          | 30420   |
| TDK             | 31208   |
| Teac            | 30490, 30420, 30180   |
| Technics        | 30029, 30303  |
| Techwood        | 30303   |
| Thule Audio     | 30157   |
| Tivoli Audio    | 31553   |
| Universum       | 30437   |
| Victor          | 30072   |
| Wards           | 30179, 30157, 30087, 30053, 30032                             |
| Yamaha          | 31292, 30490, 30036   |
| Yorx            | 30000   |

| Laser Disc Players |                            |
|--------------------|----------------------------|
| Make               | Code                       |
| Carver             | 20194, 20064               |
| Denon              | 20241, 20172, 20059        |
| Harman/Kardon      | 20194                      |
| Magnavox           | 20241, 20217, 20194, 20064 |
| Marantz            | 20194, 20064               |
| Mitsubishi         | 20243, 20241, 20059        |
| NAD                | 20059                      |
| Optimus            | 20059                      |
| Panasonic          | 20204                      |
| Philips            | 20194, 20064               |
| Pioneer            | 20241, 20059               |
| Polk Audio         | 20194                      |
| Quasar             | 20204                      |
| Sony               | 20201, 20193               |
| Technics           | 20204                      |
| Theta Digital      | 20194                      |
| Toshiba            | 20059                      |
| Wards              | 20059                      |
| Yamaha             | 20217                      |

| A/V Receivers          |  |
|------------------------|--|
| Make                   | Code   |
| ADC                    | 30531  |
| Adcom                  | 31617, 31616   |
| Aiwa                   | 31641, 31405, 31388, 31347, 31321, 31243, 30189, 30121 |
| Akai                   | 31255  |
| Alco                   | 31390  |
| AMC                    | 31077  |
| Amplifier Technologies | 31584  |
| Anam                   | 31609, 31074   |
| Apex Digital           | 31774, 31430, 31257                                    |
| Arcam                  | 31189  |
| Atlantic Technology    | 31487  |
| Audiophase             | 31387  |
| Audiotronic            | 31189  |
| Audiovox               | 31627, 31390   |
| B & K                  | 30840, 30820, 30702, 30701                             |
| Bel Canto Design       | 31584  |
| BK                     | 30702  |
| Bose                   | 31933, 31253, 31229, 30639                             |
| Brix                   | 31602  |
| Cairn                  | 30189  |
| Cambridge Soundworks   | 31477  |
| Capetronic             | 30531  |
| Carver                 | 31289, 31189, 30189, 30121                             |
| Classe                 | 31920  |
| Clatronic              | 30797  |
| Coby                   | 31263  |
| Curtis                 | 31263, 30797   |
| Curtis Mathes          | 30014  |
| Delphi                 | 31414  |
| Denon                  | 31360, 31311, 31306, 31142, 30121                      |
| Electrohome            | 32026  |
| Emerson                | 30531  |
| Fisher                 | 31801, 31409, 30797                                    |
| Fosgate                | 31487  |
| Glory Horse            | 31263  |
| Goodmans               | 30797  |
| GPX                    | 31299  |
| Grundig                | 31387, 30189   |
| Harman/Kardon          | 31306, 31304, 31289, 30891, 30189, 30110               |
| Hitachi                | 31801, 31273   |
| Insignia               | 31077, 31030   |
| Integra                | 31805, 31320, 31298, 30842, 30135                      |
| JBL                    | 31306, 30110   |
| JVC                    | 31811, 31643, 31495, 31374, 31282, 31263, 31058        |
| Kawasaki               | 31390  |
| Kenwood                | 31570, 31569, 31363, 31313                             |
| KLH                    | 31428, 31390   |



## Appendix C: Programming the Remote Control, continued

### Programming Codes, continued

| A/V Receivers |   |
|---------------|---|
| Make          | Code  |
| Koss          | 31497, 31366  |
| Linn          | 30189   |
| Liquid Video  | 31497   |
| Magnavox      | 31514, 31269, 31266, 31189, 30531, 30189  |
| Marantz       | 31289, 31269, 31189, 30891, 30200, 30189  |
| McIntosh      | 31289   |
| Micromega     | 31189, 30189  |
| Mitsubishi    | 31957, 31922, 31921, 31920, 31393   |
| Myryad        | 31189   |
| Nakamichi     | 31555, 31313, 30097   |
| Onkyo         | 31805, 31320, 31298, 30842, 30135   |
| Optimus       | 31074, 31023, 30849, 30797, 30670, 30531, 30121, 30014  |
| Oritron       | 31497, 31366  |
| Outlaw        | 31487   |
| Panasonic     | 32967, 31764, 31763, 31633, 31548, 31518, 31509, 31363, 31350, 31316, 31308, 31288, 30309                             |
| Philips       | 31368, 31365, 31283, 31269, 31268, 31266, 31189, 30891, 30189   |
| Pioneer       | 31384, 31343, 31123, 31023, 30630, 30531, 30150, 30014  |
| Polk Audio    | 31414, 31289, 30189   |
| Proceed       | 31922   |
| RadioShack    | 31609, 31263  |
| RCA           | 31609, 31511, 31390, 31123, 31074, 31023, 30531   |
| Realistic     | 31609, 30121  |
| Revox         | 30189   |
| Rio           | 31869   |
| Samsung       | 31500, 31304, 31295   |
| Sangean       | 32165   |
| Sansui        | 31189, 30189  |
| Sanyo         | 31801   |
| Sharp         | 31386, 31361  |
| Sharper Image | 31416, 31411, 31410, 31409, 31385, 31263, 30797   |
| Sherwood      | 31077   |
| Sirius        | 31811, 31627, 31602   |
| Sonic Blue    | 31869   |
| Sony          | 31858, 31759, 31758, 31658, 31622, 31558, 31529, 31503, 31458, 31441, 31406, 31382, 31371, 31367, 31258, 31131, 31058 |
| Soundesign    | 30670   |
| Stereophonics | 31023   |
| Sunfire       | 31313   |
| Sylvania      | 30797   |

| A/V Receivers |  |
|---------------|--|
| Make          | Code   |
| Teac          | 31528, 31390, 31267, 31074                             |
| Technics      | 31633, 31518, 31308, 30309                             |
| Thorens       | 31189  |
| Toshiba       | 31788, 31123, 30842, 30135                             |
| Venturer      | 31390, 30849   |
| Wards         | 30189, 30014   |
| XM            | 31414, 31406   |
| Yamaha        | 31815, 31476, 31375, 31331, 31276, 31176, 31023, 30176 |
| YBA           | 31921  |

| Satellite Receivers    |   |
|------------------------|---|
| Make                   | Code  |
| AlphaStar              | 10772   |
| Bell ExpressVu         | 11170, 10775  |
| Chaparral              | 10216   |
| Crossdigital           | 11109   |
| DirecTV                | 11856, 11749, 11640, 11639, 11609, 11444, 11443, 11442, 11414, 11392, 11377, 11142, 11109, 11108, 11076, 10819, 10749, 10724, 10639, 10566, 10392, 10247, 10099 |
| Dish Network System    | 11775, 11505, 11170, 11005, 10775   |
| Dishpro                | 11775, 11505, 11005, 10775  |
| Echostar               | 11775, 11505, 11170, 11005, 10775   |
| Expressvu              | 11775, 10775  |
| Fortec Star            | 11821   |
| Funai                  | 11377   |
| GE                     | 10566, 10392  |
| GOI                    | 11775, 10775  |
| Goodmans               | 11246   |
| Hitachi                | 11250, 10819, 10749   |
| Houston                | 10775   |
| HTS                    | 11775, 10775  |
| Hughes Network Systems | 11749, 11444, 11443, 11442, 11142, 10749  |
| Humax                  | 11790, 11781  |
| Innova                 | 10099   |
| JVC                    | 11775, 11170, 10775   |
| LG                     | 11414, 11226  |
| Magnavox               | 10724, 10722  |
| Memorex                | 10724   |
| Mitsubishi             | 10749   |
| Motorola               | 10856   |
| NEC                    | 11270   |
| Netsat                 | 10099   |
| Optimus                | 10724   |
| Panasonic              | 10701, 10247  |
| Pansat                 | 11807   |
| Paysat                 | 10724   |

| Satellite Receivers |  |
|---------------------|--|
| Make                | Code   |
| Philips             | 11749, 11442, 11142, 11076, 10819, 10775, 10749, 10724, 10722, 10099 |
| Pioneer             | 11442, 11142   |
| Proscan             | 10566, 10392   |
| RadioShack          | 10775, 10566   |
| RCA                 | 11442, 11392, 11142, 10855, 10775, 10566, 10392, 10143               |
| Samsung             | 11609, 11442, 11377, 11276, 11142, 11109, 11108                      |
| Sanyo               | 11219  |
| SKY                 | 10856, 10099   |
| Sony                | 11640, 11639, 10639  |
| Star Trak           | 10772  |
| Thomson             | 10566, 10392   |
| Tivo                | 11444, 11443, 11442, 11142   |
| Toshiba             | 11749, 10790, 10749  |
| UltimateTV          | 11640, 11392   |
| Uniden              | 10724, 10722   |
| Zenith              | 11856, 11810, 10856  |

| VCRs           |   |
|----------------|---|
| Make           | Code  |
| A-Mark         | 20278, 20240, 20046, 20037, 20000               |
| ABS            | 21972   |
| Accurian       | 20000   |
| Admiral        | 20479, 20209, 20104, 20060, 20048, 20047, 20039 |
| Adventura      | 20240, 20037, 20000                             |
| Adyson         | 20072   |
| Aiko           | 20278   |
| Aiwa           | 20124, 20037, 20000                             |
| Akai           | 20242, 20175, 20041                             |
| Alba           | 20278, 20209, 20072                             |
| Alienware      | 21972   |
| Allegro        | 20039   |
| America Action | 20278   |
| American High  | 20081, 20035                                    |
| Amstrad        | 20000   |
| Asha           | 20240   |
| Astra          | 20240, 20035                                    |
| Audiovox       | 20278, 20038, 20037                             |
| Avis           | 20072, 20000                                    |
| Beaumark       | 20240   |
| Bell & Howell  | 20479, 20104, 20048, 20046, 20039, 20035, 20000 |
| Broksonic      | 20479, 20209, 20184, 20121, 20002               |
| Calix          | 20037   |
| Candle         | 20037, 20038                                    |
| Canon          | 20035   |
| Capehart       | 20002   |
| Carrera        | 20240   |
| Carver         | 20035, 20081                                    |

## Appendix C: Programming the Remote Control, continued

### Programming Codes, continued

| VCRs Make       | Code   |
|-----------------|--|
| CCE             | 20072, 20278   |
| Cineral         | 20278  |
| Citizen         | 20479, 20278, 20240, 20209, 20037, 20035, 20000                                    |
| Classic         | 20037  |
| Colortyme       | 20278, 20060, 20045, 20035   |
| Colt            | 20072, 20000   |
| Craig           | 20240, 20072, 20047, 20037   |
| Criterion       | 20072, 20000   |
| Crosley         | 20081, 20035, 20000  |
| Crown           | 20278, 20072   |
| Curtis Mathes   | 20432, 20278, 20240, 20162, 20060, 20041, 20035, 20000                             |
| Cybernex        | 20240  |
| CyberPower      | 21972  |
| Daewoo          | 20278, 20046, 20045, 20037   |
| Daytron         | 20278, 20037   |
| Dell            | 21972  |
| Denon           | 20081, 20042   |
| Derwent         | 20041  |
| DirectTV        | 20739  |
| Dual            | 20000  |
| Durabrand       | 20039, 20038   |
| Dynatech        | 20240, 20000   |
| Electrohome     | 20240, 20209, 20060, 20043, 20037, 20000   |
| Electroponic    | 20037  |
| Emerald         | 20184, 20121   |
| Emerex          | 20032  |
| Emerson         | 21593, 20593, 20479, 20278, 20240, 20209, 20184, 20121, 20043, 20037, 20002, 20000 |
| Fisher          | 20104, 20047, 20046, 20039, 20000  |
| Fuji            | 20035, 20033   |
| Fujitsu         | 20000  |
| Funai           | 21593, 20593, 20278, 20072, 20037, 20000   |
| Garrard         | 20000  |
| Gateway         | 21972  |
| GE              | 20240, 20060, 20048, 20035, 20000  |
| Gemini          | 20060  |
| Genexxa         | 20278, 20037, 20000  |
| Go Video        | 20614, 20526, 20432, 20240   |
| GoldStar        | 20278, 20039, 20038, 20037, 20035, 20000   |
| Goodmans        | 20278, 20081, 20072, 20037, 20000  |
| Gradiente       | 20000  |
| Granada         | 20081, 20042   |
| Grundig         | 20081  |
| Harley Davidson | 20000  |
| Harman/Kardon   | 20081, 20075, 20038  |

| VCRs Make              | Code  |
|------------------------|---|
| Harvard                | 20072   |
| Harwood                | 20072   |
| Headquarter            | 20046   |
| Hewlett Packard        | 21972   |
| HI-Q                   | 20047, 20035, 20000   |
| Hitachi                | 20089, 20045, 20042, 20041, 20037, 20035, 20000   |
| Howard Comput-ers      | 21972   |
| HP                     | 21972   |
| Hughes Network Systems | 20739, 20042  |
| Humax                  | 21988, 21979, 20739   |
| Hush                   | 21972   |
| Hytek                  | 20072, 20047, 20000   |
| iBUYPOWER              | 21972   |
| ITT Nokia              | 20240, 20041  |
| Janeil                 | 20240   |
| Jensen                 | 20067, 20041  |
| JVC                    | 21162, 20067, 20041   |
| KEC                    | 20278, 20037  |
| Kenwood                | 20067, 20046, 20041, 20038  |
| KLH                    | 20072   |
| Kodak                  | 20037, 20035  |
| KTV                    | 20000   |
| LG                     | 21037, 20240, 20038, 20037  |
| Linksys                | 21972   |
| Lloyd's                | 20240, 20072, 20038, 20000  |
| Loewe                  | 20081   |
| Logik                  | 20240, 20072, 20000   |
| Lumatron               | 20278   |
| Luxor                  | 20046   |
| LXI                    | 20067, 20042, 20037, 20000  |
| M Electronic           | 20240   |
| Magnasonic             | 20593, 20278, 20240, 20072, 20037, 20000  |
| Magnavox               | 21593, 20618, 20593, 20563, 20240, 20081, 20048, 20039, 20037, 20035, 20000   |
| Magnin                 | 20240   |
| Marantz                | 20081, 20038, 20035   |
| Marta                  | 20037   |
| Matsui                 | 20209, 20037  |
| Matsushita             | 21162, 20162, 20081, 20035  |
| Media Center PC        | 21972   |
| MEI                    | 20035   |
| Memorex                | 21262, 21162, 21037, 20479, 20278, 20240, 20209, 20162, 20104, 20072, 20048, 20047, 20046, 20039, 20037, 20035, 20000 |
| Metz                   | 20037   |
| MGA                    | 20240, 20060, 20043   |

| VCRs Make      | Code   |
|----------------|--|
| MGN Technology | 20240  |
| Microsoft      | 21972  |
| Midland        | 20240  |
| Mind           | 21972  |
| Minolta        | 20042  |
| Mitsubishi     | 20443, 20242, 20214, 20173, 20075, 20067, 20060, 20048, 20047, 20043, 20042, 20041, 20000        |
| Motorola       | 20048, 20035   |
| Movie Walker   | 20072  |
| MTC            | 20240, 20072, 20000  |
| MTX            | 20000  |
| Multitech      | 20072, 20039, 20000  |
| NAD            | 20240, 20104   |
| NEC            | 20104, 20067, 20041, 20038   |
| New Tech       | 20072  |
| Nikko          | 20278, 20037   |
| Nikkodo        | 20278, 20037   |
| Nishi          | 20240  |
| Niveus Media   | 21972  |
| Noblex         | 20240  |
| Northgate      | 21972  |
| Olympus        | 20162, 20104, 20035  |
| Onkyo          | 20222  |
| Optimus        | 21262, 21162, 21062, 21048, 20593, 20432, 20240, 20162, 20104, 20048, 20047, 20037, 20035, 20000 |
| Orion          | 20479, 20278, 20240, 20209, 20184, 20121, 20104, 20002, 20000                                    |
| Panama         | 20035  |
| Panasonic      | 21262, 21162, 21062, 20616, 20614, 20225, 20162, 20035, 20000                                    |
| Penney         | 20240, 20162, 20081, 20067, 20047, 20042, 20038, 20037, 20035, 20000                             |
| Pentax         | 20042  |
| Philco         | 20479, 20209, 20081, 20035, 20000  |
| Philips        | 21181, 21081, 20739, 20618, 20616, 20209, 20162, 20081, 20048, 20045, 20035, 20000               |
| Pilot          | 20037  |
| Pioneer        | 20162, 20081, 20067, 20042   |
| Polk Audio     | 20081  |
| Portland       | 20278  |
| Presidian      | 21593  |
| Profitronic    | 20240  |
| Proscan        | 20060  |
| Protec         | 20072, 20000   |
| Protech        | 20072  |
| Pulsar         | 20278, 20240, 20039  |

## Appendix C: Programming the Remote Control, continued

### Programming Codes, continued

| VCRs<br>Make | Code   |
|--------------|--|
| Pulser       | 20240  |
| Quarter      | 20046  |
| Quartz       | 20047, 20046, 20035  |
| Quasar       | 21162, 20162, 20035, 20002   |
| RadioShack   | 21162, 21037, 20240, 20162, 20104, 20048, 20047, 20046, 20037, 20035, 20000  |
| Radix        | 20037  |
| Randex       | 20037  |
| RCA          | 20880, 20240, 20060, 20048, 20045, 20042, 20035, 20000   |
| Realistic    | 21162, 20278, 20240, 20162, 20121, 20104, 20048, 20047, 20046, 20037, 20035, 20000   |
| ReplayTV     | 20616, 20614   |
| Ricavision   | 21972  |
| Runco        | 20039  |
| Salora       | 20075  |
| Samsung      | 20739, 20432, 20240, 20060, 20045, 20038, 20000  |
| Samtron      | 20240  |
| Sanky        | 20048, 20039   |
| Sansui       | 20479, 20240, 20209, 20072, 20067, 20041, 20002, 20000   |
| Sanyo        | 20479, 20240, 20159, 20104, 20047, 20046, 20000  |
| Scott        | 20184, 20121, 20045, 20043   |
| Sears        | 20209, 20162, 20104, 20072, 20067, 20060, 20048, 20047, 20046, 20045, 20043, 20042, 20041, 20039, 20037, 20035, 20033, 20000 |
| Sharp        | 20848, 20048, 20047, 20032, 20000  |
| Shintom      | 20240, 20072, 20039, 20000   |
| Shogun       | 20240  |
| Siemens      | 20037, 20104   |
| Signature    | 20479, 20060, 20048, 20046, 20037, 20035, 20000  |
| Singer       | 20240, 20072, 20037  |
| Sonic Blue   | 20616, 20614   |
| Sonographe   | 20046  |
| Sony         | 21972, 21032, 20636, 20067, 20047, 20046, 20035, 20033, 20032, 20000   |
| Soundmaster  | 20000  |
| Stack 9      | 21972  |
| STS          | 20042  |
| SV2000       | 20072, 20000   |

| VCRs<br>Make    | Code  |
|-----------------|---|
| SVA             | 20000   |
| Sylvania        | 21593, 20593, 20081, 20043, 20035, 20000  |
| Symphonic       | 21593, 20593, 20240, 20002, 20000   |
| Systemax        | 21972   |
| Tagar Systems   | 21972   |
| Tandy           | 20104, 20000  |
| Tatung          | 20081, 20067, 20048, 20041, 20000   |
| Teac            | 20067, 20041, 20000   |
| Technics        | 20162, 20037, 20035, 20000  |
| Teknika         | 20037, 20035, 20000   |
| Telecorder      | 20240   |
| Telefunken      | 20041   |
| Tevion          | 20479   |
| Thomas          | 20002, 20000  |
| Thomson         | 20060, 20041  |
| Tisonic         | 20278   |
| Tivo            | 20739, 20636, 20618   |
| TMK             | 20240, 20000  |
| TNIX            | 20037   |
| Tocom           | 20240   |
| Toshiba         | 21988, 21972, 21008, 20240, 20209, 20045, 20043, 20041, 20000   |
| Tosonic         | 20278   |
| Totevision      | 20240, 20037  |
| Touch           | 21972   |
| Trix            | 20037   |
| Ultra           | 20278, 20045  |
| Unitech         | 20240   |
| Vector          | 20045   |
| Vector Research | 20184, 20038  |
| Vextra          | 20072   |
| Victor          | 20067, 20041  |
| Video Concepts  | 20242, 20045  |
| Videomagic      | 20037   |
| Videosonic      | 20240, 20072, 20000   |
| Viewsonic       | 21972   |
| Villain         | 20000   |
| Voodoo          | 21972   |
| Wards           | 20479, 20240, 20081, 20072, 20060, 20048, 20047, 20046, 20045, 20043, 20042, 20041, 20038, 20037, 20035, 20033, 20000 |
| Wharfedale      | 20593   |
| White           | 20479, 20278, 20209, 20072, 20000   |
| Westinghouse    | 20479, 20209, 20002   |
| World           | 20240, 20072, 20035, 20000  |
| XR-1000         | 20240, 20072, 20035, 20000  |
| Yamaha          | 20041, 20038  |
| Zenith          | 21139, 20479, 20278, 20209, 20041, 20039, 20037, 20033, 20000   |
| ZT Group        | 21972   |

| DVD Players<br>Make   | Code  |
|-----------------------|---|
| 3D LAB                | 20539, 20503  |
| Acoustic Solutions    | 20730   |
| Accurian              | 21416, 21072, 20675   |
| Adcom                 | 21094   |
| Afreey                | 20698   |
| Aiwa                  | 20641   |
| Akai                  | 21089, 20770, 20705, 20695                                    |
| Alba                  | 20717, 20672  |
| Alco                  | 20790   |
| Allegro               | 20869   |
| Amphion Media Works   | 20872   |
| AMW                   | 20872   |
| Apex Digital          | 21061, 21056, 21020, 20794, 20755, 20717, 20672, 20533        |
| Arrgo                 | 21023   |
| Aspire Digital        | 21407, 21168  |
| Audiovox              | 21072, 21041, 20790, 20717                                    |
| Awa                   | 20730   |
| Axion                 | 21072   |
| B & K                 | 20662, 20655  |
| BBK                   | 21224   |
| Bel Canto Design      | 21571   |
| Blaupunkt             | 20717   |
| Blue Parade           | 20571   |
| Blue Sky              | 20699, 20695  |
| Brandt                | 20651   |
| Broksonic             | 20695   |
| California Audio Labs | 20490   |
| Celestial             | 21020   |
| Centrex               | 20672   |
| Cinea                 | 20831   |
| CineVision            | 20876, 20869, 20833   |
| Citizen               | 22116, 21587, 21277, 21003, 20695                             |
| Clairtone             | 20571   |
| Coby                  | 21351, 21177, 21165, 21107, 21086, 21077, 20852, 20778        |
| Craig                 | 20831   |
| Creative              | 20539, 20503  |
| Curtis Mathes         | 21087   |
| CyberHome             | 21537, 21502, 21129, 21117, 21024, 21023, 20874, 20816        |
| Cytron                | 20705   |
| Daewoo                | 21242, 21234, 21172, 21169, 20869, 20833, 20784, 20770, 20705 |
| Dansai                | 20770   |
| Daytek                | 20872   |
| Decca                 | 20770   |
| Denon                 | 20634, 20490  |
| Denver                | 20778   |
| Desay                 | 21407   |
| Digitrex              | 20672   |

## Appendix C: Programming the Remote Control, continued

### Programming Codes, continued

| DVD Players   |   |
|---------------|---|
| Make          | Code  |
| Disney        | 21270, 20675  |
| DiViDo        | 20705   |
| Dual          | 21085, 21068, 20675   |
| Durabrand     | 21127   |
| DVD2000       | 20521   |
| Electrohome   | 22116, 21003  |
| Emerson       | 21268, 20675, 20591   |
| Enterprise    | 20591   |
| Entivo        | 20539, 20503  |
| Enzer         | 20770   |
| ESA           | 21268   |
| Firstline     | 20651   |
| Fisher        | 20670   |
| Funai         | 21334, 21268, 20675   |
| Gateway       | 21158, 21077, 21073   |
| GE            | 20815, 20717, 20522   |
| Go Video      | 21730, 21304, 21158, 21144, 21099, 21075, 21044, 20869, 20833, 20783, 20744, 20741, 20717, 20715, 20573 |
| Go Vision     | 21072   |
| GoldStar      | 20869, 20741  |
| Goodmans      | 20790   |
| GPX           | 20769, 20699  |
| Gradiente     | 20651, 20490  |
| Greenhill     | 20717   |
| Grundig       | 20705, 20539  |
| Harman/Kardon | 20702, 20582  |
| Hello Kitty   | 20831   |
| Hitachi       | 20664, 20573  |
| Hiteker       | 20672   |
| iLo           | 21348   |
| Initial       | 20717   |
| Insignia      | 22095, 21268  |
| Integra       | 20627, 20571  |
| IRT           | 20783   |
| Jaton         | 21078   |
| JBL           | 20702   |
| JMB           | 20695   |
| JSI           | 21423   |
| JVC           | 21164, 20867, 20623, 20558  |
| jWin          | 21051, 21049  |
| Kawasaki      | 20790   |
| Kenwood       | 20534, 20490  |
| KLH           | 21149, 21020, 20790, 20717  |
| Kloss         | 20533   |
| Konka         | 20721, 20711  |
| Koss          | 21423, 21061, 20896, 20769, 20651   |
| Lasonic       | 21173, 20798, 20627   |
| Lecson        | 21533   |
| Lenoxx        | 21127   |
| LG            | 20869, 20741, 20591   |
| LiteOn        | 21440, 21416, 21158, 21058  |
| Loewe         | 20741, 20511  |
| Logix         | 20783   |
| Magnasonic    | 20675, 20651  |

| DVD Players                |  |
|----------------------------|--|
| Make                       | Code   |
| Magnavox                   | 21506, 21268, 20675, 20646, 20539, 20503               |
| Malata                     | 21159, 20782   |
| Marantz                    | 20675, 20539, 20503                                    |
| McIntosh                   | 21533, 21273   |
| Medion                     | 20651  |
| Memorex                    | 21270, 20831, 20695                                    |
| Microsoft                  | 22083, 20522   |
| Minato                     | 20752  |
| Mintek                     | 20839, 20717   |
| Mitsubishi                 | 21521, 20521   |
| Momitsu                    | 21082  |
| Mustek                     | 20730  |
| Myryad                     | 20894  |
| NAD                        | 20741  |
| Naiko                      | 20770  |
| Nakamichi                  | 21222  |
| NEC                        | 20869, 20785   |
| Nesa                       | 20717  |
| NexxTech                   | 21402  |
| Nintaus                    | 21051  |
| Norcent                    | 21265, 21107, 21003, 20872                             |
| Onkyo                      | 21769, 20627, 20503                                    |
| Oppo                       | 21525, 21224, 20575                                    |
| Optimus                    | 20571  |
| OptoMedia Elec-<br>tronics | 20896  |
| Oritron                    | 20651  |
| Palsonic                   | 20852, 20672   |
| Panasonic                  | 21762, 21641, 20703, 20571, 20503, 20490               |
| Philco                     | 20675  |
| Philips                    | 22084, 22056, 21354, 21267, 20675, 20646, 20539, 20503 |
| Phonotrend                 | 20699  |
| PianoDisc                  | 21024  |
| Pioneer                    | 21571, 20631, 20571, 20525, 20142                      |
| Polaroid                   | 21086, 21061, 21020                                    |
| Polk Audio                 | 20539  |
| Portland                   | 20770  |
| Presidian                  | 21072, 20675   |
| Proceed                    | 20672  |
| Proscan                    | 20522  |
| Prosonic                   | 20699  |
| ProVision                  | 20778  |
| Qwestar                    | 20651  |
| Radionette                 | 20741  |
| RadioShack                 | 20571  |
| RCA                        | 21769, 20822, 20790, 20717, 20571, 20522               |
| Realistic                  | 20571  |
| Reoc                       | 20752  |
| Revoy                      | 20699  |
| Rio                        | 20869  |
| RJTech                     | 21360  |
| Rotel                      | 21178, 20623   |
| Rowa                       | 20823  |
| Saba                       | 20651  |

| DVD Players     |   |
|-----------------|---|
| Make            | Code  |
| Sampo           | 20752, 20698  |
| Samsung         | 21075, 21044, 20820, 20744, 20573, 20490, 20199               |
| Sansui          | 20695   |
| Sanyo           | 21334, 20873, 20695, 20675, 20670                             |
| Schneider       | 20783   |
| Schwaiger       | 20752   |
| Sensory Science | 21158   |
| Sharp           | 21256, 20752, 20675, 20630                                    |
| Sharper Image   | 21117   |
| Sherwood        | 21077, 21043, 20770, 20633                                    |
| Shinsonic       | 20839, 20533  |
| Slim Art        | 20784   |
| SM Electronic   | 20730   |
| Sonic Blue      | 21099, 20869, 20783, 20715, 20573                             |
| Sony            | 21536, 21533, 21516, 21431, 21070, 21033, 20864, 20533        |
| Sungale         | 21074   |
| SVA             | 21105, 20860, 20717   |
| Sylvania        | 21268, 20675  |
| Symphonic       | 21334, 21268, 20675   |
| TAG McLaren     | 20894   |
| Tatung          | 20770   |
| Teac            | 20790, 20717, 20571   |
| Technics        | 20703, 20490  |
| Technika        | 20770   |
| Technosonic     | 20730   |
| Tevion          | 20651   |
| Theta Digital   | 20571   |
| Thomson         | 20522, 20511  |
| Tivo            | 21503   |
| Toshiba         | 21769, 21608, 21515, 21503, 21154, 20695, 20573, 20539, 20503 |
| Tredex          | 20804, 20803, 20800   |
| Unimax          | 20770   |
| United          | 20730   |
| Universum       | 20591   |
| Urban Concepts  | 20539, 20503  |
| US Logic        | 20839   |
| V               | 21226, 21064  |
| Venturer        | 20790   |
| Vizio           | 21226, 21064  |
| Vocopro         | 21360   |
| Wesder          | 20699   |
| Xbox            | 22083, 20522  |
| Yamaha          | 20545, 20539, 20497, 20490                                    |
| Yamakawa        | 20872   |
| Zenith          | 20869, 20741, 20591, 20503                                    |
| Zeus            | 20784   |
| Zoece           | 21265   |



## Appendix D: Lamp-Cartridge Replacement and Cleaning



### CAUTION



#### **BURN DANGER! HOT SURFACES INSIDE!**

Touch lamp cartridge handle only. Do not touch lamp or lamp cartridge housing. Keep lamp cartridge horizontal during removal. Do not tilt as glass may come out and cause injury. Replace lamp cartridge only with the same part number 915B403001.

### WARNING

THE ACCESS PANEL IS PROVIDED WITH AN INTERLOCK TO REDUCE THE RISK OF EXCESSIVE ULTRAVIOLET RADIATION. DO NOT DEFEAT ITS PURPOSE OR ATTEMPT TO SERVICE WITHOUT REMOVING PANEL COMPLETELY.

**CAUTION:** If the television is on, press **POWER** to turn it off. **Unplug the television and allow it to cool for at least one hour before attempting to replace the lamp cartridge.**

### Lamp Life

The light source for this television is a lamp, which is part of a lamp cartridge assembly. The life of the lamp can vary, based on the lamp itself, the air temperature around the TV while it is operating, the selected lamp mode, and your viewing patterns. Warmer air or poor ventilation shorten the lamp life, as does use of the **Bright** lamp mode and turning the television on and off frequently. Mitsubishi warrants the lamp for one (1) year from the date of original purchase at retail.

### To Order a New Lamp

#### **To Receive a Replacement Lamp Under Warranty**

Call (800) 553-7278. Please have model number, serial number, and TV purchase date available.

**Important:** All lamps replaced under warranty must be returned to Mitsubishi where they will be inspected for defect verification.

#### **To Purchase a Replacement Lamp After Warranty**

Visit our website at [www.mitsuparts.com](http://www.mitsuparts.com) or call (800) 553-7278. Order the following:


**Lamp Part Number 915B403001**

### Lamp-Substitution Alert

MDEA recommends that you use only genuine Replacement Lamp Assemblies purchased directly from Mitsubishi or a Mitsubishi Authorized Dealer or Mitsubishi Authorized Service Center. MDEA advises that replacement lamps obtained separately from the Lamp Cartridge and/or Lamp Assemblies obtained from unauthorized sellers may be incorrect for your television, may not fit or perform properly and may even damage your television. MDEA can not be responsible for the performance, reliability or safety of any replacement lamps that are obtained from unauthorized sources.

### WARNING

- Do not remove the lamp cartridge immediately after turning off the television. You may get burned because the lamp is very hot. Allow the television to cool for at least one hour before replacing the lamp cartridge.
- Do not remove the lamp cartridge except when replacing it. Careless treatment can result in injury or fire.
- Do not touch the lamp glass element. It may be very hot and break, causing injuries or burns.
- Be sure not to insert any metal or flammable object into the lamp cartridge opening, as it may cause fire or electrical shock. If a foreign object is inserted into the opening, unplug the AC cord of the TV and contact your dealer for service.
- Install the lamp cartridge securely. Failure to do so may cause a fire.
- Do not touch the lamp glass elements. Oils from your fingers may cause premature lamp failure.

 = MERCURY

THE LAMP INSIDE THIS PRODUCT CONTAINS MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance at [www.eiae.org](http://www.eiae.org)



## Appendix D: Lamp-Cartridge Replacement and Cleaning, continued

### Lamp-Cartridge Replacement

#### Removing the Old Lamp Cartridge

1. Turn off TV power and allow the lamp to cool for at least one hour before proceeding.
2. After the lamp has cooled, remove the cover of the lamp compartment, located on the back of the TV. Refer to figures 1 and 2. Use a #2 (large) Phillips screwdriver to loosen the screw securing the cover. Keep the screw and cover for re-installation.
3. With a large Phillips screwdriver, loosen the two shiny screws securing the lamp cartridge until they disengage from the mating threads. These are captive screws and cannot be separated from the lamp cartridge.
4. Fully open the bag supplied with the replacement lamp and set the opened bag aside.
5. Gently grasp the handle of the lamp cartridge and pull the old cartridge straight out. See figure 3.

**CAUTION:** Do not tilt or rotate the cartridge, as small glass fragments may fall out.

6. Without tilting or putting down the lamp cartridge, insert it into the opened bag. Close the bag while being careful not to let any glass particles fall out.

#### Installing the New Lamp Cartridge


1. Do not touch the glass parts of the new lamp cartridge. Insert the new cartridge into the TV in the same orientation as the old cartridge. Push on the cartridge housing until it is fully seated.
2. With either your fingers or the screwdriver, gently tighten the two shiny screws. If using a screwdriver, **AVOID OVERTIGHTENING!**
3. Replace the plastic cover and retaining screws.
4. **WASH YOUR HANDS THOROUGHLY, AS THIS LAMP CONTAINS MERCURY.**

#### Disposal of the Old Lamp Cartridge

**Lamp under warranty:** All lamps replaced under warranty must be returned to Mitsubishi. Use the return shipping label provided and send to Mitsubishi Digital Electronics, America, 1001 Cherry Drive, Suite 2, Braselton, GA 30517.

**IMPORTANT: Lamps found to be without defect will be returned and charged back to the sender.**

**Lamp no longer under warranty:** Contact your local authorities or the Electronic Industries Alliance at [www.eiae.org](http://www.eiae.org) for lamp-disposal or recycling instructions. Do not dispose of the old lamp with common trash.

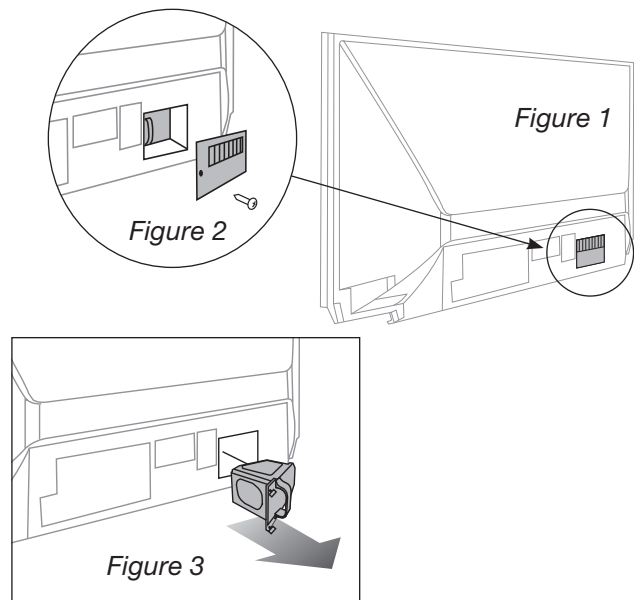

**Use only replacement lamp part number 915B403001.**

### Lamp-Cartridge Filter Cleaning

If the TV shuts off after displaying the message “TV will shut down in a few seconds. Please check if the air flow is blocked ” and/or the **STATUS LED** is yellow, the air filter may need cleaning. The air filter is part of the lamp cartridge. Use the following procedure to clean the filter.

1. Remove the lamp cartridge from the TV as described under “Removing the Old Lamp Cartridge.” Do not tilt or rotate the cartridge. Do not touch the glass parts of the lamp cartridge.
2. Holding the lamp cartridge horizontal (do not tilt or rotate), use a soft dry brush or vacuum cleaner to remove any dust that may be present on the mesh filter. Do not use liquids. See figure 4.
3. Reinstall the lamp cartridge as described under “Installing the New Lamp Cartridge.”

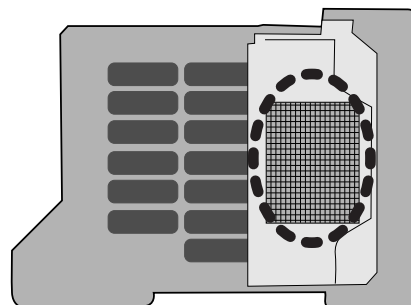


Figure 4

Keep lamp cartridge horizontal and remove dust from the mesh filter using a vacuum cleaner or soft dry brush.

## Appendix E: NetCommand HDMI Control of CEC Devices

Many new HDMI devices have a feature called CEC (Consumer Electronics Control) or HDMI Control. Mitsubishi calls this feature NetCommand HDMI Control or NetCommand for HDMI. HDMI CEC allows one device, such as the TV, to control other devices, such as an A/V receiver or disc player. CEC use is optional.

Each manufacturer chooses which CEC functions to support so it is difficult to predict which devices and features are compatible with Mitsubishi's NetCommand for HDMI. You may find that CEC functions for a specific device are limited.

### To use CEC, you must enable operation in all three of the following:

- **The TV's Inputs > NetCommand HDMI Control menu.** When off, the TV sends no control signals to CEC devices. NetCommand HDMI control is off by default.
- **The TV's Inputs > Name menu.** You can turn on or off the TV's control signals to individual CEC devices. This option operates only when NetCommand HDMI Control is enabled.
- **The device setup menus.** Most devices with HDMI CEC compatibility let you turn it on or off in the device menu, where it is typically listed as "HDMI Control."

### Enabling or Disabling the TV's NetCommand HDMI Control

1. Press **MENU** to display the TV *Main* menu.
2. Highlight **Inputs** using **▲ ▼**.
3. Press **▶** and then **▼** to select **NetCommand HDMI Control** and open the menu shown in figure 1.
4. Use **▲ ▼** to turn NetCommand HDMI Control **On** or **Off**; **Off** shuts off all NetCommand for HDMI signals.

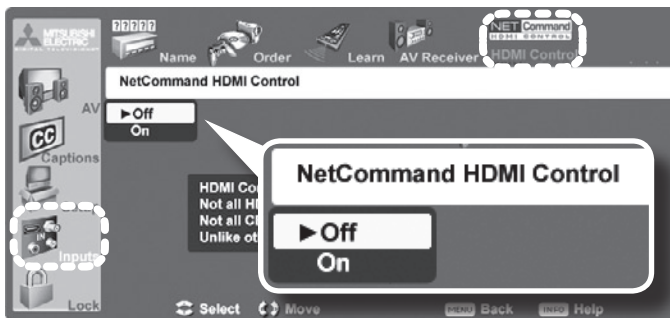


Figure 1. The TV menu *Inputs > NetCommand HDMI Control* lets you set HDMI control either on or off.

### Connecting HDMI Devices to the TV

When setting up CEC control:

- Enable the TV's NetCommand HDMI control as described above. NetCommand for HDMI is off by default.
- Connect and set up HDMI devices one at a time.
- First turn on the device and allow the power-on sequence (boot up) to complete. Stop any playback, and then connect the HDMI cable as described next.

1. Turn on the device and allow it to complete the power-on sequence (boot up).
2. Connect the device to one of the TV's HDMI inputs. When the TV detects the connection, the **Auto Input Sensing** screen will appear and provide additional instructions. You will see one of the following screens, depending on your equipment.

- **Figure 2 (TV recognizes the CEC device).** The TV's NetCommand HDMI Control is on and the device's CEC capability is on. This screen confirms the device is CEC compatible by showing the name provided by CEC. The screen shown in figure 3 may display first before figure 2 appears.

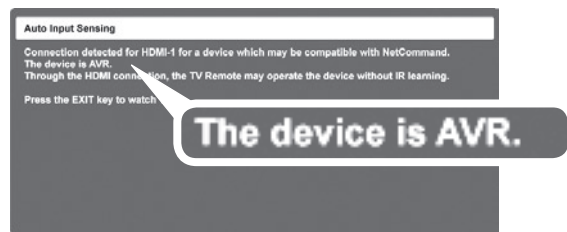


Figure 2. TV recognizes the CEC device. The TV's NetCommand for HDMI is on and the connected device's HDMI Control is also on.

- **Figure 3 ("power on the device").** One of these conditions applies:
  - The TV's NetCommand HDMI Control is turned on, but HDMI control is turned off in the menu of the new device. **Action:** Enable the device's CEC capabilities in the device's setup menus. Within a few minutes you may see the screen in figure 2.
  - The device has not yet been detected (e.g., no power). **Action:** Power on the device.
  - The device does not have CEC compatibility. **Action:** Check the device's setup menus. If there is no HDMI control listed, the device may not be compatible with CEC. Control the device with its own remote control or use the TV's NetCommand IR control.

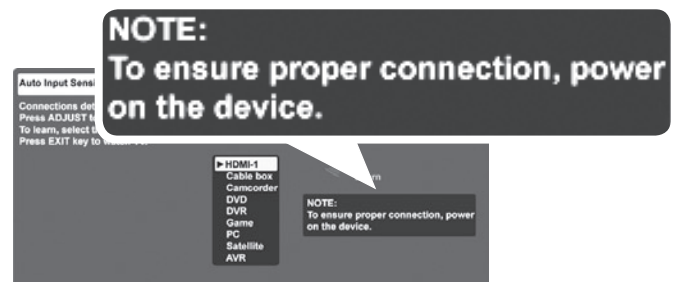


Figure 3. "Power on the device." The TV's NetCommand HDMI Control is on but either the connected device's HDMI Control is off or the device is not CEC compatible

- **Figure 4 (NetCommand HDMI Control is off).** The TV's NetCommand for HDMI Control is turned off.

**Action:** Follow the instructions in “Enabling or Disabling the TV's NetCommand HDMI Control” on the previous page.

**Note:** You may not see the screen in figure 2 if the HDMI device has previously been detected by the TV. To check if CEC is enabled for the device, open the **Inputs > Name** menu. If you are unable to change the device name, it indicates CEC is enabled.


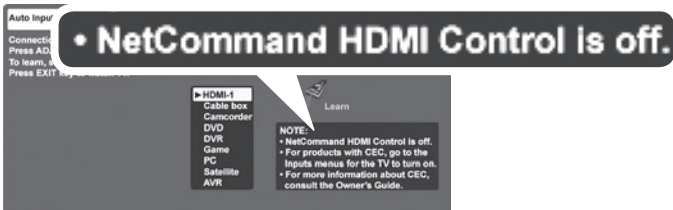


Figure 4. NetCommand HDMI Control is off.

3. With the HDMI CEC device powered on, switch the TV to the device (press the **INPUT** key, highlight the device icon, press **ENTER**). Within a few minutes CEC will be established. You may see the screen shown in figure 2. If the screen does not display, ensure HDMI control is turned on in the device's menus.
4. Once CEC has been established, CEC will automatically name the device. Any name you may have previously selected in figure 3 or figure 4 will be changed to the new name.

### NetCommand HDMI Control for an HDMI A/V Receiver and Connected Devices

1. Turn on the TV's NetCommand for HDMI feature. See “Enabling or Disabling the TV's NetCommand HDMI Control” on the previous page.
2. Connect the A/V receiver to the TV before connecting any other device to the A/V receiver.
3. If you want to be able to switch between the A/V receiver speakers and the TV speakers, also connect the TV's **DIGITAL AUDIO OUTPUT** to an input on the A/V receiver.
4. Power on the TV and A/V receiver and allow both to complete the power-on sequence (boot up).
5. Connect the HDMI output of the A/V receiver to the TV's HDMI input. The TV will automatically switch to the input.
6. If the A/V receiver is HDMI CEC compatible, turn on HDMI control in the A/V receiver (see the A/V receiver menus). If the A/V receiver menu does not show HDMI control, the A/V receiver may not be compatible with CEC.

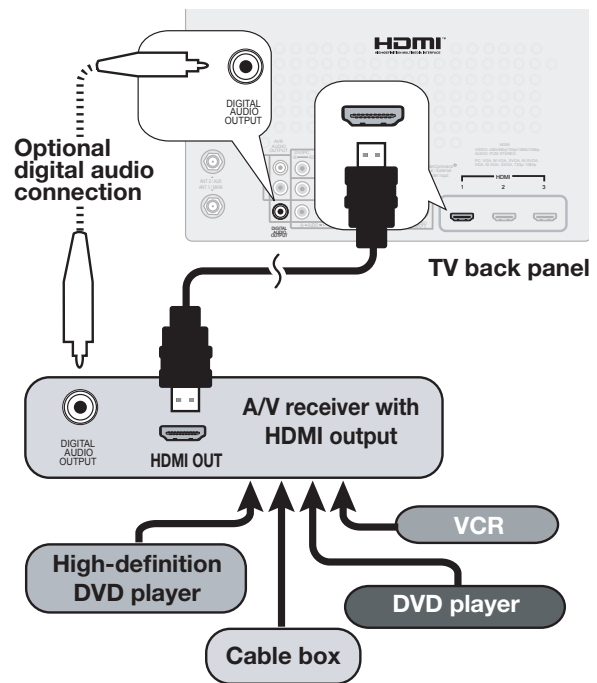

*Connecting HDMI devices. The optional digital audio connection allows you to hear audio through the A/V receiver from devices connected to the TV only.*

7. Plug in the AC power cord and power on the first HDMI device, such as a disc player, cable box or satellite receiver, and allow the device to complete the power-on sequence (boot up). Stop playback if the device starts playing.
8. Connect the device to the A/V receiver with an HDMI cable.
9. Select the device's HDMI input on the A/V receiver's front panel controls or remote control.
  - If the new device has the HDMI CEC Control feature turned on, the TV will show a display similar to Figure 2 and automatically name the device.
  - If the new device has the HDMI CEC Control feature turned off or if it is not CEC compatible, there will be no display. Check the new device's menu for the HDMI Control feature and turn it on. If there is no HDMI Control feature listed, this device may not be compatible with HDMI CEC and you will need to control the device manually.
10. After the present device has been connected and set up, repeat steps 7 through 9 for the next HDMI device.
11. **736 or 835 Series TV.** If desired, perform NetCommand IR Learning to supplement CEC functions.

## Resolving CEC Conflicts, Changing HDMI Connections, Removing HDMI Devices

Because each manufacturer selects which CEC functions to support, some devices can conflict with other devices. If control conflicts arise, you can:

- Turn off CEC in the other device’s setup menu.
- Turn off TV control of an individual CEC device (see figure 5 below).
- Reset TV control of an individual CEC device (see figure 6 below).

### Turning Off the TV’s HDMI Control of an Individual CEC Device (Figure 5)

1. Press **MENU** on the TV remote control to enter the TV **Main** menu.
2. Select the **Inputs** menu using the **▲ ▼** keys.
3. Select the **Inputs > Name** menu using the **▶** key.
4. Highlight the device to remove using the **▼** key and then the **▶** key.
5. With the device highlighted, select **Control Off** to turn off the TV’s ability to control the device.
6. Press **EXIT** to clear the menus.

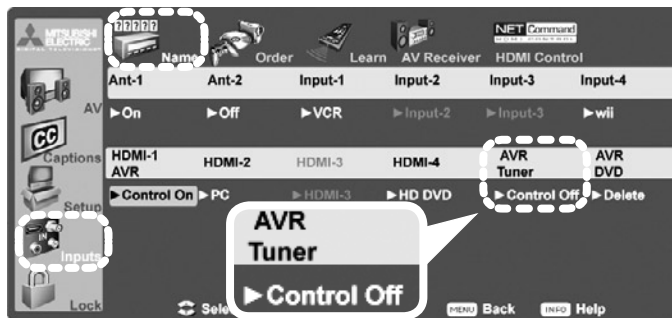


Figure 5. Inputs > Name menu with HDMI Control for AVR Tuner turned off

### Resetting HDMI Control or Removing an HDMI Device (Figure 6)

1. Power off the device.
2. If removing the device, disconnect the HDMI cable.
3. Press **MENU** on the TV remote control to enter the TV **Main** menu.
4. Select the **Inputs** menu using the **▲ ▼** keys.
5. Select the **Inputs > Name** menu using the **▶** key.
6. Highlight the device to reset using the **▼** key and then the **▶** key.
7. With the device highlighted, select **Delete** to reset HDMI Control.
8. Press **EXIT** to clear the menus.  
If the device is still connected, the **Auto Input Sensing** screen will display.



Figure 6. Inputs > Name menu with AVR DVD deleted.

## Using NetCommand HDMI Control

As an example of using NetCommand for HDMI devices, you would press **PLAY** on the device itself to:

- Turn on the TV if not already on
- Switch to the device (no need to display the **Input Selection** menu)
- Begin play of the device

Test your equipment with the TV’s remote control to find out which commands are supported. See the table below for commands that may be available, depending on the individual device.

### CEC-enabled VCR, DVD, and DVR functions that may be available:

| Record/Playback | Menu Navigation    | Channel Tuning     | Other         |
|-----------------|--------------------|--------------------|---------------|
| ▶               | ◀ ▶ ▲ ▼            | CH ^ / v           | GUIDE         |
| ● ■             | ENTER              | Digits 0-9, CANCEL | F1 (content)* |
| ◀ ▶             | CANCEL (to cancel) | ENTER              | MENU          |

\* The F1 key defaults to work like the device’s **LIST** key.

If you have a CEC-enabled A/V receiver, CEC-enabled devices connected to the A/V receiver with an HDMI cable may also be controllable. They can be selected from the TV’s **Input Selection** menu.

### CEC-enabled A/V receiver functions that may be available:

- Try the **VOL**, **MUTE**, and menu-navigation keys.
- To open the A/V receiver menu, follow these steps:
  1. While watching TV, press **AUDIO**.
  2. Press **▲** repeatedly until the **Speakers** option displays.
  3. While **Speakers** is still displayed, press **MENU**.

**736 or 835 Series TV.** You can use NetCommand IR “learning” to add commands to those supported by CEC. You must first connect and place IR emitters for the devices.



## Appendix F: Troubleshooting

### TV Reset Comparison Guide

You can resolve many common TV problems using the reset functions described in the following table. See also the troubleshooting suggestions later in this appendix.

#### IMPORTANT

**Before you change sound or picture settings:** If picture or sound settings seem wrong for a broadcast

channel (a channel from **ANT 1**, **ANT 2**, a cable box, or satellite receiver), first check other channels from the same input before changing settings. If most other channels from the same input seem correct, there is likely a problem with the broadcast rather than with the TV. Use care in this case, as changes you make to fix problems on individual channels also affect all other channels on the same input.

| Reset Name  | When to Use  | How to Use   | Resulting Action   |
|---|--|--|--|
| <b>Format</b>   | When the picture shape seems incorrect, use <b>FORMAT</b> to change the shape of the picture.  | Press the <b>FORMAT</b> key to cycle through the available formats to find the best format for the current picture.  | The last-used format for a signal type is memorized for each input. The next time the same input and the same signal type is viewed, the last-used format will be recalled.  |
| <b>PerfectColor™ and PerfectTint™ Reset</b><br>(for the single input currently being watched) | When the color intensities seem out of balance, use the PerfectColor/PerfectTint reset to reset the color balances to the original factory settings. Both PerfectColor and PerfectTint are reset at the same time. | <ol style="list-style-type: none"> <li>1. While viewing the input to be reset, press <b>MENU</b> to display the <b>Main</b> menu with the A/V icon highlighted.</li> <li>2. Use <b>▶</b> to highlight <b>PerfectColor</b> and press <b>ENTER</b> to display the PerfectColor adjustment screen.</li> <li>3. Press <b>CANCEL</b> to reset the colors.</li> </ol>  | All PerfectColor/PerfectTint sliders are reset to the original center position. The PerfectColor/PerfectTint settings for other inputs remain unchanged.   |
| <b>A/V Memory Reset</b><br>(for the single input currently being watched)                     | When audio and/or video settings for a single input seem incorrect, use A/V Memory Reset to return the input to the original factory settings.   | <ol style="list-style-type: none"> <li>1. While viewing the input to be reset, press <b>MENU</b> to display the <b>Main</b> menu with the A/V icon highlighted.</li> <li>2. Use <b>▶</b> to highlight the <b>Reset</b> icon and press <b>ENTER</b> to reset.</li> </ol>  | All Audio and Video settings for the individual input are reset except for the Listen To, Language, audio Balance, and Closed Caption settings.  |
| <b>A/V Reset</b><br>(for all inputs)  | To reset audio and video adjustments for all inputs to the original factory settings.  | While viewing the TV, press the control-panel buttons <b>GUIDE</b> and <b>FORMAT</b> at the same time.   | All Audio and Video settings are returned to the original factory settings, including Listen To and Language, plus Closed Captions settings and Format settings.   |
| <b>Channel Memorization</b>   | To erase and re-memorize channels on <b>ANT 1</b> or <b>ANT 2</b> .  | <ol style="list-style-type: none"> <li>1. While viewing the TV, press <b>MENU</b> to display the <b>Main</b> menu.</li> <li>2. Press <b>▼</b> to highlight the <b>Setup</b> icon.</li> <li>3. Press <b>▶</b> to highlight the <b>Scan</b> icon.</li> <li>4. Press <b>▼</b> to highlight the antenna input and reception mode, e.g. <b>Ant 1 Air</b>.</li> <li>5. Press <b>▶</b> to highlight the <b>Start</b> button icon and press <b>ENTER</b> to start the memorization.</li> </ol> | All previously memorized channels for the selected antenna input are erased and a new set of memorized channels is created. All custom settings for Fav, channel names, and channel locks are deleted. To add or delete individual channels, see <b>Edit</b> menu instructions on page 44. |
| <b>Lock Menu Pass Code</b>  | To change your <b>Lock</b> menu pass code  | See the cutout page in Appendix B, page 65.  | Allows a new code to be established.   |
| <b>Control-Panel Lock Release</b>   | To re-enable the control-panel buttons after activation of the Control-Panel Lock  | Press and hold the <b>MENU</b> button on the control panel for over eight seconds. This works even if the TV is powered off.   | Allows the control panel to be unlocked if the remote control is misplaced.  |



## Appendix F: Troubleshooting, continued

| Reset Name  | When to Use  | How to Use   | Resulting Action  |
|---|--|--|---|
| <b>System Reset</b>   | If the TV does not turn on or off, does not respond to the remote control or control-panel buttons, or has audio but no video.   | Press the <b>SYSTEM RESET</b> button on the control panel.   | The TV will turn off and the green LED will flash quickly for about one minute. When the green LED stops flashing, you may turn on the TV. The changes you made most recently, before using <b>SYSTEM RESET</b> , may be lost. Changes you made previously, however, are not lost.  |
| <b>TV Reset</b><br><b>IMPORTANT:</b><br>Use this reset only if all other resets have been unsuccessful. | To reset all consumer-accessible settings and all memories to the original factory defaults.<br><br><b>CAUTION:</b> All owner-performed setups and adjustments will be erased. | <ol style="list-style-type: none"> <li>1. While viewing the TV, press <b>MENU</b> to display the TV <b>Main</b> menu.</li> <li>2. With the <b>Main</b> menu displayed, press number keys <b>1 2 3</b> to display the <b>Reset</b> menu.</li> <li>3. <b>READ THE ON-SCREEN WARNING AND INSTRUCTIONS.</b> <ul style="list-style-type: none"> <li>• If you do not wish to use this reset, press <b>EXIT</b> or <b>MENU</b> to back out.</li> <li>• If you do wish to use the reset, press <b>ENTER</b> to erase all memories and settings.</li> </ul> </li> </ol> | The TV will start the initialization process. The TV will then turn off and the front green LED will start flashing. When the LED stops flashing, you can turn the TV on again. The Parental Lock Pass code will remain unaffected, but all other memories and settings outlined in this Owner's Guide will need to be set again. |

## Service and Customer Support

### Service

If you are unable to correct a problem with your TV, consult your Mitsubishi dealer or Mitsubishi Consumer Relations at (800) 332-2119.

- DO NOT adjust any controls other than those described in this Owner's Guide.
- DO NOT remove the protective back cover of your TV.

### Customer Support

- To order replacement or additional remote controls, lamp cartridges, or Owner's Guides,

visit our website at [www.mitsuparts.com](http://www.mitsuparts.com) or call (800) 553-7278.

- For questions:
  - ◆ Call Consumer Relations at 800-332-2119.
  - ◆ E-mail: [MDEAservice@mdea.com](mailto:MDEAservice@mdea.com)
  - ◆ Website: [www.mitsubishi-tv.com](http://www.mitsubishi-tv.com)

### Important

All lamps replaced under warranty must be returned to Mitsubishi where they will be inspected for defect verification.

## Appendix F: Troubleshooting, continued

| General TV Operation |  |   |
|----------------------|--|---|
|                      | Symptom  | Remarks   |
| 1.                   | A fan is running even while the TV is powered off.   | The room is too warm. When the TV is off, internal components continue to draw power and must be cooled by the fan.   |
| 2.                   | The fan gets louder after the TV is shut off.  | Normal operation. The fan speeds up to cool the lamp quickly after the TV has been shut off.  |
| 3.                   | The TV remote control does not work.   | <ul style="list-style-type: none"> <li>• Check that the batteries are fresh and installed correctly.</li> <li>• Check that the slide switch on the remote is set to TV.</li> <li>• Be no more than 20 feet from the TV when using the remote control.</li> <li>• Program the remote control to operate the TV or other device.</li> <li>• Reset the remote control.</li> <li>• If you have a custom home theater controller but prefer to use the TV's remote control, unplug the controller cable from the TV's IR—NetCommand® Output/External Controller Input.</li> </ul>  |
| 4.                   | When I try to use the remote control, the POWER key blinks five times.   | Replace the batteries.  |
| 5.                   | TV does not respond to the remote control or to control-panel buttons and TV will not power on or off.                       | <ul style="list-style-type: none"> <li>• Unplug the AC power cord for 10 seconds.</li> <li>• Use the System Reset button.</li> </ul>  |
| 6.                   | When a device is selected from the Input Selection menu, the screen is blue or black (no signal source).                     | <ul style="list-style-type: none"> <li>• Make sure the selected device is turned on.</li> <li>• Begin play of the device.</li> </ul>  |
| 7.                   | You have forgotten your Lock menu pass code.   | See Appendix B, "Bypassing the Parental Lock," page 65.   |
| 8.                   | Rating restrictions are not working.   | <p>Open the Parental Lock menu and:</p> <ul style="list-style-type: none"> <li>• Verify that the U.S. Ratings or Other Ratings setting is On.</li> <li>• Check the Lock Time/Unlock Time to check if rating restrictions are disabled.</li> <li>• Rating restrictions apply only to content on ANT 1 and ANT 2, and VIDEO composite video jacks.</li> </ul>   |
| 9.                   | On-screen displays appear each time you change a function.   | Normal TV operation.  |
| 10.                  | A warning message appeared on screen stating, "TV will shut down in a few seconds. Please check if the air flow is blocked." | <ul style="list-style-type: none"> <li>• Room temperature has exceeded proper levels. Cool the room.</li> <li>• The TV has overheated. Clear blocked air vents and ensure at least four inches of clearance on all sides of the TV.</li> <li>• Clean the air filter on the lamp cartridge. See page 75.</li> </ul>  |
| 11.                  | I have turned on CEC for my HDMI devices but control is erratic and I wish to disable it.                                    | <ul style="list-style-type: none"> <li>• Turn off all NetCommand HDMI control signals from the TV. Open the Inputs &gt; NetCommand HDMI Control menu and set to Off (page 48).</li> <li>• Turn off the TV's NetCommand HDMI control for the specific device. Open the Inputs &gt; Name menu, select the device, select Control Off (page 48).</li> <li>• Disable CEC on the device itself. See the device's instructions.</li> <li>• If the problem persists, do the following: <ol style="list-style-type: none"> <li>1. Disconnect the device from the TV.</li> <li>2. Open the Inputs &gt; Name menu. Highlight the device and select Delete to remove the device from the Input Selection menu.</li> <li>3. Reconnect the device to the TV and Auto Input Sensing will recognize the device as a non-CEC device.</li> </ol> </li> </ul> |

## Appendix F: Troubleshooting, continued

| TV Channels |  |   |
|-------------|--|---|
|             | Symptom  | Remarks   |
| 1.          | The TV takes several seconds to respond to channel changes.        | <ul style="list-style-type: none"> <li>It is normal for digital channels to take longer to tune in.</li> <li>Press ENTER after entering a channel number to avoid delays.</li> <li>Use a 4-digit number for an over-the-air digital channel.</li> <li>Use a 6-digit number for digital cable channels if your cable service is able to recognize 6-digit channel numbers.</li> </ul>  |
| 2.          | You cannot access a channel.                                       | <ul style="list-style-type: none"> <li>Use number keys instead of CH <math>\wedge/\vee</math>.</li> <li>Be sure the channel you want to view is in memory. See Setup &gt; Scan on page 43.</li> <li>Check that the TV is switched to the correct device or antenna for that channel by pressing the INPUT key.</li> <li>Make sure Channel Lock is off.</li> <li>Make sure the Lock &gt; Parent menu lock is set to off.</li> <li>If you cannot tune to a virtual digital channel even though the TV has already memorized digital channels, tune to the physical channel number used by the broadcaster. The virtual channel will then be automatically added to memory.</li> </ul> |
| 3.          | Name options are not available for some channels.                  | You can name only memorized analog channels and memorized digital channels not named by the broadcaster.  |
| 4.          | When ChannelView list is displayed, information appears incomplete | <ul style="list-style-type: none"> <li>Available information is sent from the broadcaster or cable provider. No other data is available.</li> <li>Make sure the TV clock is set correctly.</li> </ul>   |

| TV Power On/Off |   |  |
|-----------------|---|--|
|                 | Symptom   | Remarks  |
| 1.              | TV takes an excessively long time to power on.                          | <ul style="list-style-type: none"> <li>When switched on, the TV needs time to boot up, just as a computer does. Also, the TV's lamp requires a few moments to heat up to full brightness.</li> <li>TV Energy Mode is set to Low Power. Change TV Energy Mode to Fast Power On in the Setup menu.</li> </ul>  |
| 2.              | You cannot program the TV to turn on automatically (Timer function)     | <ul style="list-style-type: none"> <li>The TV may be locked.</li> <li>The clock may not be set.</li> <li>TV Energy Mode is set to Low Power. Change to Fast Power On in Setup menu.</li> </ul>   |
| 3.              | The TV will not turn on after being plugged in.                         | If light on front panel is blinking, wait at least one and a half minutes for the light to turn off, then press POWER again.   |
| 4.              | TV turned itself off and the light on the front panel started to blink. | <ul style="list-style-type: none"> <li>Momentary power fluctuation caused the TV to turn off to prevent damage. Wait for the green light to stop flashing and turn the TV on again.</li> <li>If the TV does not stay on, use the System Reset button on the control panel. If this happens frequently, obtain an AC line power conditioner/surge protector.</li> <li>An unusual digital signal may have been received, triggering a protection circuit. Wait for the light to stop flashing and turn TV on.</li> </ul> |
| 5.              | TV turned itself off and the STATUS light is a steady yellow.           | <ul style="list-style-type: none"> <li>The TV has overheated. Clear blocked air vents and ensure at least four inches of clearance on all sides of the TV.</li> <li>Clean the lamp-cartridge air filter. See Appendix D.</li> </ul>  |
| 6.              | TV will not power off.  | Use the System Reset button.   |

## Appendix F: Troubleshooting, continued

| Picture |  |   |
|---------|--|---|
|         | Symptom  | Remarks   |
| 1.      | Picture does not look like a high-definition picture.  | Not all signals are high-definition signals. To receive high-definition programming from your cable or satellite provider, you must subscribe to the provider's high-definition service. Some over-the-air broadcasts are in high-definition and can be received with a high-quality antenna suited to your location. |
| 2.      | Picture has become dimmer.   | <ul style="list-style-type: none"> <li>• The lamp is nearing the end of its life. Order a new lamp. See Appendix D for ordering information and replacement instructions.</li> <li>• Adjust picture brightness and contrast to maximum levels.</li> <li>• Change Lamp Mode from Standard to Bright.</li> </ul>        |
| 3.      | There is a large black or gray rectangle on the screen.  | The TV's analog closed captioning has been set to "text" mode in the <b>Captions</b> menu. Turn off because there is no text information being broadcast.   |
| 4.      | You cannot view a picture when playing a VHS tape.   | Check your VCR's owner's guide for further troubleshooting.   |
| 5.      | VCR or DVD player's on-screen menus jitter up and down.  | Possible cause: Many VCRs and DVD players provide on-screen menus at only half-resolution. These lower-resolution graphics may appear to jitter up and down when the TV converts them to high-definition graphics.  |
| 6.      | When viewing a stopped VCR, white lines are rolling on the screen.                                 | <ul style="list-style-type: none"> <li>• Turn off video mute for the VCR.</li> <li>• Begin playing the tape.</li> <li>• Change the VCR input to the antenna input.</li> </ul>   |
| 7.      | A color program appears as a black and white image, or the colors are dim, or the screen is black. | The PerfectColor color balance has been incorrectly set. Reset the PerfectColor balance.  |
| 8.      | Picture from an HDMI input is noisy (poor quality).  | Upgrade a Category 1 (unmarked) HDMI cable to a Category 2 high-speed HDMI cable.   |
| 9.      | The image from a computer appears distorted when viewed on the TV.                                 | Normal TV operation. The TV does not correct distortion in the picture from a computer because the correction process may cause the edges of the image to be cut off.   |

## Appendix F: Troubleshooting, continued

| <b>Sound</b> (see also NetCommand troubleshooting for additional help with A/V receiver concerns) |  |  |
|---|--|--|
|   | <b>Symptom</b>   | <b>Remarks</b>   |
| 1.  | There is no sound even when the volume is turned up.   | <ul style="list-style-type: none"> <li>• Check if the MUTE button is on.</li> <li>• The TV's "Listen to:" setting may be set to SAP.</li> <li>• Check that the Speakers option is set to TV to hear sound from the TV speakers.</li> <li>• If using an A/V receiver, check that the Speakers option is set to AV Receiver to hear sound from the A/V receiver speakers.</li> <li>• Perform a System Reset.</li> </ul>  |
| 2.  | The sound does not match the screen picture.   | The TV's Listen to: setting may be set to SAP. See page 41.  |
| 3.  | The sound from my A/V receiver does not match the screen picture (I should hear the correct audio from my A/V receiver).                             | <ul style="list-style-type: none"> <li>• Check that DIGITAL AUDIO OUTPUT and/or AVR AUDIO OUTPUT on TV's back panel is connected to the A/V receiver. Without this connection, devices connected only to the TV (and not the A/V receiver) can be heard only from the TV speakers. Note that this includes the ANT 1/ANT 2 inputs, a device (such as a camcorder) connected to the front panel, and any other device sending audio to the TV only.</li> <li>• Check A/V receiver input selection in the Inputs &gt; AV Receiver menu. If NetCommand is set up incorrectly for the A/V receiver, see "A/V Receiver Control: Automatic Audio Switching," page 59.</li> </ul> |
| 4.  | The sound from my A/V receiver does not match the screen picture (my source device should be sending both audio and video through the A/V receiver). | <ul style="list-style-type: none"> <li>• Check A/V receiver input selection in the Inputs &gt; AV Receiver menu. If NetCommand is set up incorrectly for the A/V receiver, see "Setup to Control Automatic Audio and Video Switching via HDMI," page 62.</li> <li>• The TV's Listen to: setting may be set to SAP. See page 41.</li> </ul>   |
| 5.  | Cannot select an audio-only device; it does not appear in the Input Selection Menu.  | Plug a video plug into any composite <b>VIDEO</b> jack for the Auto Input Sensing screen to appear. See "Audio-Only Device," page 25.  |

| <b>Indicators</b> |  |  |
|-------------------|--|--|
|                   | <b>Symptom</b>                                   | <b>Remarks</b>   |
| 1.                | LAMP indicator light is a constant red.          | Turn the TV off for at least 2 minutes. Turn it back on. If light is still red, the lamp has failed. Replace it. See Appendix D for lamp replacement information. For questions, please call Mitsubishi Consumer relations at (800) 332-2119.  |
| 2.                | LAMP indicator light is a flashing yellow.       | Lamp cover door is open or lamp cartridge is not secure. See Appendix D for lamp replacement information.  |
| 3.                | STATUS indicator light is a steady yellow.       | <ul style="list-style-type: none"> <li>• Room temperature has exceeded proper levels. Cool the room.</li> <li>• The TV has overheated. Clear blocked air vents and ensure at least four inches of clearance on all sides of the TV.</li> <li>• Clean the air filter on the lamp cartridge. See Appendix D .</li> </ul>   |
| 4.                | STATUS indicator light is a steady/flashing red. | <ul style="list-style-type: none"> <li>• Unplug set from AC power. Plug back in and wait one minute for blinking to stop.</li> <li>• Press SYSTEM RESET button and wait for blinking to stop.</li> <li>• If blinking continues, service is required. Contact your dealer or a Mitsubishi Authorized Service Center to arrange for a service evaluation. Listings of Mitsubishi Authorized Service locations can be obtained from our web site, <a href="http://www.mitsubishi-tv.com">www.mitsubishi-tv.com</a> or by calling 1-800-332-2119.</li> </ul> |



## Appendix F: Troubleshooting, continued

| NetCommand IR Control   |   |
|---|---|
| Symptom   | Remarks   |
| 1. Cannot see the menu from the A/V Receiver.   | <ul style="list-style-type: none"> <li>• A/V Receiver Set Up for Audio-Only Switching<br/>The A/V Receiver is not connected to any video input of the TV. To check the A/V Receiver menu, temporarily plug into an unused input of the TV, such as Input 3. Exit the Auto Input Sensing screen and select Input 3 from the Input Selection menu. Press MENU.</li> <li>• A/V Receiver Set Up for Audio and Video Switching over HDMI<br/>Use the MENU key on the A/V receiver's remote control.</li> <li>• A/V Receiver with NetCommand for HDMI.<br/>Press INPUT to open the Input Selection menu. Highlight the A/V receiver icon and press MENU.</li> </ul>   |
| 2. NetCommand unable to learn specific device keys.   | <ul style="list-style-type: none"> <li>• A/V Device does not use IR format for remote control signal. ITT and RF formats cannot be learned.</li> <li>• Room lighting may affect the signal. Have the remotes very close (6 inches or less) to the TV during Learning.</li> <li>• If learning a Mitsubishi remote control, make sure slide switch is not set to TV position.</li> <li>• Some, but not all, device key functions can be learned by NetCommand. For example, POWER and PLAY may be learned, but other functions may not.</li> <li>• The signal from the remote control may not be strong enough. Insert fresh batteries and try Learning again.</li> </ul>   |
| 3. The A/V receiver is the selected audio source but there is no sound.   | <ul style="list-style-type: none"> <li>• A/V Receiver Set Up for Audio-Only Switching <ul style="list-style-type: none"> <li>- Check to see if the A/V Receiver power is turned on.</li> <li>- With A/V receiver power turned on, redisplay the Input Selection menu and press ENTER to allow NetCommand to correctly select the A/V Receiver input.</li> <li>- Incorrect setup in the Inputs &gt; AV Receiver menu. Check the device connection assigned in the AV Receiver menu.</li> </ul> </li> <li>• A/V Receiver Set Up for Audio and Video Switching over HDMI <ul style="list-style-type: none"> <li>- Check to see if the A/V Receiver power is turned on.</li> <li>- If the device is connected only to the TV (e.g., on ANT1, ANT 2, or a front panel input), verify that the TV's AUDIO OUTPUT is connected to the A/V receiver.</li> <li>- The A/V receiver is not switching properly because you have not learned the inputs. See "Setting Up NetCommand Control of an A/V Receiver," page 58.</li> </ul> </li> </ul> |
| 4. There is no sound from the A/V receiver for my DVD player or other surround sound device even though I learned the IR code for the A/V receiver's DVD input or other input. (A/V Receiver Set Up for Audio-Only Switching) | NetCommand A/V receiver setup for the DVD player or digital surround sound device or other device is not switching properly. See chapter 6, "NetCommand IR Control," and perform A/V receiver setup for a digital surround sound device as described under "A/V Receiver Control: Automatic Audio Switching," page 59.  |

## Appendix F: Troubleshooting, continued

| NetCommand IR Control |   |  |
|-----------------------|---|--|
| Symptom               |   | Remarks  |
| 5.                    | There is no sound or picture from the A/V receiver for my DVD player or other device connected to the A/V receiver; the A/V receiver should be sending video to the TV over an HDMI cable.<br>(A/V Receiver Set Up for Audio and Video Switching over HDMI) | NetCommand A/V receiver setup is not switching audio and video inputs properly. See "Setup to Control Automatic Audio and Video Switching via HDMI," page 62.  |
| 6.                    | I've selected my DVD player or other surround sound device in combination with the TV speakers but hear no sound from the TV speakers.  | <ul style="list-style-type: none"> <li>• A/V Receiver Set Up for Audio-Only Switching<br/>If you have only an audio connection from the device to the A/V receiver, a physical audio connection from the device to the TV is also required. <ul style="list-style-type: none"> <li>- Connect the left and right audio output from the device to the appropriate TV audio input. Now you can hear audio from the device through either the TV speakers or the A/V receiver.</li> <li>- To switch audio sources, press AUDIO, press ▲ ▼ to show the Speakers option, then press ► to select AV Receiver or TV.</li> </ul> </li> <li>• A/V Receiver Set Up for Audio and Video Switching over HDMI<br/>With your DVD player connected to the A/V receiver, only video is passed from the A/V receiver to the TV because of copy-protection restrictions on the HDMI signal</li> </ul> |
| 7.                    | I "learned" the RECORD key for my VCR/DVR but when I pressed the RECORD key, the VCR/DVR did not record anything.   | Check that the VCR or DVR is receiving a signal directly from your cable box or satellite receiver.  |

## Trademark and License Information

LICENSOR'S SUPPLIERS DO NOT MAKE OR PASS ON TO END USER OR ANY OTHER THIRD PARTY, ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY OR REPRESENTATION ON BEHALF OF SUCH SUPPLIERS, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Digital Light Processing® and DLP® are registered trademarks of Texas Instruments.

FlashFX ProT is a trademark of Datalight, Inc. Datalight® is a registered trademark of Datalight, Inc. Copyright 1989-2008 Datalight, Inc., all rights reserved.

Manufactured under license from Dolby Laboratories. Dolby is a trademark of Dolby Laboratories.

HDMI™ the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

The software in this TV is based in part on the work of the Independent JPEG Group, copyright © 1991-1998, Thomas G. Lane, all rights reserved.

The  logo and the words "Simplay™" and "Simplay HD™" are the trademarks of Silicon Image, Inc.

**x.v.Color** and the **x.v.Color** logo are trademarks of Sony Corporation.

ChannelView™, DeepField™ Imager, Easy Connect™, NetCommand®, PerfectColor™, PerfectTint™, Plush 1080p®, QuickView™, SharpEdge™, Smooth120Hz™ are trademarks of Mitsubishi Digital Electronics America, Inc.

# Mitsubishi TV Software

## END-USER LICENSE AGREEMENT FOR EMBEDDED SOFTWARE

**IMPORTANT – READ CAREFULLY:** This License Agreement is a legal agreement between you (either an individual or an entity) and Mitsubishi Digital Electronics America, Inc. (MDEA) for all software pre installed and/or provided along with this television (“Software”). By utilizing this television and Software, you agree to be bound by the terms of this License Agreement.

The Software is protected by United States copyright laws and international treaty provisions, as well as other intellectual property laws and treaties. The Software is licensed, not sold.

1. **LICENSE GRANT.** MDEA grants you a non-exclusive, non-transferable, limited right and license to use one copy of the Software only with the Mitsubishi television model that included this owner’s guide and owned by you.

2. **RIGHTS AND LIMITATIONS.**

Software Not for Resale. You may not resell or otherwise transfer for value the Software, except in conjunction with a sale of the TV that Software has been pre installed.

Prohibition on Reverse Engineering, Decompilation and Disassembly. The Software contains trade secrets or other proprietary material in its human perceivable form and to protect them, you may not reverse engineer, decompile, or disassemble, or otherwise reduce the Software to any human perceivable form, except to the extent that the foregoing restriction is expressly prohibited by applicable law.

Separation of Components. The Software is licensed as a single product. Its component parts may not be separated for use on more than one TV.

No Rental. You may not rent, lease, lend, or sublicense the Software.

Trademarks. This License Agreement does not grant you any rights to any trademarks of MDEA.

3. **VIOLATIONS.** You understand that any use, copying or transfer of the Software, except as permitted pursuant to this License, may subject you to serious criminal and civil penalties including damages and an award to MDEA of attorneys’ fees in connection with any violation of this License. You further understand that you may be held legally responsible for any copyright infringement or other violation of intellectual property rights that is caused, encouraged, or induced by your failure to abide by the terms of the License. This license is effective until terminated, and will terminate immediately without notice from MDEA or judicial resolution if you fail to comply with any provision of this License.

4. **COPYRIGHT.** All title and intellectual property rights in and to the Software (including but not limited to any images, photographs, animations, video, audio, music, text, and “applets” incorporated into the Software), and any accompanying printed materials are owned by or licensed to MDEA. All title and intellectual property rights in and to the content which may be accessed through use of the Software is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This License Agreement grants you no rights to use such content, except that you own the media on which the Software is recorded, but MDEA and its licensors retain ownership of the Software itself. All rights not expressly granted are reserved by MDEA.

5. **EXPORT RESTRICTIONS.** MDEA is licensing the Software for use within the United States. You agree that you will not export or re-export the Software. You specifically agree not to export or re-export the Software: (i) to any country to which the U.S. has embargoed or restricted the export of goods or services, which currently include, but are not necessarily limited to Cuba, Iran, Iraq, Libya, North Korea, Sudan, and Syria, or to any national of any such country, wherever located, who intends to transmit or transport the Software back to such country; (ii) to any person or entity who you know or have reason to know will utilize the Software in the design, development, or production of nuclear, chemical, or biological weapons; or (iii) to any person or entity who has been prohibited from participating in U.S. export transactions by any federal agency of the U.S. government. You warrant and represent that neither the BXA nor any other U.S. federal agency has suspended, revoked, or denied your export privileges.

6. **DISCLAIMER OF WARRANTY. EXCEPT AS OTHERWISE PROVIDED IN THIS LICENSE OR IN THE LIMITED WARRANTY APPLICABLE TO THE TV, MDEA MAKES NO OTHER WARRANTIES OF ANY KIND WHATSOEVER REGARDING THE SOFTWARE AND HEREBY EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE. ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED BY MDEA. IN NO EVENT SHALL MDEA BE LIABLE TO YOU OR ANY THIRD PARTIES, IN CONTRACT, IN TORT OR OTHERWISE, FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**

7. **LIMITATION OF LIABILITY. MDEA SHALL NOT, UNDER ANY CIRCUMSTANCES BE LIABLE TO YOU OR ANY THIRD PARTIES FOR ANY DAMAGES OF ANY NATURE, WHETHER INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOST PROFITS, LOSS OF GOOD WILL OR EXPENDITURES MADE OR COMMITTED FOR IN RELIANCE ON THE CONTINUATION OF THIS LICENSE. YOU AGREE THAT NEITHER MDEA’S BREACH OF THIS LICENSE NOR ITS FAILURE TO REPAIR A DEFECT, ERROR OR BUG SHALL CONSTITUTE A FAILURE OF THE ESSENTIAL PURPOSE OF THIS LICENSE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. MDEA’s liability to you for direct damages for any cause whatsoever and regardless of the form of the action, will be limited to the money paid by you for the TV (based on fair market value of the TV) that caused the damages.**

8. **GENERAL.** This License Agreement will be governed by the laws of the State of California.

**WARNING:** This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

## Mitsubishi DLP Projection Television Limited Warranty

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC. ("MDEA") warrants as follows to the original purchaser of this television from an authorized MITSUBISHI Audio/Video Dealer, should it prove defective by reason of against defects arising from improper workmanship and/or material:

**a. Parts.** The lenticular (i.e. front picture) screen is warranted against defects in materials and workmanship for a period of thirty (30) days from the date of the original purchase at retail. The lamp and all other parts (except any software incorporated into this television) are warranted for a period of one (1) year from the date of the original purchase at retail. We will repair or replace, at our option, any defective part without charge for the part. Parts used for replacement may be replaced with those of like kind and quality and may be new or remanufactured. Parts used for replacement are warranted for the remainder of the original warranty period.

**b. Embedded Software.** MDEA warrants that all software incorporated into this television set (the "Embedded Software") will perform in accordance with the functional description of Embedded Software in all material respects, but MDEA does not warrant that the Embedded Software is error-free. MDEA also does not warrant that the Embedded Software will be compatible under IEEE 1394 AV/C and HAVi software standards with products produced by any other manufacturer. The limited warranty contained in this section shall continue for a period of one (1) year from the date of the original purchase at retail. If, after prompt notice within the warranty period, MDEA determines that the Embedded Software has failed to perform in accordance with such functional description in all material respects and if such failure is not due to accident, misuse, modification or misapplication of the Embedded Software, then MDEA shall modify or replace the nonconforming Embedded Software at no charge to you, which at MDEA's sole discretion may be fulfilled by means of modification or replacement software contained on a replacement memory card for Customer installation. The foregoing shall be MDEA's sole obligation to you under this limited warranty. All rights under this limited warranty on the Embedded Software also subject to your acceptance of and compliance with the terms of the Software License Agreement applicable to this television, and this limited warranty on the Embedded Software shall be null and void if the Embedded Software is modified or changed in any manner except as specifically authorized by MDEA.

**c. Labor.** For thirty (30) days after the original purchase at retail, we will repair or replace, at our option, the lenticular screen if it proves defective. For certain items that are designed to be replaced by the consumer, including (but not limited to) some Embedded Software, the consumer is solely responsible for any replacement labor. For all other parts, we will provide the labor for a warranty repair by an authorized MITSUBISHI service center without charge for one (1) year from the original date of purchase at retail.

**d. Notice.** To obtain warranty service, you must notify an authorized MITSUBISHI service center of any defect within the applicable warranty time period.

e. This DLP Projection Television uses a single DLP chip to create the screen image. This technology creates the image using small dots, or picture elements (pixels). Your DLP Projection TV is manufactured to a high level of performance and quality, in fact, 99.99% perfect in the number of properly functioning pixels. As in other display technology, sometimes a pixel is continuously active, inactive or the incorrect color. Our standard is clear; MDEA warrants only that the percentage of properly functioning pixels will be not less than 99.99% of all pixels.

**BEFORE REQUESTING SERVICE, please review the instruction booklet to insure proper installation and correct customer control adjustment. If the problem persists please arrange for warranty service.**

### 1. TO OBTAIN WARRANTY SERVICE:

a. Contact your nearest authorized MITSUBISHI service center, whose name and address can be obtained from your MITSUBISHI dealer, by writing at the address provided below, calling MDEA at the 800-332-2119, or by using the support feature of our website at [www.Mitsubishi-tv.com](http://www.Mitsubishi-tv.com).

b. Warranty service will be provided in your home or, if required, at an authorized service shop, provided that your television is located within the geographic territory customarily covered by an authorized MITSUBISHI service center. If not, you must either deliver your television to an authorized service location at your own expense, or pay for any travel and/or transportation costs the service center may charge to and from your home. Actual service labor will be provided without charge.



c. Proof of purchase date from an authorized MITSUBISHI dealer is required when requesting warranty service. Present your sales receipt or other document which establishes proof and date of purchase. THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION OF COVERAGE UNDER THIS LIMITED WARRANTY. However, please return the Owner Registration Card so that we can contact you should a question of safety arise which could affect you.

d. To obtain a replacement lamp, order the lamp directly from the MDEA Parts Department at (800) 553-7278.

**2. THIS LIMITED WARRANTY DOES NOT COVER:**

a. Up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated).

b. Damage to the lenticular screen or Fresnel lens, screen frame, cosmetic damage or to any other damage where such damage is caused by unauthorized modification, alteration, repairs to or service of the product by anyone other than an authorized MITSUBISHI service center; physical abuse to or misuse of the product (including any failure to carry out any maintenance as described in the Owner's Guide including air vent cleaning or any product damaged by excessive physical or electrical stress); any products that have had a serial number or any part thereof altered, defaced or removed; product use in any manner contrary to the Owner's Guide; freight damage; or any damage caused by acts of God or other factors beyond the reasonable control of MDEA, such as power surge damage caused by electrical system or lightning. This limited warranty also excludes service calls where no defect in the product covered under this warranty is found, service calls related to unsatisfactory audio or visual reception or signal unless caused by a defect in the product that is covered under this limited warranty, all costs, expenses or any other damages arising from product installation, or set-ups, any adjustments of user controls (including contrast, brightness, color, tint, fine tuning, sharpness), other adjustment necessary to prepare the unit for display or use, connection with any external audio receiver, antenna, cable or satellite systems, or service of products purchased or serviced outside the U.S.A. Please consult the operating instructions contained in the Owner's Guide furnished with the product for information regarding user controls.

**3. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY WHICH, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR.**

**4. UNDER NO CIRCUMSTANCES SHALL MDEA BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE.**

5. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental, special, or consequential damages, so the above limitations or exclusions may not apply to you.

6. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

7. In the event of any dispute under this limited warranty, jurisdiction and venue for resolving that dispute will be in the state where the television was purchased and the laws of such state will govern.



MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.  
9351 Jeronimo Road  
Irvine, CA 92618-1904

# Index

## A

- Adjust Keys (Up/Down/Left/Right) 27, 36
- Anamorphic Picture Format 32
- Antenna
  - Connecting 21
  - Signal Strength for Digital Channels 30
- Antenna Inputs (ANT 1, ANT 2) 9
- Audio Lock (A/V receiver control) 68
- Audio Output Jacks 9
- Auto Input Sensing 13
- Auto-Off (Sleep Timer) 26
- Auto-On (Timer) 46
- A/V Memory Reset 80
- A/V Receiver
  - and TV Speakers 41
  - and TV's Remote Control 58, 62, 67
  - Audio Lock 68
  - Connecting 9, 24
  - Controlling Sound Volume 15
  - Disconnecting Analog 14
  - NetCommand IR Control 52, 56, 58
    - Controlling a Device Connected to the A/V Receiver 16, 63
    - Video and Audio Switching via HDMI 62
- A/V Reset 7, 80

## B

- Back Panel (described) 9, 10
- Batteries 11
- Blue Glow 38
- Bright (Lamp Mode) 47
- Brightness (picture adjustment) 39

## C

- Cable Box
  - and TV's Remote Control 28, 67
  - Connecting 19, 20, 22, 23
- Camcorder 25
- Captions Menu 42
- CEC (Consumer Electronics Control) 6, 16, 67
  - A/V Receiver 15, 78, 86
  - CEC-Enabled Devices and the Inputs Name menu 48
  - Disabling CEC for a Device 48
  - NetCommand for HDMI/CEC 77
  - Troubleshooting 82
- Channels
  - antennaweb.org 43
  - Changing Channels 26
  - Channel Lock 44

- Digital Channel Numbers 64
- Edit Channels (menu) 44
- Favorites (Fav) 31, 44
- Memorizing 13
- Naming 44
- Physical/Virtual Channel Numbers 43, 44
- Scan (memorize) 43
- Status Display 30
- Troubleshooting 83
- ChannelView™ Channel Listings 29
- Cleaning 4
- Clock, Set Date and Time 45
- Closed Captions 42
- Color Adjustments 37, 39
  - Reset Color 37, 80
- Computer
  - and Display Formats 18, 64
  - Connecting 17
- Contrast 39
- Control Panel 7
- Control Panel Lock 51
- Customer Service and Support 81

## D

- Date. *See* Clock
- Defaults, Resetting 80
- DIGITAL AUDIO OUT 9
- Dolby Digital 9, 24, 59, 64
- DVD Player
  - and TV's Remote Control 28, 67
  - Connecting 20
- DVI Device, Connecting 20

## E

- Edit Menu (channels) 44
- Energy Mode 47
- External Controller Input and Setup 10

## F

- F1–F4 Keys 28, 54
- Fan Noise 4, 47
- Fast Power On 47
- FAV (Favorite Channels) 31, 44
- Film Mode 38
- Filter, Air (on lamp cartridge) 76
- Font (digital closed captions) 42
- FORMAT Key 32
- Freeze Picture 28
- Front Panel 7
  - Blue Glow 38
  - Controls 7
  - Front-Panel Indicators (lights) 8

## G

- Game
  - 3D Video 35
  - Game as Input Name 48
  - Game Picture Mode 39
  - HDMI Cables for Games 10
- Global Menu 38
- GUIDE Key 27, 67
  - ChannelView 29

## H

- HD (High-Definition) Signal) 32
- HDMI
  - Changing Out an HDMI Device and Auto Input Sensing 14
  - Connecting an HDMI Device 20
    - A/V Receiver 24
  - HDMI Cable Categories 10
  - HDMI Jack 10
  - NetCommand for HDMI Devices 6, 67, 79, 86
  - Removing an HDMI Device from the Input Selection Menu 48

## I

- INFO Key
  - ChannelView 29
  - in TV Menus 36
  - USB Photo Menu 33
- Input Selection Menu
  - Choose Viewing Source 26
  - Disconnected HDMI Device 14, 48, 79
  - Icon Order 48
  - INPUT Key 27
- Inputs Menu 48
  - Inputs > Name Menu and CEC Devices 79
- IR (infrared) Emitter Placement 53
- IR NetCommand Output (jack) 10

## J

- JPEG Photo Files 33

## L

- Lamp Cartridge Replacement 75
- LAMP Indicator 8
- Lamp Mode 47
- Language
  - in Digital Programs 41
  - SAP (Second Audio Program) 41
- Language Menu 43
- Learn 48. *See also* NetCommand IR Control
- Learn Menu 48
- LED Indicator Lights 8
  - Troubleshooting 85
- Letter Box Image Display 32

- Level Sound 41
- Light, Decorative 38
- Listen To 41
- Listings 29
- Lock Menu. *See* Lock TV
- Lock TV
  - Bypassing the Lock 65
  - Lock by Channel 44
  - Lock by Ratings 50
  - Lock by Time 51
  - Lock Control Panel 51
  - Preset V-Chip Blocking 49
- Low Power (Energy Mode) 47
  - Wired IR option 10
- M**
- Media Setup Menu 34
- Memorizing Channels 13
  - Add Single Channel to Memory 43, 44
- Memory Reset, A/V 80
- Mute
  - Closed Captions 42
  - MUTE key 27
  - Video Mute 38
- N**
- Name (Inputs > Name menu) 48
- NetCommand for HDMI Devices 6, 67, 77, 79
- NetCommand IR Control
  - About 52
  - A/V Receiver Control 58
  - Compared to Programming the Remote Control 67
  - Initial Setup for Most Devices 54
  - Operating 56, 57
  - Specialized Device Keys 55
  - Troubleshooting 86
- Noise, Video 39
- O**
- 120 Hz Picture Processing 38
- Order Menu (Inputs > Order) 48
- P**
- Parent Menu 50
- Pass Code
  - Resetting 65
  - Setting 49
- PAUSE Key 28
- PerfectColor 37
- PerfectTint 37
- Photo Viewing 34
- Picture
  - AV Menu Controls 37
  - Picture Quality and Film Mode 38
  - Troubleshooting 84
- Picture Mode 39
- Power Consumption
  - Energy Mode 47
  - Specifications 64
- Power On/Off 11, 26
  - Troubleshooting 83
- POWER/TIMER Indicator 8
- Q**
- QV Key (QuickView™) 27
  - and FAV Key 31
- R**
- Ratings (TV and Movie) 50
- Remote Control
  - Keys and Functions 27, 28
  - Programming Codes (reference chart) 69
  - Programming, Compared to NetCommand “Learning” 67
  - Programming Instructions 68
  - Reset 28
- Reset
  - AV Menu Reset (by input) 37
  - A/V Reset (all settings) 7
  - Color 80
  - Pass Code 65
  - Remote Control 28
  - Remote Control Audio Lock 68
  - System Reset 7
  - TV Reset Comparison Guide 80
- S**
- Safety Instructions 5
- SAP (second audio program) 41
- Satellite Receiver
  - and the Remote Control 67
  - Connecting 19, 20, 22
- Scan (memorize channels) 43
- Screen Saver 38
- SD (Standard-Definition Signal) 32
- Signal Definitions 32
- Signal Strength Indicator 30
- Sleep Timer 26
- Smooth 120Hz 38
- Sound
  - Audio Menu 41
  - Controlling A/V Receiver Volume 58, 62
  - Level Sound 41
- Sound Mode (audio effects) 41
- Speakers Option
  - In Audio Menu 41
- Specifications, TV 64
- Standard-Definition Signal 32
- Standard (Lamp Mode) 47
- Stand Part Number 4
- Status Display 30
- STATUS Indicator 8
- Stereo System. *See* A/V Receiver
- Surround Sound 9, 24, 60, 61
  - Simulated Surround Sound 41
- System Reset 7, 81
- T**
- Test Picture 38
- 3D GLASSES EMITTER Jack 10
- 3D Video 35, 47
- Time. *See* Clock
- Timer (auto-on) 46
- TIMER Indicator (POWER/TIMER) 8
- Time Zone. *See* Clock
- Troubleshooting 80
- V**
- V-Chip Ratings
  - Applying Restrictions 49
  - Definitions 50
  - In Status Display 30
- VCR
  - Connecting 22, 23
  - Troubleshooting 84
- Vert Adjustment 40
- Video from a Digital Camera 34
- Video Game. *See* Game
- Video Menu 39
- Video Mute 38
- Video Noise 39
- Viewing Device. *See* Input Selection
  - Menu
- W**
- Wall Outlet Cable 21
- X**
- x.v.Color 10, 20, 39



**Website:**  
[www.mitsubishi-tv.com](http://www.mitsubishi-tv.com)

**E-mail:**  
[MDEAservice@mdea.com](mailto:MDEAservice@mdea.com)

**For questions, call Consumer Relations at  
800-332-2119**

**To order replacement or additional  
remote controls, lamp cartridges, or Owner's Guides**

**Visit our website [www.mitsuparts.com](http://www.mitsuparts.com)**

**or call**

**800-553-7278**

**SYSTEM RESET**

If the TV does not respond to the remote control, control-panel buttons, or will not power on/off, press the **SYSTEM RESET** button on the control panel.

The green LED will flash quickly for about one minute. When the green LED stops flashing, you may turn on the TV. Settings changes you made most recently, before using **SYSTEM RESET**, may be lost.