

***myprojectorlamps.com***

**The most trusted, dependable name  
in projector lamp sales.**



<http://www.myprojectorlamps.com>



<http://www.myprojectorlamps.ca>



<http://www.myprojectorlamps.eu>

The following projector manual has not been modified or altered in any way.

**TOSHIBA**


*OWNER'S MANUAL*

***3LCD DATA PROJECTOR***

---

**TLP790**  
**TLP791**

*(WITH DOCUMENT IMAGING CAMERA)*

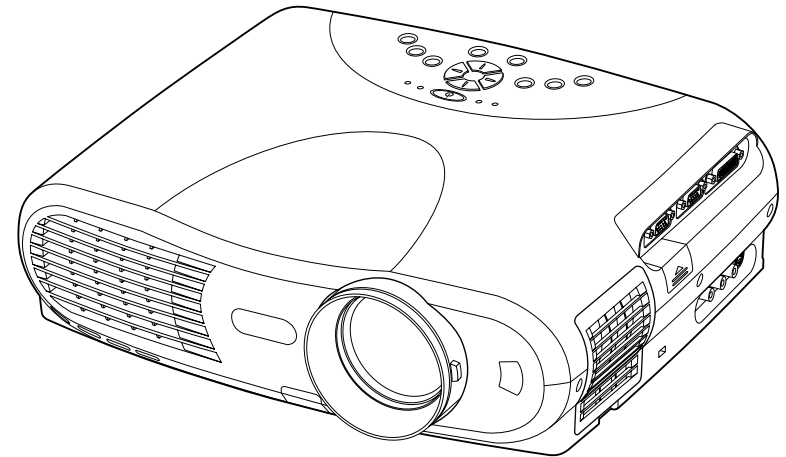

**TLP790**

<p><b>WARNING:</b> BEFORE OPERATING, PLEASE READ OWNER'S MANUAL.</p> <p>DO NOT REMOVE SCREWS EXCEPT LAMP COVER SCREWS.</p> <p>DO NOT BLOCK VENTING OPENINGS.</p>	<p>THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.</p> <p>THIS CLASS A DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES (R3230).</p> <p>CET APPAREIL NUMÉRIQUE DE LA CLASSE A EST CONFORME À LA NORME NMB-003 DU CANADA.</p>
<p><b>AVIS:</b> VEUILLEZ LIRE LE MODE D'EMPLOI AVANT L'USAGE.</p> <p>NE PAS RETIRER LES VIS À L'EXCEPTION DES VIS DU COUVERCLE DE LAMPÉ.</p> <p>NE BOUCHEZ PAS LES ORIFICES DE VENTILATION.</p>	<p><b>WARNING:</b> - VOR DEM EINSATZ DIE BEDIENUNGSANLEITUNG LESEN.</p> <p>- KEINE SCHRAUBEN AUSSER DEN LAMPENDECKELSCHRAUBEN ENTFERNEN.</p> <p>- LÜFTUNGSÖFFNUNGEN NICHT BLOCKIEREN.</p>
<p><b>警告:</b> ・ご使用前に、取扱説明書をお読みください。 ・ランプカバー以外のネジを取り外さないでください。 ・通気孔をふさがないでください。</p>	<p><b>警告:</b> ・操作前、詳細阅读使用说明书。 ・请勿移除任何螺丝(灯罩螺丝除外) ・请勿堵塞通风孔以免内部温度升高导致故障或火灾。</p> <p>23553839</p>



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

**WARNING:** Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

## FCC Radio Frequency Interference Statement

**Note:**  
USA only

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiates radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**WARNING:** Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user’s authority to operate the equipment.

**Notice:**  
CANADA only

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

**WARNING:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

# IMPORTANT PRECAUTIONS

## Save Original Packing Materials

The original shipping carton and packing materials will come in handy if you ever have to ship your LCD projector. For maximum protection, repack the set as it was originally packed at the factory.

## Avoid Volatile Liquid

Do not use volatile liquids, such as an insect spray, near the unit. Do not leave rubber or plastic products touching the unit for a long time. They will mar the finish.

## Moisture Condensation

Never operate this unit immediately after moving it from a cold location to a warm location. When the unit is exposed to such a change in temperature, moisture may condense on the crucial internal parts. To prevent the unit from possible damage, do not use the unit for at least 2 hours when there is an extreme or sudden change in temperature.

## Exemption Clauses

- Toshiba Corporation bears no responsibility in the case of damages arising from earthquakes, fire not liable to Toshiba Corporation, operating by third parties, other accidents, or use under abnormal conditions including erroneous or improper operation and other problems.
- Toshiba Corporation bears no responsibility for incidental damages (lost profit, work interruption, corruption or loss of the memory contents, etc.) arising from the use of or the inability to use this unit.
- Toshiba Corporation accepts no liability whatsoever for any damages arising from not having followed the descriptions in this Owner's Manual.
- Toshiba Corporation accepts no liability whatsoever for any damages arising from malfunctions arising from combination with equipment or software that is not related to Toshiba Corporation.

In the spaces provided below, record the Model and Serial No. located at the bottom of your LCD projector.

Model No. \_\_\_\_\_ Serial No.  
\_\_\_\_\_

Retain this information for future reference.

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

## 1. Read Owner's Manual

After unpacking this product, read the owner's manual carefully, and follow all the operating and other instructions.




## 2. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.



## 3. Source of Light

Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyes or sight.

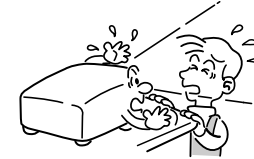


## 4. Ventilation

Openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.



## 5. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

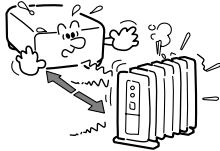

## 7. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.




## 9. Overloading

Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.



## 6. Water and Moisture

Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool and the like.

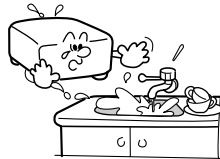


## 8. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.



## 10. Lightning

For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

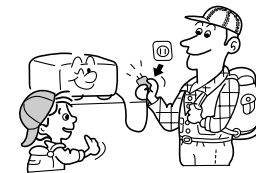


## 11. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.




## 13. Stack Inhibited

Do not stack other equipment on this product or do not place this product on the other equipment. Top and bottom plates of this product develops heat and may give some undesirable damage to other unit.

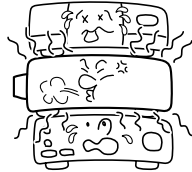

## 12. Do not place the product vertically

Do not use the product in the upright position to project the pictures at the ceiling, or any other vertical positions. It may fall down and dangerous.

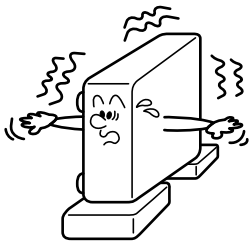

## 14. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.



## 15. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

## 16. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way.
- f) When the product exhibits a distinct change in performance – this indicates a need for service.

## 17. If glass components, including lens and lamp, should break, contact your dealer for repair service.

This product incorporates glass components, including a lens and a lamp. If such parts should break, please handle with care to avoid injury and contact your dealer for repair service. The broken pieces of glass may cause to injury.

In the unlikely event of the lamp rupturing, thoroughly clean the area around the projector and discard any edible items placed in that area.

## 18. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.




## 19. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. (Replacement of the lamp only should be made by users.)

## 20. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

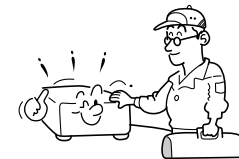




- 21. Do not get your hands between the camera arm and the main unit when setting the camera arm back in its original position.**

To avoid injury, be careful not to get your hands caught when setting the camera arm back in its original position. Families with children should be particularly careful.

- 23. Do not leave documents on the unit for long periods of time while using the document imaging function.**

Do not leave texts, papers or other documents for projection on the unit for long periods of time. The heat could erase the letters on a thermal paper.

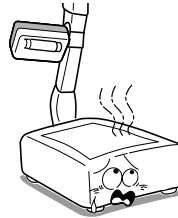

- 25. Do not look into the arm light while it is lit.**

The strong light may cause damage to your eyes or sight.


- 22. Do not carry by the camera arm.**

Do not carry the projector by the camera arm. Doing so can result in damage or injury.








- 24. Do not move the projector while the arm is still erect.**


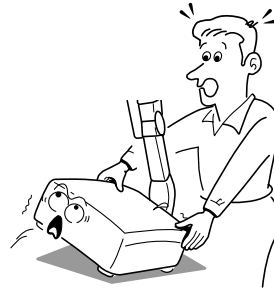
Always store the arm back in position when moving the projector. Otherwise injury or damage may result.



# Power supply cord selection

   If your line voltage is 220 to 240V, use one of the following types of cable.

Plug configuration	Plug type	Line voltage
	EURO 240V 10 – 15A	220 – 240V
	UK 240V 6A	200 – 240V
	Australian 240V 10A	200 – 240V
	North American 240V 15A	200 – 240V
	Switzerland 240V 6A	200 – 240V

  Plug configuration	Plug type	Line voltage
	EURO	220 – 240V
	UK	220 – 240V

Use a 5A fuse which is approved by ASTA or BSI to BSI362.  
Always replace the fuse cover after changing the fuse.

## Before use

<i>SAFETY PRECAUTIONS</i> .....	2
<i>IMPORTANT PRECAUTIONS</i> .....	3
<i>IMPORTANT SAFETY INSTRUCTIONS</i> .....	4
<i>Power supply cord selection</i> .....	9
<i>Contents</i> .....	10
<i>Names of each part on the main unit</i> .....	11
<i>Names of each part on the remote control</i> .....	14
<i>Loading batteries</i> .....	15
<i>Remote control operation</i> .....	16

## Installation and connections

<i>Floor-mounted projector placement</i> .....	17
<i>Projector placement angle adjustment</i> .....	20
<i>Ceiling-mounted projector placement</i> .....	21
<i>Connecting a computer (COMPUTER IN 1 connector)</i> ...	22
<i>Connecting a computer (COMPUTER IN 2 connector)</i> ..	23
<i>Connecting video equipment</i> .....	24
<i>Projector operation control by a computer</i> .....	26
<i>How to use the output connector</i> .....	27

## Operations

<i>Projection on the screen</i> .....	28
<i>Turning the power off</i> .....	33
<i>Adjusting the picture automatically</i> .....	34
<i>Correcting the keystone distortion</i> .....	35
<i>Cutting off the picture and sound temporarily</i> .....	37
<i>Freezing the picture</i> .....	38
<i>Enlarging the picture size</i> .....	39
<i>Displaying PIP Sub-pictures</i> .....	40
<i>Displaying Information</i> .....	41
<i>Operating a computer by the remote control</i> .....	42

## Adjustments & Settings

<i>Operating the menu screen</i> .....	43
<i>GUIDE MENU adjustments and settings</i> .....	45
<i>FULL MENU adjustments and settings - Picture</i> .....	46
<i>FULL MENU adjustments - Position</i> .....	47
<i>FULL MENU adjustments - Color</i> .....	48
<i>FULL MENU adjustments and settings - Audio</i> .....	49
<i>FULL MENU adjustments and settings - Display</i> .....	50
<i>FULL MENU settings - Default setting</i> .....	51
<i>FULL MENU settings - Reset</i> .....	52
<i>PIP menu setting</i> .....	53

## Document imaging camera

<i>Part names (of the document imaging camera model) ...</i>	54
<i>Preparation of the document imaging camera</i> .....	55
<i>Picture projection with the document imaging camera ..</i>	56
<i>Overlaying projection</i> .....	59
<i>Locking the white balance</i> .....	60
<i>Correcting illuminated defects</i> .....	61

## Maintenance

<i>Trouble indications</i> .....	62
<i>Air filter cleaning</i> .....	63
<i>Lens and main unit cleaning</i> .....	65
<i>Lamp replacement</i> .....	66

## Others


<i>Before calling service personal</i> .....	68
<i>Pin assignment of COMPUTER IN connector</i> .....	70
<i>Applicable signal</i> .....	71
<i>Controlling the projector by using RS-232C</i> .....	73
<i>Specifications</i> .....	79

# Names of each part on the main unit

### CAUTION

Openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.

The explanation here is only for the model without the document imaging camera. For the model with the document imaging camera, refer to [54](#).

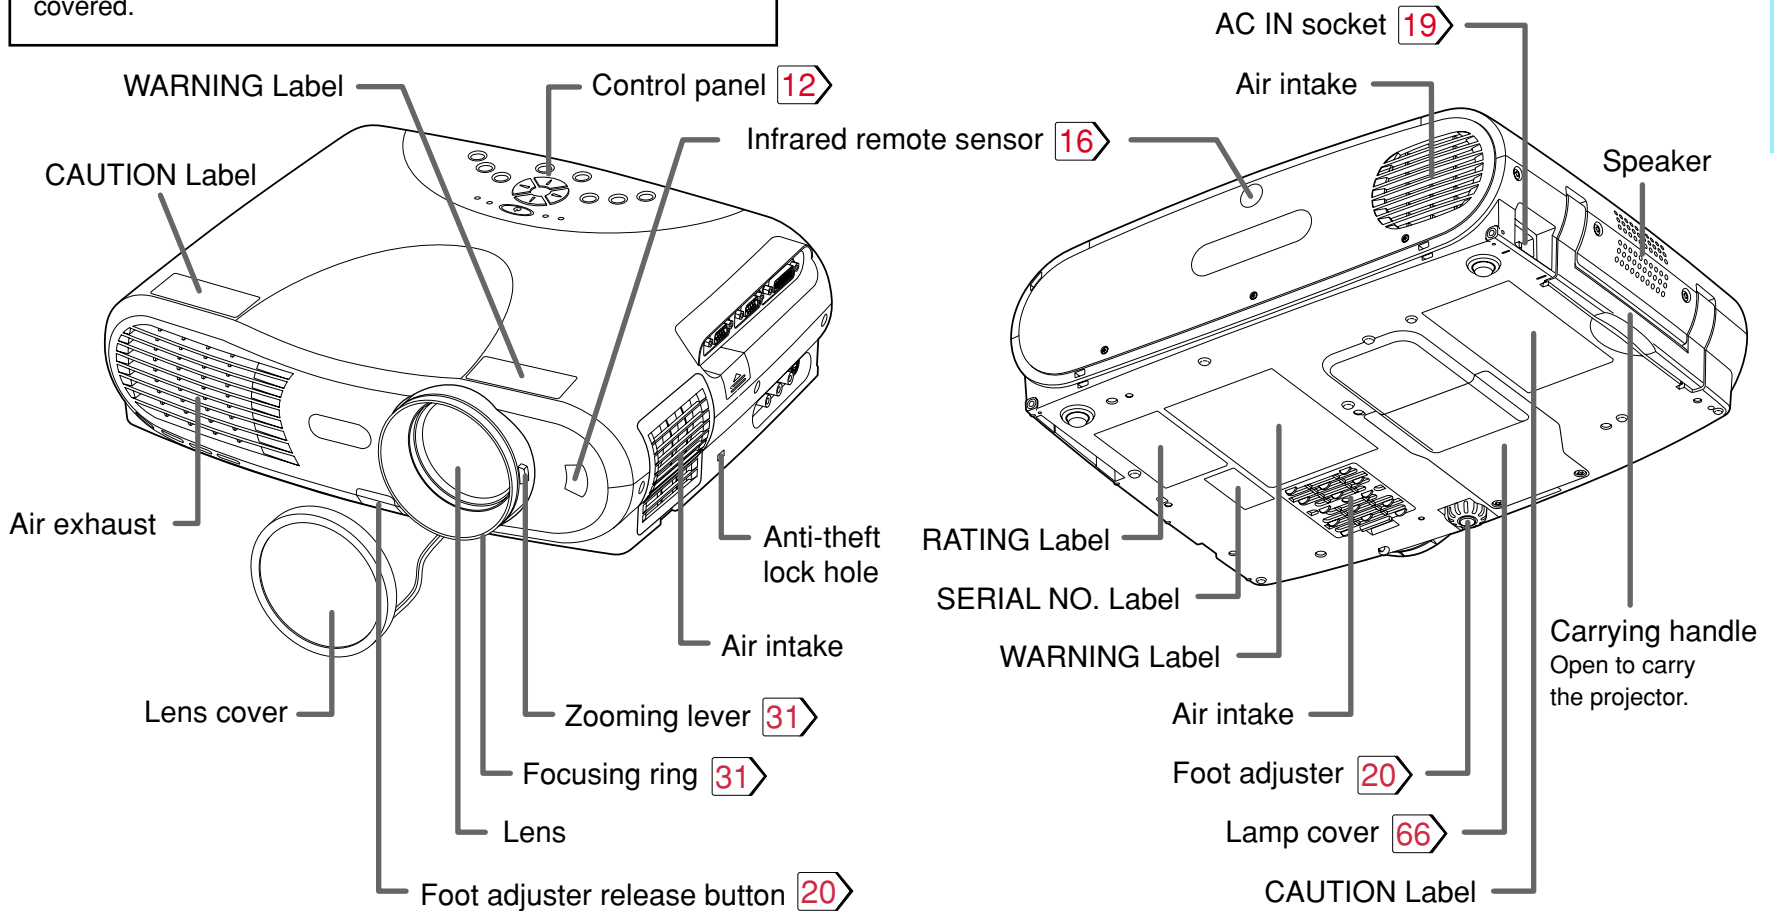

### Note

The air exhaust discharges high temperature air. Do not put anything around the air exhaust, otherwise it may deform due to the high temperature air.

# Names of each part on the main unit (continued)

To display the menu screen and/or select operations on the menu screen. **43** **44**

Use the selection buttons and the **EXIT** button to enlarge the image. **39**

- EXIT button
- Selection buttons
- ENTER button
- MENU button

**INPUT** button **30**  
To select the input source.

**ON/STANDBY** button **28** **33**  
To turn the projector on or off (standby).

**ON** indicator **28** **33** **62**

**LAMP** indicator **28** **33** **62**

**TEMP** indicator **62**


**FAN** indicator **28** **33** **62**

To indicate the status of the projector.


**VOL/ADJ** buttons **44**  
To set and/or adjust values on the menu.  
To adjust the volume when the menu is not displayed.

**AUTO SET** button **34**  
To adjust the computer input image automatically.

**KEYSTONE** button **35**  
To correct the keystone distortion of the picture.

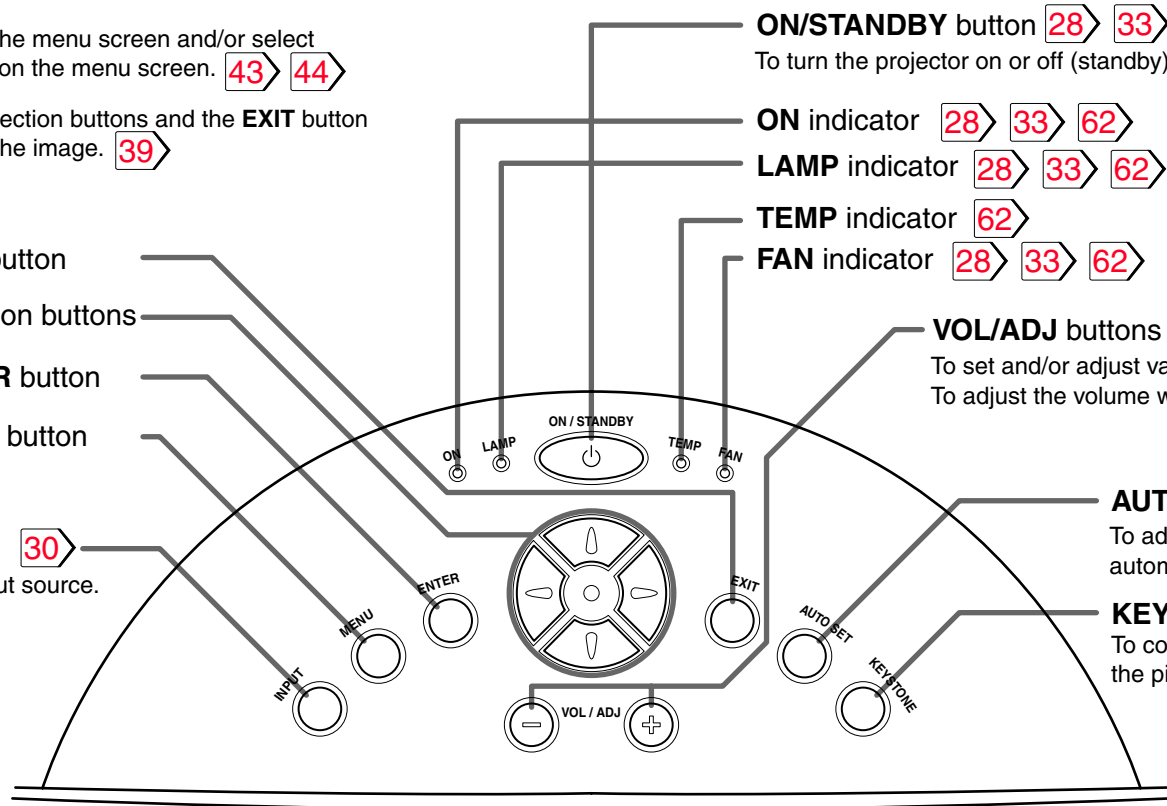

**【Top side】  
Control panel**

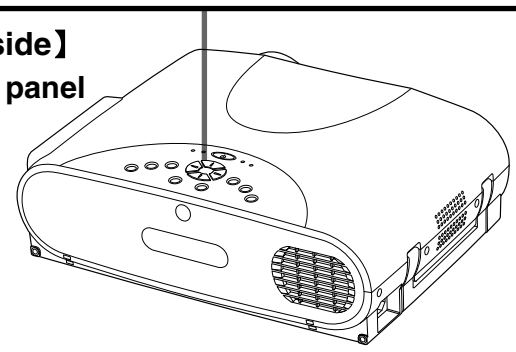

# Names of each part on the main unit (continued)

**CONTROL connector (RS-232C connector)** **26** **73**  
To connect a computer to control the projector. (Remove the cover to use the connector.)

**USB connector** **42**  
To connect to a USB connector of a computer when using the remote control mouse.

**MONITOR OUT connector** **27**  
To connect a monitor, etc.

**COMPUTER IN 1 connector** **22** **25**  
To enter RGB signal from a computer, etc or component video signal (Y/Pb/Pr Signal) from a video equipment.

**COMPUTER IN 2 connector** **23**  
To enter RGB signal from a computer, etc.


**S-VIDEO connector** **24**  
To enter S-Video signal from video equipment, etc.

**VIDEO jack** **24**  
To enter video signal from video equipment, etc.

**AUDIO(L/R) jacks** **24**  
To enter audio signal from video equipment, etc.

**AUDIO IN jack (Audio input)** **22** **25**  
(Ø 3.5mm stereo mini-jack)  
To enter audio signal from a computer or video equipment with component video output (Y/Pb/Pr signal output) supported.


**【Right side】**

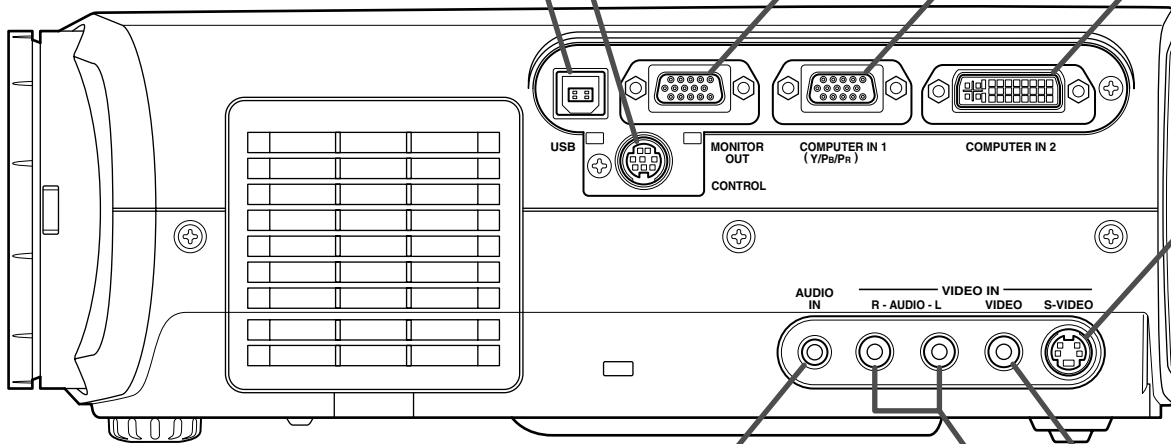

# Names of each part on the remote control

**Caution** - use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## Location of the labels

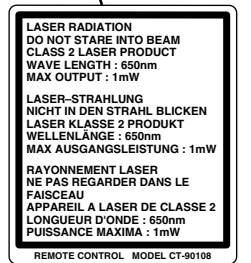

## 【Top side】

### INPUT button

To select the input source.

### KEystone button

To correct the keystone distortion of the picture.

### Pointer control button

### R-CLICK button

### L-CLICK button

To use as  
USB remote control mouse.

### PIP button


To display the video input image as a small size picture in the computer image display window.

### FREEZE button

To freeze the picture.

### CALL button

To display the information.

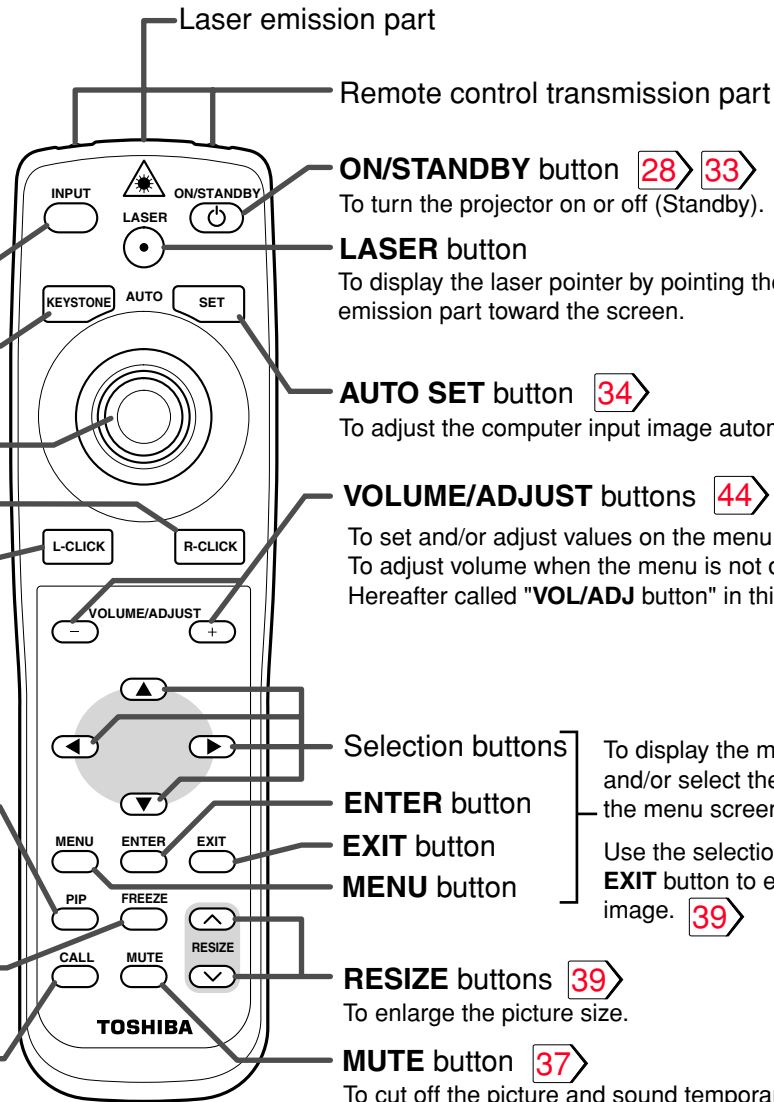


## Note

The description in the label differs dependent on the destination of the product.



## Notes

Using batteries incorrectly can cause them to leak or burst. Strictly observe the following.

- Install the batteries with their + and – ends facing correctly.
- Do not charge, heat, disassemble, or short the batteries or throw them into a fire.
- Do not leave any exhausted batteries in the remote control.
- Do not mix different types of batteries or new and old batteries.
- When you will not be using the remote control for a prolonged period, take the batteries out of the remote control.
- When the remote control stops working or only works at very close range, replace all the batteries with new ones.
- When replacing the batteries, use longer life alkaline batteries.
- If a battery has leaked, carefully wipe off any residue inside the battery case before loading new batteries.

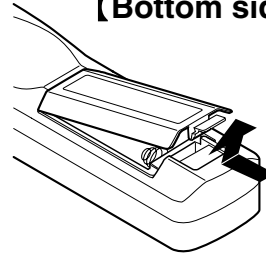**1****[Bottom side]****Open the cover.****2****Install the batteries.**


Make sure that the +/- polarities match the illustration in the compartment.  
Two batteries (LR6 (SIZE AA)) are used.

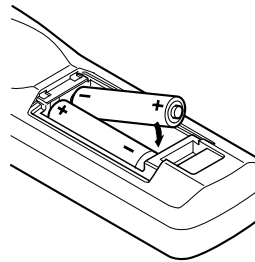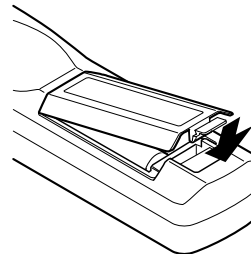**3****Attach the cover.**



# Remote control operation

Point the remote control at the infrared remote sensor and press a button.

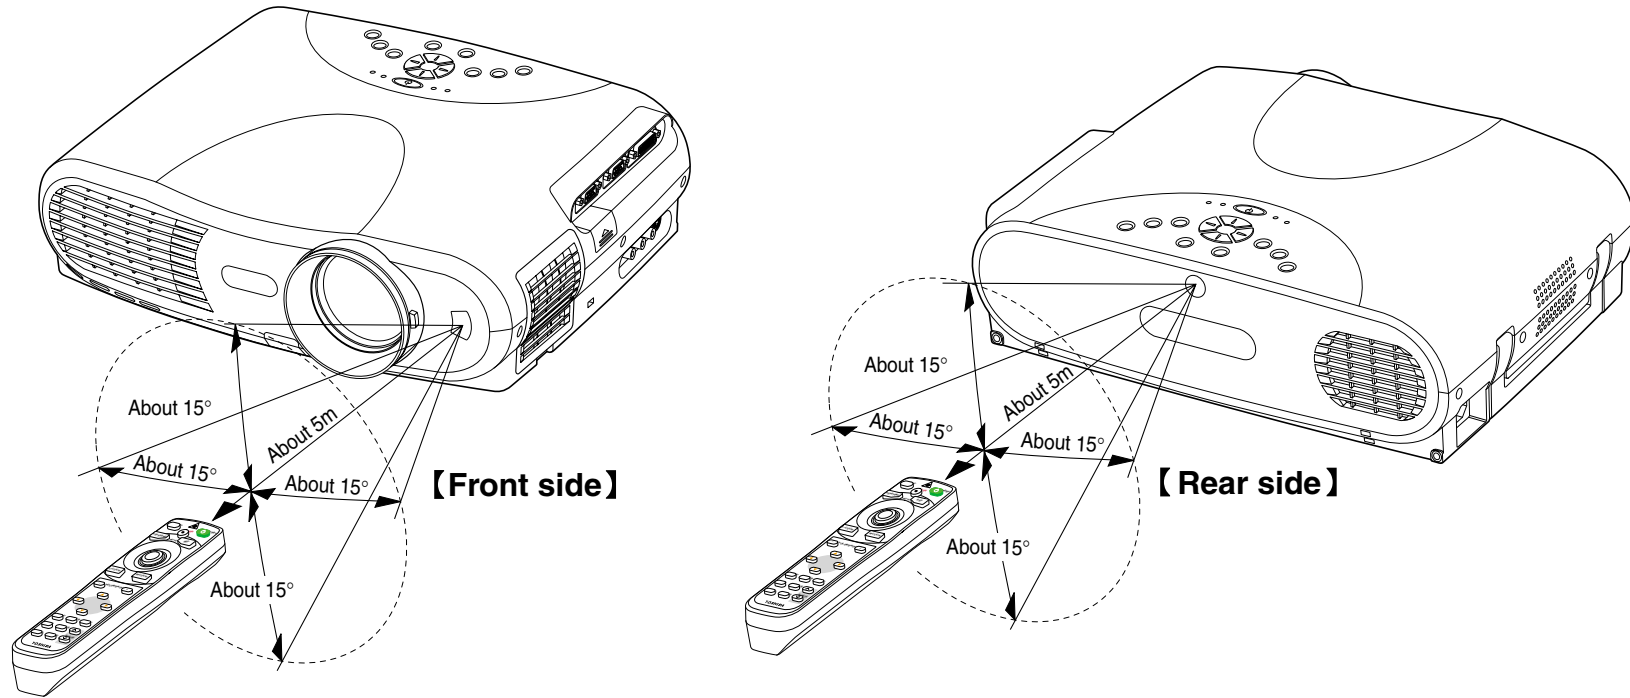

## Notes

- The remote control may not operate when there is sunlight or other strong light such as a fluorescent lamp shining on the projector's remote sensor.
- Operate the remote control from a position where the remote sensor is visible.
- Do not drop the remote control or otherwise jolt it.
- Keep the remote control out of locations with excessively high temperature or humidity.
- Do not get water on the remote control or place wet objects on it.
- Do not disassemble the remote control.
- Under unusual circumstances the remote control may not operate well due to the location being used or the surroundings. At such times, change the direction of the remote control to the projector and retry the operation.


# Floor-mounted projector placement

There are two ways to place the floor-mounted projector. Perform the “Projection mode” setting on the menu screen for the projection method. [51](#)

For the ceiling-mounted projector placement, refer to the page [21](#).


## Floor-mounted front projection

Viewing a picture projected on the front of the screen from a floor installation.

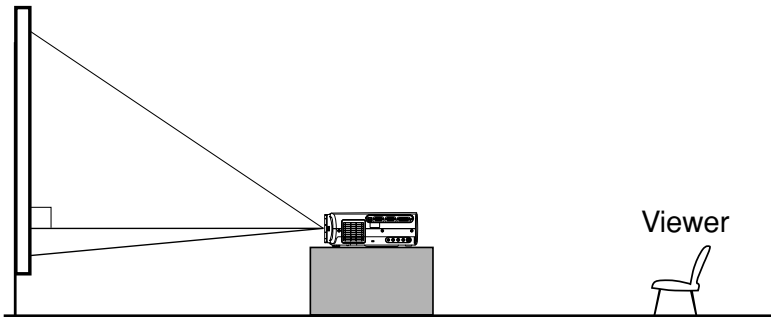


## Floor-mounted rear projection

Viewing a picture projected through the back of the screen from a floor installation.

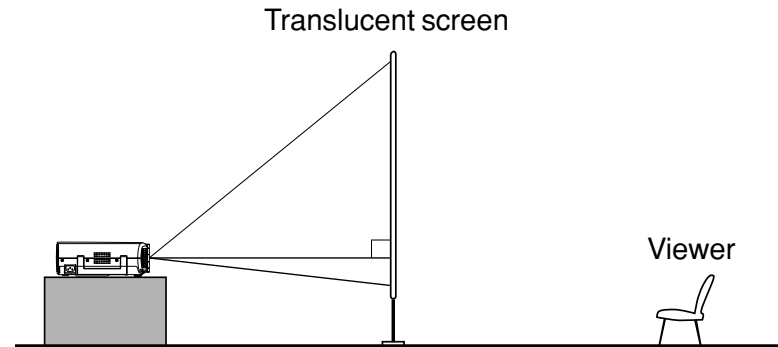


## 1 Place the projector on a steady, level surface such as a table.

To obtain proper screen projection, place the projector so that the light beam hits the screen squarely.

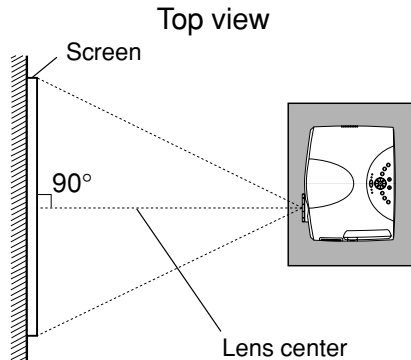


Point the lens straight at the center of the screen as above.

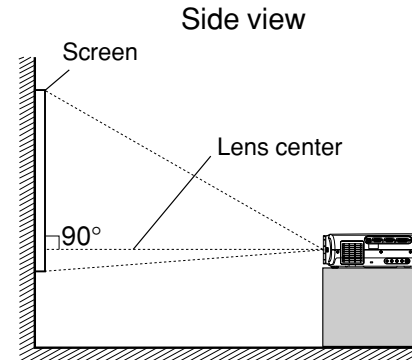

Place the projector horizontally so that the projecting light hits the screen squarely.

## 2 Determine the screen size projected on the screen.

The projection size depends on the distance between the lens and the screen. Adjust the projection size by changing the distances as shown below.

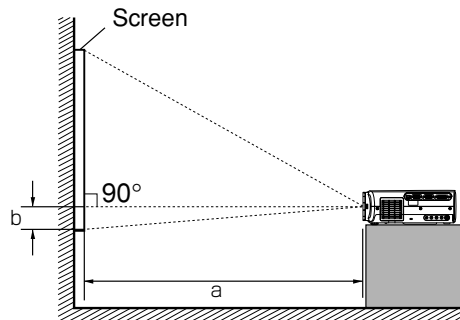

$$a \text{ (min.)} = \frac{\text{Projection size} - 1.7382}{23.377}$$

$$a \text{ (max.)} = \frac{\text{Projection size} - 1.3766}{23.266}$$

$$b = \text{Projection size (cm)} \times 0.072$$

a: Distance between the lens and the screen (m)


b: Distance between the lens height and the bottom of projection area (cm)

• The values are approximations.

Projection size (inches)	a (m)		b (cm)
	Minimum (At maximum zoom)	Maximum (At minimum zoom)	
32 (81)	–	1.30	5.8
40 (102)	1.30	1.66	7.3
60 (152)	1.98	2.52	11.0
80 (203)	2.66	3.38	14.6
100 (254)	3.34	4.24	18.3
150 (381)	5.05	6.39	27.4
200 (508)	6.75	8.54	36.6
300 (762)	10.15	–	54.9

## 3 Connect the power cord.


- Insert one end into the AC IN socket on the projector.
- Insert the other end into a wall outlet.

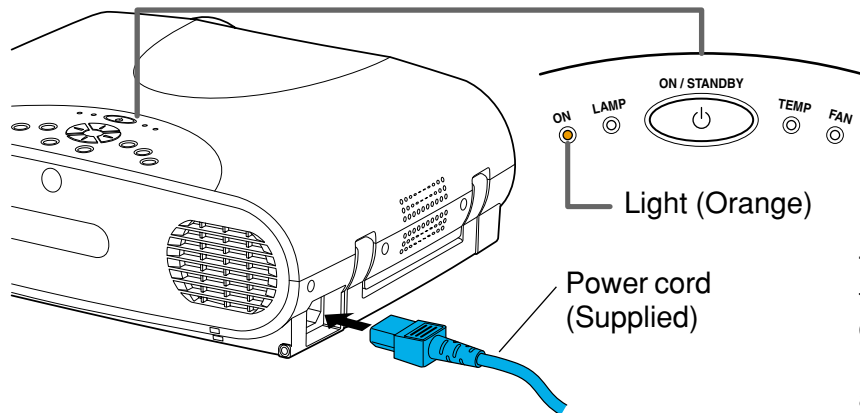

The three indicators, TEMP, LAMP, and ON, light in green for several seconds and then the ON indicator lights in orange and the projector turns to the standby mode.

Do not perform any operations while the three indicators are lit green.

## 4 Take off the lens cover.

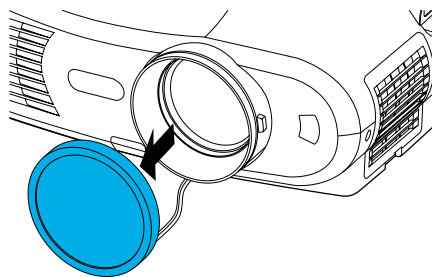


### Notes

- When the projector is moved from a cold location to a warm location, or when the ambient temperature in the projection room has risen suddenly, moisture may condense on the lens or the internal optical section to blur the projected pictures. In such a case, leave the projector for an adequate time (1 to 2 hours, depending on the room's condition) before using it, so it adjusts to the ambient temperature.
- If the screen is exposed to direct sunlight or other strong light, the projected picture will become too faint to see. Shut out the light with curtains or by other means.
- If the screen and the projector are not installed properly, the projected picture may be distorted.

# Projector placement angle adjustment

The tilt of the projector can be adjusted using the foot adjuster.


1

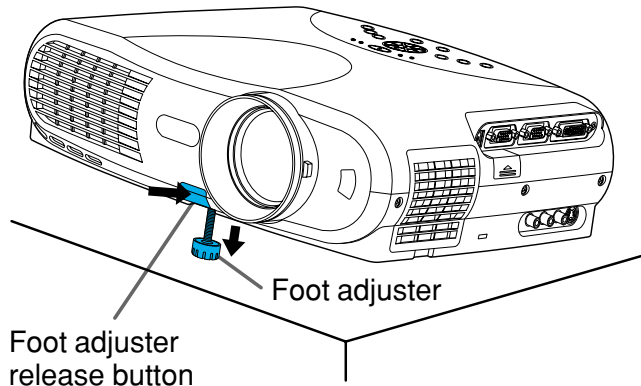

**Lift the front of the projector until the desired tilt angle is obtained and hold down the foot adjuster release button.**

The foot adjuster will extend.  
Release the button to lock in position.

2

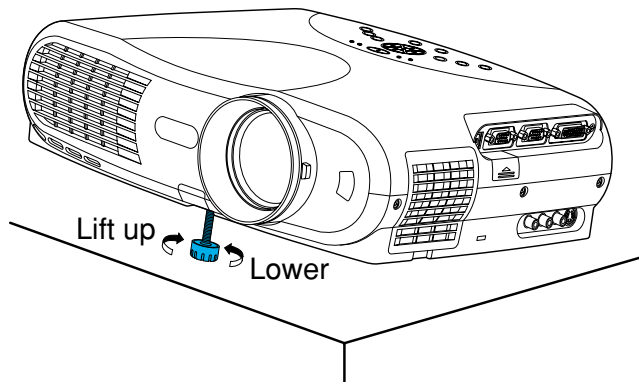

**Turn the foot adjuster to make fine adjustment to the height.**

Turn clockwise to lift up.  
Turn counterclockwise to lower.

## Notes


- To put the foot adjuster back, hold down the foot adjuster release button and lower the front slowly.
- Be sure to hold the projector when putting the foot adjuster back so as not to let the front fall on your fingers.
- Do not tilt the projector at an angle exceeding the range adjustable by the foot adjusters, since the life duration of the lamp may be shortened.

## CAUTION

When a ceiling mount is required, please consult with the dealer.


### Ceiling-mounted front projection

Viewing a picture projected on the front of the screen from a ceiling installation.

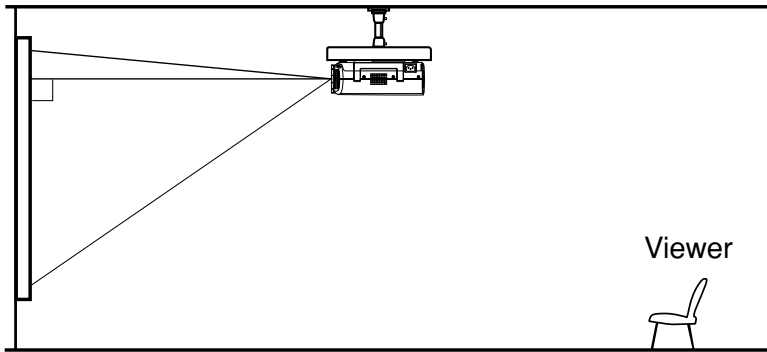

### Ceiling-mounted rear projection

Viewing a picture projected through the back of the screen from a ceiling installation.

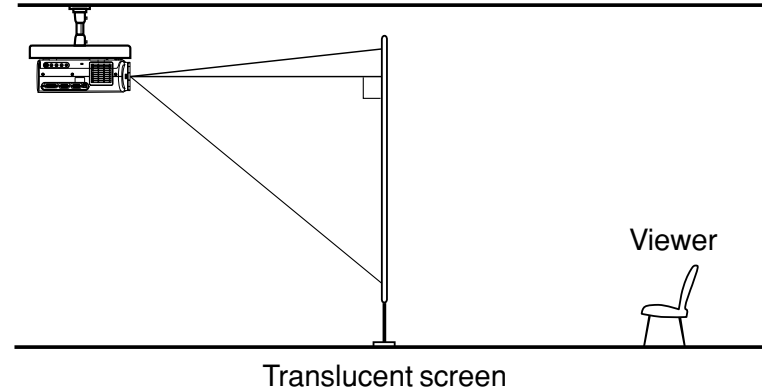

Perform the “Projection mode” setting on the menu screen for the projection method. [51](#)


## Note

The relation between the projection size and the distance to the screen is the same as that of the floor-mounted projection mode [18](#).

# Connecting a computer (COMPUTER IN 1 connector)

You can project the picture from the computer.

Check that the power supplies for the projector and for the computer are off before connecting the cables.

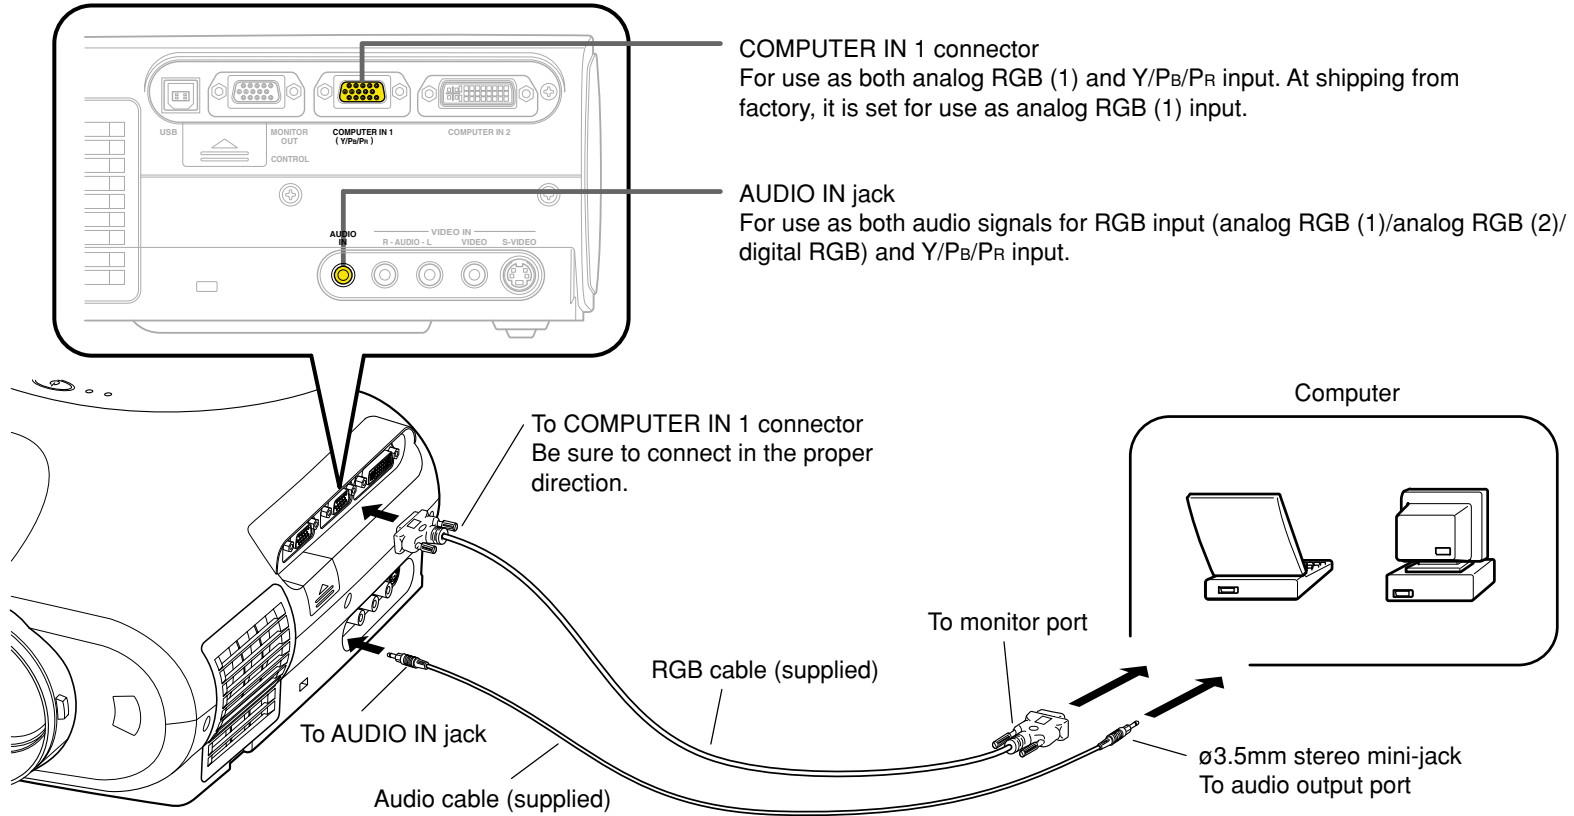


## Notes

- The projector cannot be connected to a computer without an analog RGB connector. For details, refer to the computer manual.
- You may not be able to connect some computers to the projector. For details, consult the dealer.
- Some computers may have output modes which are not compatible with this projector. Check the compatibility of the connectors, signal levels, timing, resolutions, etc.

# Connecting a computer (COMPUTER IN 2 connector)

You can project the picture of analog RGB or digital RGB signal from a computer by using the COMPUTER IN 2 connector. Check that the power supplies for the projector and for the computer are off before connecting the cables.

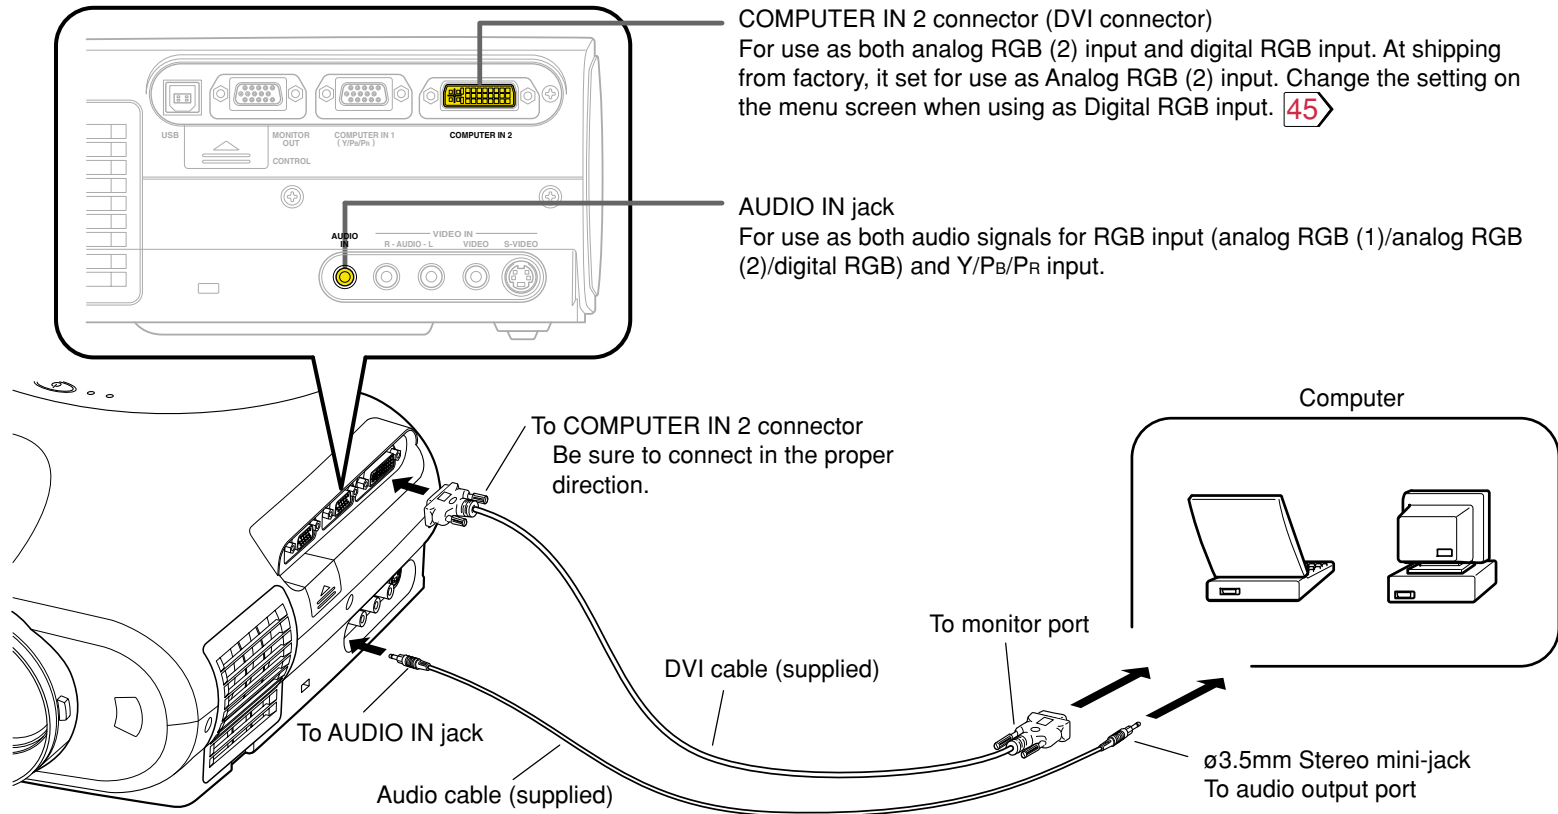


## Notes (Please also read "Notes" on page 22.)

- DVI digital cable needs to be purchased separately when you input a digital RGB signal.
- Although infrequent, noise might be generated on the screen depending on the types of computer and connection cables. Should this occur, reduce the refresh rate of the computer signal, or lower the resolution. Use of connection cables that are 2 m or shorter is recommended.
- The input signal specifications of the DVI port of the projector conform to DVI 1.0 specifications; however, contents protection is not supported. Note that there is no guarantee for the operations not specified in this specification.



# Connecting video equipment


You can project the picture from video equipment by using VIDEO IN connectors. Check that the power supplies for the projector and for the video equipment are off before connecting the cables.

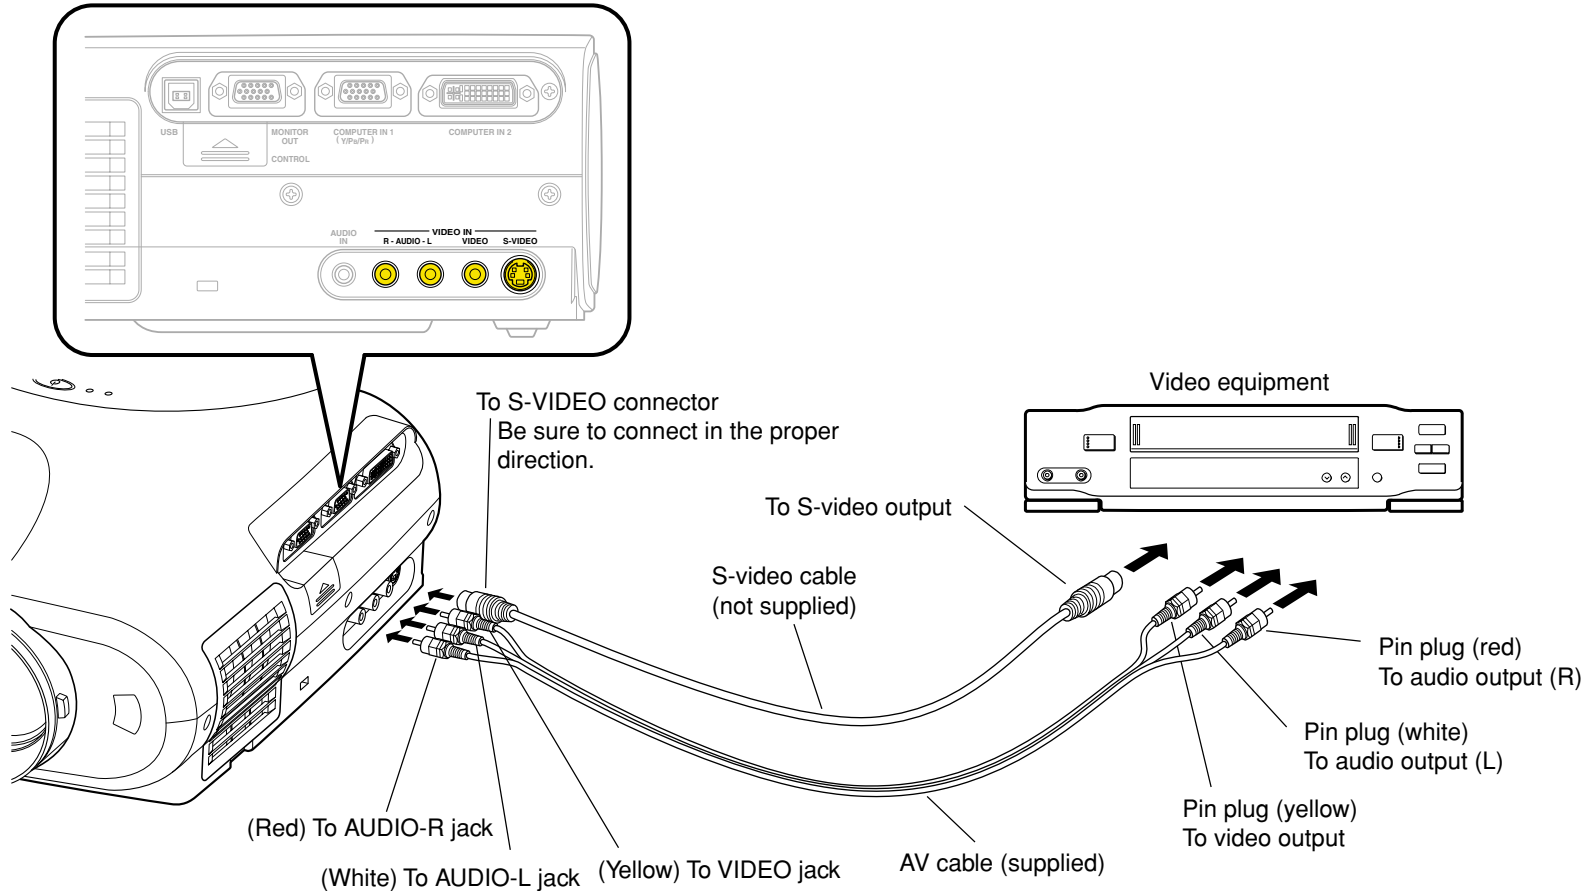

**Note**  
The S-VIDEO connector and VIDEO jack can be used independently, but the audio input jacks are used as both the S-VIDEO and VIDEO input.


# Connecting video equipment (continued)

You can project the picture from video equipment with component video output jack.  
Check that the power supplies for the projector and for the video equipment are off before connecting the cables.

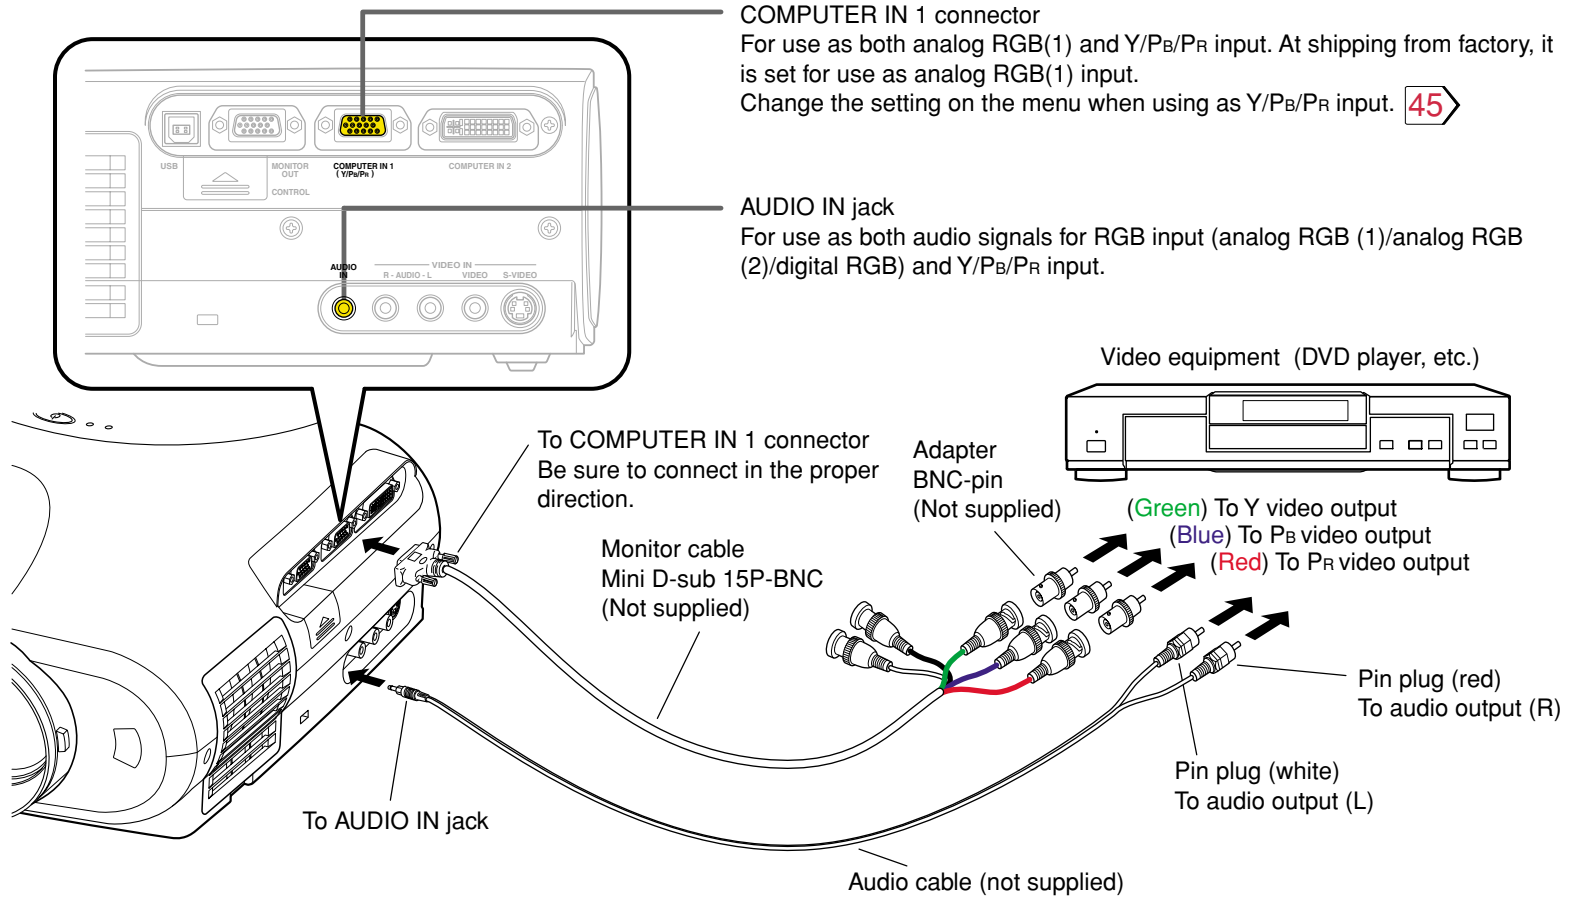

# Projector operation control by a computer

You can control the projector by a computer connected with the control cable supplied. **73**  
Check that the power supplies for the projector and for the computer are off before connecting the cables.

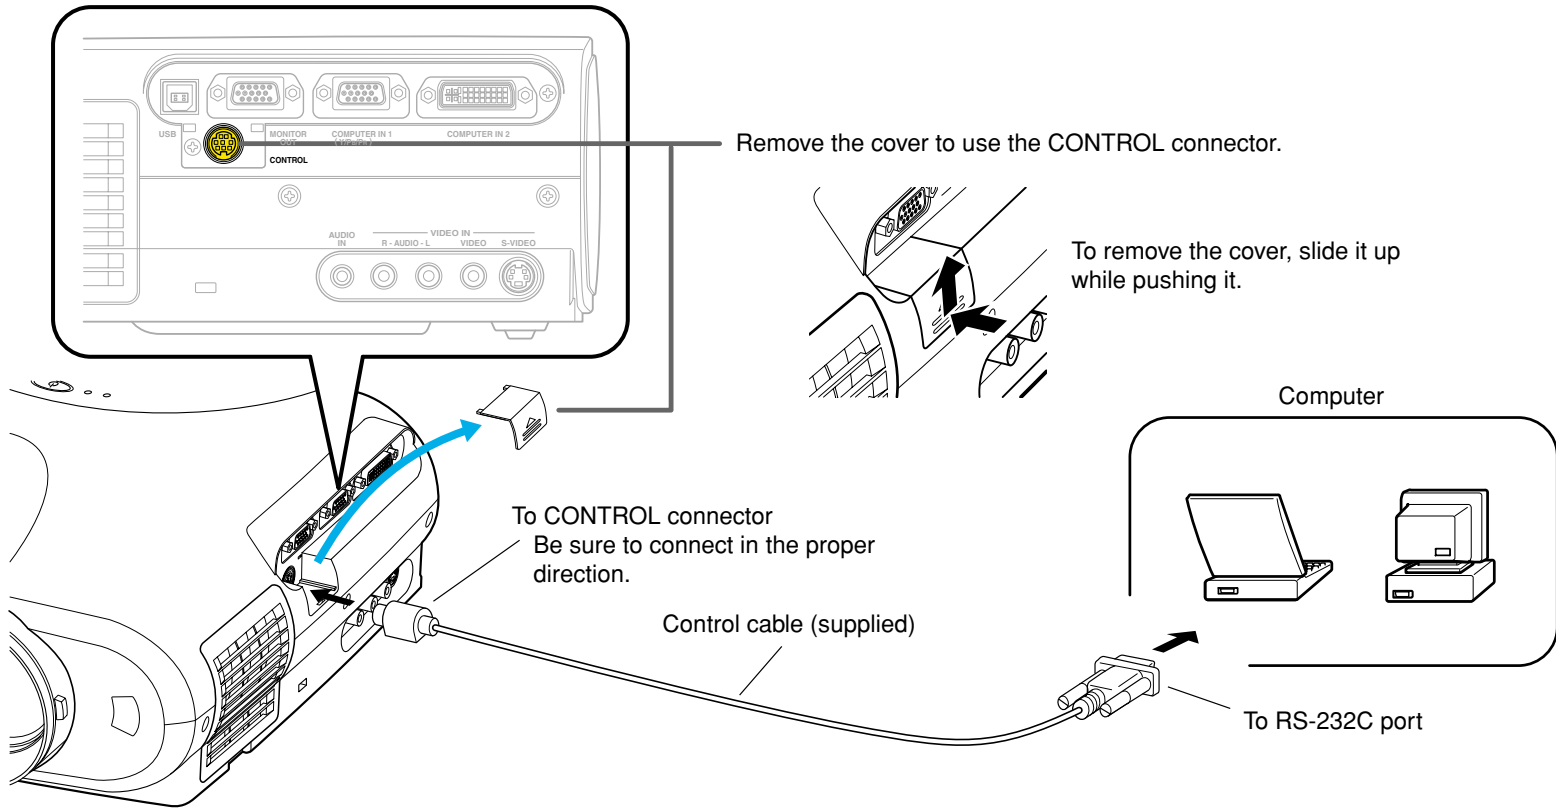


**Note**  
Do not connect any cable other than the exclusive one supplied.

# How to use the output connector

You can output video signals to a computer monitor, etc.

Check that the power supplies for the projector and for the equipments are off before connecting the cables.

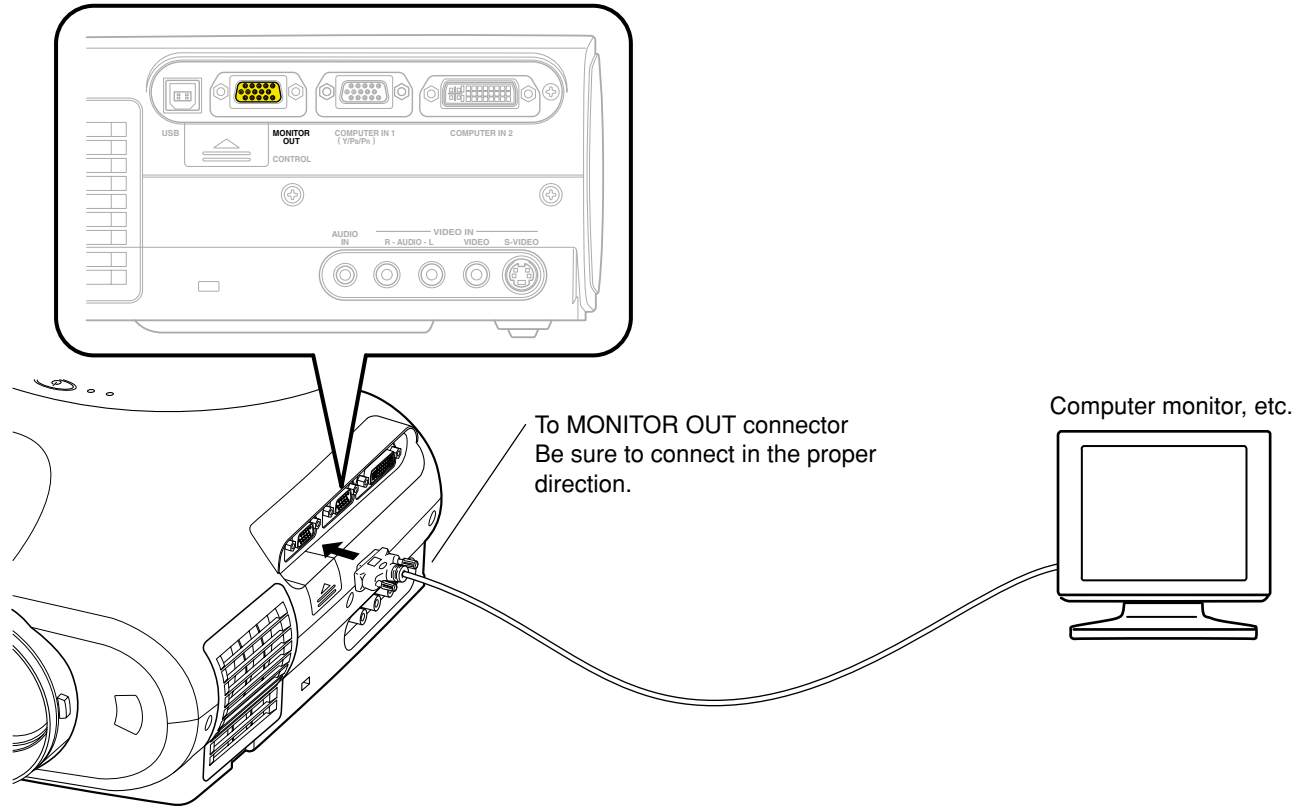


## Notes

- The analog RGB signals or Y/Pb/Pr signals of the COMPUTER IN 1 or COMPUTER IN 2 connector selected by the input select operation are output from the MONITOR OUT connector. If neither of these input sources is selected, the signal of the COMPUTER IN 1 connector is output. (Digital RGB signals are not output.)
- Signals are output from the MONITOR OUT connector even when in the standby mode.
- An ordinary computer monitor may not display a normal picture with Y/Pb/Pr signals.


**CAUTION** – Do not look into the projection lens while operating the projector.

### Remote control

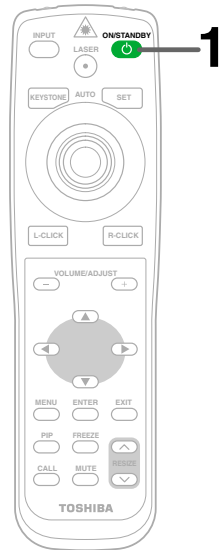

### Control panel

(Main unit side)

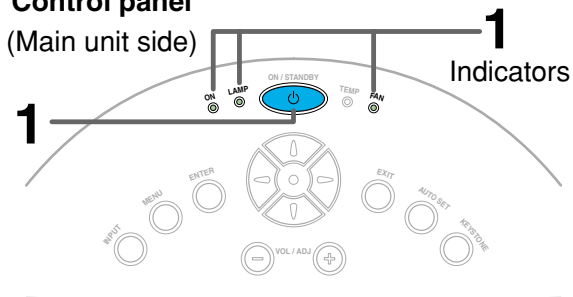

### Preparation

- 1 Install and connect the projector properly.
- 2 Take off the lens cover.

1

ON/STANDBY




ON/STANDBY




### Press ON/STANDBY.

The projector turns on and the ON, LAMP and FAN indicators light in green.

(The LAMP indicator blinks while the lamp is warming up.)

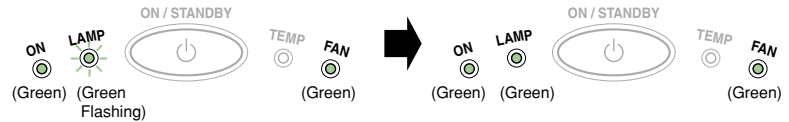


The lamp lights and the start up display appears.

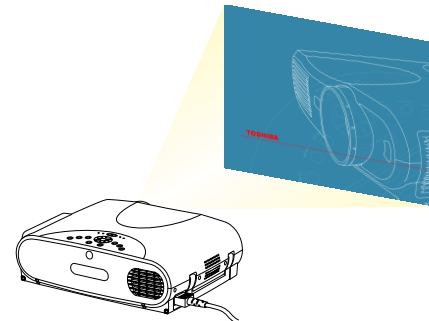


### Notes

- The startup screen disappears when you push the **EXIT** button or wait for a while. You can also set the startup screen not to be displayed on the menu screen. [51](#)
- When a projector is used for the first time, the language selection menu is displayed after the startup screen disappears. Set it up with procedures 2 and 3 on the next page.

Remote control

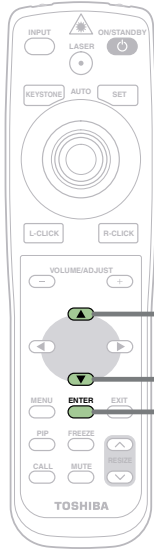

Control panel  
(Main unit side)

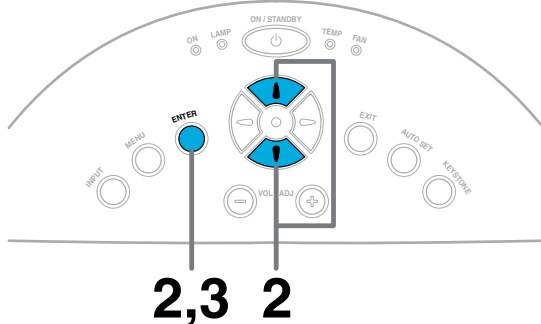

When a projector is used for the first time, the language selection menu, which is to select a language for displaying menus or messages, is displayed. Select a desired language. (At shipping from factory, it is set to English.)

**2** **Select a desired language with the selection buttons (▲/▼), and press ENTER.**  
A menu confirming the selection result is displayed in the selected language.


**3** **Press ENTER to confirm.**  
Press EXIT to return to step 2 if you want to re-select a language.

**Notes**


- The language selection menu will not be displayed on the second and subsequent times you turn on the power. However, if “Reset all” [52](#) is executed, the language selection menu will be displayed when the power is turned on next.
- The language can also be selected on the menu screen. [50](#)
- This Owner’s manual is described on the supposition that English was selected.

**4** **Turn on the connected equipment and put it in playback mode.**  
Select “Cancel” or install driver contained in the supplied CD-ROM, when the dialog box of the Add New Hardware Wizard screen appears on the computer when connecting a computer. (The supplied CD-ROM contains a driver information file named TOSHIBA\_TLP.inf. Click the Browse button of the dialog box to find and designate this file.)

Remote control

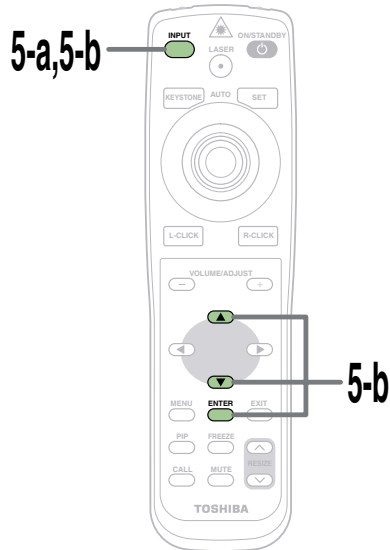


Control panel  
(Main unit side)

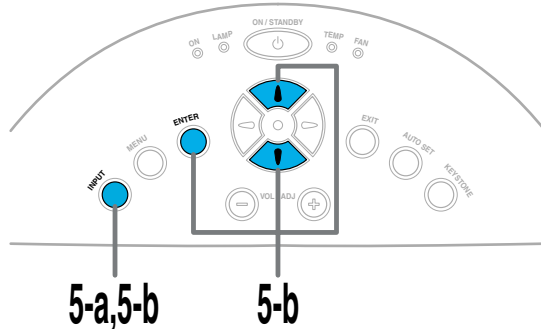

Select the input source to project.

There are two kinds of methods as follows (5-a and 5-b.)

## 5-a

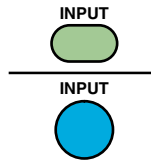

**Select the input source by pressing INPUT repeatedly.**


At shipping from factory, “Analog RGB(1)” connected to COMPUTER IN 1 connector or “Video” connected to VIDEO Jack can be selected. (You can select “Camera” when using the model with a document imaging camera.)

The icon and the name of the selected input source appear on the screen.

### Note

The types of input sources selected when the **INPUT** button is pressed repeatedly can be set from the menu screen. [45](#)

## 5-b

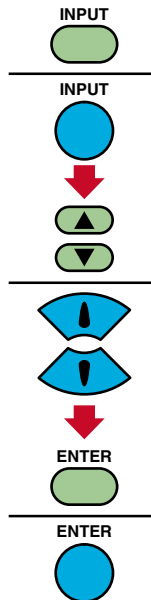

**Press INPUT and hold for two seconds.**

The input source selection menu appears.

**Select the input source to project with the selection buttons (▲/▼).**

Regardless of the contents of input source settings on the menu screen, all the input sources are displayed here for selection.

**Press ENTER.**


A picture of the selected input source is projected. When a sound signal source is also connected, sound is emitted from the speaker.

## Notes

(Signal sent from the computer)

- If you project an image from a computer with an LCD screen while monitoring the image on the computer, the image may not be projected properly, depending on the computer model. In this case, turn off the computer display. For details on controlling the computer display, etc., refer to the computer's manual and description on the software for the computer used.
- The projector projects an image by XGA signal (1024 x 768) in full screen.
- The image quality from a computer signal other than XGA may be inferior. It is recommended to set the external monitor connected to the computer to XGA mode (1024 x 768).
- The projector can be also applied to DDC2B (Display Data Channel 2B). If your computer is applied to the DDC, start up your computer after turning on the projector.


6

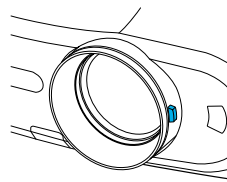

**Adjust the picture size by turning the zooming lever.**


Turn to the right to enlarge the picture.  
Turn to the left to reduce the picture.

7

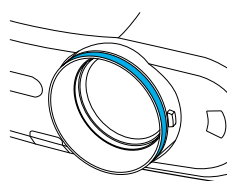


**Focus on the picture by turning the focusing ring.**

A still picture is recommended for focusing.

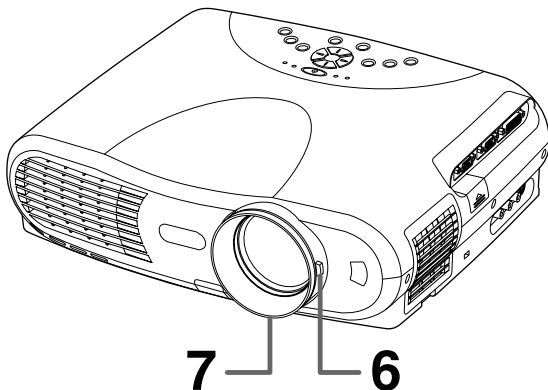




## Remote control

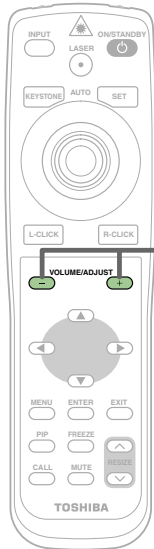


8

## Control panel (Main unit side)

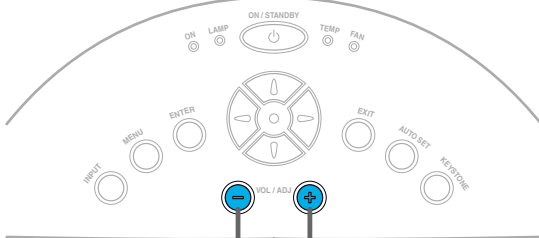

8

8

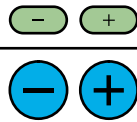

**Press VOL/ADJ (+/-) to adjust volume.**

Press the (+) button to increase volume.

Press the (-) button to decrease volume.

### Notes

- To change the projecting angle, adjust the foot adjuster. [20](#)
- If the screen image suffers keystone distortion, press the **KEYSTONE** button to adjust the distortion. [35](#)
- Due to lamp characteristics, flickers may occasionally occur in a picture. This is not malfunction of the unit.
- The lamp may rarely burst with a loud sound. A lamp is consumable supplies. If used for extended periods, images will appear dark, and the lamp could burn out. This is characteristic of a lamp, and is not malfunction. (The lifetime of the lamp depends on conditions of use.)
- The projector's liquid crystal panel is made using extremely advanced technology, but there may be black spots (pixels that do not light) or bright spots (pixels that are constantly lit) on the panel. Please note that these are not malfunctions.
- When trying to press a button whose operation is not available, the icon appears.
- When supplying the signal not compatible with the projector, the icon appears.
- When signals are not input from the input source, the **OFF** icon appears.
- The projector may stop operating if the surrounding temperature is too high or if the air filter is clogged with dust. [62](#)



### About the LCD Panel

The life of the LCD panel is limited.

Take care over the points below so as to use the panel for years.

- To prolong the life of this panel, never fail to turn the power off when the panel is not in use and make sure that the lamp has gone out. The state of the lamp being extinguished helps enhance the effect of energy saving.
- If the air filter is stained and is clogged up, the main unit inner temperature rises. As a result, the life of the LCD is shortened and a malfunction may also occur. Clean the air filter from time to time [63](#) and replace it regularly. It is recommended that this replacement be done at the time of replacing a lamp. (Ask a dealer where the unit was purchased or your nearby service station about an air filter for replacement.)

Remote control

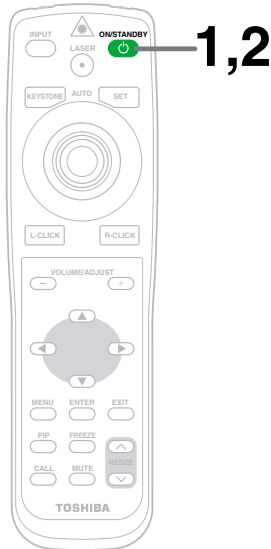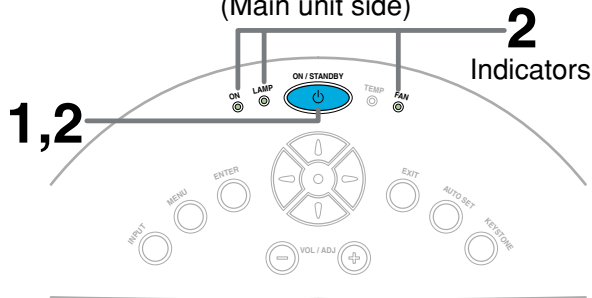Control panel  
(Main unit side)

1

ON/STANDBY



ON/STANDBY



## Press ON/STANDBY after using the projector.

An instruction message for turning the power off appears on the screen and disappears after a while. When the message disappears, operation becomes invalid.

2

ON/STANDBY




ON/STANDBY



## Press ON/STANDBY again.

Cooling starts. Once cooling is completed, the LAMP and FAN indicators turn off and the standby mode is set. (The ON indicator turns in orange.)

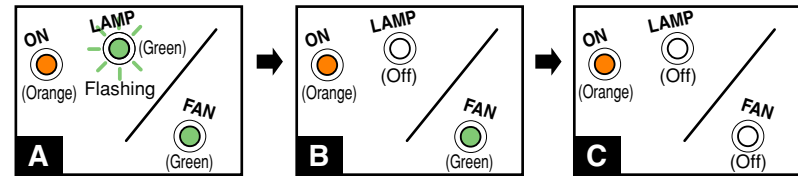


- A** To protect the light source lamp, the LAMP indicator blinks as long as a minimum of cooling is necessary. The power cannot be turned back on during this time. Unplugging the power cord at this time will shorten the lamp's duration life.
- B** The cooling fan continues to run for a while to expel the heat remaining inside. If you are in a hurry, however, you may unplug the power cord at this time.
- C** The standby mode is set.


### Notes

- The projector consumes about 20W of power in the standby mode. We recommend you unplug the power cord when not using the projector for long periods of time.
- Be sure that the LAMP indicator has turned off before unplugging the power cord. Cutting the power by unplugging the power cord while the projector is operating or the light source lamp is being cooled will shorten the lamp's duration life. **Should a fault or some other irregularity arise with this unit, unplug the power cord.**
- When reinserting the power before the lamp has cooled, please wait until the lamp has cooled sufficiently before use. When the lamp is at a high temperature, it may not light and its life duration will be shortened.

Remote control

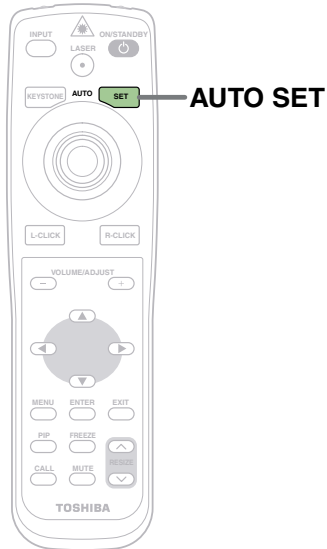

Control panel  
(Main unit side)

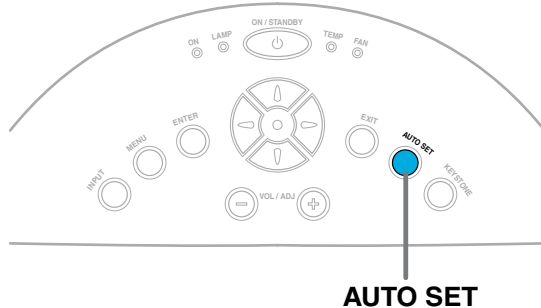


You can adjust the optimum horizontal position, vertical position, sampling phase and sampling frequency for projecting analog RGB signals at the touch of a button.

1

**Input full screen video signals from the input source (computer) and project the image.**

 
Adjustments may not be performed properly for images that are not displayed on the entire screen or for extremely dark images.

2




**Press AUTO SET.**

The horizontal position, vertical position, sampling phase and sampling frequency are adjusted automatically.

The icon  appears during signal processing.

## Notes



- Automatic adjustment may not be performed properly for signals other than those computers' signals with which the projector is compatible.
- The horizontal position, vertical position, sampling phase and sampling frequency can also be adjusted from the menu screen .

### \* Sampling frequency


Analog RGB signals input from the computer are converted into digital signals inside the projector. The sampling frequency is the number of times per second the analog signals are converted into digital signals. In order to capture (sample) each individual dot of the computer's signals, the sampling frequency must be adjusted to match the computer's dot clock frequency. If this adjustment is off, details of the image details may be blurred, a striped pattern may appear if images with many vertical lines are displayed, or the image's width may change. For computer signals with which are projector-compatible, the sampling frequency is adjusted automatically even when the **AUTO SET** button is not pressed.

### \* Sampling phase

The sampling phase is the timing at which the computer's analog RGB signals are sampled. If the sampling phase is off, the individual dots cannot be sampled at the proper timing, resulting in blurred or flickering images.

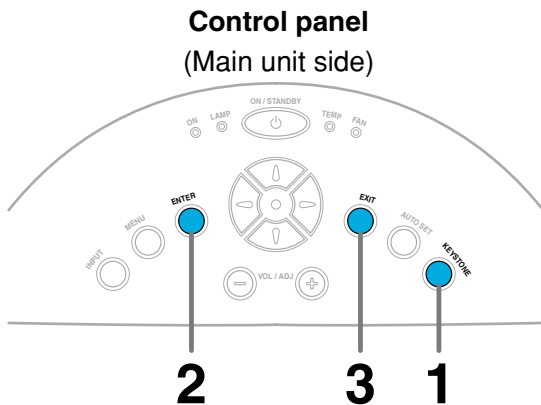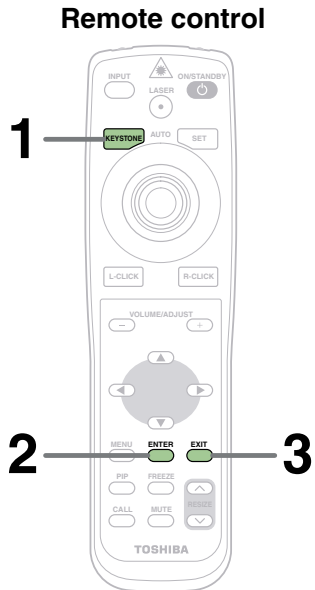

A picture may be expanded on the upper side if projected upward from the projector lifted up by the foot adjuster. The projector can correct this keystone distortion.

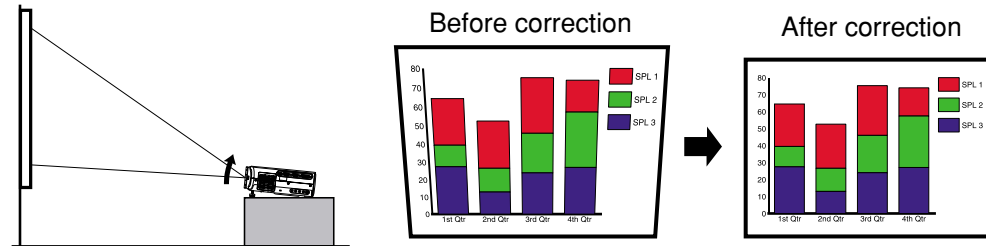

- 1**

**KEYSTONE**


**Press KEYSTONE.**

The keystone adjustment menu appears, with the “Auto. V-keystone” being selected. (This menu is the same as the sub-menu which is displayed when “Correct the keystone distortion of the screen” is selected from GUIDE MENU. **45**)
- 2**

**ENTER**

**Press ENTER.**

The vertical keystone distortion on the picture projected is automatically corrected.

The  icon appears while the keystone correction is executing.

When the correction is finished, the menu for selecting “V-keystone” or “H-keystone” by manual adjustment appears, with the former being selected.
- 3**


**EXIT**

**Confirm the keystone distortion.**

When no more adjustment is needed, press the **EXIT** button repeatedly until the menu disappears.


If the keystone distortion has not been corrected properly, adjust it according to the next procedure.

Remote control

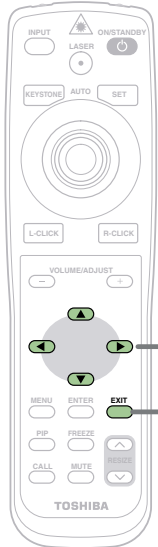

4,5  
6

Control panel  
(Main unit side)

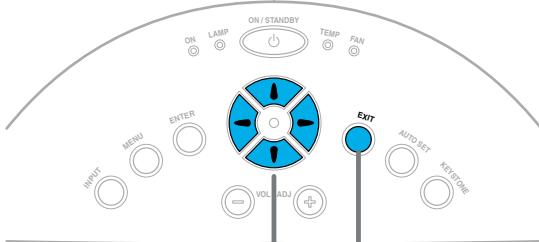


4,5 6

4

If the screen is not installed vertically, "Auto. V-keystone" is not corrected properly.




After confirming that "V-keystone" is selected on the menu; **Adjust the distortion of the both sides (right and left) of the picture with the selection buttons (◀/▶).**

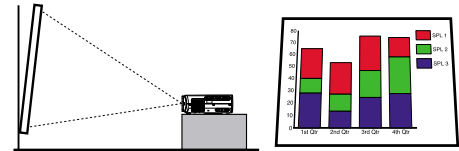

5



When the projector is not installed at an angle of 90° to the screen viewed from the top, the upper and lower sides of the projected picture will be distorted.

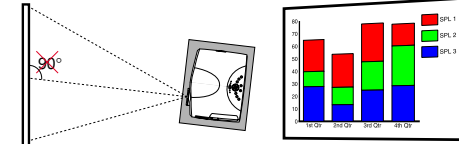

Select "H-keystone" from the menu with the selection buttons (▲/▼), and adjust the distortion of the upper and lower sides of the picture with the selection buttons (◀/▶).

6




Press EXIT repeatedly until the menu disappears.

The keystone adjustment finishes.

### Notes

- Due to digital correction processing, some of the information may be eliminated or the picture quality may be degraded depending on the amount of keystone correction or the contents of the signal source.
- The adjustable range of "V-keystone" or "H-keystone" is influenced by each other's correction amount, and each input signal **71**.
- When "Auto. V-keystone" does not operate properly even with the screen installed vertically, execute "Horizontal reference value reset" **52**.

Remote control

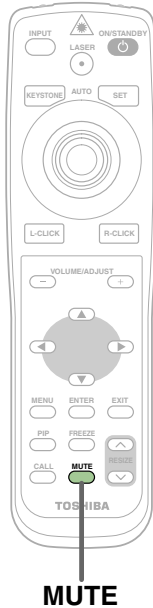


The image and sound of this projector can be turned off if you wish to temporarily project the image from another projector or an OHP, etc., onto the screen.



## Press MUTE.


The sound and picture are cut off temporarily.  
To cancel the mute mode, press **MUTE** again. The image and sound will be output.

The  icon appears in the mute mode.

### Note

The mute mode is cancelled if another operation is performed during the mute mode.

## Remote control

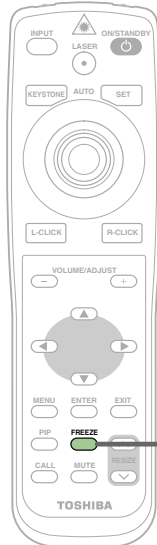

**FREEZE**

You can freeze the image being projected.


Use this function to stop moving images from a video recorder during presentations.



### Press **FREEZE**.

The picture freezes.


To release the picture, press **FREEZE** again.

The  icon appears in the freeze mode.

### Notes


- The frozen image can be enlarged with the **RESIZE** buttons. The freeze mode is cancelled if any operation other than **RESIZE** is performed.
- The freeze mode cannot be set when there is no input (when no signals are being supplied from a signal source).
- The input source's moving image continues to run even when the projector is set in freeze mode.
- If you use this function on video soft sold on the market, broadcast or broadcast on cable except for the purpose of your private seeing and hearing, it may infringe the copyright protected by the copyright laws.

Remote control

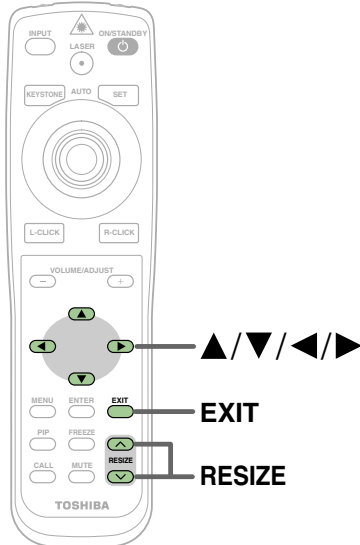



The icon  appears in the resize mode.

You can enlarge (resize) the picture size projected.


**RESIZE** 

  **Press RESIZE (▲).**  
The enlargement ratio increases each time the **RESIZE (▲)** button is pressed.  
The enlargement ratio can be increased continuously by keeping the button pressed in.




 
**RESIZE** 

**To reduce the enlargement ratio, press the RESIZE (▼) button.**  
The enlargement ratio can be reduced continuously by keeping the button pressed in.



The enlarged section is moved when the selection buttons (▲/▼/◀/▶) are pressed.  
The section can be moved continuously by keeping the button pressed in.



**EXIT** 


**Press the EXIT button to cancel the resize mode and return to the original size.**

**Notes**

- Enlarged images can be frozen by pressing the **FREEZE** button. The frozen image can also be enlarged or reduced.
- The resize mode is cancelled if any operation other than setting the freeze mode is performed.
- This projector uses electrical digital resizing, so the picture quality degrades when images are enlarged.
- This function does not work in no input status (no signal is supplied from the signal source).
- If you use this function on video soft sold on the market, broadcast or broadcast on cable except for the purpose of your private seeing and hearing, it may infringe the copyright protected by the copyright laws.



Remote control

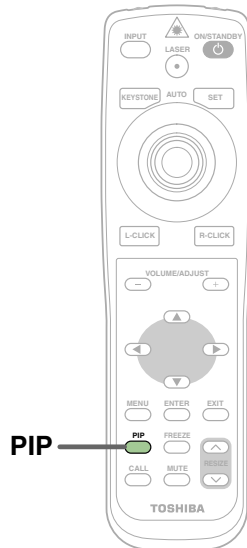

Video or S-video images can be displayed as small images within the computer's image. (Referred to as "sub-pictures" in this manual.)




### Press PIP.

A sub-picture is displayed.  
Press the **PIP** button again to turn off the sub-picture.

### Notes

- The PIP function cannot be used when a source other than an RGB input source is selected.
- The PIP function cannot be used without signals supplied from an RGB signal source.
- The sub-picture turns off if any other operation is performed.
- The signal source, size, display position and audio input source to display sub-pictures can be changed from the menu screen. [53](#)
- If you use this function on video soft sold on the market, broadcast or broadcast on cable except for the purpose of your private seeing and hearing, it may infringe the copyright protected by the copyright laws.

Remote control

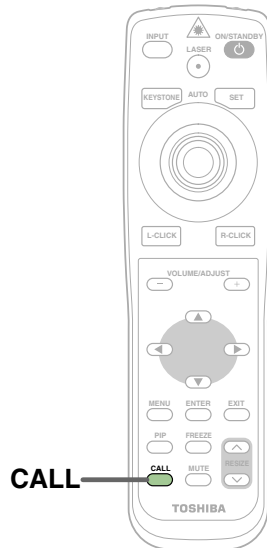

Information on the input signal source, etc., can be displayed.



## Press CALL.

The information described below is displayed.

The information display turns off when the **CALL** button is pressed again.



### Status display


Input	- current input source
H-resolution	- the horizontal resolution of the input signal (at RGB input)
V-resolution	- the vertical resolution of the input signal (at RGB input)
H-frequency	- the horizontal frequency of the input signal (at RGB input)
V-frequency	- the vertical frequency of the input signal (at RGB input)
Sync	- the polarity of the sync signal (at RGB input)
Video mode	- the color mode of the video signal (at Video, S-Video input)
Signal format	- the formatting of the Y/P <sub>B</sub> /P <sub>R</sub> signal (at Y/P <sub>B</sub> /P <sub>R</sub> input)
Lamp time	- the elapsed usage time of the lamp
Version	- the version of the firmware
Shutter	- the shutter speed of the document imaging camera (at document imaging camera input)

### Notes

- The information displayed is not refreshed even if it changes. To refresh the information, turn off the information display, then turn it back on.
- The information display turns off if any other operation is performed.
- The “Lamp time” shows an approximate time for lamp replacement. (It should not be used as a lamp warranty time counter.) If the time indicated here nears 1500 hours, contact your store of purchase about obtaining a replacement lamp (TLPL79, sold separately).
- The “Lamp time” can be reset when the lamp is replaced.
- The “Version” is the version of the control program used in the projector and is used for servicing, etc.

# Operating a computer by the remote control

You can control a computer by the remote control when the projector and computer are connected with the supplied USB cable. In this manual, this function is explained as “mouse remote control”.

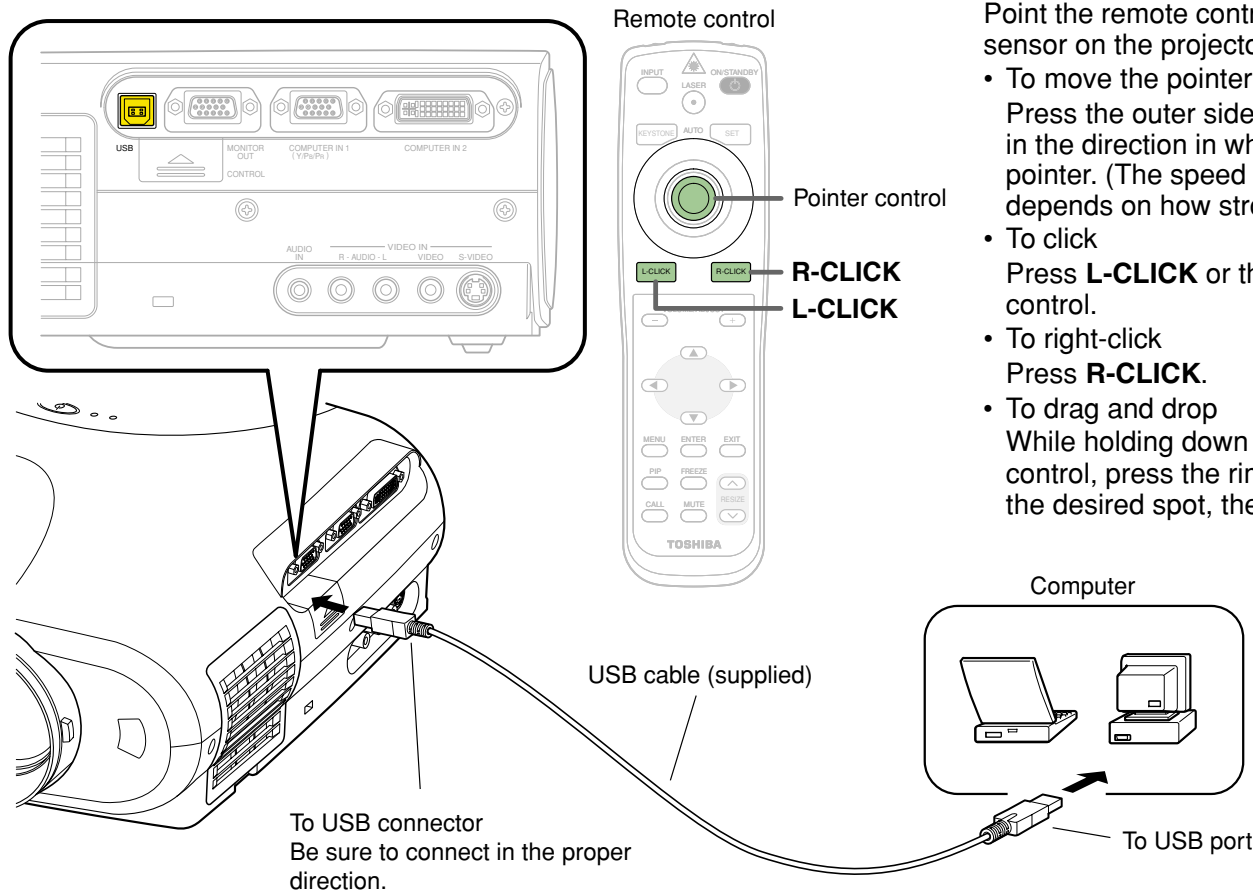

Point the remote control at the remote control sensor on the projector when operating its buttons.

- To move the pointer  
Press the outer side of the pointer control button in the direction in which you want to move the pointer. (The speed at which the pointer moves depends on how strongly the button is pressed.)
- To click  
Press **L-CLICK** or the center of the pointer control.
- To right-click  
Press **R-CLICK**.
- To drag and drop  
While holding down the center of the pointer control, press the rim side to move the pointer to the desired spot, then release the center part.

## Notes

- This function is available on any computer with the Windows 98/98SE, Windows Me, Windows 2000, Windows XP or Mac OS9 that is equipped with a USB port which can support USB1.1. However, please note that Toshiba does not guarantee the operation of all computers.
- When connecting to the computer's USB port for the first time, a message asking you to insert the Windows98 CD-ROM may appear on the computer's monitor screen, depending on whether or not the device driver is installed. If so, do as the message says.
- When using a USB cable other than the supplied one, be sure to use a shielded type.

Various adjustments and settings can be made on the menu screen. The basic operations on the menu screen are shown here.

**Start** **GUIDE MENU:** You can adjust or set the functions used frequently.

**FULL MENU:** For the operating instruction, refer to the next page. [44](#)

**Press MENU.**  
The GUIDE MENU appears, and an item list is displayed on the menu.

The current input source → Analog RGB(1)

Items


- Adjust the image brightness.
- Adjust the image flicker.
- Select the image with its brightness priority or quality (color) priority.
- Correct the keystone distortion of the screen.
- Select the input source when changing the input.

Button operation guide → FULL Item Next Quit

If you want to make more detailed adjustments and settings, call up the FULL MENU.

Return to the GUIDE MENU when the MENU button is pressed.

**Press MENU once again.**  
The FULL MENU of [Picture] appears.  
FULL MENU has seven pages of [Picture], [Position], [Color], [Audio], [Display], [Default setting] and [Reset].  
Use the selection buttons (◀/▶) to change the page of FULL MENU.

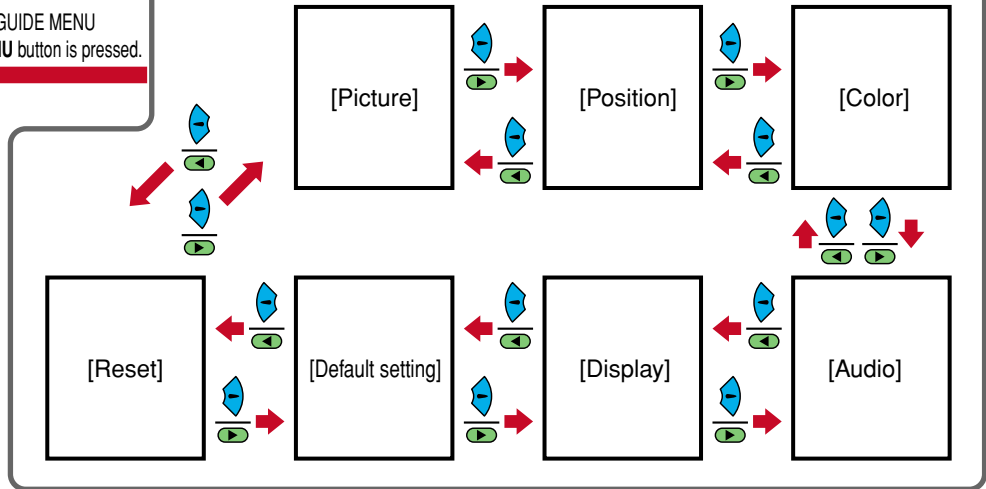

**Select the item with the selection buttons (▲/▼).**

**Press ENTER to confirm.**  
The selected item can be adjusted or set.


**Adjust and set the selected item with the button displayed in the button operation guide section.**  
According to the selected item, the kind ([adjustment], [setting] or [execution]) and the button to be used are displayed in the button operation section.

**Press EXIT to return to the GUIDE MENU.**  
When you want to select other items, press EXIT repeatedly until GUIDE MENU appears.  
When you want to quit, press EXIT repeatedly until GUIDE MENU disappears.


**End**

Adjustments & Settings

Control panel (Main unit side)

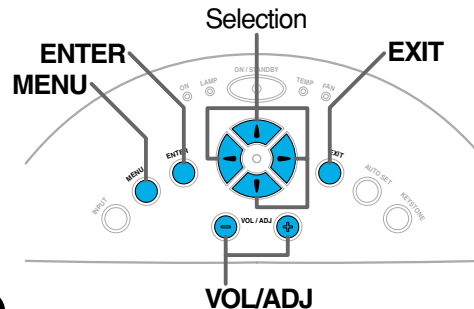



Remote control

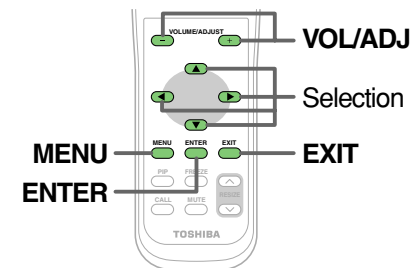

Continued

**Start** For the selection method of FULL MENU, refer to 43

- Select the item with selection buttons (▲/▼).
- The figure below is a sample for explanation.
- This status does not really exist.

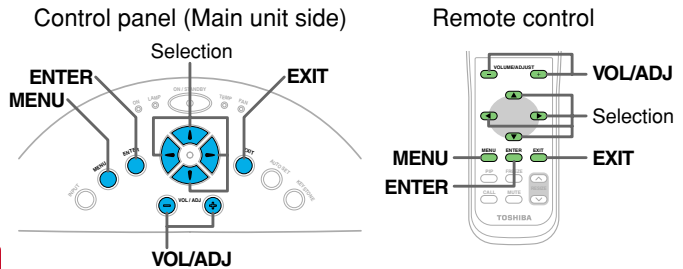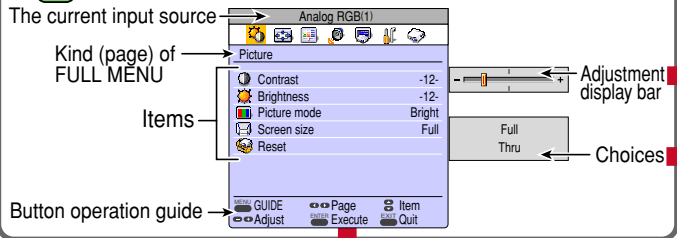

- For the items whose adjustment bar is displayed:
- For the items whose choices are displayed:

**Method -1**

**Adjust with VOL/ADJ (+/-)**  
Press the selection buttons (▲/▼) when selecting other items continuously.

**Method -2**

For the items that [Execute] is displayed in the button operation guide section:

**Press ENTER.**  
The selected item is executed. FULL MENU is displayed after execution.

**Press ENTER.**  
The objects in the Choices section become selectable.

**Press ENTER.**  
Only the (short list of the) selected adjusting items is displayed. This is useful as you can see a main picture not hidden under FULL MENU.

**Set with the buttons shown in the Button operation guide section.**

**Adjust with VOL/ADJ (+/-) or selection buttons (▲/▼).**

**Press EXIT.**  
FULL MENU is displayed and you can select other items.

**Press EXIT.**  
FULL MENU disappears, and adjustment or setting is finished.

**End**

**Note**

An exclusive menu is displayed when making PIP function sub-picture settings. 53

# GUIDE MENU adjustments and settings

On GUIDE MENU, you can set or adjust the functions frequently used.

To operate GUIDE MENU, refer to page [43](#).

				The relationship between input source and item Yes: Adjustable -: Not displayed								
				Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/P <sub>B</sub> /P <sub>R</sub>	Video	S-Video	Camera		
Adjust the image brightness.	Contrast	ADJ.	Adjust the contrast of the picture.	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
	Brightness	ADJ.	Adjust the brightness of the picture.									
Adjust the image flicker.	Phase	ADJ.	Adjust the flicker of the picture. (Sampling clock phase adjustment)	Yes	Yes	-	-	-	-	-		
Adjust the image color.	Color	ADJ.	Adjust the color depth of the picture.	-	-	-	Yes	Yes	Yes	-		
Adjust the sensitivity of the document imaging camera.	Camera gain	ADJ.	Adjust the document imaging camera's gain.	-	-	-	-	-	-	Yes		
	Shutter	Select a shutter speed below to decrease the flickering of the document imaging camera's picture.										
Restrain the flicker of the camera.	Auto	SET	The shutter speed is set automatically.	-	-	-	-	-	-	Yes		
	50Hz	SET	The shutter speed is fixed to 50 Hz.									
	60Hz	SET	The shutter speed is fixed to 60 Hz.									
Select the image with its brightness priority or quality (color) priority.	Bright	SET	The picture is set with its brightness priority.	Yes	Yes	Yes	-	-	-	-		
	True color	SET	The picture is set with its color quality priority.									
Correct the keystone distortion of the screen.	Auto. V-keystone	EXEC.	Adjust the vertical keystone distortion automatically.	Yes (common for all of the inputs)								
	To manual adjustment	EXEC.	V-keystone								ADJ.	Adjust the Vertical keystone.
		EXEC.	H-keystone								ADJ.	Adjust the Horizontal keystone.
Select the input source when changing the input.	COMPUTER IN 1	SET	<input checked="" type="checkbox"/> : COMPUTER IN 1 connector is selectable with the <b>INPUT</b> button.	Yes (common for all of the inputs)								
	Analog RGB(1)	SET	<input checked="" type="checkbox"/> : Use COMPUTER IN 1 connector as Analog RGB (1) input.									
	Y/P <sub>B</sub> /P <sub>R</sub>	SET	<input checked="" type="checkbox"/> : Use COMPUTER IN 1 connector as Y/P <sub>B</sub> /P <sub>R</sub> input.									
	COMPUTER IN 2	SET	<input checked="" type="checkbox"/> : COMPUTER IN 2 connector is selectable with the <b>INPUT</b> button.									
	Analog RGB(2)	SET	<input checked="" type="checkbox"/> : Use COMPUTER IN 2 connector as Analog RGB (2) input.									
	Digital RGB	SET	<input checked="" type="checkbox"/> : Use COMPUTER IN 2 connector as Digital RGB input.									
	VIDEO	SET	<input checked="" type="checkbox"/> : Video input is selectable with the <b>INPUT</b> button.									
	S-VIDEO	SET	<input checked="" type="checkbox"/> : S-Video input is selectable with the <b>INPUT</b> button.									
	CAMERA	SET	<input checked="" type="checkbox"/> : Camera input is selectable with the <b>INPUT</b> button.									

: On/Off with **ENTER**  
: On/Off with (◀) or (▶)

## Notes

- The items related to the camera (the document imaging camera) are displayed only with models having a camera.
- "Sampling phase" is adjusted and memorized for each RGB signal [71](#).
- "Keystone" and "Input source setting" can be adjusted (set) at all input sources, but the adjustments (settings) made at one input source are applied to all input sources.
- It is impossible to exit from the menu if no input source is selected.
- If setting of the input source is changed, the setting becomes effective the next time the input is changed.
- The adjustments or settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments or settings are not memorized.

# FULL MENU adjustments and settings - Picture

You can make various adjustments or settings of the picture from FULL MENU [Picture].

To operate FULL MENU, refer to page [44](#).

				The relationship between input source and item				Yes: Adjustable - : Not displayed		
				Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/P <sub>B</sub> /P <sub>R</sub>	Video	S-Video	Camera
Contrast	ADJ.	Adjust the contrast of the picture.		Yes	Yes	Yes	Yes	Yes	Yes	Yes
Brightness	ADJ.	Adjust the brightness of the picture.		Yes	Yes	Yes	Yes	Yes	Yes	Yes
Sharpness	ADJ.	Adjust the sharpness of the picture. (In Y/P <sub>B</sub> /P <sub>R</sub> input mode, sharpness is a setting item.)		-	-	-	Yes	Yes	Yes	Yes
Camera gain	ADJ.	Adjust the document imaging camera's gain.		-	-	-	-	-	-	Yes
Picture mode	Bright	SET	The picture is set with its brightness priority.	Yes	Yes	Yes	-	-	-	-
	True color	SET	The picture is set with its color quality priority.							
Video mode	Auto.	SET	The video mode (color system) is set automatically.	-	-	-	-	Yes	Yes	-
	NTSC	SET	The video mode is fixed to NTSC system.							
	PAL	SET	The video mode is fixed to PAL system.							
	SECAM	SET	The video mode is fixed to SECAM system.							
	PAL-N	SET	The video mode is fixed to PAL-N system.							
	PAL-M	SET	The video mode is fixed to PAL-M system.							
	PAL60	SET	The video mode is fixed to PAL60 system.							
NTSC4.43	SET	The video mode is fixed to NTSC4.43 system.								
Signal format	Auto.	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is set automatically.	-	-	-	Yes	-	-	-
	525i	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is fixed to 525i mode.							
	525p	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is fixed to 525p mode.							
	625i	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is fixed to 625i mode.							
	750p	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is fixed to 750p mode.							
	1125i	SET	The Y/P <sub>B</sub> /P <sub>R</sub> signal format is fixed to 1125i mode.							
Shutter	Auto.	SET	The shutter speed is set automatically.	-	-	-	-	-	-	Yes
	50Hz	SET	The shutter speed is fixed at 50 Hz.							
	60Hz	SET	The shutter speed is fixed at 60 Hz.							
Screen size	Full	SET	The picture is converted to XGA (1024 x 768 dot) resolution.	Yes	Yes	Yes	Yes	Yes	Yes	Yes
	Thru	SET	The picture is displayed with the input source resolution.	-	-	-	Yes	Yes	Yes	-
	Wide	SET	The picture is converted to wide screen format.	-	-	-	Yes	Yes	Yes	-
Reset	EXEC.	Return the adjustments and settings of FULL MENU [Picture] to the factory default values.		Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Notes

- The items related to the camera (the document imaging camera) are displayed only with models having a camera.
- A part of function is restricted if you set the "Video mode" or "Signal format" to the modes other than [Auto.] . [51](#)
- If you use this function to display a video image of a video soft sold on the market, broadcast or broadcast on cable with the aspect ratio changed selecting in the screen size setting menu except for the purpose of your private seeing and hearing, it may infringe the copyright protected by the copyright laws.
- The adjustments or settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments or settings are not memorized.

# FULL MENU adjustments - Position

You can adjust the picture position etc. of the analog RGB input from FULL MENU [Position].

To operate FULL MENU, refer to page [44](#).

			The relationship between input source and item				Yes: Adjustable - : Not displayed		
			Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/P <sub>B</sub> /P <sub>R</sub>	Video	S-Video	Camera
H-position	ADJ.	Adjust the horizontal display position of the picture.	Yes	Yes	-	-	-	-	-
V-position	ADJ.	Adjust the vertical display position of the picture.	Yes	Yes	-	-	-	-	-
Phase	ADJ.	Adjust the flicker of the picture. (Sampling clock phase adjustment)	Yes	Yes	-	-	-	-	-
Frequency	ADJ.	Adjust the sampling frequency of the input signal if vertical stripes appear in the detailed image.	Yes	Yes	-	-	-	-	-
Reset	EXEC.	Return the adjustments of FULL MENU [Position] to the factory default values.	Yes	Yes	-	-	-	-	-

## Notes

- This menu is not displayed except with analog RGB input.
- The adjustment of each item in this menu is memorized for each RGB signal input [71](#).
- The adjustments made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments are not memorized.



# FULL MENU adjustments - Color

You can adjust the color condition of the picture from FULL MENU [Color].

To operate FULL MENU, refer to page 44.

			The relationship between input source and item							Yes: Adjustable - : Not displayed	
			Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/P <sub>B</sub> /P <sub>R</sub>	Video	S-Video	Camera		
Color	ADJ.	Adjust the color depth of the picture.	-	-	-	Yes	Yes	Yes	-		
Tint	ADJ.	Adjust the tint of the picture. (Not adjustable at PAL, SECAM, PAL-N, PAL-M and PAL60)	-	-	-	-	Yes	Yes	-		
R-level	ADJ.	Adjust the red level of the picture.	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
G-level	ADJ.	Adjust the green level of the picture.	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
B-level	ADJ.	Adjust the blue level of the picture.	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Reset	EXEC.	Return the adjustments of FULL MENU [Color] to the factory default value.	Yes	Yes	Yes	Yes	Yes	Yes	Yes		

## Note

The adjustments made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments are not memorized.

# FULL MENU adjustments and settings - Audio

You can set the sound emitted from the speaker from FULL MENU [Audio].

To operate FULL MENU, refer to page [44](#).

				The relationship between input source and item						
				Yes: Adjustable - : Not displayed						
				Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/PB/PR	Video	S-Video	Camera
Volume	ADJ.	Adjust the sound volume emitted from the speaker.		Yes	Yes	Yes	Yes	Yes	Yes	-
Speaker output	On	SET	The sound is emitted from the speaker.	Yes (common)				Yes (common)	-	
	Off	SET	No sound is emitted from the speaker.							
Channel select	L+R	SET	The sound of the left and right channels is mixed and emitted from the speaker.	Yes (common)				Yes (common)	-	
	L	SET	Only the sound of the left input channel is emitted from the speaker.							
	R	SET	Only the sound of the right channel is emitted from the speaker.							
Loudness	On	SET	The loudness effect is added to the speaker sound.	Yes (common)				Yes (common)	-	
	Off	SET	The loudness effect is not added to the speaker sound.							
Reset	EXEC.	Return the adjustments and settings of FULL MENU [Audio] to the factory default values.		Yes (common)				Yes (common)	-	

## Notes

- When the camera input is selected, sound is not emitted.
- Each item can be set at every input source except the camera input, but the settings made at one input source are applied to all input sources as shown in the table. The sound volume can be adjusted for each input source except the camera input.
- The adjustments or settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments or settings are not memorized.

# FULL MENU adjustments and settings - Display

You can set the language, menu display, etc. from FULL MENU [Display].  
 To operate FULL MENU, refer to page 44.

				The relationship between input source and item						
				Yes: Adjustable -: Not displayed						
				Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/Pb/Pr	Video	S-Video	Camera
V-keystone	ADJ.	Adjust the keystone distortion caused by changing the vertical installation angle.		Yes (common for all of the inputs)						
H-keystone	ADJ.	Adjust the keystone distortion caused by changing the horizontal installation angle.		Yes (common for all of the inputs)						
Language	English	SET	Menus and messages are displayed in English.	Yes (common for all of the inputs)						
	Français	SET	Menus and messages are displayed in French.							
	Deutsch	SET	Menus and messages are displayed in German.							
	Italiano	SET	Menus and messages are displayed in Italian.							
	Español	SET	Menus and messages are displayed in Spanish.							
	Português	SET	Menus and messages are displayed in Portuguese.							
	日本語	SET	Menus and messages are displayed in Japanese.							
	中文(简体字)	SET	Menus and messages are displayed in Chinese (Simplified).							
	中文(繁體字)	SET	Menus and messages are displayed in Chinese (Traditional).							
한국어	SET	Menus and messages are displayed in Korean.								
Icon	On	SET	The icon is displayed.	Yes (common for all of the inputs)						
	Off	SET	The icon is not displayed.							
Menu position	Upper left	SET	The menu is displayed at the upper left of the screen.	Yes (common for all of the inputs)						
	Upper right	SET	The menu is displayed at the upper right of the screen.							
	Lower left	SET	The menu is displayed at the lower left of the screen.							
	Lower right	SET	The menu is displayed at the lower right of the screen.							
Menu translucent	On	SET	The menu background becomes translucent.	Yes (common for all of the inputs)						
	Off	SET	The menu background is normal.							
Reset	EXEC.	Return the adjustments and settings of FULL MENU [Display] to the factory default values.		Yes (common for all of the inputs)						

## Notes

- Each item can be set at all input sources, but the settings made at one input source are applied to all input sources.
- The adjustments or settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the adjustments or settings are not memorized.
- The setting of “Menu translucent” is not available if no signal is input. Also, the background of the menu will not be translucent, regardless of the settings.

# FULL MENU settings - Default setting

You can set the Input source, projection mode, etc. from FULL MENU [Default setting].

To operate FULL MENU, refer to page 44.

The relationship between input source and item				Yes: Adjustable	-: Not displayed	
Analog RGB(1)	Analog RGB(2)	Digital RGB	Y/Pb/Pr	Video	S-Video	Camera

Input source setting ☑: On/Off with <b>ENTER</b> ⦿: On/Off with (◀) or (▶)	COMPUTER IN 1	SET	☑: COMPUTER IN 1 connector is selectable with the <b>INPUT</b> button.	Yes (common for all of the inputs)
	Analog RGB(1)	SET	⦿: Use COMPUTER IN 1 connector as Analog RGB (1) input.	
	Y/Pb/Pr	SET	⦿: Use COMPUTER IN 1 connector as Y/Pb/Pr input.	
	COMPUTER IN 2	SET	☑: COMPUTER IN 2 connector is selectable with the <b>INPUT</b> button.	
	Analog RGB(2)	SET	⦿: Use COMPUTER IN 2 connector as Analog RGB (2) input.	
	Digital RGB	SET	⦿: Use COMPUTER IN 2 connector as Digital RGB input.	
	VIDEO	SET	☑: Video input is selectable with the <b>INPUT</b> button.	
	S-VIDEO	SET	☑: S-Video input is selectable with the <b>INPUT</b> button.	
CAMERA	SET	☑: Camera input is selectable with the <b>INPUT</b> button.		
Projection mode	Standard	SET	The projector is set to the floor-mounted front projection mode.	Yes (common for all of the inputs)
	Rear	SET	The projector is set to the floor-mounted rear projection mode.	
	Ceiling	SET	The projector is set to the ceiling-mounted front projection mode.	
	Rear ceiling	SET	The projector is set to the ceiling-mounted rear projection mode.	
Background	Logo	SET	The TOSHIBA logo is displayed when no signal is input.	Yes (common for all of the inputs)
	Blue	SET	The entire screen is set to blue when no signal is input.	
	None	SET	Nothing is displayed when no signal is input.	
No signal power off	Off	SET	The power does not turn off automatically even if no signal status continues.	Yes (common for all of the inputs)
	5 min.	SET	The power turns off automatically when no signal status continues for approx. 5 min.	
Power on	Manual	SET	The power turns on by pressing the <b>ON/STANDBY</b> button.	Yes (common for all of the inputs)
	Auto	SET	When the power plug is inserted, the power is on.	
Start-up screen	On	SET	The start-up display appears when the power is turned on.	Yes (common for all of the inputs)
	Off	SET	The start-up display does not appear when the power is turned on.	
Reset	EXEC.		Return the settings of FULL MENU [Default setting] to the factory default values.	Yes (common for all of the inputs)

## Notes

- It is impossible to exit from the menu if no input source is selected.
- If setting of the input source is changed, the setting becomes effective the next time the input is changed.
- In the following conditions, the function to detect no signal (“No signal background”, “No signal power off”) does not activate:
  - 1) When “Video mode” 46 is set to the modes other than [Auto] and Video input or S-Video input is selected.
  - 2) When “Signal format” 46 is set to the modes other than [Auto] and Y/Pb/Pr input is selected.
- Note that the projector automatically powers up at the restoration of power after a failure, if “Power on” is set to [Auto] with the power plug inserted.
- Each item can be set at all input sources, but the settings made at one input source are applied in common to all input sources.
- The settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is un-plugged or if a power failure occurs while the projector is on, the settings are not memorized.

# FULL MENU settings - Reset

- You can return the adjusting and setting values of all menus to the factory default settings. ("Horizontal reference value reset" below also returns to the value of at the factory default setting.)
- The projector stores the standard conditions of horizontal installation, but depending on the using environment (if the projector is subject to vibrations or shock, etc.), the standard may change.

If the keystone distortion is not corrected properly when "Auto. V-keystone" **35** is executed with the screen installed vertically, put the projector's foot adjuster back **20** and set the projector on a flat surface, then execute "Horizontal reference value reset" function.

Reset all	EXEC.	Return the adjustments and settings of all menus to the factory default setting.
Horizontal reference value reset	EXEC.	The horizontal reference value for "Auto. V-keystone" is calibrated automatically.

## Notes

- If the projector's foot adjuster is used or the projector is inclined, "Horizontal reference value reset" will not be executed properly.
- The settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the settings are not memorized.

# PIP menu setting

When a PIP sub-picture is displayed, the PIP menu screen will appear if you press the **MENU** button. You can make the PIP sub-picture settings and the sound settings when a PIP subpicture is displayed. To cancel the menu, press the **EXIT** button.

Source	Select the signal source for PIP sub-picture.	
Video	SET	: Video input is selected as signal source.
S-Video	SET	: S-Video input is selected as signal source.
Size	Set the PIP sub-picture size.	
Small	SET	: The PIP sub-picture size is set to small.
Middle	SET	: The PIP sub-picture size is set to medium.
Large	SET	: The PIP sub-picture size is set to large.
Position	Set the PIP sub-picture display position.	
	SET	: The sub-picture is displayed at the upper left of the screen.
	SET	: The sub-picture is displayed at the upper right of the screen.
	SET	: The sub-picture is displayed at the lower left of the screen.
	SET	: The sub-picture is displayed at the lower right of the screen.
Audio	Select the audio input source.	
Main	SET	: The sound of the main picture is emitted from the speaker.
Sub	SET	: The sound of the sub picture is emitted from the speaker.
Reset	EXEC	Return the settings of PIP MENU to the factory default setting.

## Notes



- The size of the PIP sub-picture differs according to the signal type (resolution) of the main picture.
- When the PIP sub-picture is turned off, the audio input source returns to the previous source (main picture).
- The settings made are memorized automatically when the power is turned off by pressing the **ON/STANDBY** button. If the power cord is unplugged or if a power failure occurs while the projector is on, the settings are not memorized.


# Part names (of the document imaging camera model)

## CAUTION

When using the camera, be careful not to pinch your hand or fingers into the arm.

On the document imaging camera model, you can project pictures using the document imaging camera. The document imaging camera can directly project any materials (documents, illustrations, etc.) without using an OHP film.

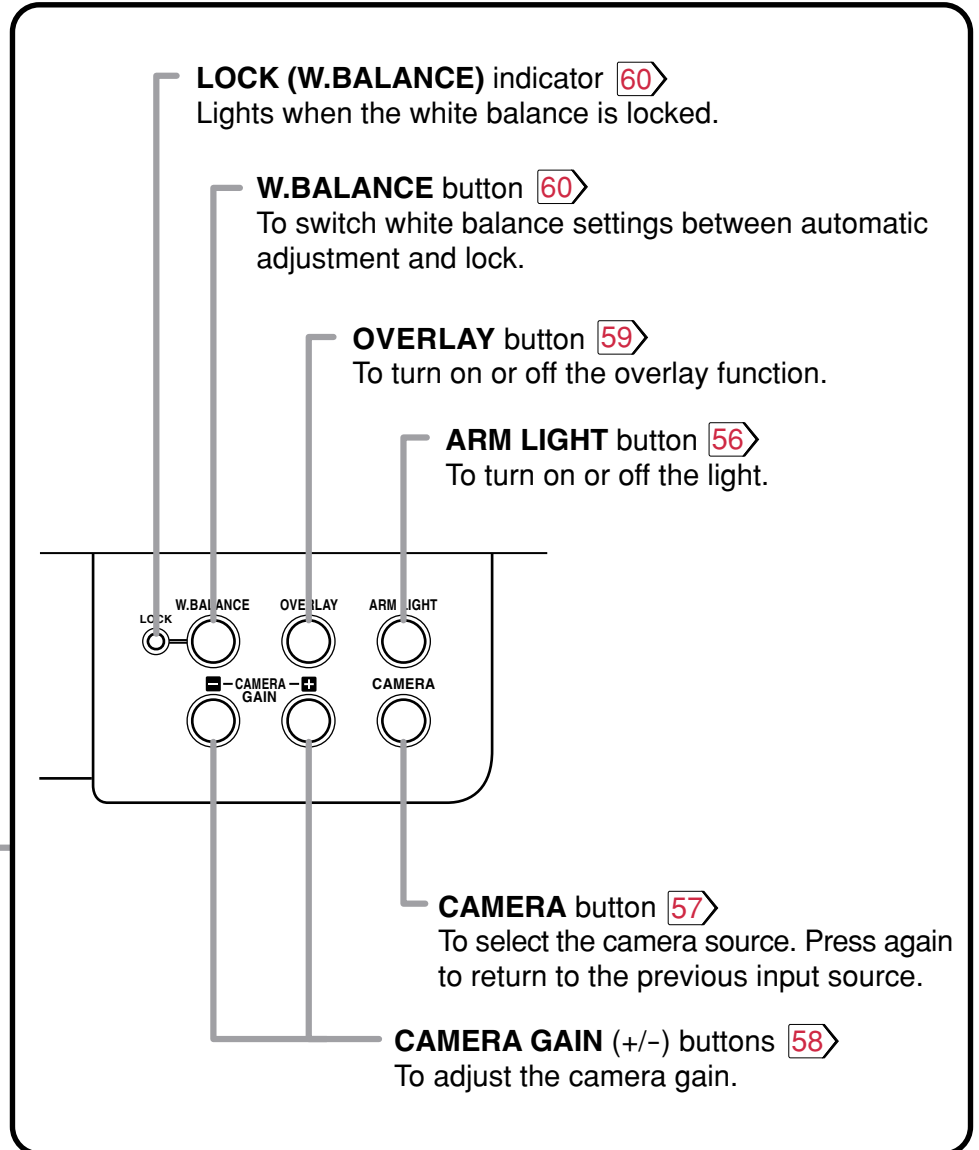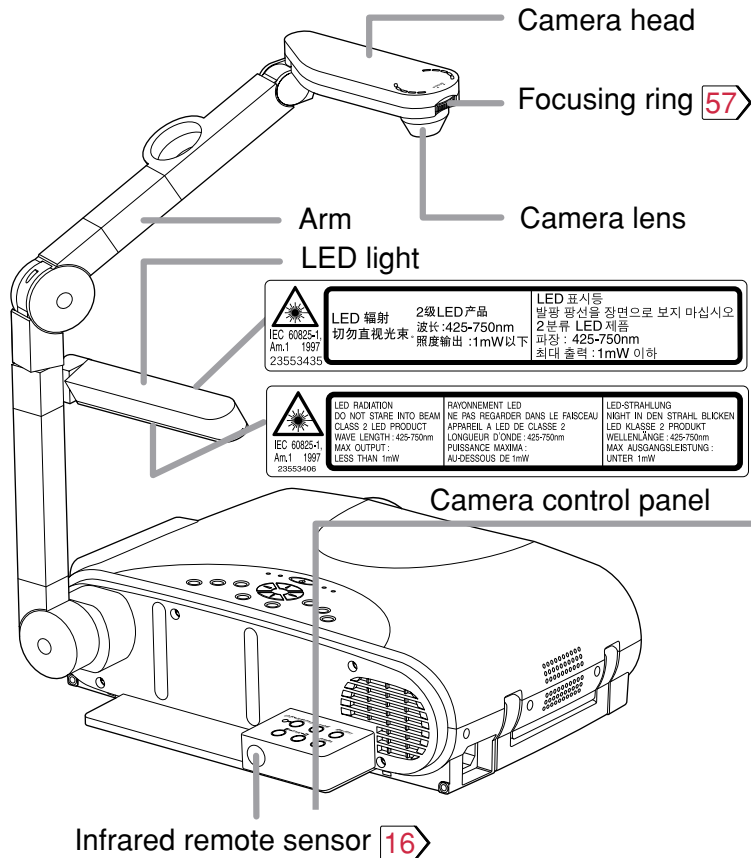

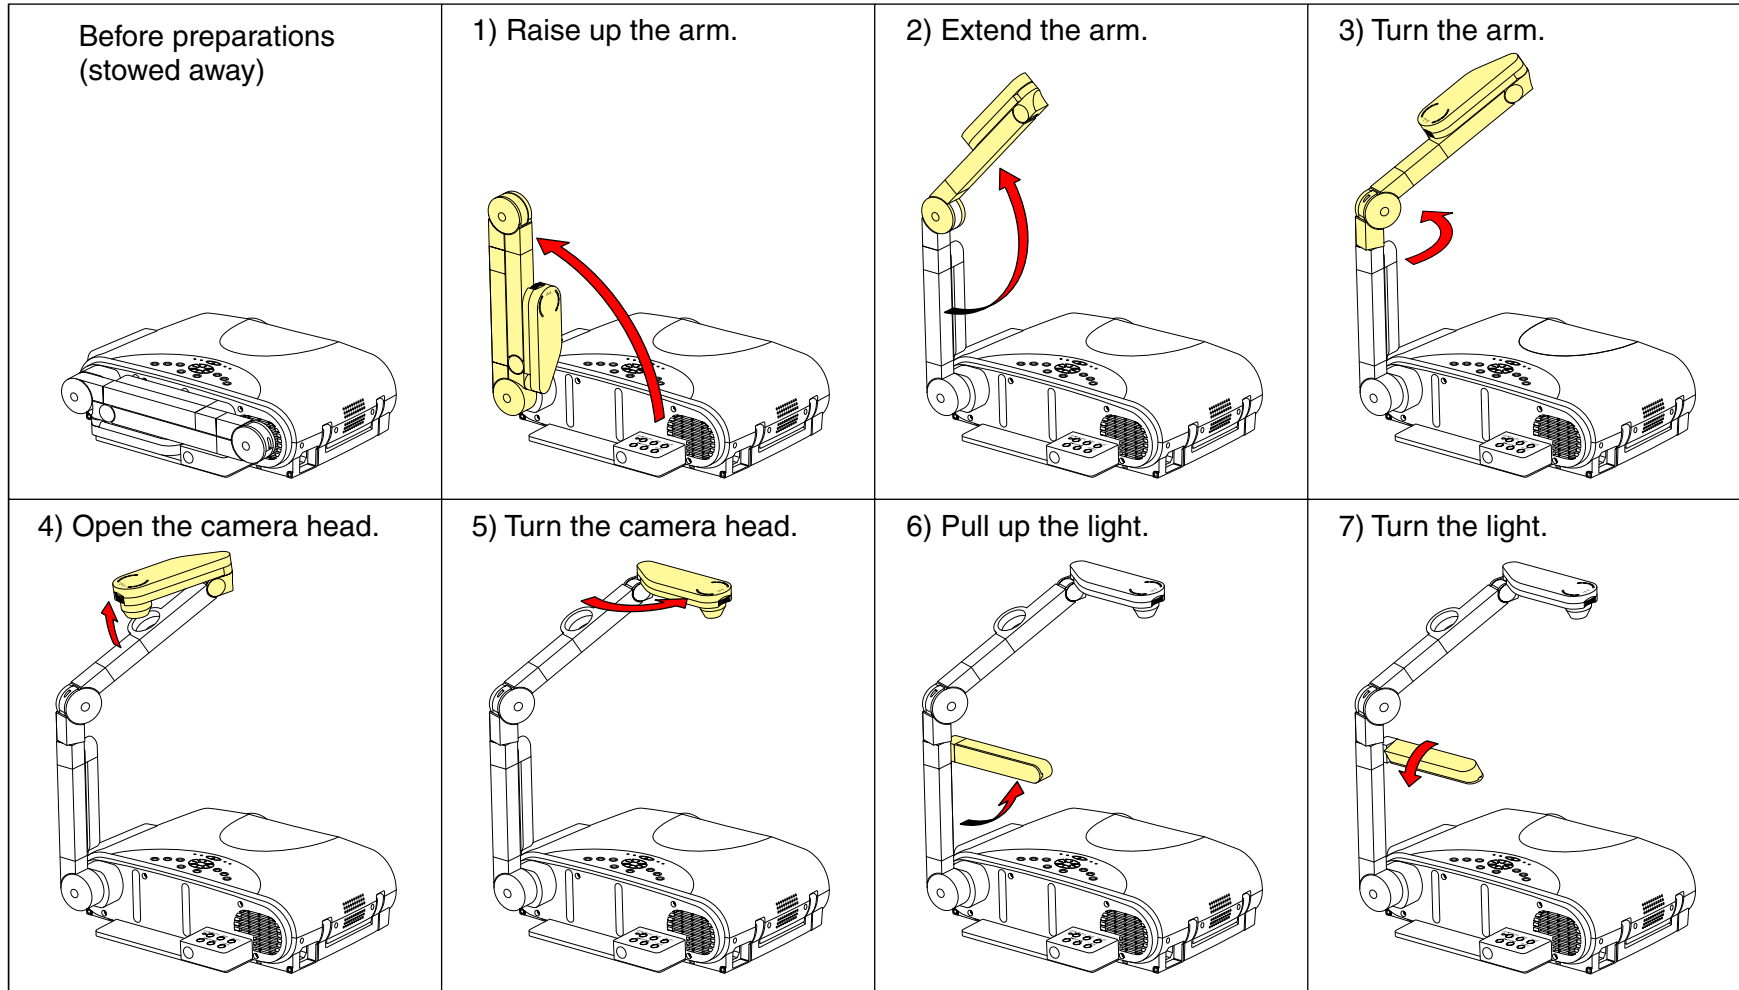

## Notes


- Never give shocks or impacts to the camera or arm as this may cause malfunction.
- While raising up or turning the arm, the arm moves describing an arc, be careful not to hit your face or your body.
- The figures above are procedures of putting materials on the projector. When the stability of materials is required or the light of the indicator is visible through the materials, place the materials at the back of the projector and set the arm and camera head over them.



## CAUTION

Do not look into the arm light while it is lit.

Camera control panel

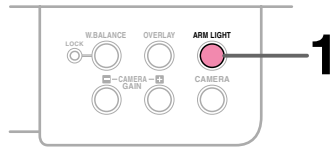

## Preparation

1 Project a picture on the screen as explained in the step "Projection on the screen". 28

# 1

ARM LIGHT




## Press ARM LIGHT.

The light turns on.

# 2

## Set a document to be projected.

Place the document (illustrations, etc.) onto or around the projector, and turn the camera head to the direction of the document.

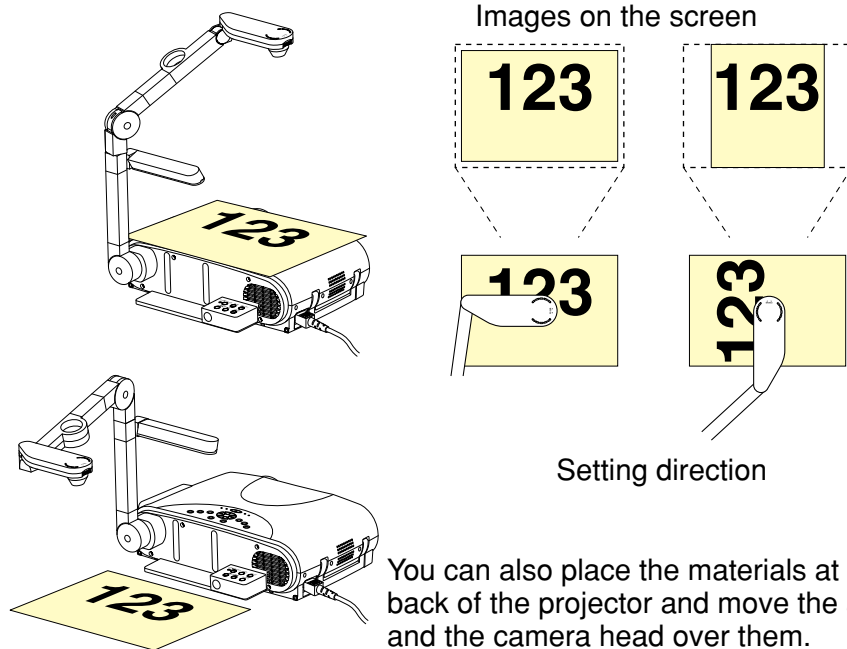


You can also place the materials at the back of the projector and move the arm and the camera head over them.


## Notes

- Use the arm light when necessary according to the brightness of the room.
- When setting the materials on the projector, be careful not press the operation buttons.


Remote control

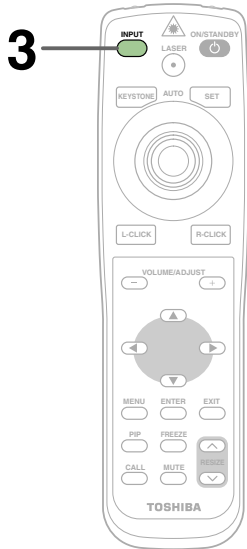

Control panel  
(Main unit side)

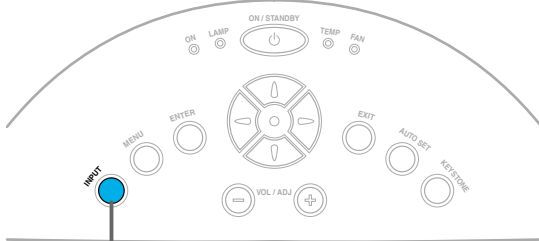

Camera control panel

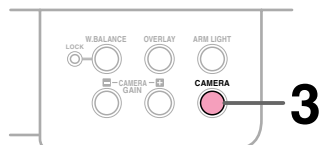

3

CAMERA



INPUT



INPUT




Press **CAMERA** to select the camera input mode.

- Pressing **CAMERA** again will return the input selection to the previous mode.
- You can also select it by pressing **INPUT** on the remote control or on the main unit. Set the input source on the menu screen when selecting by the **INPUT** button. **30**
- The **CAMERA** button can be used regardless of the input setting.
- “Camera” is displayed when the picture switches to the document imaging camera’s picture.


4

Move the camera head to adjust the size of the picture.

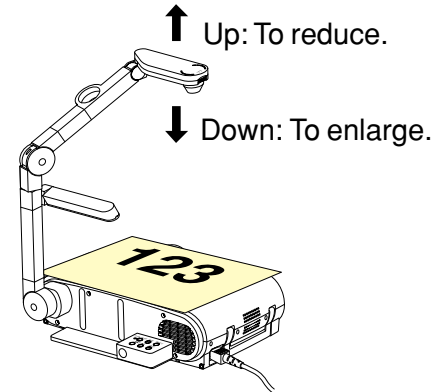


5


Focus on the picture by turning the focusing ring on the camera head.

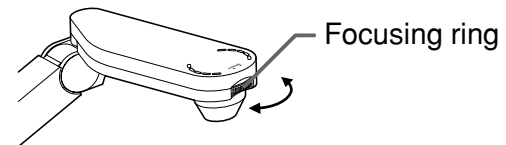

Camera control panel

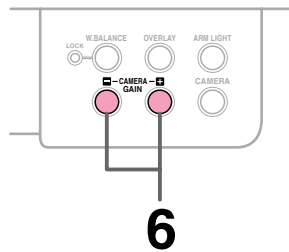

6

 

Press **CAMERA GAIN (+/-)** to improve view of a camera subject which is too dark or vivid.

## Notes

- You can adjust the “Sharpness” of the camera image on the menu screen. [46](#)
- If the image flickers due to a fluorescent light in the room, either turn off the fluorescent light or set the “Shutter” on the menu screen. [46](#)

Note that the image may still flicker due to the lighting, the document status, the image adjustment, etc., even if the “Shutter” setting is changed.

7

When finished, turn off the light and close it, and put back the arm.

Follow the steps of “Preparation of the document imaging camera” in reverse.


## Notes

- Though this projector uses a 1.45 million pixel camera unit, the images projected on the screen are 1024 x 768 dot images. If the “Screen size” in the menu screen [46](#) is set to “Full”, the camera’s full image is compressed to 1024 x 768 dots. If “Thru” is selected, the 1024 x 768 dots at the center of the image are projected.
- The light turns off automatically when the arm is inclined.
- When the arm is not raised up, the camera source cannot be projected.
- In the camera input selected, the sound is not emitted.


# Overlaying projection

You can draw figures or write with a pen on the picture of RGB input or video input, by using the overlay function.


## Remote control

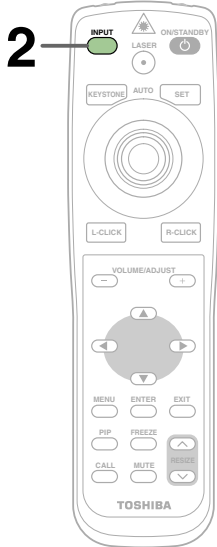

## Camera control panel

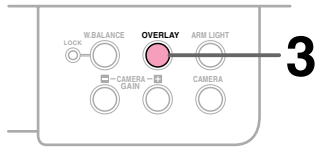


## Control panel (Main unit side)

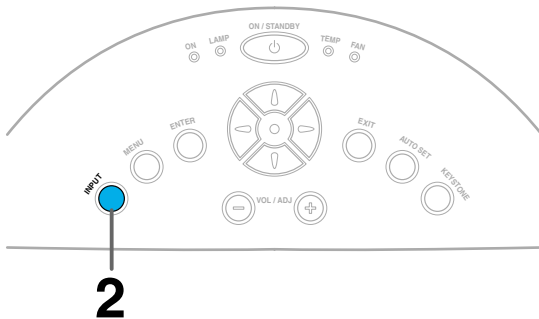

## Preparation

- 1 Project a picture on the screen as explained in the step "Picture projection with the document imaging camera". [56](#)
- 2 Prepare white paper and a red or blue pen.


1

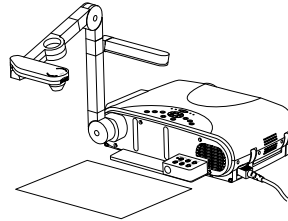

**Set the white paper on a flat surface and set the camera so that the paper is projected onto the screen.**

Adjust the camera to make the white paper be projected on the wholescreen.

 2



**Select the input source using the overlay function by pressing INPUT.**


Select an input source other than the camera input.

3



**Press OVERLAY.**

4

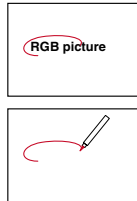

Screen


**Draw any line on the paper with a red or blue pen.**

 A drawn line is projected on the screen, overlapped with the picture of the input source.

Paper

The position of a pen point can be confirmed on the screen before drawing anything.

5




**Adjust the gain with CAMERA GAIN (+/-) so that the overlaying picture is displayed clearly.**

## Notes

- Handwriting in colors other than blue or red cannot be displayed properly.
- Handwriting in fine lines may not be displayed properly.


Camera control panel

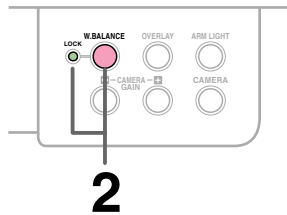


This projector's camera is always being adjusted automatically for projected color balance; however, the balance can shift away from optimum due to the color scheme of the document. Should this occur, the white balance can be set to a fixed condition by using the following procedure.

1

Project a white paper and enlarge it to fill the screen.

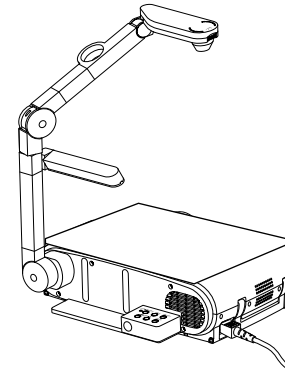

2

 

Press **W.BALANCE** to turn the **LOCK** indicator on.


The white balance is locked.  
To release the white balance, press **W.BALANCE** again to turn the **LOCK** indicator off.

## Notes

- If you raise up the arm while the camera input is being selected, the color of the picture may vary for an instant due to the automatic white balance adjustment. This is not a malfunction.
- If you put the arm back and raise it again while the white balance is locked (the **LOCK** indicator is lit), the projector will release the white balance.
- Depending on the tint of the indoor illumination, the white balance might not be compensated optimally. Should this be the case, or if you would like to adjust it to a desired tint, adjust "R-level", "G-level" or "B-level" on the FULL MENU [Color] screen.

For the CCD image sensor used in the camera unit, in rare cases some of the pixels may be disturbed due to the influence of cosmic rays, etc. This disturbance may cause white spots to appear on the picture.

If white spots appear on the document camera image, use the procedure described below to correct the problem.

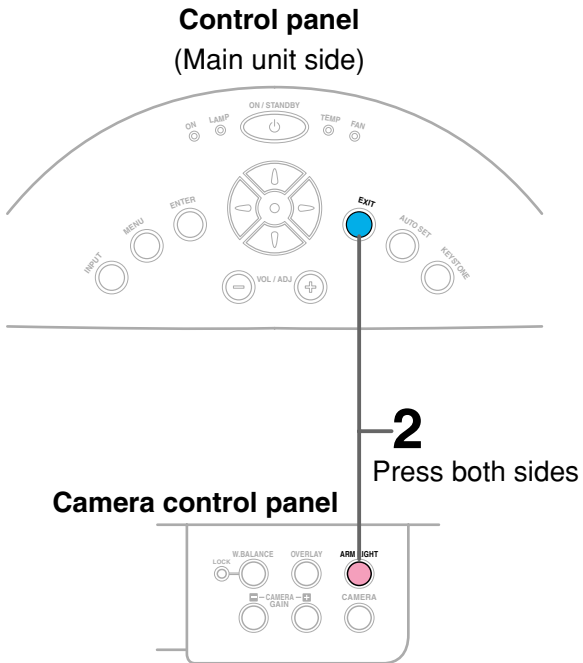

**1** With the document camera operating, fully cover the camera lens with a piece of black paper or cloth.

Camera lens


**2** Press **ARM LIGHT** on the camera control panel and **EXIT** on the projector's control panel simultaneously. You can not use the remote control buttons.

ARM LIGHT  
+  
EXIT

**Note**  
Do not press **ARM LIGHT** and **EXIT** buttons simultaneously if the camera lens is not covered. Doing so will not only erase the white spot correction data already set but also result in parts of the image that are properly displayed being corrected. Also be careful if the camera input mode is not selected.

# Trouble indications

If there is some problem inside the projector, the indicators light up or blink.

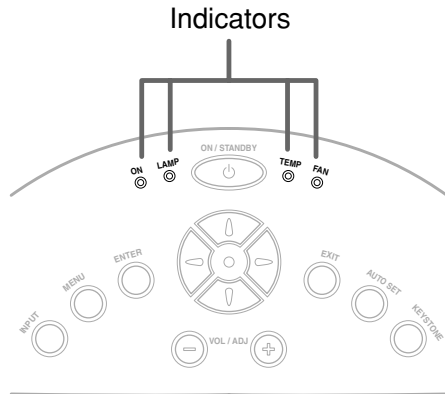

**Control panel**  
(Main unit side)

	<p>The power does not come on. → Malfunction of the unit. • Unplug the power cord and call the dealer.</p>
	<p>The lamp turns off or does not light up. → The projector will return to the standby mode in about 2 minutes. If the projector does not operate normally when the power is switched on again, the lamp is at the end of its life duration or the unit has a fault. • Lamp's life duration is over, replace the lamp with a new one. <a href="#">66</a> • Unplug the power cord and call the dealer.</p>
	<p>The power turns off or does not come on. → The inside is too hot, or the projector has been working in an area of high temperature. • Place the projector correctly so the intake and exhaust fan's holes are not covered. • Turn the projector off, and leave it for a while, and turn it on again. • Clean the air filter. <a href="#">63</a> * The  icon appears before the power turned off. * The projector returns to the standby mode after the fault display has been shown for about 2 minutes.</p>
	<p>The power turns off or does not come on. → Trouble with the cooling fan. • Unplug the power cord and call the dealer. * The  icon appears before the power turned off. * The projector returns to the standby mode after the fault display has been shown for about 2 minutes.</p>
	<p>The power turns off or does not come on. → The lamp cover is not properly attached. • Unplug the power cord and reattach the lamp cover. <a href="#">67</a> * The  icon appears before the power turned off. * The projector returns to the standby mode after the fault display has been shown for about 2 minutes.</p>

## Notes

- If abnormality occurs while operating, unplug the power cord.
- When reinserting the power cord before the lamp has cooled, please wait until the lamp has cooled sufficiently before use. When the lamp is at a high temperature, it may not light and the life duration will be shortened.


## CAUTION

If you use the projector mounted on the ceiling, ask the dealer to carry out the maintenance such as cleaning.

The filter inside the air filter cover is the part to shut out dusts or dregs.  
Do not use the projector with the filter taken off.  
We recommend you clean the air filter frequently. (The cleaning period is once per 50 hours approximately).

## 1 Unplug the power cord.


## 2 Take off the air filter cover.

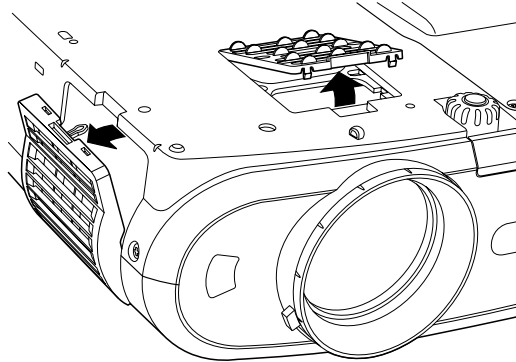

The filter is on the right and bottom side of the projector. The illustration is viewed from the bottom side.

## 3 Disassemble the air filter.

Air filter for the right side

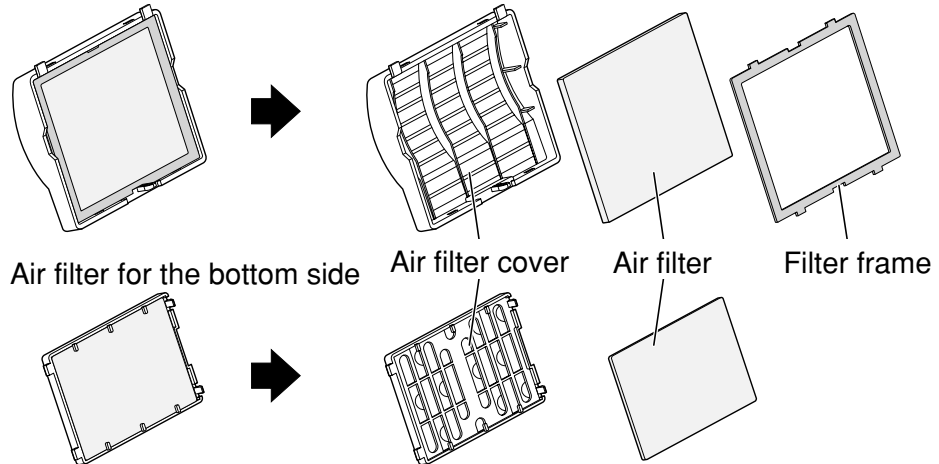




## Notes

- When the air filter is dusty, the ventilation is impaired. This causes the temperature inside the projector to rise, and may damage the unit.
- Attach the air filter cover firmly after the cleaning. If it is not set correctly, the dusts will enter and they will be projected and overlapped on the picture.
- If you wash the air filter with water, be sure to let it dry fully before reinstalling it. Using it damp will result in malfunction.
- If the air filter is damaged, contact your store of purchase and replace it with a new one. Using a damaged air filter will cause dust or dirt to get inside the projector and onto the images.

4

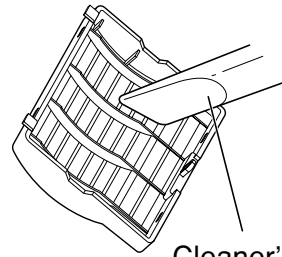

Cleaner's nozzle

## Clean the air filter.


Use a vacuum cleaner to carefully remove any dust and dirt from the air filter cover, air filter and filter frame.

Be careful that the air filter is not sucked into the vacuum cleaner.


5

## Assemble the air filter.


Air filter for the right side

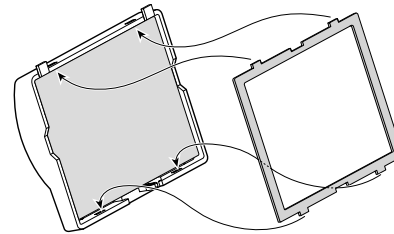

Air filter for the bottom side

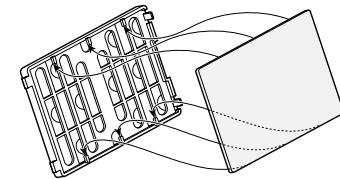

6

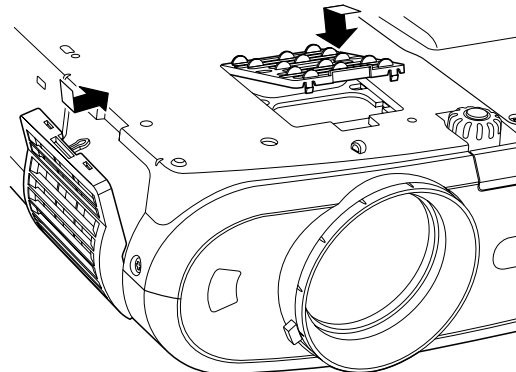


## Mount the air filter.

Surely mount the air filters on the right and bottom side.


## CAUTION

If you use the projector mounted on the ceiling, ask the dealer to carry out the maintenance such as cleaning.

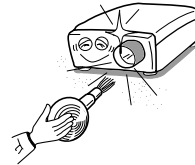

## Cleaning the lens

Use a blower or a lens cleaner to clean the lens. Never rub or tap the lens with a hard object as the lens surface is fragile.

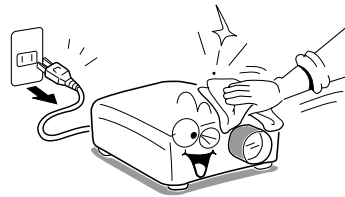

## Cleaning the main unit

- Pull out the power cord before cleaning.
- Use a soft cloth to wipe off stains from the surface.
- To remove difficult stains, use a soft cloth slightly moistened with a weak solution of synthetic detergent and water, and finish with a soft, dry cloth.

## Replacing the intake, exhaust fans and air filter

To maintain the efficiency of the projector, replace the intake and exhaust fans about every two to three years. Ask the dealer for the replacement.

A lamp is consumable supplies. If used for extended periods, images will appear dark, and the lamp could burn out. This is characteristic of a lamp, and is not malfunction. (The lifetime of the lamp depends on conditions of use.) If this happens, replace it with a new one.

## CAUTION


- If you use the projector mounted on the ceiling, ask the dealer to carry out the maintenance such as cleaning or replacement of the lamp.
- When replacing, always use lamp "TLPL79" (sold separately). For details, refer to the lamp instruction.
- If you have been using the projector, the lamp will be very hot, and may cause burn injuries. Wait for the lamp to cool (for longer than 1 hour) before replacing it.
- If the lamp should break, please handle with care to avoid injury due to broken pieces and contact your dealer for repair service.

**1** Unplug the power cord.

**2** Wait until the lamp gets cool enough.


**3** Take off the lamp cover on the bottom panel.

Loosen the two screws, and pull off the lamp cover.

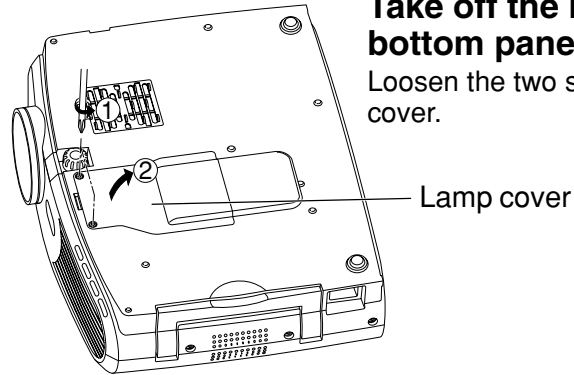



**4** Pull out the lamp.

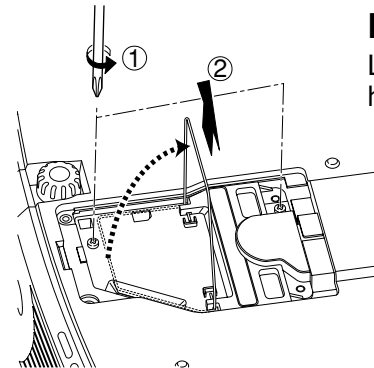Loosen the two fixing screws, and lift up the handle to pull out the lamp.




## Notes

- When the **CALL** button is pressed, the “Lamp time” (the approximate amount of time the lamp has been used) will be displayed. 
- The lamp should be replaced if the total working time exceeds about 1,500 hours.  
When the “Lamp time” is displayed as 1,500 hours, the icon  appear. They will disappear when you do some operation.
- Attach the lamp cover firmly after replacing the lamp. If it is not set correctly, the power will not turn on.
- Use a new lamp when replacing it.
- The lamp is made of glass and is very fragile. Do not touch the lamp with your bare hands and do not jolt or damage it. Do not try to use an exhausted lamp.
- Dispose of the exhausted lamp as toxic waste.

## 5 Load a new lamp.


Slide until it hits the bottom and tighten the two fixing screws.

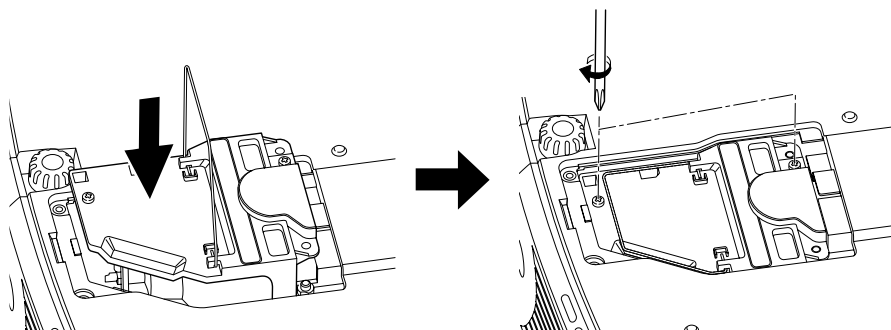

## 6

### Attach the lamp cover.

Slide the cover into place and tighten the two screws.

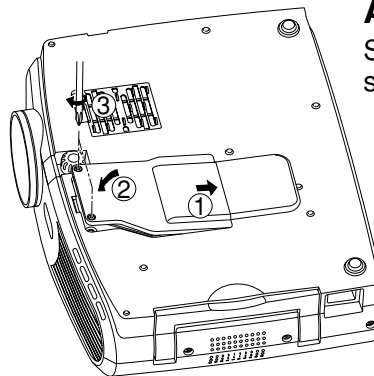

## 7 Reset the lamp timer.

Refer to the lamp instructions for resetting.

# Before calling service personal

Check the following points before asking for support service. Refer also to “Trouble indications”. [62](#)


Symptom	Cause	Correction	Page
The power does not come on.	• The power cord is disconnected.	Firmly plug in the power cord.	<a href="#">19</a>
	• The lamp cover is not attached correctly.	Attach the cover correctly.	<a href="#">67</a>
The power turns off while using the projector.	• The ambient temperature of the projection room is too high.	Lower the ambient temperature of the projection room, and turn the power on.	<a href="#">62</a>
No image appears.	• The lens cover is on.	Take off the lens cover.	<a href="#">19</a>
	• The wrong input is selected.	Select the input source correctly.	<a href="#">30</a>
	• The muting mode is on.	Press <b>MUTE</b> to restore the picture.	<a href="#">37</a>
	• The “Brightness” adjustment is at its darkest.	Make the “Brightness” adjustment.	<a href="#">45</a>
	• The source is not correctly connected to the projector.	Connect the source correctly to the projector.	<a href="#">22</a> - <a href="#">25</a>
No sound is heard.	• The wrong input is selected.	Select the input source correctly.	<a href="#">30</a>
	• The muting mode is on.	Press <b>MUTE</b> to restore the sound.	<a href="#">37</a>
	• The sound volume is at its minimum.	Adjust the sound volume.	<a href="#">32</a>
	• The source is not correctly connected to the projector.	Connect the source correctly to the projector.	<a href="#">22</a> - <a href="#">25</a>
Desired input source cannot be selected by the <b>INPUT</b> button.	• Input is not set so that it can be selected with the <b>INPUT</b> button. By default, only the Analog RGB(1) and Video input modes can be selected.	Set from the menu screen so that the source can be selected with the <b>INPUT</b> button.	<a href="#">45</a>
			<a href="#">30</a>
Analog RGB(1) input or Y/Pb/Pr input colors are not right.	• The COMPUTER IN 1 connector’s input setting is wrong.	On the menu screen, set for the proper input signal type.	<a href="#">45</a>
Analog RGB(2) input image does not appear.	• The COMPUTER IN 2 connector’s input setting is wrong.	On the menu screen, set for the proper input signal type.	<a href="#">45</a>
	• The signal cable type is wrong.	Use a proper signal cable.	<a href="#">23</a>
Digital RGB input image does not appear.	• The COMPUTER IN 2 connector’s input setting is wrong.	At the menu screen, set for the proper input signal type.	<a href="#">45</a>
	• The signal cable type is wrong.	Use a proper signal cable.	<a href="#">23</a>
The image is blurred. Focusing is uneven.	• The lens is dirty.	Clean the lens with a blower or lens cleaner, etc.	<a href="#">65</a>
	• The picture is out of focus.	Focus the picture.	<a href="#">31</a>
	• The projection distance is not appropriate.	Adjust the distance properly.	<a href="#">18</a>
	• The projecting light is not hitting the screen squarely.	Adjust the projecting direction so that the light hits the screen squarely.	<a href="#">18</a>
	• The “Brightness”, “Contrast”, “Sharpness” or “Phase” adjustments are not correct.	Make the “Picture” adjustments.	<a href="#">45</a>
The picture is dim.	• The “Brightness” or “Contrast” adjustments are not correct.	Make the “Picture” adjustments.	<a href="#">45</a>
	• The lamp life is ending.	Replace the lamp.	<a href="#">66</a>

# Before calling service personal (continued)

Symptom	Cause	Correction	Page
The color is faint. The tint is not good.	• The “Color”, “Tint”, “R-Level”, “G-Level” or “B-Level” adjustments are not correct.	Make the “Picture” adjustments.	<a href="#">48</a>
	• The lamp life is ending.	Replace the lamp.	<a href="#">66</a>
The remote control does not work.	• The remote control is not facing the remote sensor.	Face the remote control transmitter toward the remote sensor on the projector.	<a href="#">16</a>
	• The remote control is too far away.	Operate within about 5 meters.	<a href="#">16</a>
	• There is an obstruction between the remote control and the remote sensor.	Remove the obstacle.	–
	• The batteries are exhausted.	Replace the batteries.	<a href="#">15</a>
Mouse function cannot be used from the remote control unit.	• The USB cable is not properly connected.	Connect the USB cable properly.	<a href="#">42</a>
	• The computer or OS is not compatible.	The remote control mouse function is not available.	–
	• The batteries are exhausted.	Replace the batteries.	<a href="#">15</a>
Document camera image is blurry.	• The lens is dirty.	Clean the lens with a blower or lens cleaner, etc.	<a href="#">65</a>
	• The picture is out of focus.	Focus the picture by turning the focus ring.	<a href="#">57</a>
	• The light is not on.	Turn on the light.	<a href="#">56</a>
Document camera image flickers.	• Image is being affected by fluorescent light in the room.	Set the shutter speed on the menu screen.	<a href="#">45</a>
Document camera image movement is awkward.	• The image's number of frames is low. This is not a malfunction.		
Horizontal stripes appear when document projected with the document camera is moved.	• The image's number of frames is low. This is not a malfunction.		


# Pin assignment of COMPUTER IN connector

## COMPUTER IN 1

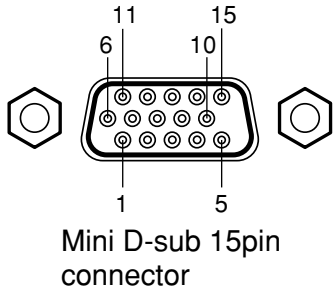

Input signal  
 Analog R, G, B signal: 0.7V(p-p) 75Ω  
 Horizontal sync signal:  
 TTL level (positive/negative polarity)  
 Vertical sync signal:  
 TTL level (positive/negative polarity)  
 Y signal: 1.0V(p-p) 75Ω  
 P<sub>B</sub>, P<sub>R</sub> signal: 0.7V(p-p) 75Ω

## COMPUTER IN 2

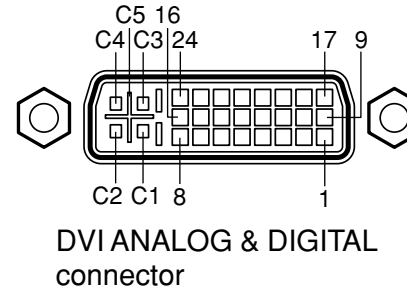

Analog input signal  
 Analog R, G, B signal: 0.7V(p-p) 75Ω  
 Horizontal sync signal:  
 TTL level (positive/negative polarity)  
 Vertical sync signal:  
 TTL level (positive/negative polarity)

Pin No.	Description	
	RGB input	Y/P <sub>B</sub> /P <sub>R</sub> input
1	Video signal (Red)	Color difference signal (P <sub>R</sub> )
2	Video signal (Green)	Luminance signal (Y)
3	Video signal (Blue)	Color difference signal (P <sub>B</sub> )
4	GND	*
5	GND	*
6	GND (Red)	GND (P <sub>R</sub> )
7	GND (Green)	GND (Y)
8	GND (Blue)	GND (P <sub>B</sub> )
9	N.C	*
10	GND	*
11	GND	*
12	DDC data	*
13	Horizontal sync signal	*
14	Vertical sync signal	*
15	DDC clock	*


\* : Do not connect anything.

Pin No.	Description
1	T.M.D.S. data 2 -
2	T.M.D.S. data 2 +
3	T.M.D.S. data 2/4 shield
4	T.M.D.S. data 4 -
5	T.M.D.S. data 4 +
6	DDC clock
7	DDC data
8	Analog vertical sync signal
9	T.M.D.S. data 1 -
10	T.M.D.S. data 1 +
11	T.M.D.S. data 1/3 shield
12	T.M.D.S. data 3 -
13	T.M.D.S. data 3 +
14	+5V power
15	GND (+5V, H Sync & V Sync)

Pin No.	Description
16	Hot plug detection
17	T.M.D.S. data 0 -
18	T.M.D.S. data 0 +
19	T.M.D.S. data 0/5 shield
20	T.M.D.S. data 5 -
21	T.M.D.S. data 5 +
22	T.M.D.S. clock shield
23	T.M.D.S. clock +
24	T.M.D.S. clock -
C1	Analog Video signal (Red)
C2	Analog Video signal (Green)
C3	Analog Video signal (Blue)
C4	Analog horizontal sync signal
C5	Analog GND (R,G & B)

## Applicable computer signal

The unit is applicable to the following signals. However, some computers may have different timings than those in the chart. Make the necessary adjustments if the picture has flickers or is blurred.

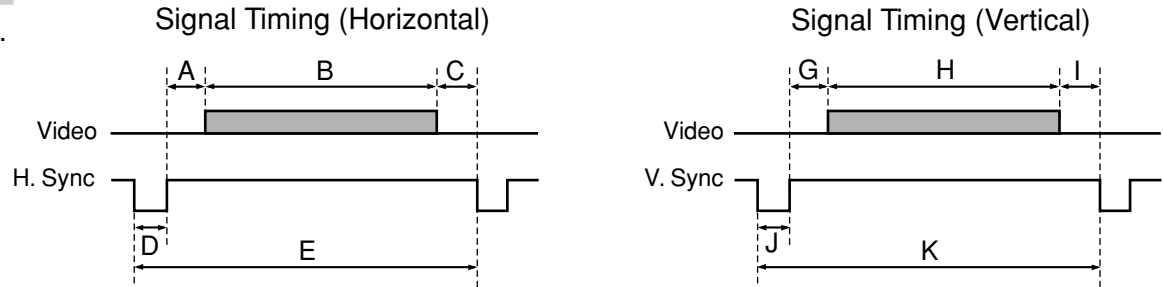

Timing chart

Mode	Resolution	A (Pixels)	B (Pixels)	C (Pixels)	D (Pixels)	E (Pixels)	fh (kHz)	fv (Hz)	Clock (MHz)	G (Lines)	H (Lines)	I (Lines)	J (Lines)	K (Lines)
TEXT70	640 x 350	50	640	14	96	800	31.469	70.086	25.175	59	350	38	2	449
TEXT70	640 x 400	50	640	14	96	800	31.469	70.086	25.175	34	400	13	2	449
TEXT85	640 x 350	96	640	32	64	832	37.861	85.080	31.500	60	350	32	3	445
TEXT85	640 x 400	96	640	32	64	832	37.861	85.080	31.500	41	400	1	3	445
NEC PC98 24k	640 x 400	85	640	59	64	848	24.820	55.900	21.047	25	400	11	8	444
VGA60	640 x 480	48	640	16	96	800	31.469	59.940	25.175	33	480	10	2	525
VGA72	640 x 480	128	640	24	40	832	37.861	72.809	31.500	28	480	9	3	520
VGA75	640 x 480	120	640	16	64	840	37.500	75.000	31.500	16	480	1	3	500
VGA85	640 x 480	80	640	56	56	832	43.269	85.008	36.000	25	480	1	3	509
MAC13"	640 x 480	96	640	64	64	864	35.000	66.667	30.240	39	480	3	3	525
SVGA56	800 x 600	128	800	24	72	1024	35.156	56.250	36.000	22	600	1	2	625
SVGA60	800 x 600	88	800	40	128	1056	37.879	60.317	40.000	23	600	1	4	628
SVGA72	800 x 600	64	800	56	120	1040	48.077	72.188	50.000	23	600	37	6	666
SVGA75	800 x 600	160	800	16	80	1056	46.875	75.000	49.500	21	600	1	3	625
SVGA85	800 x 600	152	800	32	64	1048	53.674	85.061	56.250	27	600	1	3	631
MAC16"	832 x 624	216	832	40	64	1152	49.725	74.550	57.283	39	632	1	3	667
XGA43i	1024 x 768	56	1024	8	176	1264	35.522	43.479	44.900	20	768	0	4	817
XGA60	1024 x 768	160	1024	24	136	1344	48.363	60.004	65.000	29	768	3	6	806
XGA70	1024 x 768	144	1024	24	136	1328	56.476	70.069	75.000	29	768	3	6	806
XGA75	1024 x 768	176	1024	16	96	1312	60.023	75.029	78.750	28	768	1	3	800
XGA85	1024 x 768	208	1024	48	96	1376	68.677	84.997	94.500	36	768	1	3	808
MAC19"	1024 x 768	180	1024	20	96	1320	60.197	74.872	73.200	30	768	3	3	804



## Timing chart (Continued)

Mode	Resolution	A (Pixels)	B (Pixels)	C (Pixels)	D (Pixels)	E (Pixels)	fh (kHz)	fv (Hz)	Clock (MHz)	G (Lines)	H (Lines)	I (Lines)	J (Lines)	K (Lines)
*SXGA1152x864 75Hz	1152 x 864	256	1152	64	128	1600	67.500	75.000	108.000	32	864	1	3	900
*SXGA1280x960 60Hz	1280 x 960	312	1280	96	112	1800	60.000	60.000	108.000	36	960	1	3	1000
*SXGA1280x960 85Hz	1280 x 960	224	1280	64	160	1728	85.938	85.002	148.500	47	960	1	3	1011
*SXGA1280x1024 60Hz	1280 x 1024	248	1280	48	112	1688	63.981	60.020	108.000	38	1024	1	3	1066
*SXGA1280x1024 75Hz	1280 x 1024	248	1280	16	144	1688	79.976	75.025	135.000	38	1024	1	3	1066
*SXGA1280x1024 85Hz	1280 x 1024	224	1280	64	160	1728	91.146	85.024	157.500	44	1024	1	3	1072
*UXGA60	1600 x 1200	304	1600	64	192	2160	75.000	60.000	162.000	46	1200	1	3	1250
*UXGA65	1600 x 1200	304	1600	64	192	2160	81.250	65.000	175.500	46	1200	1	3	1250
*UXGA70	1600 x 1200	304	1600	64	192	2160	87.500	70.000	189.000	46	1200	1	3	1250
*UXGA75	1600 x 1200	304	1600	64	192	2160	93.750	75.000	202.500	46	1200	1	3	1250

### Notes

- Signal sources marked “\*” are displayed in compressed format, so some of their data may be missing or their picture quality may be degraded.
- With analog RGB inputs, if the signal source’s dot clock frequency exceeds 165 MHz, not all of the pixel signals can be sampled.
- For digital RGB inputs, the projector is not compatible with signal sources whose dot clock frequency exceeds 162 MHz.

### The compatible Video and S-Video signal

Mode	fh (kHz)	fv (Hz)	fsc (MHz)
NTSC	15.73	60	3.58
PAL	15.63	50	4.43
SECAM	15.63	50	4.25 or 4.41
PAL-M	15.73	60	3.58
PAL-N	15.63	50	3.58
PAL-60	15.73	60	4.43
NTSC4.43	15.73	60	4.43


### The compatible components video signal (Y/P<sub>B</sub>/P<sub>R</sub>)

Mode	fh (kHz)	fv (Hz)
525i	15.73	59.94
525p	31.47	59.94
625i	15.63	50.00
750p	45.00	60.00
1125i	33.75	60.00

# Controlling the projector by using RS-232C

You can also control the projector by entering the command from a computer via RS-232C.

## Signal assignment of RS-232C

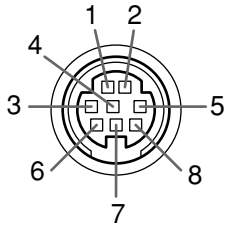

CONTROL RS-232C

Pin No.	Signal	Description
1	RXD	Receiving data
2	CTS	Consent to send
3	DSR	Data set ready
4	GND	Signal ground
5	RTS	Request to send
6	N.C	No connection
7	TXD	Sending data
8	N.C	No connection

## Interface format

1	Communication method	RS-232C 9600 bps, No parity, Data length: 8 bits, Stop bit: 1 bit
2	Communication format	STX (02h)   Command (3Byte)   ETX (03h) One command only can be used per communication.
3	Data format	Commands shall be composed of alphanumeric characters of ASCII description. Use only capital letters.
4	Return value	Acknowledge ACK (06h) Not Acknowledge NAK (15h)

## Command list

Classification	Items/Status	Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/PB/PR	Camera	
Power	On	PON	-	Yes	Yes	Yes	Yes	Yes	
	Off (with confirmation message)	POF	-	Yes	Yes	Yes	Yes	Yes	
	Shut Down (without confirmation message)	PSD	-	Yes	Yes	Yes	Yes	Yes	
Normal (RS-232C Condition Display Off)		DOF	-	Yes	Yes	Yes	Yes	Yes	
Picture	Contrast	VCN	Yes	Yes	Yes	Yes	Yes	Yes	
	Brightness	VBR	Yes	Yes	Yes	Yes	Yes	Yes	
	Sharpness	VSH	Yes	-	-	Yes	Yes	Yes	
	Camera gain	Increase	CGU	-	-	-	-	-	Yes
		Decrease	CGD	-	-	-	-	-	Yes
	Picture mode	Bright	MVB	-	Yes	Yes	-	-	-
True color		MVP	-	Yes	Yes	-	-	-	

## Notes

- When commands are transmitted serially, wait for the reply of the projector (acknowledge or not acknowledge) before sending the next command.
- Adjustment commands include "ARG" (increase adjustment value) and "ALF" (decrease adjustment value). For usable items (marked "Yes"), send after the selection command.
- The "Yes" marks in the input source columns indicate that that command can be used.

# Controlling the projector by using RS-232C (continued)

Classification	Items/Status	Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/PB/PR	Camera	
Picture (Continued)	Video mode	Auto.	KV0	-	-	-	Yes	-	
		NTSC	KV1	-	-	-	Yes	-	
		PAL	KV2	-	-	-	Yes	-	
		SECAM	KV3	-	-	-	Yes	-	
		PAL-N	KV4	-	-	-	Yes	-	
		PAL-M	KV5	-	-	-	Yes	-	
		PAL60	KV6	-	-	-	Yes	-	
		NTSC4.43	KV7	-	-	-	Yes	-	
	Signal format	Auto.	SG0	-	-	-	-	Yes	-
		525i	SG1	-	-	-	-	Yes	-
		525p	SG2	-	-	-	-	Yes	-
		625i	SG3	-	-	-	-	Yes	-
		750p	SG4	-	-	-	-	Yes	-
		1125i	SG5	-	-	-	-	Yes	-
	Shutter	Auto.	CSA	-	-	-	-	-	Yes
		50Hz	CS0	-	-	-	-	-	Yes
		60Hz	CS1	-	-	-	-	-	Yes
	Screen size	Full	MSF	-	Yes	Yes	Yes	Yes	Yes
		Thru	MST	-	Yes	Yes	Yes	Yes	Yes
		Wide	MSW	-	-	-	Yes	Yes	-
	Picture reset		DRV	-	Yes	Yes	Yes	Yes	Yes
Position	H-position	PHP	Yes	Yes	-	-	-	-	
	V-position	PVP	Yes	Yes	-	-	-	-	
	Phase	PPH	Yes	Yes	-	-	-	-	
	Frequency	PCK	Yes	Yes	-	-	-	-	
	Position reset		DRP	-	Yes	-	-	-	

# Controlling the projector by using RS-232C (continued)

Classification	Items/Status		Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/PB/PR	Camera
Color	Color		VCL	Yes	-	-	Yes	Yes	-
	Tint		VTN	Yes	-	-	Yes*	-	-
	R-level		VLR	Yes	Yes	Yes	Yes	Yes	Yes
	G-level		VLG	Yes	Yes	Yes	Yes	Yes	Yes
	B-level		VLB	Yes	Yes	Yes	Yes	Yes	Yes
	Color reset		DRC	-	Yes	Yes	Yes	Yes	Yes
Audio	Volume	Increase	VLU	-	Yes	Yes	Yes	Yes	-
		Decrease	VLD	-	Yes	Yes	Yes	Yes	-
	Speaker output	On	AS1	-	Yes	Yes	Yes	Yes	-
		Off	AS0	-	Yes	Yes	Yes	Yes	-
	Channel select (RCA)	L+R	APA	-	-	-	Yes	-	-
		L	APL	-	-	-	Yes	-	-
		R	APR	-	-	-	Yes	-	-
	Loudness (RCA)	Off	LR0	-	-	-	Yes	-	-
		On	LR1	-	-	-	Yes	-	-
	Channel select (Mini)	L+R	AMA	-	Yes	Yes	-	Yes	-
		L	AML	-	Yes	Yes	-	Yes	-
		R	AMR	-	Yes	Yes	-	Yes	-
	Loudness (Mini)	Off	LM0	-	Yes	Yes	-	Yes	-
		On	LM1	-	Yes	Yes	-	Yes	-
	Audio reset		DRA	-	Yes	Yes	Yes	Yes	-
	Display	V-keystone		PKV	Yes	Yes	Yes	Yes	Yes
H-keystone		PKH	Yes	Yes	Yes	Yes	Yes	Yes	
Keystone reset		DRK	-	Yes	Yes	Yes	Yes	Yes	
Language		English	LEN	-	Yes	Yes	Yes	Yes	Yes
		French	LFR	-	Yes	Yes	Yes	Yes	Yes
		German	LGR	-	Yes	Yes	Yes	Yes	Yes
		Italian	LIT	-	Yes	Yes	Yes	Yes	Yes
		Spanish	LSP	-	Yes	Yes	Yes	Yes	Yes
		Portuguese	LPO	-	Yes	Yes	Yes	Yes	Yes
		Japanese	LJP	-	Yes	Yes	Yes	Yes	Yes
		Chinese(Simplified)	LPK	-	Yes	Yes	Yes	Yes	Yes
		Chinese(Traditional)	LKT	-	Yes	Yes	Yes	Yes	Yes
Korean	LKK	-	Yes	Yes	Yes	Yes	Yes		

\* Not possible for PAL/SECAM.

# Controlling the projector by using RS-232C (continued)

Classification	Items/Status		Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/PB/PR	Camera		
Display (Continued)	Icon	On	MO0	-	Yes	Yes	Yes	Yes	Yes		
		Off	MO1	-	Yes	Yes	Yes	Yes	Yes		
	Menu position	Upper left	MP1	-	Yes	Yes	Yes	Yes	Yes		
		Lower left	MP2	-	Yes	Yes	Yes	Yes	Yes		
		Upper right	MP3	-	Yes	Yes	Yes	Yes	Yes		
		Lower right	MP4	-	Yes	Yes	Yes	Yes	Yes		
	Menu translucent	On	MB1	-	Yes	Yes	Yes	Yes	Yes		
		Off	MB0	-	Yes	Yes	Yes	Yes	Yes		
Display reset (except keystone)		DRD	-	Yes	Yes	Yes	Yes	Yes			
Default setting	Input source setting	COMPUTER IN 1	On	I10	-	Yes	Yes	Yes	Yes		
			Off	I11	-	Yes	Yes	Yes	Yes		
			Analog RGB(1)	IS0	-	Yes	Yes	Yes	Yes	Yes	
			Y/PB/PR	IS1	-	Yes	Yes	Yes	Yes	Yes	
			COMPUTER IN 2	On	I20	-	Yes	Yes	Yes	Yes	Yes
				Off	I21	-	Yes	Yes	Yes	Yes	Yes
			Analog RGB(2)	IV0	-	Yes	Yes	Yes	Yes	Yes	
			Digital RGB	IV1	-	Yes	Yes	Yes	Yes	Yes	
		VIDEO	On	I30	-	Yes	Yes	Yes	Yes	Yes	
			Off	I31	-	Yes	Yes	Yes	Yes	Yes	
		S-VIDEO	On	I40	-	Yes	Yes	Yes	Yes	Yes	
			Off	I41	-	Yes	Yes	Yes	Yes	Yes	
	CAMERA	On	I60	-	Yes	Yes	Yes	Yes	Yes		
		Off	I61	-	Yes	Yes	Yes	Yes	Yes		
	Projection mode	Standard	PJ0	-	Yes	Yes	Yes	Yes	Yes		
		Rear	PJ1	-	Yes	Yes	Yes	Yes	Yes		
		Ceiling	PJ2	-	Yes	Yes	Yes	Yes	Yes		
		Rear ceiling	PJ3	-	Yes	Yes	Yes	Yes	Yes		
	No signal background	Logo	BG0	-	Yes	Yes	Yes	Yes	Yes		
		Blue background	BG1	-	Yes	Yes	Yes	Yes	Yes		
		Non	BG2	-	Yes	Yes	Yes	Yes	Yes		
	No signal power off	Off	PN0	-	Yes	Yes	Yes	Yes	Yes		
		5 min.	PN1	-	Yes	Yes	Yes	Yes	Yes		
	Power on	Manual	AP0	-	Yes	Yes	Yes	Yes	Yes		
		Auto.	AP1	-	Yes	Yes	Yes	Yes	Yes		

# Controlling the projector by using RS-232C (continued)

Classification	Items/Status		Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/PB/PR	Camera
Default setting (Continued)	Startup screen	On	MS0	-	Yes	Yes	Yes	Yes	Yes
		Off	MS1	-	Yes	Yes	Yes	Yes	Yes
	Default setting reset		DRI	-	Yes	Yes	Yes	Yes	Yes
Reset	Reset all		DRS	-	Yes	Yes	Yes	Yes	Yes
	H-reference reset		PKR	-	Yes	Yes	Yes	Yes	Yes
Status display (CALL)			DON	-	Yes	Yes	Yes	Yes	Yes
Input selection	Toggle		IN0	-	Yes	Yes	Yes	Yes	Yes
	COMPUTER-1		IN1	-	Yes	Yes	Yes	Yes	Yes
	COMPUTER-2		IN2	-	Yes	Yes	Yes	Yes	Yes
	VIDEO		IN3	-	Yes	Yes	Yes	Yes	Yes
	S-VIDEO		IN4	-	Yes	Yes	Yes	Yes	Yes
	CAMERA		IN6	-	Yes	Yes	Yes	Yes	Yes
RESIZE	Increase the enlargement ratio		RUP	-	Yes	Yes	Yes	Yes	Yes
	Decrease the enlargement ratio (Minimum: reset status)		RDW	-	Yes	Yes	Yes	Yes	Yes
	Move the enlargement section	Up	PO1	-	Yes	Yes	Yes	Yes	Yes
		Down	PO2	-	Yes	Yes	Yes	Yes	Yes
		Left	PO3	-	Yes	Yes	Yes	Yes	Yes
		Right	PO4	-	Yes	Yes	Yes	Yes	Yes
Enlargement reset		RS0	-	Yes	Yes	Yes	Yes	Yes	
FREEZE	On		FON	-	Yes	Yes	Yes	Yes	Yes
	Off		FOF	-	Yes	Yes	Yes	Yes	Yes
MUTE	On		MON	-	Yes	Yes	Yes	Yes	Yes
	Off		MOF	-	Yes	Yes	Yes	Yes	Yes
PIP	On		PIN	-	Yes	Yes	-	-	-
	Off		PIF	-	Yes	Yes	-	-	-
	PIP input source	Video	PI0	-	Yes	Yes	-	-	-
		S-Video	PI1	-	Yes	Yes	-	-	-
	PIP size	Small	PS0	-	Yes	Yes	-	-	-
		Middle	PS1	-	Yes	Yes	-	-	-
		Large	PS2	-	Yes	Yes	-	-	-
	PIP position	Upper left	PP0	-	Yes	Yes	-	-	-
Upper right		PP1	-	Yes	Yes	-	-	-	
Lower left		PP2	-	Yes	Yes	-	-	-	
Lower right		PP3	-	Yes	Yes	-	-	-	

# Controlling the projector by using RS-232C (continued)

Classification	Items/Status		Selection Command	Adjustment Command	Analog RGB(1) Analog RGB(2)	Digital RGB	Video S-Video	Y/Pb/Pr	Camera
PIP (Continued)	PIP audio source	Main	PA0	-	Yes	Yes	-	-	-
		Sub	PA1	-	Yes	Yes	-	-	-
	PIP reset		DRW	-	Yes	Yes	-	-	-
AUTO SET			PAT	-	Yes	Yes	-	-	-
Auto. V-keystone			PKA	-	Yes	Yes	Yes	Yes	Yes
Overlay	On		CON	-	Yes	Yes	Yes	Yes	-
	Off		COF	-	Yes	Yes	Yes	Yes	-
Camera	Shortcut		CDR	-	Yes	Yes	Yes	Yes	Yes
	Auto. W/B	On	CW1	-	Yes	Yes	Yes	Yes	Yes
		Off	CW0	-	Yes	Yes	Yes	Yes	Yes
	Lighting	On	CL1	-	Yes	Yes	Yes	Yes	Yes
		Off	CL0	-	Yes	Yes	Yes	Yes	Yes

## Main unit

Power consumption	340W (Standby: 20W)
Mass	TLP790: 4.2kg TLP791: 5.0kg
Dimensions (Includes the protrusion parts)	TLP790: 338 x 101 x 268 (mm) (W/H/D) TLP791: 338 x 101 x 323 (mm) (W/H/D)
Cabinet Material	PC+ABS resin and ABS resin
Ambient environment	Temperature : 0 deg. to 35 deg. Humidity : 30% to 70% RH
Lamp	High pressure mercury lamp
Projection screen size	32 to 300 inches
Projection distance	1.3 to 10.2m
Speaker	1W (monaural)
Connectors	
• COMPUTER IN 1	Mini D-sub 15-pin Analog RGB(1)/Y/P <sub>B</sub> /P <sub>R</sub> (combination)
• COMPUTER IN 2	DVI ANALOG & DIGITAL connector Analog RGB(2)/Digital RGB (combination)
• MONITOR OUT	Mini D-sub 15-pin Analog RGB/Y/P <sub>B</sub> /P <sub>R</sub> (combination)
• S-VIDEO IN	Mini DIN 4-pin
• VIDEO IN	1V(p-p), 75Ω, RCA pin jack
• AUDIO(L/R) IN	1.3V(rms), more than 22kΩ, RCA pin jack x 2
• AUDIO IN	1.3V(rms), more than 22kΩ, ø3.5mm stereo mini jack
• CONTROL	Mini DIN 8-pin (RS-232C)
• USB	Type B (USB 1.1)

## Liquid crystal display

Projection system	3-panel transmission
Panel size	1.0 inches
Driving system	TFT active matrix
Picture elements	786,432 pixels (1024 x 768 dots) (H./V.) x 3

## Projection lens

Lens	Zooming lens F=1.7 to 2.1 f=33.6 to 42mm
Focusing	Manual operation
Zooming	Manual operation


## Document imaging camera (with camera model)

Lens	F = 3.1, f = 6.4mm
Focusing	Manual operation
Zoom	None (adjusted by distance to subject)
Iris	Auto./Manual
Image element	1/2 inch CCD
Effective pixels for pickup section	1,447,680 pixels (1392 x 1040 dots) (H./V.)
Lighting	LED light (class 2)




## Accessories


Owner's manual (Getting started) ..... 1

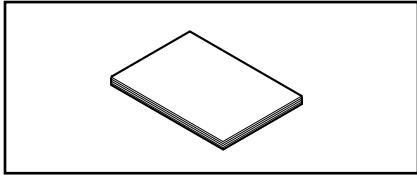


Power cord ..... \*Note

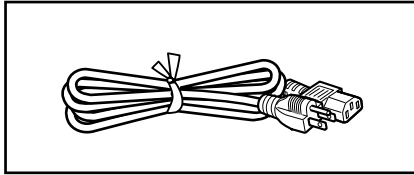


DVI cable ..... 1 (2m)

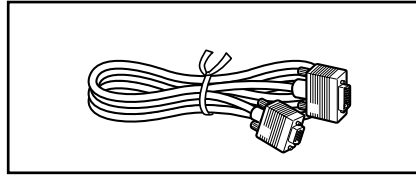


Carry-on bag ..... 1

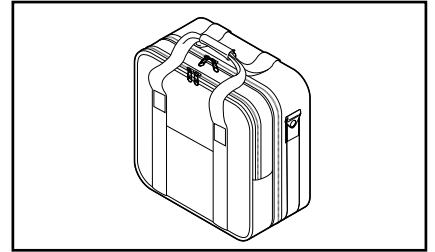


Owner's manual (CD-ROM) ..... 1

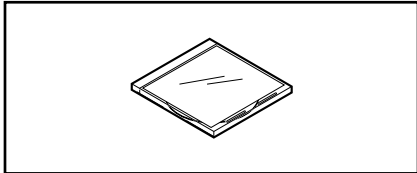


RGB cable ..... 1 (3m)

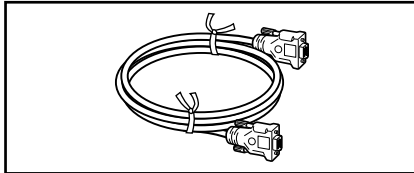


Control cable ..... 1 (1.8m)

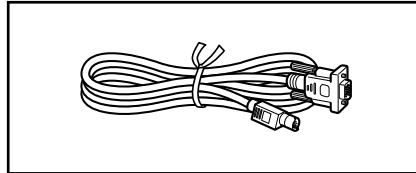


Quick Reference ..... 1

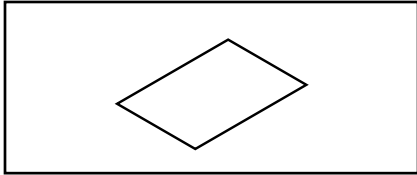


AV cable ..... 1 (3m)

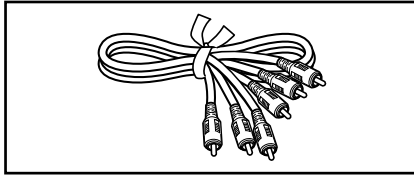


USB cable ..... 1 (2m)

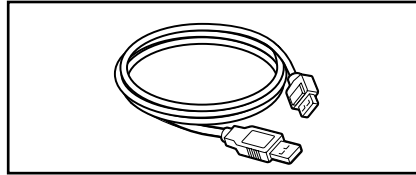

Remote control ..... 1  
LR6 (AA) size battery ..... 2

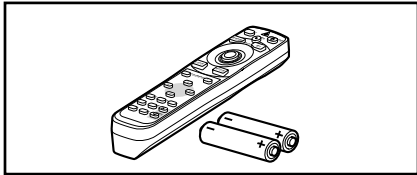

Audio cable (for Computer) ..... 1 (3m)

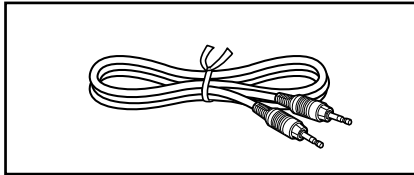

### Sold separately

Replacement lamp TLPL79

- The design and specifications are subject to change without notice.

### Note

The shape and number of the power cord varies with the destination.

### Trademarks

NEC, PC-98 series are trademarks of NEC Corporation.

VGA, SVGA, XGA, SXGA, UXGA are trademarks or registered trademarks of International Business Machines Corporation.

Macintosh is a registered trademark of Apple Computer, Inc.

Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.

Display Data Channel is a trademark of Video Electronics Standard Association.