USA's primary source for projector lamps
myprojectorlamps

PROJECTOR OWNER'S MANUAL

BenQ

W710ST

Need a replacement lamp for this projector?

www.myprojectorlamps.com

Original manufacturer manual, provided unmodified as a courtesy of MyProjectorLamps.com.
All trademarks belong to their respective owners.

BenQ

W700 / W710ST
Digital Projector
User Manual

Welcome

English

Table of contents

Important safety instructions.....3

Introduction 7

Projector features 7
Shipping contents 8
Projector exterior view 9
Controls and functions..... 10

Positioning your projector 15

Choosing a location 15
Obtaining a preferred projected image size..... 16

Connection 20

Connecting a computer..... 20
Connecting Video source devices..... 21
Connecting HDMI source devices 22

Operation.....26

Starting up the projector..... 26
Using the menus 27
Securing the projector 27
Utilizing the password function..... 28
Switching input signal..... 31
Adjusting the projected image 32
Magnifying and searching for details. 34
Playing 3D function..... 34
Selecting the aspect ratio..... 35
Optimizing the image..... 37
Hiding the image..... 41
Remote Receiver..... 41
My Screen..... 41
Freezing the image.....43
Operating in a high altitude environment 43
Adjusting the sound 44
Personalizing the projector menu display 45
Shutting down the projector 45
Menu operation 46

Maintenance 54

Care of the projector 54
Lamp information 55

Troubleshooting..... 61

Specifications..... 62

Projector specifications.....62
Dimensions.....63
Timing chart.....64


Warranty and Copyright information 69

Important safety instructions


Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.

Safety Instructions


1. **Please read this manual before you operate your projector. Save it for future reference.**

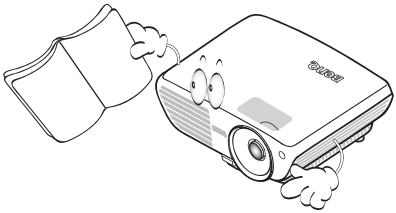


2. **Do not look straight at the projector lens during operation.** The intense light beam may damage your eyes.

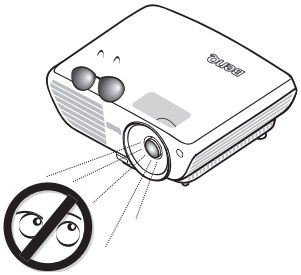


3. **Refer servicing to qualified service personnel.**

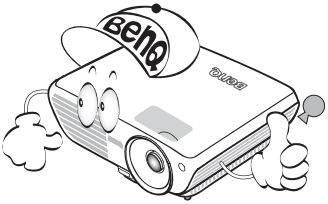

4. **Always open the lens shutter or remove the lens cap when the projector lamp is on.**

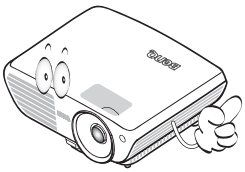


5. In some countries, the line voltage is NOT stable. This projector is designed to operate safely within a mains voltage between 100 to 240 volts AC, but could fail if power cuts or surges of ±10 volts occur. **In areas where the mains voltage may fluctuate or cut out, it is recommended that you connect your projector through a power stabilizer, surge protector or uninterruptible power supply (UPS).**

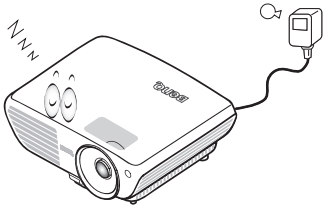


6. Do not block the projection lens with any objects when the projector is under operation as this could cause the objects to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press **BLANK** on the projector or remote control.

Safety Instructions (Continued)


7. The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.

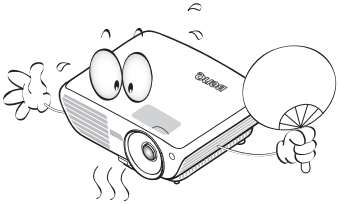


8. Do not operate lamps beyond the rated lamp life. Excessive operation of lamps beyond the rated life could cause them to break on rare occasions.

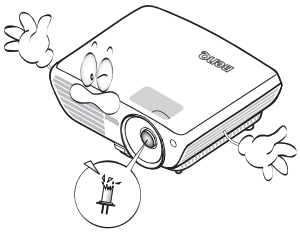


9. Never replace the lamp assembly or any electronic components unless the projector is unplugged.

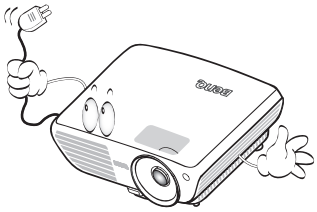

10. Do not place this product on an unstable cart, stand, or table. The product may fall, sustaining serious damage.

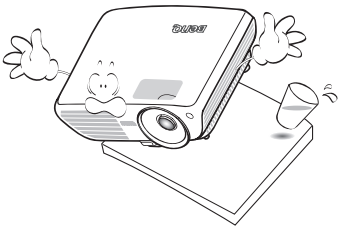


11. Do not attempt to disassemble this projector. There are dangerous high voltages inside which may cause death if you should come into contact with live parts. The only user serviceable part is the lamp which has its own removable cover. Under no circumstances should you ever undo or remove any other covers. Refer servicing only to suitably qualified professional service personnel.

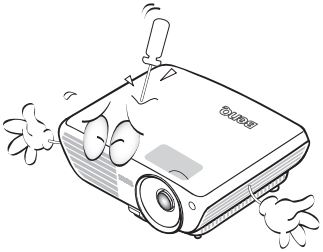


12. When the projector is under operation, you may sense some heated air and odor from its ventilation grill. It is a normal phenomenon and not a product defect.

Safety Instructions (Continued)


13. Do not place this projector in any of the following environments.
    - Space that is poorly ventilated or confined. Allow at least 50 cm clearance from walls and free flow of air around the projector.
    - Locations where temperatures may become excessively high, such as the inside of a car with all windows rolled up.
    - Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shortening the projector's life span and darkening the image.

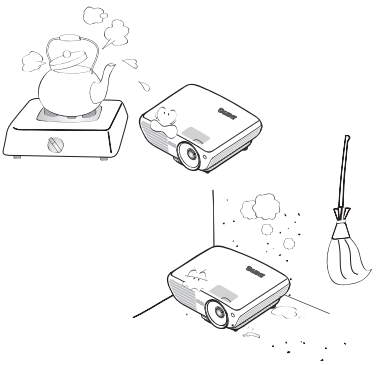

    - Locations near fire alarms
    - Locations with an ambient temperature above 35°C / 95°F
    - Locations where the altitudes are higher than 3000 m (10000 feet).

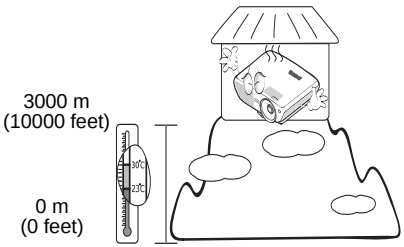


14. Do not block the ventilation holes.
    - Do not place this projector on a blanket, bedding or any other soft surface.
    - Do not cover this projector with a cloth or any other item.
    - Do not place inflammables near the projector.

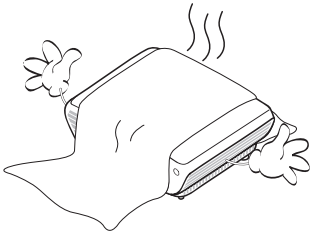


    If the ventilation holes are seriously obstructed, overheating inside the projector may result in a fire.

15. Always place the projector on a level, horizontal surface during operation.
    - Do not use if tilted at an angle of more than 10 degrees left to right, nor at angle of more than 15 degrees front to back. Using the projector when it is not fully horizontal may cause a malfunction of, or damage to, the lamp.

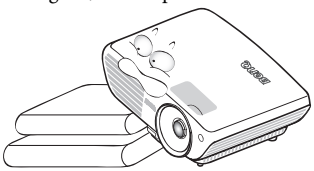

16. Do not stand the projector on end vertically. Doing so may cause the projector to fall over, causing injury or resulting in damage to the projector.

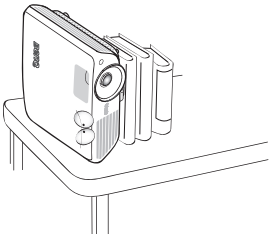


Safety Instructions (Continued)

17. Do not step on the projector or place any objects upon it. Besides probable physical damage to the projector, doing so may result in accidents and possible injury.




18. Do not place liquids near or on the projector. Liquids spilled into the projector may cause it to fail. If the projector does become wet, disconnect it from the power supply's wall socket and call BenQ to have the projector serviced.

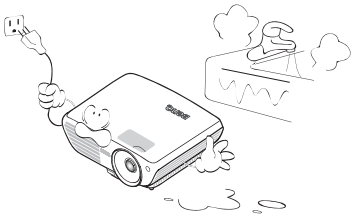

19. This product is capable of displaying inverted images for ceiling mount installation.

⚠ **Use only BenQ's Ceiling Mount Kit for mounting the projector and ensure it is securely installed.**

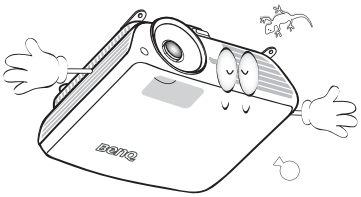

⚠ Ceiling mounting the projector

We want you to have a pleasant experience using your BenQ projector, so we need to bring this safety matter to your attention to prevent possible damage to person and property.

If you intend to mount your projector on the ceiling, we strongly recommend that you use a proper fitting BenQ projector ceiling mount kit and that you ensure it is securely and safely installed.

If you use a non-BenQ brand projector ceiling mount kit, there is a safety risk that the projector may fall from the ceiling due to an improper attachment through the use of the wrong gauge or length screws.

You can purchase a BenQ projector ceiling mount kit from the place you purchased your BenQ projector. BenQ recommends that you also purchase a separate Kensington lock compatible security cable and attach it securely to both the Kensington lock slot on the projector and the base of the ceiling mount bracket. This will perform the secondary role of restraining the projector should its attachment to the mounting bracket become loose.

Introduction

Projector features

The projector integrates high-performance optical engine projection and a user-friendly design to deliver high reliability and ease of use.

The projector offers the following features.

- Dual HDMI inputs
- Filter free design to lower maintenance and operating costs
- Auto keystone function to correct image keystoning automatically
- Brilliant color / UNISHAPE to provide truer, more vibrant colors in picture
- Closed captioning to display the dialogue, narration, and sound effects of TV programs and videos
- Variable audio output
- Wall color correction allowing projection on surfaces of several predefined colors
- Quick auto search speeding up the signal detecting process
- Selectable password protected function
- 3D color management allowing color adjustments to your liking
- Selectable quick cooling function making the projector cool in a shorter time
- High quality manual zoom lens
- One-key auto-adjustment to display the best picture quality
- Adjustable color balance control for data/video display
- Ability to display 16.7 million colors
- Multi-language On-screen Display (OSD) menus
- Switchable normal and economic modes to reduce the power consumption
- Built-in speaker providing mixed mono audio when an audio input is connected
- Component HDTV compatibility (YPbPr)
- HDCP compatibility
- 3D ready function for enjoying the 3D content.

☞ • **The apparent brightness of the projected image will vary depending on the ambient lighting conditions, selected input signal contrast/brightness settings, and is directly proportional to projection distance.**

• **The lamp brightness will decline over time and may vary within the lamp manufacturers specifications. This is normal and expected behavior.**

Shipping contents


Carefully unpack and verify that you have all of the items shown below. If any of these items are missing, please contact your place of purchase.

Standard accessories


The supplied accessories will be suitable for your region, and may differ from those illustrated.




Projector

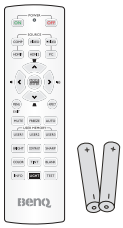


Remote control with battery

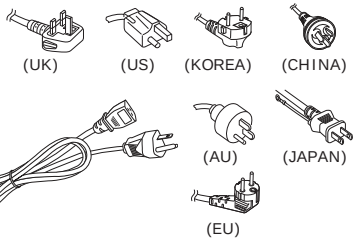

Power cord

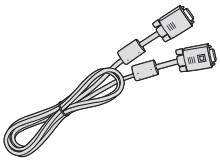

VGA cable



Quick start guide



User manual CD



Warranty card*


Optional accessories

1. Spare lamp kit
2. Ceiling mount kit
3. Presentation Plus
4. Soft Carry Case
5. RS232 Cable

***The warranty card is only supplied in some specific regions. Please consult your dealer for detailed information.**


Projector exterior view

Front/upper side

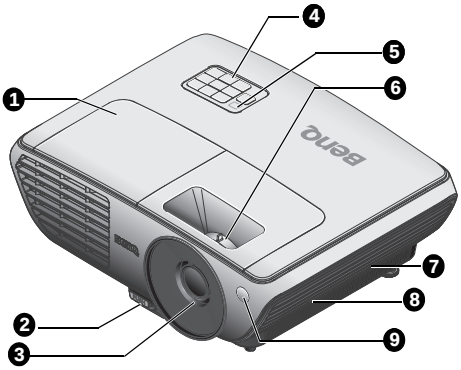

1. Lamp compartment cover
2. Quick-release button
3. Projection lens
4. External control panel (See "Projector" on page 10 for details.)
5. Top IR remote sensor
6. Focus ring and Zoom ring
7. Vent (cool air intake)
8. Audio speaker
9. Front IR remote sensor


Rear/lower side

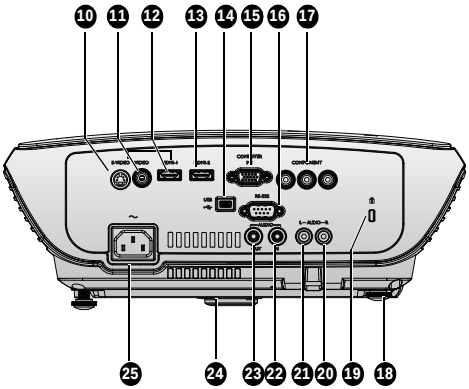

10. S-VIDEO input jack
11. VIDEO input jack
12. HDMI 1 input jack
13. HDMI 2 input jack
14. USB input jack
15. COMPUTER PC input jack
16. RS-232 control port
17. COMPONENT input jacks
18. Rear adjuster foot
19. Kensington anti-theft lock slot
20. AUDIO input jack (R)
21. AUDIO input jack (L)
22. AUDIO input jack
23. AUDIO output jack
24. Quick-release foot
25. AC power cord inlet


Controls and functions

Projector

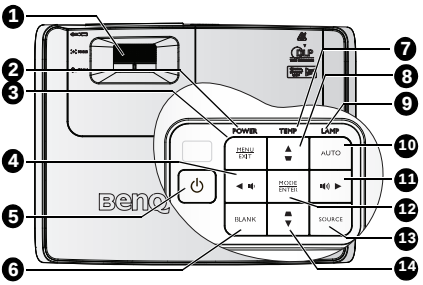

1. **FOCUS/ZOOM Ring**
   Used to adjust the projected image appearance. See "Fine-tuning the image size and clarity" on page 33 for details.
2. **POWER indicator light**
   Lights up or flashes when the projector is under operation. See "Indicators" on page 61 for details.
3. **MENU/EXIT**
   Turns on the On-Screen Display (OSD) menu. Goes back to previous OSD menu, exits and saves menu settings. See "Using the menus" on page 27 for details.
4. **◀ Left/ 🔉 Decrease volume level**
   Decreases volume. See "Adjusting the sound level" on page 44 for details.
5. **⏻POWER**
   Toggles the projector between standby mode and on.
   See "Starting up the projector" on page 26 and "Shutting down the projector" on page 45 for details.
6. **BLANK**
   Used to hide the screen picture. See "Hiding the image" on page 41 for details.
7. **TEMPerature indicator light**
   Lights up red if the projector's temperature becomes too high. See "Indicators" on page 61 for details.
8. **Keystone/Arrow keys (▼ / ▲ Up)**
   Manually corrects distorted images resulting from an angled projection. See "Correcting keystone" on page 33 for details.
9. **LAMP indicator light**
   Indicates the status of the lamp. Lights up or flashes when the lamp has developed a problem. See "Indicators" on page 61 for details.
10. **AUTO**
    Automatically determines the best picture timings for the displayed image. See "Auto-adjusting the image" on page 32 for details.
11. **▶ Right/ 🔊 Increase volume level**
    Increases volume. See "Adjusting the sound level" on page 44 for details.
    When the On-Screen Display (OSD) menu is activated, the #4, #8, #11, and #14 keys are used as directional arrows to select the desired menu items and to make adjustments. See "Using the menus" on page 27 for details.
12. **MODE/ENTER**
    Selects an available picture setup mode. See "Selecting a picture mode" on page 37 for details.
    Enacts the selected On-Screen Display (OSD) menu item. See "Using the menus" on page 27 for details.
13. **SOURCE**
    Displays the source selection bar. See "Switching input signal" on page 31 for details.
14. **Keystone/Arrow keys (▲ / ▼ Down)**
    Manually corrects distorted images resulting from an angled projection. See "Correcting keystone" on page 33 for details.

Remote control

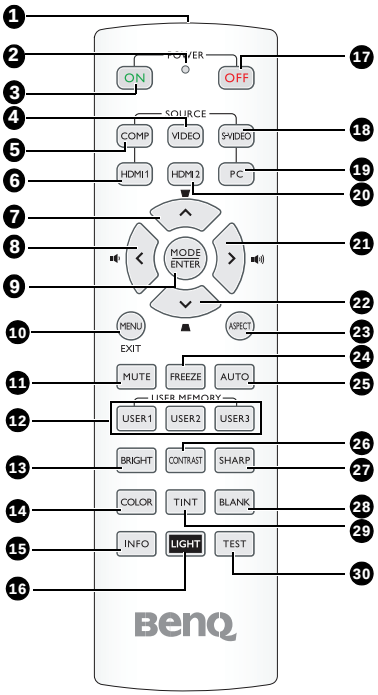

1. **IR transmitter**
   Transmits signal to projector.
2. **LED indicator**
   Lights only when the key is pressed
3. **POWER ON**
   Turns on the projector. See "Starting up the projector" on page 26 for details.
4. **VIDEO**
   Displays the VIDEO source selection. See "Switching input signal" on page 31 for details.
5. **COMP**
   Displays the COMPONENT source selection. See "Switching input signal" on page 31 for details.
6. **HDMI 1**
   Displays the HDMI 1 source selection. See "Switching input signal" on page 31 for details.
7. **Up cursor/Keystone (▲/ ▼)**
   ▲: Navigates and changes settings in the OSD. See "Using the menus" on page 27 for details.
   ▼: Manually corrects distorted images resulting from an angled projection. See "Correcting keystone" on page 33 for details.
8. **Left cursor/Decrease volume level (◀/ 🔉)**
   ◀: Navigates and changes settings in the OSD. See "Using the menus" on page 27 for details.
   🔉 : Decreases volume.
9. **MODE/ ENTER**
   MODE: Choose a suitable preset mode for usage environment.
   ENTER: Enter key for OSD menu.
10. **MENU/ EXIT**
    MENU: Turns on the On-Screen Display (OSD) menu.
    EXIT: Goes back to previous OSD menu, exits and saves menu settings.
    See "Using the menus" on page 27 for details.
11. **MUTE**
    Mutes the built-in speaker.
12. **USER 1/ User 2/ User 3**
    Select the User memory settings.

    Note: User 3 not supported for this model.
13. **BRIGHT**
    Displays the BRIGHTNESS setting bar. See "Adjusting Brightness" on page 38 for details.
14. **COLOR**
    Displays the COLOR setting bar. See "Selecting a Color Temperature" on page 39 for details.
15. **INFO**
    Starts the INFORMATION function.

16. **LIGHT**

    Turns on or off the remote control backlight for about 10 seconds. Pressing any other key while the backlight is on keeps the backlight on for a further 10 seconds.

17. **POWER OFF**

    Turns off the projector. See "Shutting down the projector" on page 45 for details.

18. **S-VIDEO**

    Displays the S-VIDEO source selection. See "Switching input signal" on page 31 for details.

19. **PC**

    Displays the PC source selection. See "Switching input signal" on page 31 for details.

20. **HDMI 2**

    Displays the HDMI 2 source selection. See "Switching input signal" on page 31 for details.

21. **Right cursor/Increase volume level**

    (/)

    : Navigates and changes settings in the OSD. See "Using the menus" on page 27 for details.

    : Increase Volume.

22. **Down cursor/Keystone (/)**

    : Navigates and changes settings in the OSD. See "Using the menus" on page 27 for details.

    : Manually corrects distorted images resulting from an angled projection. See "Correcting keystone" on page 33 for details.

23. **ASPECT**

    Select the display aspect ratios. See "Selecting the aspect ratio" on page 35 for details.

24. **FREEZE**

    Freeze/unfreezes the on-screen picture. See "Freezing the image" on page 43 for details.

25. **AUTO**

    Automatically determines the best picture timings for the displayed image.

26. **CONTRAST**

    Displays the CONTRAST setting bar. See "Adjusting Contrast" on page 38 for details.

27. **SHARP**

    Displays the SHARPNESS setting bar. See "Adjusting Sharpness" on page 39 for details.

28. **BLANK**

    Hides the screen picture. See "Hiding the image" on page 41 for details.

29. **TINT**

    Displays the TINT setting bar. See "Adjusting Tint" on page 39 for details.


30. **TEST**

    Displays the test pattern.




Remote control effective range

Infra-Red (IR) remote control sensor is located on the front and the top of the projector. The remote control must be held at an angle within 30 degrees perpendicular to the projector's IR remote control sensor to function correctly. The distance between the remote control and the sensor should not exceed 7 meters (~ 23 feet).

Make sure that there are no obstacles between the remote control and the IR sensor on the projector that might obstruct the infra-red beam.

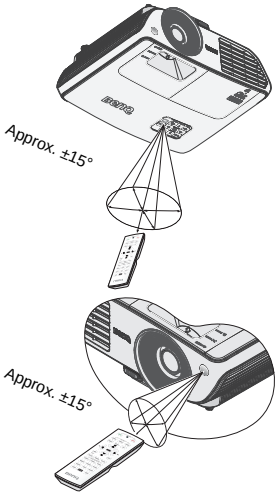

Replacing the remote control battery

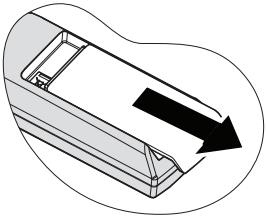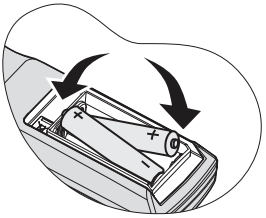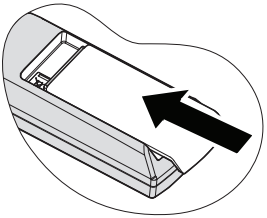1. Remove the battery compartment cover by sliding the cover in the direction of the arrow.	
2. Insert the supplied batteries taking note of the polarity (+/-) as shown here.	
3. Replace the cover.	

- **Avoid excessive heat and humidity.**
- **There may be battery damage if the battery is incorrectly replaced.**
- **Replace only with the same or equivalent type recommended by the battery manufacturer.**
- **Dispose of the used battery according to the battery manufacturer's instructions.**
- **Never throw a battery into a fire. There may be danger of an explosion.**
- **If the battery is dead or if you will not be using the remote control for a long time, remove the battery to prevent damage to the remote control from possible battery leakage.**

Positioning your projector


Choosing a location

Your room layout or personal preference will dictate which installation location you select. Take into consideration the size and position of your screen, the location of a suitable power outlet, as well as the location and distance between the projector and the rest of your equipment.

Your projector is designed to be installed in one of four possible installation locations:

1. Front Table

Select this location with the projector placed on a table in front of the screen. This is the most common way to position the projector for quick setup and portability.

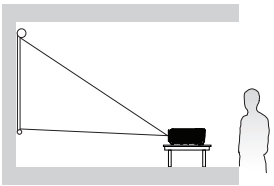


2. Front Ceiling

Select this location with the projector suspended upside-down from the ceiling in front of the screen.

Purchase the BenQ Projector Ceiling Mounting Kit from your dealer to mount your projector on the ceiling.

Set **Front Ceiling** in the **SYSTEM SETUP: Basic** > **Projector Position** menu after you turn the projector on.

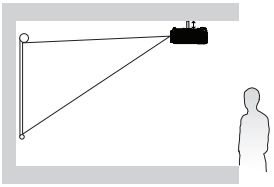


3. Rear Table

Select this location with the projector placed on a table behind the screen.

Note that a special rear projection screen is required.

Set **Rear Table** in the **SYSTEM SETUP: Basic** > **Projector Position** menu after you turn the projector on.

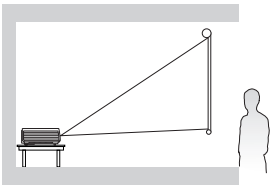


4. Rear Ceiling

Select this location with the projector suspended upside-down from the ceiling behind the screen.

Note that a special rear projection screen and the BenQ Projector Ceiling Mounting Kit are required for this installation location.

Set **Rear Ceiling** in the **SYSTEM SETUP: Basic** > **Projector Position** menu after you turn the projector on.

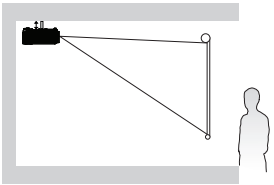

***To set the projector position:**

1. Press **MENU/EXIT** on the projector or remote control and then press ◀ / ▶ until the SYSTEM SETUP: Basic menu is highlighted.

2. Press ▲ / ▼ to highlight Projector Position and press ◀ / ▶ until the correct position is selected.



Obtaining a preferred projected image size

The distance from the projector lens to the screen, the zoom setting (if available), and the video format each factors in the projected image size.

16:9 is the native aspect ratio. W700/W710ST can project a complete 16:9 (widescreen) image.

The projector should always be placed horizontally level (like flat on a table), and positioned directly perpendicular (90° right-angle square) to the horizontal center of the screen. This prevents image distortion caused by angled projections (or projecting onto angled surfaces).

The modern digital projector does not project directly forward (like older style reel-to-reel film projectors did). Instead, digital projectors are designed to project at a slightly upward angle above the horizontal plane of the projector. This is so that they can be readily placed on a table and will project forward and upwards onto a screen positioned so that the bottom edge of the screen is above the level of the table (and everyone in the room can see the screen).

If the projector is mounted on a ceiling, it must be mounted upside-down so that it projects at a slightly downward angle.

You can see from the diagram on page 18, that this type of projection causes the bottom edge of the projected image to be vertically offset from the horizontal plane of the projector. When ceiling mounted, this refers to the top edge of the projected image.

If the projector is positioned further away from the screen, the projected image size increases, and the vertical offset also increases proportionately.

When determining the position of the screen and projector, you will need to account for both the projected image size and the vertical offset dimension, which are directly proportional to the projection distance.

BenQ has provided a table of screen sizes to assist you in determining the ideal location for your projector. Refer to "W700/W710ST projection dimensions" on page 18. There are two dimensions to consider, the perpendicular horizontal distance from the center of the screen (projection distance), and the vertical offset height of the projector from the horizontal edge of the screen (offset).

How to determine the position of the projector for a given screen size

1. Select your screen size.
2. Refer to the table and find the closest match to your screen size in the left columns labelled "16:9 screen". Using this value, look across this row to the right to find the corresponding average distance from screen value in the column labelled "Average". This is the projection distance.
3. On that same row, look across to the right column and make note of the "Vertical offset in mm" value. This will determine the final vertical offset placement of the projector in relation to the edge of the screen.
4. The recommended position for the projector is aligned perpendicular to the horizontal center of the screen, at the distance from the screen determined in step 2 above, and offset by the value determined in step 3 above.

For example, if you are using a 120-inch screen,

the W700 average projection distance is 4325 mm and with a vertical offset of 269 mm.

the W710ST average projection distance is 2004 mm and with a vertical offset of 269 mm.

If you place the projector in a different position (to that recommended), you will have to tilt it down or up to center the image on the screen. In these situations, some image distortion will occur. Use the Keystone function to correct the distortion. See "Correcting keystone" on page 33 for details.

How to determine the recommended screen size for a given distance

This method can be used for situations where you have purchased this projector and would like to know what screen size will fit in your room.

The maximum screen size is limited by the physical space available in your room.

1. Measure the distance between the projector and where you want to position the screen. This is the projection distance.
2. Refer to the table and find the closest match to your measurement in the average distance from screen column labelled "Average". If the min and max values are available on the table, check that your measured distance is between the min and max distances listed on either side of the average distance value.
3. Using this value, look across that row to the left to find the corresponding screen diagonal listed in that row. That is the projected image size of the projector at that projection distance.
4. On that same row, look across to the right column and make note of the "Vertical offset in mm" value. This will determine the final placement of the screen in relation to the horizontal plane of the projector.


For example,

W700: if your measured projection distance was 3.5 m (3500 mm), the closest match in the "Average" column is 3604 mm. Looking across this row shows that a 100-inch screen is required.

W710ST: if your measured projection distance was 1.5 m (1500 mm), the closest match in the "Average" column is 1670 mm. Looking across this row show that a 100-inch screen is required.

W700/W710ST projection dimensions

Refer to "Dimensions" on page 64 for the center of lens dimensions of this projector before calculating the appropriate position.

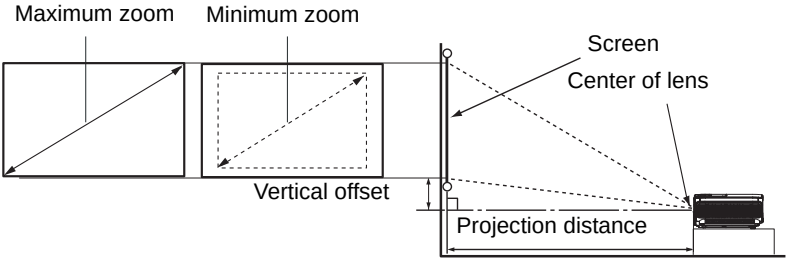

W700

16:9 screen				Recommended projection distance from screen in mm			Vertical offset in mm
diagonal		Width	Height	Min length (with max. zoom)	Average	Max length (with min. zoom)	
Inches	mm	mm	mm				
30	762	664	374	-	-	1137	67
40	1016	886	498	1367	1442	1516	90
50	1270	1107	623	1709	1802	1895	112
60	1524	1328	747	2051	2162	2274	134
80	2032	1771	996	2734	2883	3032	179
100	2540	2214	1245	3418	3604	3790	224
120	3048	2657	1494	4102	4325	4548	269
150	3810	3321	1868	5127	5406	5685	336
200	5080	4428	2491	6836	7208	7580	448
220	5588	4870	2740	7520	7929	8338	493
250	6350	5535	3113	8545	9010	9475	560
300	7620	6641	3736	10254	-	-	672

W710ST

16:9 screen				Recommended projection distance from screen in mm			Vertical offset in mm
diagonal		Width	Height	Min length (with max. zoom)	Average	Max length (with min. zoom)	
Inches	mm	mm	mm				
34.30	871	759	427	-	-	600	77
40	1016	886	498	637	668	700	90
50	1270	1107	623	796	835	874	112
60	1524	1328	747	955	1002	1049	134
80	2032	1771	996	1273	1336	1399	179
100	2540	2214	1245	1592	1670	1749	224
120	3048	2657	1494	1910	2004	2099	269
150	3810	3321	1868	2388	2505	2623	336
188.5	4788	4173	2347	3000	-	-	423

There is 5% tolerance among these numbers due to optical component variations. BenQ recommends that if you intend to permanently install the projector, you should physically test the projection size and distance using the actual projector before you permanently install it, so as to make allowance for this projector's optical characteristics. This will help you determine the exact mounting position so that it best suits your installation location.

Connection

When connecting a signal source to the projector, be sure to:
1. Turn all equipment off before making any connections.
2. Use the correct signal cables for each source.
3. Ensure the cables are firmly inserted.

In the connections shown below, some cables may not be included with the projector (see "Shipping contents" on page 8). They are commercially available from electronics stores.

Connecting a computer

Connecting a computer

The projector provides a VGA input socket that allows you to connect it to both IBM® compatibles and Macintosh® computers. A Mac adapter (an optional accessory) is needed if you are connecting legacy version Macintosh computers.

To connect the projector to a notebook or desktop computer:

- **With a VGA cable:**

1. Take a VGA cable and connect one end to the D-Sub output socket of the computer. Connect the other end of the VGA cable to the **COMPUTER PC** signal input socket on the projector.

- **With a HDMI cable:**


Your computer must be equipped with a HDMI output socket.

1. Take a HDMI cable and connect one end to the HDMI socket of the computer. Connect the other end of the cable to the **HDMI 1 or 2** signal input socket on the projector.

2. If you wish to make use of the projector (mixed mono) speaker in your presentations, take a suitable audio cable and connect one end of the cable to the audio output socket of the computer, and the other end to the **AUDIO** socket of the projector. Once connected, the audio can be controlled by the projector On-Screen Display (OSD) menus. See "Audio Settings" on page 48 for details.

The final connection path should be like that shown in the following diagram:

Notebook or desktop computer

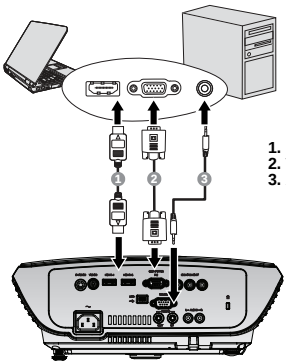

1. HDMI cabe
2. VGA cable
3. Audio cable

Many notebooks do not turn on their external video ports when connected to a projector. Usually a key combo like FN + F3 or CRT/LCD key turns the external display on/off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol on the notebook. Press FN and the labeled function key simultaneously. Refer to your notebook's documentation to find your notebook's key combination.

Connecting Video source devices

You can connect your projector to various Video source devices that provide any one of the following output sockets:

- HDMI
- Component Video
- S-Video
- Video (composite)

You need only connect the projector to a Video source device using just one of the above connecting methods, however each provides a different level of video quality. The method you choose will most likely depend upon the availability of matching terminals on both the projector and the Video source device as described below:

Best video quality

The best available video connection method is HDMI. If your source device is equipped with a HDMI socket, you can enjoy uncompressed digital video quality.

See "Connecting HDMI source devices" on page 22 for how to connect the projector to a HDMI source device and other details.

If no HDMI source is available, the next best video signal is Component Video (not to be confused with composite Video). Digital TV tuners and DVD players output Component Video natively, so if available on your devices, they should be your connection method of choice in preference to S-Video or (composite) Video.

See "Connecting Component Video source devices" on page 23 for how to connect the projector to a Component Video device.

Better video quality

The S-Video method provides a better quality analog video than standard composite Video. If you have both composite Video and S-Video output terminals on your Video source device, you should elect to use the S-Video option.

Least video quality

Composite Video is an analog video and will result in a perfectly acceptable, but less than optimal result from your projector, being the least video quality of the available methods described here.

See "Connecting S-Video source devices" on page 24 for how to connect the projector to an S-Video or Video device.

Connecting Audio

The projector has a built-in mono speaker which is designed to provide basic audio functionality accompanying data presentations for business purposes only. They are not designed for, nor intended for stereo audio reproduction use as might be expected in home theater or home cinema applications. Any stereo audio input (if provided), is mixed into a common mono audio output through the projector speakers.

Connecting HDMI source devices

The projector provides a HDMI input socket that allows you to connect it to a HDMI source device like a DVD player, a DTV tuner or a display.

HDMI (High-Definition Multimedia Interface) supports uncompressed video data transmission between compatible devices like DTV tuners, DVD players and displays over a single cable. It provides pure digital viewing and listening experience.


Examine your Video source device to determine if it has a set of unused HDMI output sockets available:

- If so, you can continue with this procedure.
- If not, you will need to reassess which method you can use to connect to the device.

To connect the projector to an HDMI source device:

1. Take a HDMI cable and connect one end to the HDMI output socket of the HDMI source device. Connect the other end of the cable to the HDMI 1 or 2 signal input socket on the projector. Once connected, the audio can be controlled by the projector On-Screen Display (OSD) menus. See "Audio Settings" on page 48 for details.

The final connection path should be like that shown in the following diagram:

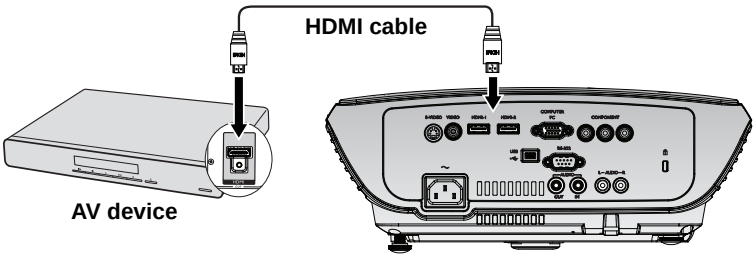

- **In the unlikely event that you connect the projector to a DVD player and the projected picture displays wrong colors, please change the color space. See "Changing Color Space" on page 31 for details.**
- **If no signal is detected after establishing the connection, turn off the Quick Auto Search function in the SOURCE menu. See "Switching input signal" on page 31 for details.**

Connecting Component Video source devices

Examine your Video source device to determine if it has a set of unused Component Video output sockets available:

- If so, you can continue with this procedure.
- If not, you will need to reassess which method you can use to connect to the device.


To connect the projector to a Component Video source device:

1. Take a Component Video cable and connect the end with 3 RCA type connectors to the Component Video output sockets of the Video source device. Match the color of the plugs to the color of the sockets; green to green, blue to blue, and red to red.
2. Connect the other end of the Component Video cable to the **COMPONENT** socket on the projector. Match the colors of the plugs to the colors of the jacks-green to green, blue to blue, and red to red.

To connect the projector to an Audio source device:

1. Take a suitable audio cable and connect one end to the AUDIO OUT jack of the AV device. Connect the other end of the cable to the AUDIO IN jack on the projector. Once connected, the audio can be controlled by the projector On-Screen Display (OSD) menus. See "Audio Settings" on page 48 for details.

The final connection path should be like that shown in the following diagram:

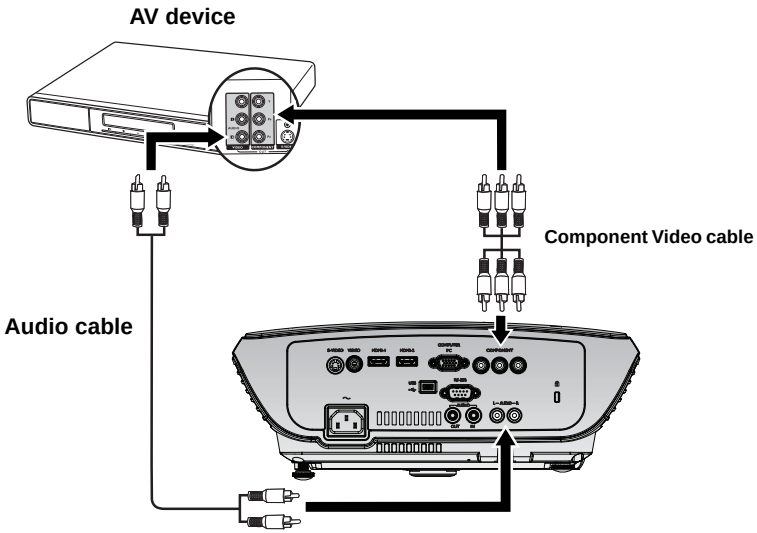

- **If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the Video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.**
- **If you have already made an HDMI Video connection between the projector and this Component Video source device using HDMI Video connections, you need not connect to this device using a Component Video connection as this makes an unnecessary second connection of poorer picture quality. See "Connecting Video source devices" on page 21 for details.**

Connecting S-Video source devices

Examine your Video source device to determine if it has an unused S-Video output socket available:

- If so, you can continue with this procedure.
- If not, you will need to reassess which method you can use to connect to the device.


To connect the projector to an S-Video source device:

1. Take an S-Video cable and connect one end to the S-Video output socket of the Video source device.
2. Connect the other end of the S-Video cable to the **S-VIDEO** socket on the projector.

To connect the projector to an Audio source device:

1. Take a suitable audio cable and connect one end to the AUDIO OUT jack of the AV device. Connect the other end of the cable to the AUDIO IN jack on the projector. Once connected, the audio can be controlled by the projector On-Screen Display (OSD) menus. See "Audio Settings" on page 48 for details.

The final connection path should be like that shown in the following diagram:

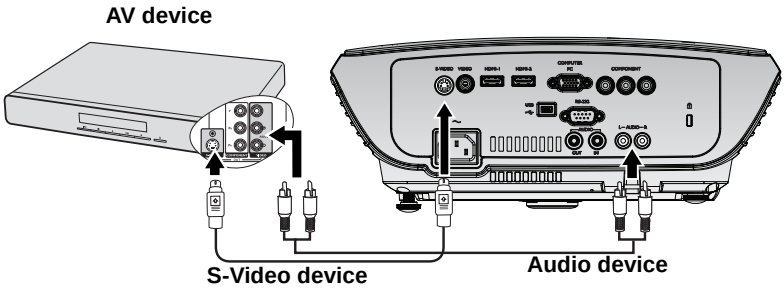

- **If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the Video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.**
- **If you have already made a Component Video connection between the projector and this S-Video source device using Component Video connections, you need not connect to this device using an S-Video connection as this makes an unnecessary second connection of poorer picture quality. See "Connecting Video source devices" on page 21 for details.**

Connecting Composite Video source devices

Examine your Video source device to determine if it has a set of unused composite Video output sockets available:

- If so, you can continue with this procedure.
- If not, you will need to reassess which method you can use to connect to the device.


To connect the projector to a composite Video source device:

1. Take a Video cable and connect one end to the composite Video output socket of the Video source device.
2. Connect the other end of the Video cable to the **VIDEO** socket on the projector.

To connect the projector to an Audio source device:

1. Take a suitable audio cable and connect one end to the AUDIO OUT jack of the AV device. Connect the other end of the cable to the AUDIO IN jack on the projector. Once connected, the audio can be controlled by the projector On-Screen Display (OSD) menus. See "Audio Settings" on page 48 for details.

The final connection path should be like that shown in the following diagram:

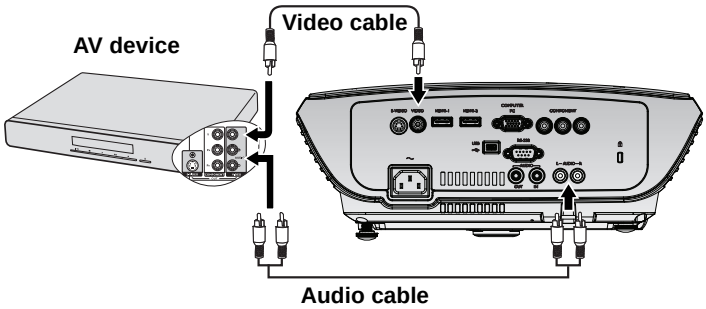


- **If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the Video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.**
- **You need only connect to this device using a composite Video connection if HDMI and Component Video and S-Video inputs are unavailable for use. See "Connecting Video source devices" on page 21 for details.**

Operation


Starting up the projector

1. Plug the power cord into the projector and into a wall socket. Turn on the wall socket switch (where fitted). Check that the **POWER indicator light** on the projector lights orange after power has been applied.

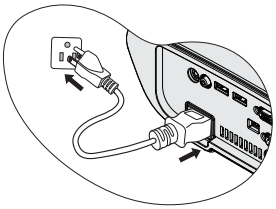

Please use the original accessories (e.g. power cable) only with the device to avoid possible dangers such as electric shock and fire.

2. Press **POWER** on the projector or remote control to start the projector and a start up tone sounds. The **POWER indicator light** flashes green and stays green when the projector is on.
   The start up procedure takes about 30 seconds. In the later stage of start up, a startup logo is projected.
   (If necessary) Rotate the focus ring to adjust the image clearness.

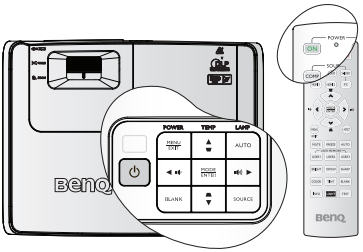

To turn off the ring tone, see "Turning off the Power on/off ring tone" on page 44 for details.

If the projector is still hot from previous activity, it will run the cooling fan for approximately 90 seconds before energizing the lamp.

3. To use the OSD menus, please set them to your familiar language first. See "Personalizing the projector menu display" on page 45 for details.
4. If you are prompted for a password, press the arrow keys to enter a five digit password. See "Utilizing the password function" on page 28 for details.
5. Switch all of the connected equipment on.
6. The projector will start to search for input signals. The current input signal being scanned displays in the upper left corner of the screen. If the projector doesn't detect a valid signal, the message '**No Signal**' will continue displaying until an input signal is found.
   You can also press **SOURCE** on the projector or remote control to select your desired input signal. See "Switching input signal" on page 31 for details.



If the frequency/resolution of the input signal exceeds the projector's operating range, you will see the message 'Out of Range' displayed on a blank screen. Please change to an input signal which is compatible with the projector's resolution or set the input signal to a lower setting. See "Timing chart" on page 65 for details.

To maintain the lamp life, once you turn the projector on, wait at least 5 minutes before turning if off.

Using the menus

The projector is equipped with On-Screen Display (OSD) menus for making various adjustments and settings.
Below is the overview of the OSD menu.



To use the OSD menus, please set them to your familiar language first.

1. Press **MODE/ENTER** on the projector or remote control to turn the OSD menu on.



2. Use ◀ / ▶ to highlight the **SYSTEM SETUP: Basic** menu.



3. Press ▼ to highlight **Language** and press ◀ / ▶ to select a preferred language**.**



4. Press **MODE/ENTER** twice* on the projector or remote control to leave and save the settings.
***The first press leads you back to the main menu and the second press closes the OSD menu.**

Securing the projector

Using a security cable lock

The projector has to be installed in a safe place to prevent theft. Otherwise, purchase a lock, such as a Kensington lock, to secure the projector. You can locate a Kensington lock slot on the left side of the projector. See "AUDIO input jack (R)" on page 9 for details.

A Kensington security cable lock is usually a combination of key(s) and a lock. Refer to the lock's documentation for finding out how to use it.

Utilizing the password function


For security purposes and to help prevent unauthorized use, the projector includes an option for setting up password security. The password can be set through the On-Screen Display (OSD) menu. For details of the OSD menu operation, please refer to "Using the menus" on page 27.

You will be inconvenienced if you activate the power-on lock functionality and subsequently forget the password. Print out this manual (if necessary) and write the password you used in this manual, and keep the manual in a safe place for later recall.

Setting a password

Once a password has been set, the projector cannot be used unless the correct password is entered every time the projector is started.
Once a password has been set and the splash screen lock is activated, you cannot change the splash screen that displays at projector startup unless the correct password is entered.

1. Open the OSD menu and go to the **SYSTEM SETUP: Advanced** > **Security Settings** menu. Press **MODE/ENTER**. The **Security Settings** page displays.
2. Highlight **Power on Lock** and select **On** by pressing ◀/▶ .
3. As pictured to the right, the four arrow keys (▲ , ▼ , ◀, ▶) respectively represent 4 digits (1, 2, 3, 4). According to the password you desire to set, press the arrow keys to enter five digits for the password.

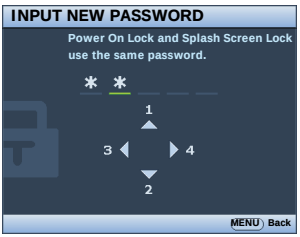

4. Confirm the new password by re-entering the new password.
   Once the password is set, the OSD menu returns to the **Security Settings** page.
5. To activate the **Power on Lock** function, press ▲/▼ to highlight **Power on Lock** and press ◀/▶ to select **On**.
6. To activate the **Splash Screen Lock** function, press ▲/▼ to highlight **Splash Screen Lock** and press ◀/▶ to select **On**.
   When the **Splash Screen Lock** is activated, the **My Screen** function in the **SYSTEM SETUP: Basic** menu will be password-protected.


The digits being input will display as asterisks on-screen. Write your selected password down here in this manual in advance or right after the password is entered so that it is available to you should you ever forget it.

Password: __ __ __ __ __

Keep this manual in a safe place.

7. To leave the OSD menu, press **MENU/EXIT.**


If you forget the password

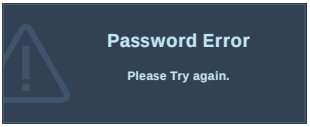

If the password function is activated, you will be asked to enter the five-digit password every time you turn on the projector. If you enter the wrong password, the password error message as pictured to the right displays lasting for three seconds, and the message **'INPUT PASSWORD'** follows. You can retry by entering another five-digit password, or if you did not record the password in this manual, and you absolutely do not remember it, you can use the password recall procedure. See "Entering the password recall procedure" on page 29 for details.

If you enter an incorrect password 5 times in succession, the projector will automatically shut down in a short time.

Entering the password recall procedure

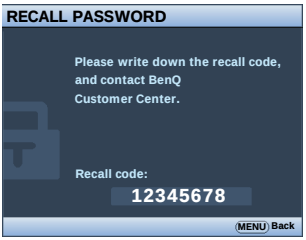

1. Press and hold **AUTO** on the projector or remote control for 3 seconds. The projector will display a coded number on the screen.
2. Write down the number and turn off your projector.
3. Seek help from the local BenQ service center to decode the number. You may be required to provide proof of purchase documentation to verify that you are an authorized user of the projector.

Changing the password


1. Open the OSD menu and go to the **SYSTEM SETUP: Advanced** > **Security Settings** > **Change password** menu.
2. Press **MODE/ENTER**. The message **'INPUT CURRENT PASSWORD'** displays.
3. Enter the old password.
   - If the password is correct, another message **'INPUT NEW PASSWORD'** displays.
   - If the password is incorrect, the password error message displays lasting for three seconds, and the message **'INPUT CURRENT PASSWORD'** displays for your retry. You can press **MENU/EXIT** to cancel the change or try another password.
4. Enter a new password.

The digits being input will display as asterisks on-screen. Write your selected password down here in this manual in advance or right after the password is entered so that it is available to you should you ever forget it.

Password: __ __ __ __ __

Keep this manual in a safe place.

5. Confirm the new password by re-entering the new password.
6. You have successfully assigned a new password to the projector. Remember to enter the new password next time the projector is started.
7. To leave the OSD menu, press **MENU/EXIT.**

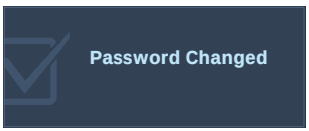

Disabling the password function

To disable password protection, go back to the **SYSTEM SETUP: Advanced** > **Security Settings** > **Power on Lock** menu after opening the OSD menu system. Select **Off** by pressing ◀/▶ . The message **'INPUT PASSWORD'** displays. Enter the current password.

i. If the password is correct, the OSD menu returns to the **Security Settings** page with **Off** show in the row of **Power on Lock**. You will not have to enter the password next time you turn on the projector.
   Press ▼ to highlight **Splash Screen Lock** and press ◀/▶ to select **Off**. The **Splash Screen** function in the **SYSTEM SETUP: Advanced** will be available for your change.

ii. If the password is incorrect, the password error message displays lasting for three seconds, and the message **'INPUT PASSWORD'** displays for your retry. You can press **MENU/EXIT** to cancel the change or try another password.


☞ **Though the password function is disabled, you need to keep the old password in hand should you ever need to re-activate the password function by entering the old password.**

Switching input signal

The projector can be connected to multiple devices at the same time. However, it can only display one full screen at a time.

Be sure the **Quick Auto Search** function in the **SOURCE** menu is **On** (which is the default of this projector) if you want the projector to automatically search for the signals.

You can also manually cycle through the available input signals.

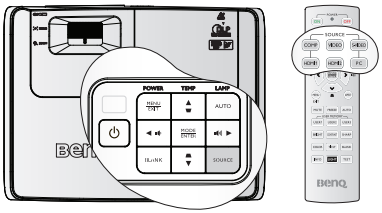

1. Press **SOURCE** on the projector or press input source directly from the remote control. A source selection bar displays.
2. Press ▲ /▼ until your desired signal is selected and press **MODE/ENTER**.

   Once detected, the selected source information will display on the screen for seconds. If there is multiple equipment connected to the projector, repeat steps 1-2 to search for another signal.



- **When SOURCE is activated, the Quick Auto Search function will be turned off automatically until restarting the projector.**
- **The brightness level of the projected image will change accordingly when you switch between different input signals. Data (graphic) "PC" presentations using mostly static images are generally brighter than "Video" using mostly moving images (movies).**
- **The native display resolution of this projector is in a 16:9 aspect ratio. For best display picture results, you should select and use an input signal which outputs at this resolution. Any other resolutions will be scaled by the projector depending upon the 'aspect ratio' setting, which may cause some image distortion or loss of picture clarity. See "Selecting the aspect ratio" on page 35 for details.**

Changing Color Space

In the unlikely event that you connect the projector to a DVD player via the projector's **HDMI** input and the projected picture displays wrong colors, please change the color space.

To do this:

1. Press **MENU/EXIT** and then press ◀ /▶ until the **SOURCE** menu is highlighted.
2. Press ▼ to highlight **Color Space Conversion** and press ◀ /▶ to select the setting.


This function is only available when the HDMI input socket is in use.

Adjusting the projected image

Adjusting the projection angle

The projector is equipped with 1 quick-release adjuster foot and 1 rear adjuster foot. These adjusters change the image height and projection angle. To adjust the projector:

1. Press the quick-release button and lift the front of the projector. Once the image is positioned where you want it, release the quick-release button to lock the foot in position.
2. Screw the rear adjuster foot to fine tune the horizontal angle.

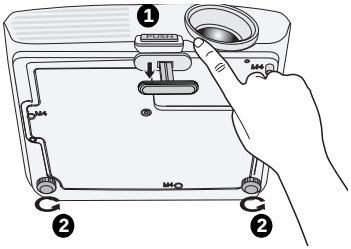


To retract the foot, hold up the projector while pressing the quick-release button, then slowly lower the projector. Screw the rear adjuster foot in a reverse direction.

If the projector is not placed on a flat surface or the screen and the projector are not perpendicular to each other, the projected image becomes trapezoidal. To correct this situation, see "Correcting keystone" on page 33 for details.

- **Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyes.**
- **Be careful when you press the adjuster button as it is close to the exhaust vent where hot air comes from.**

Auto-adjusting the image

In some cases, you may need to optimize the picture quality. To do this, press **AUTO** on the projector or remote control. Within 3 seconds, the built-in Intelligent Auto Adjustment function will re-adjust the values of Frequency and Clock to provide the best picture quality.

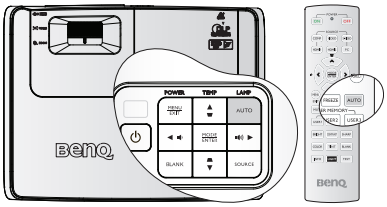


The current source information will be displayed in the upper left corner of the screen for 3 seconds.

- **The screen will be blank while AUTO is functioning.**
- **This function is only available when PC signal (analog RGB) is selected.**

Fine-tuning the image size and clarity


1. Adjust the projected image to the size that you need using the ZOOM ring.





2. Then sharpen the image by rotating the FOCUS ring.





Correcting keystone

Keystoning refers to the situation where the projected image is noticeably wider at either the top or bottom. It occurs when the projector is not perpendicular to the screen.


To correct this, besides adjusting the height of the projector, you can use **Auto Keystone** or **Keystone** manually correct it following one of these steps.

- Using **Auto Keystone**

It can correct **Keystone** to optimal status by automatically.

- Using the remote control


1. Press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted.
2. Press ▼ to highlight **Auto Keystone** and press ◀ /▶ to select **Off** to disable **Auto Keystone** function.
3. Press ▼ / ▲ on the projector or remote control to display the Keystone correction page. Press ▲ to correct keystoning at the top of the image. Press ▼ to correct keystoning at the bottom of the image.

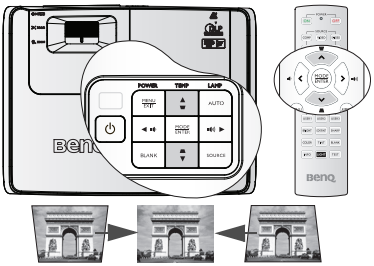

- Using the OSD menu

1. Press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted.
2. Press ▼ to highlight **Auto Keystone** and press ◀ /▶ to select **Off** to disable **Auto Keystone** function.
3. Press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted.
4. Press ▼ to highlight **Keystone** and press **MODE/ENTER**. The **Keystone** correction page displays.

5. Press ▲ to correct keystoning at the top of the image or press ▼ to correct keystoning at the bottom of the image.

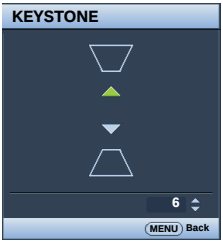

Magnifying and searching for details

If you need to find the details on the projected picture, magnify the picture. Use the direction arrow keys for navigating the picture.

1. Press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted.
2. Press ▼ to highlight **Digital Zoom** and press **MODE/ENTER**. The Zoom bar displays.
3. Press ▲ on the projector repeatedly to magnify the picture to a desired size.
4. To navigate the picture, press **MODE/ENTER** to switch to the paning mode and press the directional arrows (▲, ▼, ◀, ▶) to navigate the picture.
5. To reduce size of the picture, press **MODE/ENTER** to switch back to the zoom in/out functionality, and press **AUTO** to restore the picture to its original size. You can also press ▼ repeatedly until it is restored to the original size.

☞ **The picture can only be navigated after the picture is magnified. You can further magnify the picture while searching for details.**

Playing 3D function

1. To enter the special preset mode, press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted, and press ◀ /▶ to enable or disable **3D Sync**. When the **3D Sync** is enabled, the current picture mode adjustment will be disabled.
2. To invert the image, press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted, and press ◀ /▶ to enable or disable **3D Sync Invert**.
3. 3D Requirement:
   - PC: PC with graphic card with stereo capability (Quad buffer feature) and can run at 120Hz/60Hz refresh rate.
   - Video: standard NTSC/PAL DVD player to output 60Hz/50Hz movie.
   - 55% of the brightness will loss.

☞ **To enjoy the 3D function, first enable the Play Movie in 3D setting found in your DVD devices under the 3D Disc Menu.**

Selecting the aspect ratio

The 'aspect ratio' is the ratio of the image width to the image height. For W700/W710ST, the default aspect ratio is 16:9. Most analog TV and computers are in 4:3 ratio, and digital TV and DVDs are usually in 16:9 ratio.

With the advent of digital signal processing, digital display devices like this projector can dynamically stretch and scale the image output to a different aspect than that of the image input signal.


To change the projected image ratio (no matter what aspect the source is):

1. Press **MENU/EXIT** and then press ◀ /▶ until the **DISPLAY** menu is highlighted.
2. Press ▼ to highlight **Aspect Ratio**.
3. Press ◀/▶ to select an aspect ratio to suit the format of the video signal and your display requirements.


About the aspect ratio

In the pictures below, the black portions are inactive areas and the white portions are active areas. OSD menus can be displayed on those unused black areas.


1. **Auto**:
   Scales an image proportionally to fit the projector's native resolution in its horizontal width. This is suitable for the incoming image which is neither in 4:3 nor 16:9 and you want to make most use of the screen without altering the image's aspect ratio.

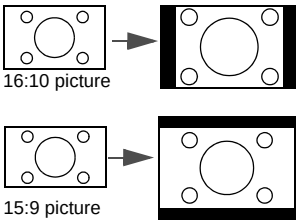


2. **Real**:
   The image is projected as its original resolution, and resized to fit within the display area. For input signals with lower resolutions, the projected image will display smaller than if resized to full screen. You could adjust the zoom setting or move the projector away from the screen to increase the image size if necessary. You may also need to refocus the projector after making these adjustments.

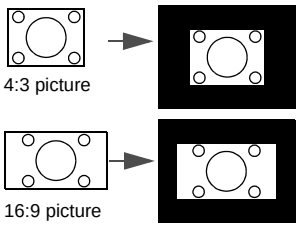

3. **4:3**:
   Scales an image so that it is displayed in the center of the screen with a 4:3 aspect ratio. This is most suitable for 4:3 images like computer monitors, standard definition TV and 4:3 images aspect DVD movies, as it displays them without aspect alteration.



4. **16:9**:
   Scales an image so that it is displayed in the center of the screen with a 16:9 aspect ratio. This is most suitable for images which are already in a 16:9 aspect, like high definition TV, as it displays them without aspect alteration.



5. **16:10**:
   Scales an image so that it is displayed in the center of the screen with a 16:10 aspect ratio. This setting stretches and resizes linearly.

Optimizing the image


Using Wall Color

In the situation where you are projecting onto a colored surface such as a painted wall which may not be white, the **Wall Color** feature can help correct the projected picture's color to prevent possible color difference between the source and projected pictures.

To use this function, go to the **DISPLAY** > **Wall Color** menu and press ◀ / ▶ to select a color which is the closest to the color of the projection surface. There are several precalibrated colors to choose from: **Light Yellow**, **Pink**, **Light Green**, **Blue**, and **Blackboard**.

Selecting a picture mode

The projector is preset with several predefined picture modes so that you can choose one to suit your operating environment and input signal picture type.

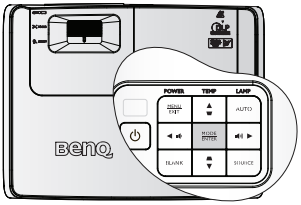

To select an operation mode that suits your need, you can follow one of the following steps.

- Press **MODE/ENTER** on the projector repeatedly until your desired mode is selected.
- Go to the **PICTURE** > **Picture Mode** menu and press ◀ / ▶ to select a desired mode.

Picture modes for different types of signals

The picture modes available for different types of signals are listed below.

1. **Bright mode**: Maximizes the brightness of the projected image. This mode is suitable for environments where extra-high brightness is required, such as using the projector in well lit rooms.
2. **Living Room mode**: Is designed for using the projector in a living room. The brightness is emphasized in this model.
3. **Gaming mode**: Is designed for playing video games in a bright room.
4. **Cinema mode**: Is appropriate for playing colorful movies, video clips from digital cameras or DVs through the PC input for best viewing in a blackened (little light) environment.
5. **User 1/User 2 mode**: Recalls the settings customized based on the current available picture modes. See "Setting the User 1/User 2 mode" on page 38 for details.

Setting the User 1/User 2 mode

There are two user-definable modes if the current available picture modes are not suitable for your need. You can use one of the picture modes (except the **User 1**/**User 2**) as a starting point and customize the settings.

1. Press **MENU/EXIT** to open the On-Screen Display (OSD) menu.
2. Go to the **PICTURE** > **Picture Mode** menu.
3. Press ◀ / ▶ to select **User 1** to **User 2**.
4. Press ▼ to highlight **Reference Mode**.

This function is only available when User 1 or User 2 mode is selected up in the Picture Mode sub-menu item.

5. Press ◀ / ▶ to select a picture mode that is closest to your need.
6. Press ▼ to select a sub-menu item to be changed and adjust the value with ◀ / ▶ . See "Fine-tuning the image quality in user modes" below for details.
7. When all settings have been done, highlight **Save Settings** and press **MODE/ENTER** to store the settings.
8. The confirmation message '**Setting Saved**' displays.

Fine-tuning the image quality in user modes

According to the detected signal type, there are some user-definable functions available when **User 1** or **User 2** mode is selected. You can make adjustments to these functions based on your needs.

Adjusting Brightness

Highlight **Brightness** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

The higher the value, the brighter the image. And lower the setting, darker the image. Adjust this control so the black areas of the image appear just as black and that detail in the dark areas is visible.



Adjusting Contrast

Highlight **Contrast** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

The higher the value, the greater the contrast. Use this to set the peak white level after you have previously adjusted the **Brightness** setting to suit your selected input and viewing environment.



Adjusting Color

Highlight **Color** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

Lower setting produces less saturated colors. If the setting is too high, colors on the image will be overpowering, which makes the image unrealistic.

Adjusting Tint

Highlight **Tint** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

The higher the value, the more reddish the picture becomes. The lower the value, the more greenish the picture becomes.

Adjusting Sharpness

Highlight **Sharpness** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

The higher the value, the sharper the picture becomes. The lower the value, the softer the picture becomes.

Adjusting Brilliant Color

Highlight **Brilliant Color** in the **PICTURE** menu and select by pressing ◀ / ▶ on the projector or remote control.

This feature utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing truer, more vibrant colors in picture. It enables a greater than 50% brightness increase in mid-tone images, which are common in video and natural scenes, so the projector reproduces images in realistic and true colors. If you prefer images with that quality, select **On**. If you don't need it, select **Off**.

On is the default and recommended selection for this projector. When **Off** is selected, the **Color Temperature** function is not available.

Selecting a Color Temperature

Highlight **Color Temperature** in the **PICTURE** menu and adjust the values by pressing ◀ / ▶ on the projector or remote control.

The options available for color temperature* settings vary according to the signal type selected.

1. **Cooler:** With the highest color temperature, Cooler makes the image appear the most bluish white than other settings.
2. **Cool:** Makes images appear bluish white.
3. **Normal:** Maintains normal colorings for white.
4. **Warm:** Makes images appear reddish white.
5. **Warmer:** With the lowest color temperature, **Warmer** makes the image appear the most reddish white than other settings.

***About color temperatures:**

There are many different shades that are considered to be "white" for various purposes. One of the common methods of representing white color is known as the "color temperature". A white color with a low color temperature appears to be reddish white. A white color with a high color temperature appears to have more blue in it.

3D Color Management

In most installation situations, color management will not be necessary, such as in classroom, meeting room, or lounge room situations where lights remain on, or where building external windows allow daylight into the room.

Only in permanent installations with controlled lighting levels such as boardrooms, lecture theaters, or home theaters, should color management be considered. Color management provides fine color control adjustment to allow for more accurate color reproduction, should you require it.

Proper color management can only be achieved under controlled and reproducible viewing conditions. You will need to use a colorimeter (color light meter), and provide a set of suitable source images to measure color reproduction. These tools are not provided with the projector, however, your projector supplier should be able to provide you with suitable guidance, or even an experienced professional installer.

The Color Management provides six sets (RGBCMY) of colors to be adjusted. When you select each color, you can independently adjust its range and saturation according to your preference.


If you have purchased a test disc which contains various color test patterns and can be used to test the color presentation on monitors, TVs, projectors, etc. You can project any image from the disc on the screen and enter the **3D Color Management** menu to make adjustments.

To adjust the settings:

1. Go to the **PICTURE** menu and highlight **3D Color Management**.
2. Press **MODE/ENTER** and the **3D Color Management** page displays.
3. Highlight **Primary color** and press ◀ / ▶ to select a color from among Red, Green, Blue, Cyan, Magenta and Yellow.
4. Press ▼ to highlight **Hue** and press ◀ / ▶ to select its range. Increase in the range will include colors consisted of more proportions of its two adjacent colors.

   Please refer to the illustration to the right for how the colors relate to each other.

   For example, if you select Red and set its range at 0, only pure red in the projected picture will be selected. Increasing its range will include red close to yellow and red close to magenta.

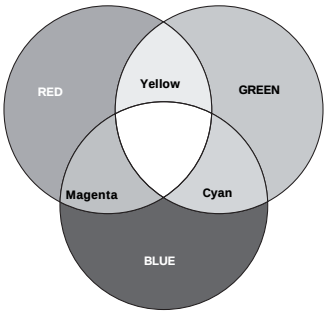


5. Press ▼ to highlight **Saturation** and adjust its values to your preference by pressing ◀ / ▶ . Every adjustment made will reflect to the image immediately.

   For example, if you select Red and set its value at 0, only the saturation of pure red will be affected.
6. Press ▼ to highlight **Gain** and adjust its values to your preference by pressing ◀ / ▶ . The contrast level of the primary color you select will be affected. Every adjustment made will reflect to the image immediately.
7. Repeat steps 3 to 6 for other color adjustments.
8. Make sure you have made all of the desired adjustments.
9. Press **MENU/EXIT** to exit and save the settings.

Saturation is the amount of that color in a video picture. Lower settings produce less saturated colors; a setting of "0" removes that color from the image entirely. If the saturation is too high, that color will be overpowering and unrealistic.

Hiding the image

In order to draw the audience's full attention to the presenter, you can use **BLANK** on the projector or remote control to hide the screen image. Press any key on the projector or remote control to restore the image. The word '**BLANK**' appears at the lower right corner of the screen while the image is hidden.

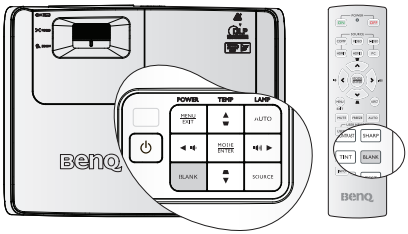


You can set the blank time in the **SYSTEM SETUP: Basic > Operating Settings > Blank Timer** menu to let the projector return the image automatically after a period of time when there is no action taken on the blank screen.

No matter **Blank Timer** is activated or disabled, you can press any key except **PAGE ▲/▼** , **ENTER** on the remote control, or **ENTER** on the projector to restore the picture.

- **Do not block the projection lens from projecting as this could cause the blocking object to become heated and deformed or even cause a fire.**

Remote Receiver

The Infrared Remote Receiver (Front and Top) allows the projector to accept signals from the remote control. For best results, be sure to aim the control toward the sensor without any obstructions between the two, and at a distance no greater than 7 meters.

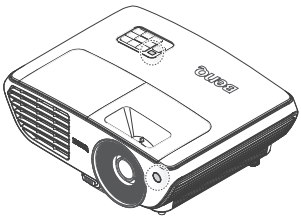


You can set the remote receiver in the **SYSTEM SETUP: Basic > Remote Receiver** menu.

My Screen


In addition to selecting the projector preset startup screen from among Black, Blue or BenQ screen, you can make your own startup screen that is an image projected from your computer or video source.

1. Project the image you want to use as your startup screen from either a computer or video source.
2. Select **MyScreen** in the **SYSTEM SETUP: Basic > Splash Screen** menu.
3. Go to the **SYSTEM SETUP: Basic > My Screen** menu, press **ENTER**.
4. A confirmation message displays. Press **ENTER** again.

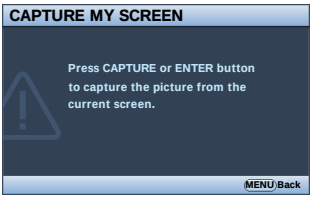

5. The message "**Screen Capturing...**" displays while the projector is processing the image. Please wait.

6. If the action is successful, you see the message "**Captured Succeeded**" on the screen. The captured image is saved as My Screen.
7. Restart the projector to view the captured image displayed as the startup screen.

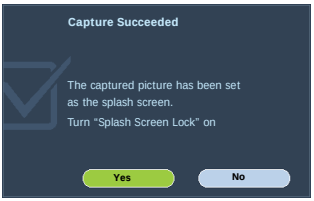


In the unlikely event that the capturing action fails, change your target image.

When Splash Screen Lock is activated, MyScreen cannot be enabled unless the correct password is entered every time when you attempt to capture a screen.

Freezing the image

Press **FREEZE** on the remote control to freeze the image. The word '**FREEZE**' will display in the upper left corner of the screen. To release the function, press any key on the projector or remote control.



Even if an image is frozen on the screen, the pictures are running on the video or other device. If the connected devices have active audio output, you will still hear the audio even though the image is frozen on screen.


Operating in a high altitude environment

We recommend you use the **High Altitude Mode** when your environment is between 1500 m –3000 m above sea level, and temperature is between 5°C–23°C.

⚠ **Do not use the High Altitude Mode if your altitude is between 0 m and 1500 m and temperature is between 5°C and 28°C. The projector will be over cooled, if you turn the mode on under such a condition.**

To activate the **High Altitude Mode**:

1. Press **MENU/EXIT** and then press ◀ / ▶ until the **SYSTEM SETUP: Advanced** menu is highlighted.
2. Press ▼ to highlight **High Altitude Mode** and press ◀ / ▶ to select **On**. A confirmation message displays.
3. Highlight **Yes** and press **MODE/ENTER**.

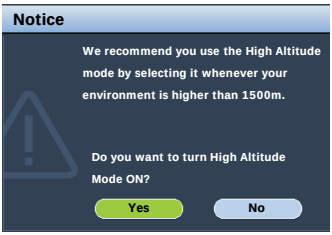

Operation under "**High Altitude Mode**" may cause a higher decibel operating noise level because of increased fan speed necessary to improve overall system cooling and performance.

If you use this projector under other extreme conditions excluding the above, it may display auto shut-down symptoms, which is designed to protect your projector from over-heating. In cases like this, you should switch to High Altitude mode to solve these symptoms. However, this is not to state that this projector can operate under any and all harsh or extreme conditions.

Adjusting the sound

The sound adjustments made as below will have an effect on the projector speakers. Be sure you have made a correct connection to the projector audio input. See "Connection" on page 20 for how the audio input is connected.

INPUT SOURCE	AUDIO IN	AUDIO OUT
Computer PC	mini jack	mini jack
HDMI 1/2	HDMI	mini jack
Component	RCA	mini jack
VIDEO	RCA	mini jack
S-VIDEO	RCA	mini jack

Muting the sound

To temporarily turn off the sound,



- Using the remote control

Press **MUTE** to temporarily turn off the sound. While the sound is off, the screen will display in the upper right corner of the screen.


To restore the sound, press **MUTE** again.

- Using the OSD menu

1. Press **MENU/EXIT** and then press ◀ / ▶ until the **SYSTEM SETUP: Advanced** menu is highlighted.
2. Press ▼ to highlight **Audio Settings** and press **ENTER**. The **Audio Settings** page displays.
3. Highlight **Mute** and press ◀ / ▶ to select **On**.
4. To restore the sound, repeat steps 1-3 and press ◀ / ▶ to select **Off**.

Adjusting the sound level

To adjust the sound level,

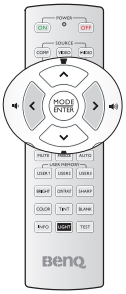

- Using the remote control

Press or to select a desired sound level.

- Using the OSD menu

1. Repeat steps 1-2 above.
2. Press ▼ to highlight **Volume** and press ◀ / ▶ to select a desired sound level.

Turning off the Power on/off ring tone

1. Repeat steps 1-2 above.
2. Press ▼ to highlight **Power on/off ring tone** and press ◀ / ▶ to select **Off**.

The only way to change Power on/off ring tone is setting On or Off here. Setting the sound mute or changing the sound level will not affect the Power on/off ring tone.

Personalizing the projector menu display


The On-Screen Display (OSD) menus can be set according to your preferences. The following settings do not affect the projection settings, operation, or performance.

- **Menu display time** in the **SYSTEM SETUP: Basic** > **Menu Settings** menu sets the length of time the OSD will remain active after your last key press. The time length ranges from 5 to 30 seconds in 5-second increments. Use ◀ / ▶ to select a suitable time frame.
- **Menu position** in the **SYSTEM SETUP: Basic** > **Menu Settings** menu sets the OSD position in five locations. Use ◀ / ▶ to select a preferred position.
- **Language** in the **SYSTEM SETUP: Basic** menu sets your familiar language for the OSD menus. Use ◀ / ▶ to select your language.
- **Splash Screen** in the **SYSTEM SETUP: Basic** menu sets a preferred logo screen to be displayed during projector start-up. Use ◀ / ▶ to select a screen.

Shutting down the projector

1. To turn the projector off, press POWER OFF on the remote control to turn projector off directly. Or you can press ⏻ **POWER** on the projector and a warning message appears.

   Press ⏻ **POWER** again.
2. Once the cooling process finishes, the **POWER indicator light** is a steady orange and fans stop.
3. Disconnect the power cord from the wall socket if the projector will not be used in an extended period of time.

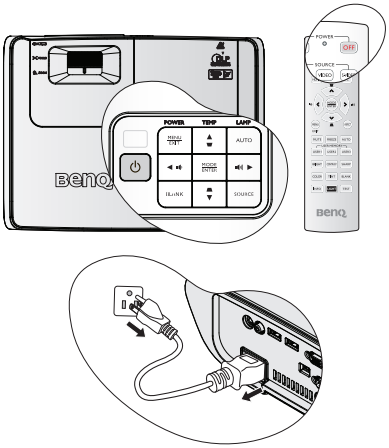

- **To protect the lamp, the projector will not respond to any commands during the cooling process.**
- **To shorten the cooling time, you can also activate the Quick Cooling function. See "Quick Cooling" on page 51 for details.**
- **If the projector is not properly shut down, to protect the lamp, when you attempt to re-start the projector, the fans will run for a few minutes to cool down. Press POWER again to start the projector after the fans stop and the POWER indicator light turns orange.**
- **Lamp life results will vary depending on environmental conditions, and usage.**

Menu operation

Menu system

Please note that the on-screen display (OSD) menus vary according to the signal type selected.

Main menu	Sub-menu		Options
1. DISPLAY	**Wall Color**		**Off**/Light Yellow/Pink/Light Green/Blue/Blackboard
	Aspect Ratio		**Auto**/Real/4:3/16:9/16:10
	Auto Keystone		**On**/Off
	Keystone		
	Position		
	Phase		
	H. Size		
	Digital Zoom		
	3D Sync		**Off**/DLP LINK/NVIDIA 3D Vision
	3D Format		**Frame Sequential**/Top-Bottom
	3D Sync Invert		**Disable**/Invert
2. PICTURE	**Picture Mode**		Bright/**Living Room**/Gaming/Cinema/User 1/User 2
	Reference Mode		Bright/**Living Room**/Gaming/Cinema
	Brightness		
	Contrast		
	Color		
	Tint		
	Sharpness		
	Brilliant Color		**On**/Off
	Color Temperature		Warmer/Warm/Normal/Cool/ Cooler
	3D Color Management	**Primary color**	R/G/B/C/M/Y
		Hue	
		Saturation	
		Gain	
	Save Settings		
3. SOURCE	**Quick Auto Search**		**On**/Off
	Color Space Conversion		**Auto**/RGB/YUV

4. SYSTEM SETUP: Basic	**Language**		**ENGLISH**/ FRANÇAIS/ DEUTSCH/ ITALIANO/ ESPAÑOL/ РУССКИЙ/ 繁體中文/ 简体中文/ 日本語/ 한국어/ Svenska/ Nederlands/ Türkçe/ Čeština/ Português/ ไปรตุเกส/ Polski/ Magyar/ Hrvatski/ Română/ Norsk/ Dansk/ български/ Suomi/ Ελληνικά/ Bahasa Indonesia
	Projector Position		**Front Table**/Rear Table/ Rear Ceiling/Front Ceiling
	Menu Settings	**Menu display time**	5 sec/10 sec/**15 sec**/20 sec/ 25 sec/30 sec
		Menu position	**Center**/Top-left/Top-right/Bottom-right/Bottom-left
		Reminder Message	**On**/Off
	Operation Setting	**Direct Power On**	On/**Off**
		Auto Power Off	**Disable**/5 min/10 min/15 min/20 min/25 min/30 min
		Quick Cooling	**On**/Off
		Blank Timer	**Disable**/5 min/10 min/15 min/20 min/25 min/30 min
		Sleep Timer	**Disable**/30 min/1 hr/2 hr/3 hr/4 hr/8 hr/12 hr
	Remote Receiver		**Front+Top**/Top/Front
	Background Color		Black/**Blue**/Purple
	Splash Screen		**BenQ**/Black/Blue/MyScreen
	MyScreen		

5. SYSTEM SETUP: Advanced	**Audio Settings**	**Mute**	**Off**/On
		Volume	Range : 0 ~ 10
		Power on / off ring tone	Off/**On**
	Lamp Settings	**Lamp Mode**	**Normal**/Economic
		Reset lamp timer	
		Equivalent Lamp Hour	
	High Altitude Mode		**Off**/**On**
	Security Settings	**Change password**	
		Change Security Settings	Power on Lock Splash Screen Lock
	Baud Rate		2400/4800/9600/14400/19200/ 38400/57600/**115200**
	Test Pattern		**Off**/On
	Closed Caption	Closed Caption Enable	**Off**/On
		Caption Version	**CC1**/CC2/CC3/CC4
	Reset All Settings		
6. INFORMATION	**Current System Status**		• **Source** • **Picture Mode** • **Resolution** • **Color System** • **Equivalent Lamp Hour** • **Firmware Version**

Note that the menu items are available when the projector detects at least one valid signal. If there is no equipment connected to the projector or no signal detected, limited menu items are accessible.

Description of each menu

	FUNCTION	DESCRIPTION
1. DISPLAY menu	**Wall Color**	Corrects the projected picture's color when the projection surface is not white. See "Using Wall Color" on page 37 for details.
	Aspect Ratio	There are four options to set the image's aspect ratio depending on your input signal source. See "Selecting the aspect ratio" on page 35 for details.
	Auto Keystone	Corrects any keystoning of the image automatically. See "Correcting keystone" on page 33 for details.
	Keystone	Corrects any keystoning of the image manually. See "Correcting keystone" on page 33 for details.
	Position	Displays the position adjustment page. To move the projected image, use the directional arrow keys. The values shown on the lower position of the page change with every key press you made until they reach their maximum or minimum. This function is only available when a PC signal (analog RGB) is selected.
	Phase	Adjusts the clock phase to reduce image distortion. This function is only available when a PC signal (analog RGB) is selected. 
	H. Size	Adjusts the horizontal width of the image. This function is only available when a PC signal (analog RGB) is selected.
	Digital Zoom	Magnifies or reduces the projected image. See "Magnifying and searching for details" on page 34 for details.
	3D Sync	Enable 3D function.
	3D Format	If input timings Vsync is higher than 95Hz, 3D Format grays out. If input timings Vsync is lower than 95Hz, 3D Format supports **Frame Sequential** / **Top-Bottom**.
	3D Sync Invert	Invert 3D sync.

2. PICTURE menu	**Picture Mode**	Pre-defined picture modes are provided so you can optimize your projector image set-up to suit your program type. See "Selecting a picture mode" on page 37 for details.
	Reference Mode	Selects a picture mode that most suits your need for the image quality and further fine-tune the image based on the selections listed on the same page below. See "Setting the User 1/User 2 mode" on page 38 for details.
	Brightness	Adjusts the brightness of the image. See "Adjusting Brightness" on page 38 for details.
	Contrast	Adjusts the degree of difference between dark and light in the image. See "Adjusting Contrast" on page 38 for details.
	Color	Adjusts the color saturation level -- the amount of each color in a video image. See "Adjusting Color" on page 39 for details. ☞ **The function is only available when Video or S-Video with NTSC system is selected.**
	Tint	Adjusts the red and green color tones of the image. See "Adjusting Tint" on page 39 for details. ☞ **The function is only available when Video or S-Video with NTSC system is selected.**
	Sharpness	Adjusts the image to make it look sharper or softer. See "Adjusting Sharpness" on page 39 for details. ☞ **The function is only available when Video or S-Video with NTSC system is selected.**
	Brilliant Color	Adjusts white peaking while maintaining correct color presentation. See "Adjusting Brilliant Color" on page 39 for details.
	Color Temperature	See "Selecting a Color Temperature" on page 39 for details.
	3D Color Management	See "3D Color Management" on page 40 for details.
	Save Settings	Saves the settings made for **User 1** or **User 2** mode.
3. SOURCE menu	**Quick Auto Search**	See "Switching input signal" on page 31 for details.
	Color Space Conversion	See "Changing Color Space" on page 31 for details.

	FUNCTION	DESCRIPTION
4. SYSTEM SETUP: Basic menu	**Language**	Sets the language for the On-Screen Display (OSD) menus. See "Using the menus" on page 27 for details.
	Projector Position	The projector can be installed on a ceiling or behind a screen, or with one or more mirrors. See "Choosing a location" on page 15 for details.
	Menu Settings	**Menu display time** Sets the length of time the OSD will remain active after your last key press. The range is from 5 to 30 seconds in 5-second increments. **Menu position** Sets the On-Screen Display (OSD) menu position. **Reminder Message** Selecting **On** allows the projector to remind you to clean the filter.
	Operation Settings	**Direct Power On** Powers projector on automatically when the power cable is connected. **Auto Power Off** Allows the projector to turn off automatically if no input signal is detected after a set period of time. See "Setting Auto Power Off" on page 55 for details. **Quick Cooling** Enables or disables the **Quick Cooling** function. Selecting **On** enables the function and the projector cooling time will be shortened from a normal 90 second duration to approximately 2 seconds. **If you attempt to restart the projector right after the quick cooling process, it may not be turned on successfully and will rerun its cooling fans.** **Blank Timer** Sets the image blank time when the Blank feature is activated, once elapsed the image will return to the screen. See "Hiding the image" on page 41 for details. **Sleep Timer** Sets the auto-shutdown timer. The timer can be set to a value between 30 minutes and 12 hours.
	Remote Receiver	Sets the preferred remote receiver (Front and Top) allowing the projector to accept signals from the remote control.
	Background Color	Selects background appearance when there is no signal.
	Splash Screen	Allows you to select which logo screen will display during projector start-up. Four options are available: BenQ logo, Black screen, Blue screen, or MyScreen.
	MyScreen	Captures and stores the projected picture as MyScreen. See "My Screen" on page 41 for details.

5. SYSTEM SETUP: Advanced menu

Audio Setting	**Mute** **Volume** **Power On/Off ring tone** See "Adjusting the sound" on page 44 for details.
Lamp Settings	**Lamp Mode** See "Setting Lamp mode as Economic" on page 55 for details. **Reset lamp timer** See "Resetting the lamp timer" on page 60 for details. **Equivalent Lamp Hour** See "Getting to know the lamp hour" on page 55 for details on how the total lamp hour is calculated.
High Altitude Mode	A mode for operation in high altitude areas. See "Operating in a high altitude environment" on page 43 for details.
Security Settings	**Change password** You will be asked to enter the current password before changing to a new one. See "Utilizing the password function" on page 28 for details. **Change Security Settings** **Power On Lock** When **Power On Lock** is activated, you will be asked to enter the current password before powering on the projector. If you enter incorrect password 5 times in succession, the projector will automatically shut down in a short time. **Splash Screen Lock** When **Splash Screen Lock** is activated, you will be asked to enter the current password when attempting to capture a screen.
Baud Rate	Selects a baud rate that is identical with your computer's so that you can connect the projector using a suitable RS-232 cable and update or download the projector's firmware. This function is intended for qualified service personnel.
Test Pattern	Selecting **On** enables the function and the projector displays the grid test pattern. It helps you adjust the image size and focus and check that the projected image is free from distortion.
Closed Caption	Selecting **On** enables the function. The closed captioning text is displayed if available. ☞ **Close Caption will disable when aspect change to 16:9, 16:10 or real.**
Reset All Settings	Returns all settings to the factory preset values. ☞ **The following settings will still remain: Position, Phase, H. Size, User 1, User 2, Projector Position, Language, High Altitude Mode, Security Settings, Baud Rate.**

	FUNCTION	DESCRIPTION
6. INFORMATION menu	Current System Status	**Source** Shows the current signal source. **Picture Mode** Shows the selected mode in the **PICTURE** menu. **Resolution** Shows the native resolution of the input signal. **Color System** Shows input system format, NTSC, PAL, SECAM or RGB. **Equivalent Lamp Hour** Displays the number of hours the lamp has been used. **Firmware Version** Displays the firmware version of the projector.

☞ **The INFORMATION menu shows you the current operating status of the projector.**

Maintenance

Care of the projector

Your projector needs little maintenance. The only thing you need to do on a regular basis is to keep the lens clean.

Never remove any parts of the projector except the lamp. Contact your dealer if other parts need replacing.

Cleaning the lens

Clean the lens whenever you notice dirt or dust on the surface.

- Use a canister of compressed air to remove dust.
- If there is dirt or smears, use lens-cleaning paper or moisten a soft cloth with lens cleaner and gently wipe the lens surface.

⚠ **Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the projector surface and cabinet material.**

Cleaning the projector case

Before you clean the case, turn the projector off using the proper shutdown procedure as described in "Shutting down the projector" on page 45 and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral pH detergent. Then wipe the case.

⚠ **Never use wax, alcohol, benzene, thinner or other chemical detergents. These can damage the case.**

Storing the projector

If you need to store the projector for an extended time, please follow the instructions below:

- Make sure the temperature and humidity of the storage area are within the recommended range for the projector. Please refer to "Specifications" on page 62 or consult your dealer about the range.
- Retract the adjuster feet.
- Remove the battery from the remote control.
- Pack the projector in its original packing or equivalent.

Transporting the projector

It is recommended that you ship the projector with its original packing or equivalent. When you carry the projector yourself, please use the original box or a suitable soft carry case.

Lamp information

Getting to know the lamp hour

When the projector is in operation, the duration (in hours) of lamp usage is automatically calculated by the built-in timer. The method of calculating the equivalent lamp hour is as follows:

See "Setting Lamp mode as Economic" below for more information on Economic mode.

To obtain the lamp hour information:

1. Press **Menu/Exit** and then press ◀/▶ until the **SYSTEM SETUP: Advanced** menu is highlighted.
2. Press ▼ to highlight **Lamp Settings** and press **MODE/ENTER**. The **Lamp Settings** page displays.
3. You will see the **Equivalent lamp hour** information displaying on the menu.
4. To leave the menu, press **Menu/Exit**.

You can also get the lamp hour information on the **INFORMATION** menu.

Extending lamp life

The projection lamp is a consumable item. To keep the lamp life as long as possible, you can do the following settings via the OSD menu.

Setting Lamp mode as Economic

Using **Economic** mode reduces system noise and power consumption by 20%. If the **Economic** mode is selected, the light output will be reduced and result in darker projected pictures.

Setting the projector in **Economic** mode also extends the lamp operation life. To set **Economic** mode, go into the **SYSTEM SETUP: Advanced** > **Lamp Settings** > **Lamp mode** menu and press ◀/▶.

Setting Auto Power Off

This function allows the projector to turn off automatically if no input source is detected after a set period of time to prevent unnecessary waste of lamp life.

To set **Auto Power Off**, go into the **SYSTEM SETUP: Basic** > **Auto Power Off** menu and press ◀/▶. The time period can be set from 5 to 30 minutes in 5-minute increments. If the preset time lengths are not suitable for your presentation, select **Disable**. The projector will not automatically shut down in a certain time period.

Timing of replacing the lamp


When the **Lamp indicator** lights up red or a message appears suggesting it is time to replace the lamp, please install a new lamp or consult your dealer. An old lamp may cause a malfunction in the projector and in some instances the lamp may explode.

Go to http://lamp.benq.com for a replacement lamp.

The Lamp indicator light and Temperature warning light will light up if the lamp becomes too hot. See "Indicators" on page 60 for details.

The following lamp warning displays will remind you to change the lamp.


The warning messages below are for reference only. Please follow the actual on-screen instructions to prepare and replace the lamp.

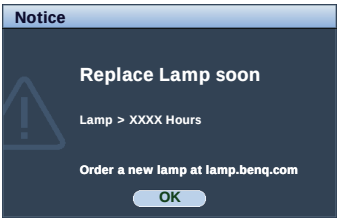Status	Message
Install a new lamp for optimal performance. If the projector is normally run with **Economic** selected (See "Setting Lamp mode as Economic" on page 55), you may continue to operate the projector until the next lamp warning appears.	
A new lamp should be fitted to avoid the inconvenience when the projector runs out of lamp time.	
It is strongly recommended that you replace the lamp at this age. The lamp is a consumable item. The lamp brightness diminishes with use. This is normal lamp behavior. You can replace the lamp whenever you notice that the brightness level has significantly diminished.	
The lamp MUST be replaced before the projector will operate normally.	

Replacing the lamp


- **If lamp replacement is performed while the projector is suspended upside-down from the ceiling, make sure that no one is underneath the lamp socket to avoid any possible injury or damage to the human eyes caused by fractured lamp.**
- **To reduce the risk of electrical shock, always turn the projector off and disconnect the power cord before changing the lamp.**
- **To reduce the risk of severe burns, allow the projector to cool for at least 45 minutes before replacing the lamp.**
- **To reduce the risk of injuries to fingers and damage to internal components, use caution when removing lamp glass that has shattered into sharp pieces.**
- **To reduce the risk of injuries to fingers and/or compromising image quality by touching the lens, do not touch the empty lamp compartment when the lamp is removed.**
- **This lamp contains mercury. Consult your local hazardous waste regulations to dispose of this lamp in a proper manner.**
- **To assure optimal performance from the projector, it is recommended that you purchase a BenQ projector lamp for lamp replacement.**

1. Turn the power off and disconnect the projector from the wall socket. If the lamp is hot, avoid burns by waiting for approximately 45 minutes until the lamp has cooled.
2. Loosen the captive screw from the front.
3. Remove the lamp compartment cover as shown.

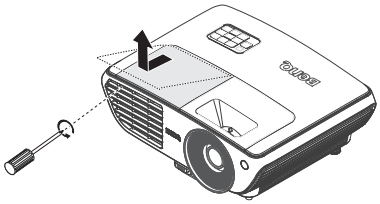


4. Loosen the three captive screws that secure the lamp.

- **Do not turn the power on with the lamp cover removed.**
- **Do not insert your fingers between the lamp and the projector. The sharp edges inside the projector may cause injuries.**

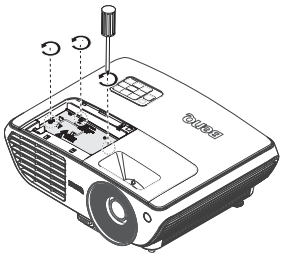


5. Lift the handle so that it stands up. Use the handle to slowly pull the lamp out of the projector.

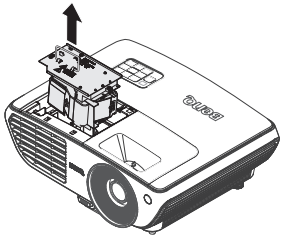


- **Pulling it too quickly may cause the lamp to break and scatter broken glass in the projector.**
- **Do not place the lamp in locations where water might splash on it, children can reach it, or near flammable materials.**
- **Do not insert your hands into the projector after the lamp is removed. If you touch the optical components inside, it could cause color unevenness and distortion of the projected images.**

6. Insert the new lamp into the lamp compartment and make sure it fits in the projector.

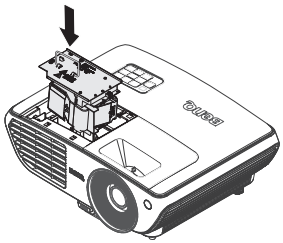


- **Ensure the connectors are aligned.**
- **If you experience resistance, lift the lamp and start again.**

7. Tighten the screws that secure the lamp.
8. Ensure the handle is fully laid flat and locked in place.

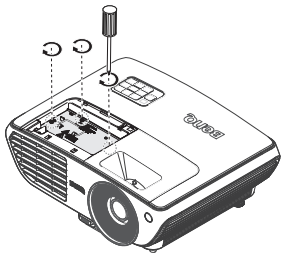

- **Loose screw may cause a bad connection, which could result in malfunction.**
- **Do not over tighten the screw.**

9. Replace the lamp compartment cover on the projector and tighten the captive screw.

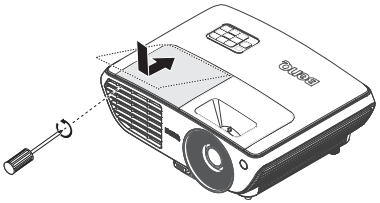


10. Restart the projector.

Do not turn the power on with the lamp cover removed.

Resetting the lamp timer

11. After the startup logo, open the On-Screen Display (OSD) menu. Go to the **SYSTEM SETUP: Advanced** > **Lamp Settings** menu. Press **MODE/ENTER**. The **Lamp Settings** page displays. Press ▼ to highlight **Reset lamp timer** and press **MODE/ENTER**. A warning message displays asking if you want to reset the lamp timer. Highlight **Reset** and press **MODE/ENTER**. The lamp time will be reset to '0'.

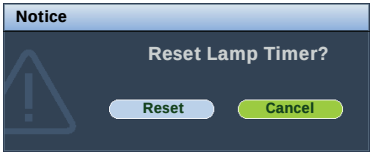

⚠ **Do not reset if the lamp is not new or replaced as this could cause damage.**

Indicators

Light			Status & Description
Power	Temp	Lamp	
Power events			
Orange	Off	Off	Stand-by mode
Green Flashing	Off	Off	Powering up
Green	Off	Off	Normal operation
Orange Flashing	Off	Off	The projector needs to cool for 90 seconds after the power is turned off.
Lamp events			
Orange Flashing	Off	Red	The lamp ignition retries if the lamp fails during startup.
Off	Off	Red	1. The projector needs 90 seconds to cool down. **Or** 2. Please contact your dealer for assistance.
Thermal events			
Off	Red	Off	The projector has shutdown automatically. If you try to re-start the projector, it will shutdown again. Please contact your dealer for assistance.
Off	Red	Red	
Off	Red	Green	
Off	Red	Orange	
Red	Red	Red	
Red	Red	Green	
Red	Red	Orange	
Green	Red	Red	
Green	Red	Green	
System events			
Off	Green	Red	The projector has shutdown automatically. If you try to re-start the projector, it will shutdown again. Please contact your dealer for assistance.
Off	Green	Green	
Off	Green	Orange	

Troubleshooting

ⓘ The projector does not turn on.

Cause	Remedy
There is no power from the power cable.	Plug the power cord into the AC inlet on the projector, and plug the power cord into the power outlet. If the power outlet has a switch, make sure that it is switched on.
Attempting to turn the projector on again during the cooling process.	Wait until the cooling down process has completed.

ⓘ No picture

Cause	Remedy
The video source is not turned on or connected correctly.	Turn the video source on and check that the signal cable is connected correctly.
The projector is not correctly connected to the input signal device.	Check the connection.
The input signal has not been correctly selected.	Select the correct input signal with the **SOURCE** key on the projector or remote control.

ⓘ Blurred image

Cause	Remedy
The projection lens is not correctly focused.	Adjust the focus of the lens using the focus ring.
The projector and the screen are not aligned properly.	Adjust the projection angle and direction as well as the height of the unit if necessary.

ⓘ Remote control does not work

Cause	Remedy
The battery is out of power.	Replace the battery with new one.
There is an obstacle between the remote control and the projector.	Remove the obstacle.
You are too far away from the projector.	Stand within 7 meters (23 feet) of the projector.

ⓘ The password is incorrect

Cause	Remedy
You do not remember the password.	Please see "Entering the password recall procedure" on page 29 for details.


Specifications
Projector specifications


☞ **All specifications are subject to change without notice.**

General		
Product name	Digital Projector	
Model name	W700	W710ST
Optical		
Resolution	720p, 1280 x 720	
Display system	1-CHIP DMD	
Lens F/Number	F = 2.52 to 2.73, f = 21.8 to 24 mm	F = 2.77, f = 10.16 to 11.16 mm
Lamp	190 W	220 W
Electrical		
Power supply	AC100–240V, 50/60 Hz (Automatic)	
Power consumption	250W (Max)/ <1W (Standby)	290W (Max)/ <1W (Standby)
Mechanical		
Dimensions	330 mm (W) x 150 mm (H) x 247 mm (D) (Adjust foot max.)	
Weight	8 lbs (3.63 Kg)	
Input terminal		
Computer input		
RGB input	D-Sub 15-pin (female)	
Video signal input		
HDMI	Screw type x 2	
COMPONENT	RCA jack x 3	
S-VIDEO	Mini DIN 4-pin port x 1	
VIDEO	RCA jack x 1	
SD/HDTV signal input	Component RCA jack x 3	
Audio input	Mini jack x 1, RCA jack x 2	
Output terminal		
Audio output	Mini jack x 1	
Speaker	10W mono speaker	
Control terminal		
USB	Mini B type	
RS-232 serial control	9 pin x 1	
Environmental Requirements		
Operating temperature	5°C–35°C at sea level	
Operating relative humidity	10%–85% (without condensation)	
Operating altitude	• 0–1499 m at 5°C–28°C • 1500–3000 m at 5°C–23°C (with **High Altitude Mode** on)	

Dimensions


330 mm (W) x 119.5 mm (H) x 247 mm (D)

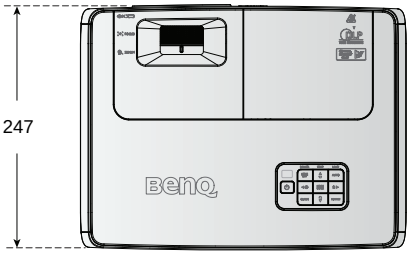


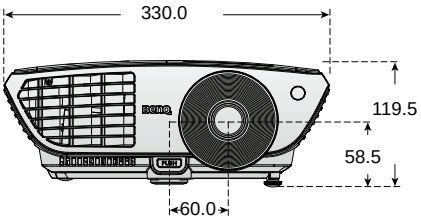


Ceiling Mount Installation

*Ceiling Mount Screws:
M4 x L8 (Max. L=12, Min. L=8)

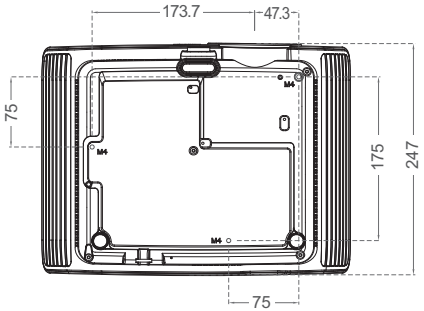

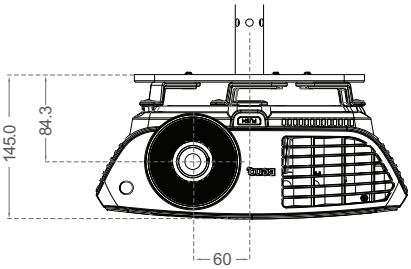

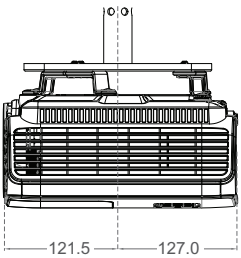

Unit: mm

Timing chart

Supported timing for PC input

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Frequency (MHz)	Mode
640 x 480	31.469	59.940	25.175	VGA_60*
	37.861	72.809	31.500	VGA_72
	37.500	75.000	31.500	VGA_75
	43.269	85.008	36.000	VGA_85
	61.91	119.518	52.5	640 x 480 120Hz*
720 x 400	37.927	85.039	35.5	720 x 400 x 85
800 x 600	35.2	56.3	36	SVGA_56
	37.879	60.317	40.000	SVGA_60*
	48.077	72.188	50.000	SVGA_72
	46.875	75.000	49.500	SVGA_75
	53.674	85.061	56.250	SVGA_85
	76.302	119.972	73.25	VESA DMT0D 120Hz*
	77.425	119.854	83	800 x 600 120Hz*
1024 x 768	48.363	60.004	65.000	XGA_60*
	56.476	70.069	75.000	XGA_70
	60.023	75.029	78.750	XGA_75
	68.667	84.997	94.500	XGA_85
	97.551	119.989	115.5	VESA DMT14 120Hz*
1280 x 720	45.000	60.000	74.250	1280 x 720_60*
	90.000	120.000	148.50	1280 x 720_120*

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Frequency (MHz)	Mode
1280 x 800	49.7	59.8	83.5	WXGA_60*
	62.8	74.9	106.5	WXGA_75
	71.554	84.880	122.500	WXGA_85
1280 x 1024	63.981	60.020	108.000	SXGA3_60*
	79.976	75.025	135.000	SXGA3_75
	91.146	85.024	157.500	SXGA3_85
1280 x 960	60.000	60.000	108	1280 x 960_60*
	85.938	85.002	148.500	1280 x 960_85
1440 x 900	55.935	59.887	106.500	WXGA+_60*
	70.635	74.984	136.750	WXGA+_75
1400 x 1050	65.317	59.978	121.750	SXGA+_60*
1600 x 1200	75.000	60.000	162.000	UXGA
640 x 480@67Hz	35.000	66.667	30.240	MAC13
832 x 624@75Hz	49.722	74.546	57.280	MAC16
1024 x 768@75Hz	60.240	75.020	80.000	MAC19
1152 x 870@75Hz	68.68	75.06	100.000	MAC21
1024 x 576@60Hz	35.82	60	46.996	1024 x 576-GTF
1024 x 600@60Hz	37.32	60	48.964	1024 x 600-GTF

*** Supported timing for 3D function.**

Supported timing for Component-YPbPr input

Signal Format	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
480i(525i)@60Hz	15.73	59.94
480p(525p)@60Hz	31.47	59.94
576i(625i)@50Hz	15.63	50.00
576p(625p)@50Hz	31.25	50.00
720p(750p)@60Hz	45.00	60.00
720p(750p)@50Hz	37.50	50.00
1080i(1125i)@60Hz	33.75	60.00
1080i(1125i)@50Hz	28.13	50.00
1080P@24Hz	27	24
1080P@25Hz	28.13	25
1080P@30Hz	33.75	30
1080P@60Hz	67.5	60.00
1080P@50Hz	56.26	50.00

Displaying a 1080i(1125i)@60Hz or 1080i(1125i)@50Hz signal may result in slight image vibration.

Supported timing for Video and S-Video inputs

Video mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Color sub-carrier Frequency (MHz)
NTSC*	15.73	60	3.58
PAL*	15.63	50	4.43
SECAM	15.63	50	4.25 or 4.41
PAL-M	15.73	60	3.58
PAL-N	15.63	50	3.58
PAL-60	15.73	60	4.43
NTSC4.43*	15.73	60	4.43

☞ *** Supported timing for 3D function.**

Supported timing for HDMI (HDCP) input

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Frequency (MHz)	Mode
720 x 400	37.927	85.039	35.5	720 x 400_85
640 x 480	31.469	59.940	25.175	VGA_60*
	37.861	72.809	31.500	VGA_72
	37.500	75.000	31.500	VGA_75
	43.269	85.008	36.000	VGA_85
	61.91	119.518	52.5	640 x 480 120Hz*
800 x 600	35.2	56.3	36	SVGA_56
	37.879	60.317	40.000	SVGA_60*
	48.077	72.188	50.000	SVGA_72
	46.875	75.000	49.500	SVGA_75
	53.674	85.061	56.250	SVGA_85
	76.302	119.972	73.25	VESA DMT0D 120Hz*
	77.425	119.854	83	800 x 600 120Hz*
1024 x 768	48.363	60.004	65.000	XGA_60*
	56.476	70.069	75.000	XGA_70
	60.023	75.029	78.750	XGA_75
	68.667	84.997	94.500	XGA_85
	97.551	119.989	115.5	VESA DMT14 120Hz*
1280 x 720	45.000	60.000	74.250	1280 x 720_60*
	90.000	120.000	148.50	1280 x 720_120*
1280 x 800	49.7	59.8	83.5	WXGA_60*
	62.8	74.9	106.5	WXGA_75
	71.554	84.880	122.500	WXGA_85
1280 x 1024	63.981	60.020	108.000	SXGA_60*
	79.976	75.025	135.000	SXGA_75
	91.146	85.024	157.500	SXGA_85
1280 x 960	60.000	60.000	108	1280 x 960_60*
	85.938	85.002	148.500	1280 x 960_85

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Frequency (MHz)	Mode
1440 x 900	55.935	59.887	106.500	WXGA+_60*
	70.635	74.984	136.750	WXGA+_75
1400 x 1050	65.317	59.978	121.750	SXGA+_60*
1600 x 1200	75.000	60.000	162.000	UXGA
640 x 480@67Hz	35.000	66.667	30.240	MAC13
832 x 624@75Hz	49.722	74.546	57.280	MAC16
1024 x 768@75Hz	60.241	75.020	80.000	MAC19
1152 x 870@75Hz	68.68	75.06	100.000	MAC21
VIDEO	15.73	60	13.50	480i*
	31.47	60	27	480p*
	15.63	50	13.50	576i*
	31.25	50	27.000	576p
	37.50	50	74.25	720p_50
	45.00	60	74.25	720p_60*
	28.13	50	74.25	1080i_50
	33.75	60	74.25	1080i_60
	67.5	60	148.5	1080p
	56.26	50	148.5	1080p
	27	24	74.25	1080P@24Hz
	28.12	25	74.25	1080P@25Hz
	33.75	30	74.25	1080P@30Hz

Displaying a 1080i_50 or 1080i_60 signal may result in slight image vibration.

*** Supported timing for 3D function.**

Warranty and Copyright information

Limited warranty

BenQ warrants this product against any defects in material and workmanship, under normal usage and storage.

Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, BenQ's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included). To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects.

Important: The above warranty shall be void if the customer fails to operate the product in accordance with BenQ's written instructions, especially the ambient humidity must be in-between 10% and 85%, temperature in-between 5°C and 28°C, altitude lower than 4920 feet, and avoiding to operate the projector in a dusty environment. This warranty gives you specific legal rights, and you may have other rights which vary from country to country.

For other information, please visit www.BenQ.com.

Copyright

Copyright 2011 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

*DLP, Digital Micromirror Device and DMD are trademarks of Texas Instruments. Others are copyrights of their respective companies or organizations.