myprojectorlamps.com

The most trusted, dependable name
in projector lamp sales.

http://www.myprojectorlamps.com

http://www.myprojectorlamps.ca

http://www.myprojectorlamps.eu

The following projector manual has not been modified or altered in any way.

IN72/ IN74/ IN76

User's Guide

InFocus

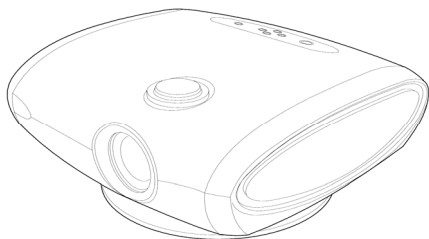# 1 Unpack the box

Here's what's included:
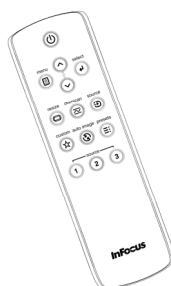
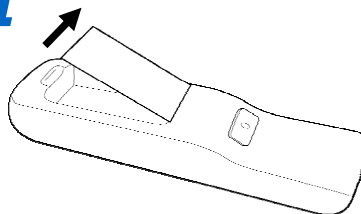| Projector	Remote	CD-ROM

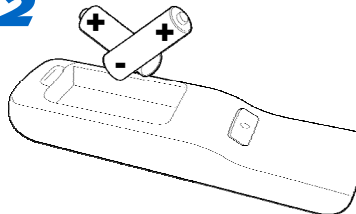| Composite Video Cable	Power Cord

2 Put batteries in the remote

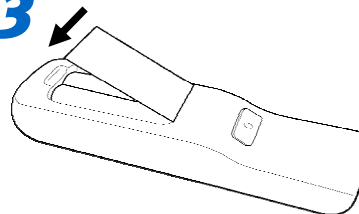The remote uses 2 AA batteries.

1 *2* *3*

Please dispose of batteries in an environmentally proper manner.

Remote illumination

Tap the button on the bottom of the remote for backlight, hold it down for flashlight*

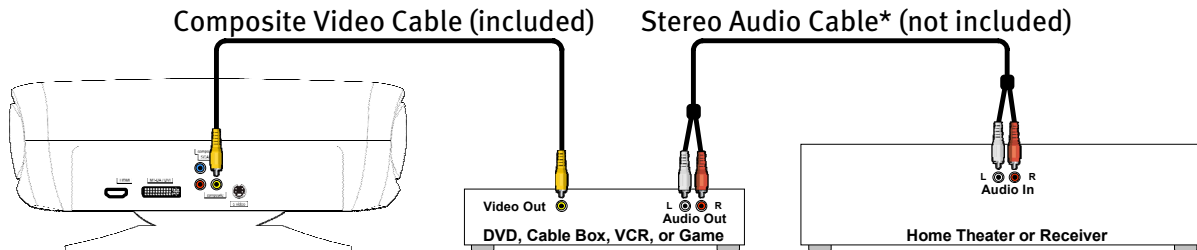*Illumination features may not be available on all models

3 Connect source

You can connect more than one source if needed.

Connect to: **DVD, Cable Box, VCR, or Game**   ★ Basic

Composite Video Cable (included)   Stereo Audio Cable* (not included)

Video Out   L   R
DVD, Cable Box, VCR, or Game   Audio Out

L   R
Audio In
Home Theater or Receiver

*www.infocus.com/store part no. **SP-RCAAUD-5M**
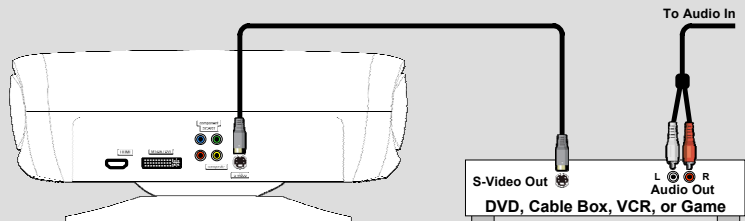
OR

Use optional cables (not included) for improved video quality

Connect to: **DVD, Cable Box, VCR, or Game**   ★★ Good

Use: **S-Video Cable**

Separates color from brightness to improve quality.

To Audio In

S-Video Out   L   R
DVD, Cable Box, VCR, or Game   Audio Out

www.infocus.com/store part no. **SP-SVIDEO-10M**

Connect to: **HDTV Receiver or DVD**   ★★★ Better

Use: **Component Video Cable**

Separates all color signals for better color accuracy. HDTV compatible.

To Audio In

Video Out   Y Pb Pr   L   R
HDTV Receiver or DVD   Audio Out
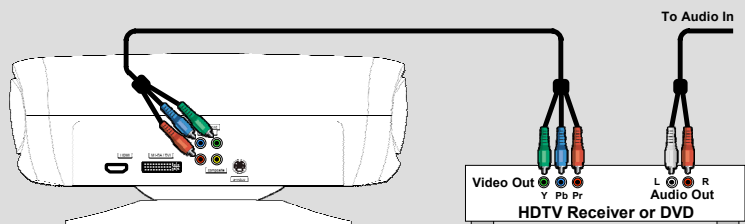
www.infocus.com/store part no. **SP-CPNT**

Connect to: **HDTV Receiver**   ★★★★ Best

Use: **HDMI Cable**

100% Digital connection. HDTV compatible.

To Audio In

HDMI Out   L   R
HDTV Receiver   Audio Out
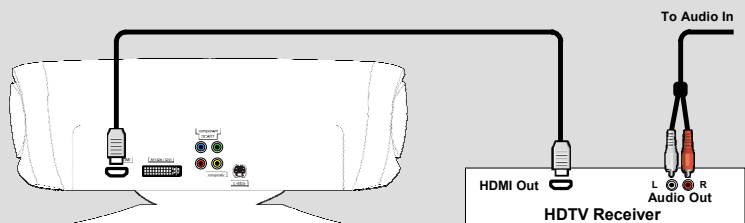
www.infocus.com/store part no. **SP-HDMI**

Connect to: **SCART Source**

Use: SCART to RGBS Cable (RGB with sync)

component
SCART
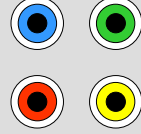
1 Connect 4 color-coded connectors to corresponding connectors on projector.

2 Enable **SCART RGB** in the **Source Enable** menu (**Settings › Sources › Source Enable**).

Connect to: **DVI Source**

Use: M1 to DVI Cable
100% digital connection.

M1-DA / DVI

Connect the cable to the projector's M1-DA/DVI connector.

www.infocus.com/store part no. **SP-DVI-D**

4   Turn on projector and source
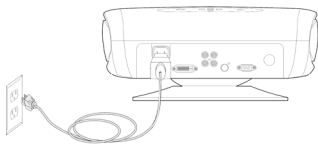
1   Connect the power cord to the projector and to an electrical outlet

The green light on the projector near the power button will turn on.
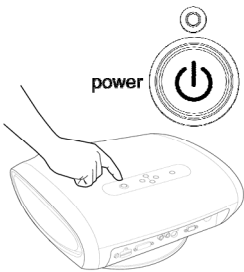
2   Turn on the projector

power

Press **power** (on the projector or remote). The green light on the projector will start blinking.
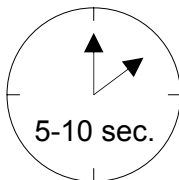
3   Wait for the lamp to warm up

5-10 sec.

After a few seconds, the green light will stop blinking and stay on. It can take a minute for the lamp to reach full brightness.

⚠ **WARNING:** Do not look directly into the lens when the projector is turned on.
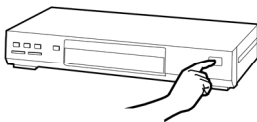
4   Turn on the source device

Turn on your DVD player, cable box, VCR, game, or HDTV receiver.

5   Select the video source

source

If needed, press **source** (on the projector or remote) to view the source. You may have to press it more than once.

5 Adjust the picture

1 Height

Tilt the projector up or down.

2 Keystone

menu select
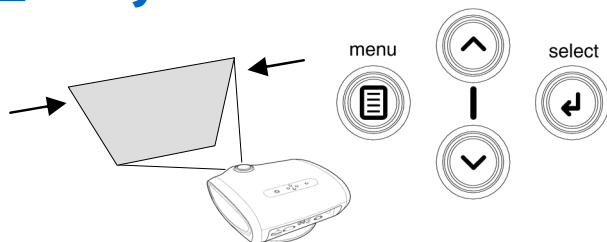
To make the picture square:

1 Press **menu** (on projector or remote).
2 Press ∨ or ∧ to highlight **Picture**, then press **select**.
3 Press ∨ or ∧ to highlight **Keystone**, then press **select**.
4 Press ∨ or ∧ to adjust keystone.
5 Press **menu** to exit.

3 Zoom and focus

zoom (outer ring)

focus (inner ring)
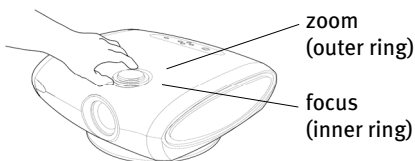
Adjust zoom first, then focus the center of the image.

4 Aspect ratio
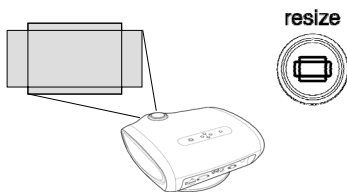
resize

Press **resize** (on the remote) to make the picture wider (16:9) or narrower (4:3).

Projector location

As distance increases, the image gets larger and moves upwards.

Lens center line
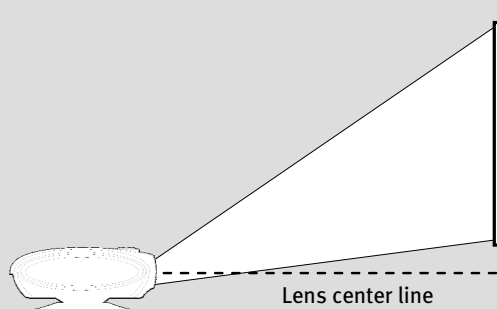
Interactive Screen Size and Distance Calculator
www.infocus.com/calculator

IN72

Diagonal Screen Size	Distance to Screen	
	Minimum	Maximum
60" / 1.5 m	7'10" / 2.4 m	9'4" / 2.8 m
80" / 2 m	10'5" / 3.2 m	12'4" / 3.8 m
92" /2.3 m	12' / 3.7 m	14'2" / 4.3 m
150" / 3.8 m	19'6" / 5.9 m	23'1" / 7 m

IN74/IN76

Diagonal Screen Size	Distance to Screen	
	Minimum	Maximum
60" / 1.5 m	6'7" / 2 m	8'4" / 2.5 m
80" / 2 m	8'10" / 2.7 m	11'1" / 3.4 m
92" /2.3 m	10'1" / 3.1 m	12'10" / 3.9 m
150" / 3.8 m	16'5" / 5 m	20'10" / 6.3 m

Buy a Screen and Other Custom Accessories
www.infocus.com/store

6 Turn off the projector

Press the power button

The green light on the projector will blink while the fan cools the lamp. **If you need to unplug the projector**, wait until the fan stops and the green light stops blinking and stays on.

NOTE: While the green light is blinking, button presses on the projector and remote are ignored.

7 Register with InFocus

It's quick, easy, and secure.

Activate your warranty to ensure eligibility for service and support. Get special offers and notifications about free product updates.

1 Write down your projector's serial number

It's printed on the label on the back of the projector. You'll need it to register (and if you ever need to contact InFocus support).

Serial number: ....

2 Go to www.infocus.com/register

8 Read the Reference Guide

and visit the InFocus web site

Insert the CD-ROM, or go to www.infocus.com/service

The Reference Guide is on the CD-ROM in multiple languages. It covers advanced setup and operation, including lamp replacement instructions. The Reference Guide is also available at **www.infocus.com/service**

Windows* users: The CD-ROM also includes links to the InFocus web site, including shopping for custom accessories, service & support, and an interactive screen size/distance calculator.

Troubleshooting

There is no picture or the image is blank

Check power
If the light on the projector near the power button is off, make sure the power cord is connected and plugged into a working electrical outlet.
If the light is green and *not* blinking, press the **power** button.

Check video source and cables
Make sure the video source (DVD player, cable box, VCR, game, HDTV receiver, etc.) is turned on and cables are securely connected between the source and the projector.

Press the Source button (on projector or remote)
You may need to press it several times to view the correct source.

Press the Auto Image button (on remote)

The picture is unstable or distorted, or "Signal out of range" is displayed

Press the Auto Image button (on remote)

The light on the projector is blinking red

Check air vents and lamp
Turn off the projector and remove anything that may be blocking its air vents. Leave the projector off for at least one minute to let it cool, then turn it on again. If the projector lamp won't light and the red light starts to blink again, the lamp needs to be replaced. For lamp replacement instructions, see the Reference Guide, which is on the included CD-ROM or can be downloaded at **www.infocus.com/service**

More troubleshooting options are in the Reference Guide

The Reference Guide is on the included CD-ROM, or download it at www.infocus.com/service

---

⚠️ **WARNING:** In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector when it is turned on. See the safety instructions booklet for more details.

Questions? InFocus is here to help!

Visit us at:
www.infocus.com/service

InFocus is here to support you with your new purchase. We can help you with...
- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- Selecting optional accessories
- Product warranty protection plans

USA, Canada, Latin America
Customer Support Telephone
+1 (503) 685-8888
TOLL FREE: **800-799-9911**
Mon-Fri, 7 am – 5 pm Pacific
techsupport@infocus.com

Asia Pacific
Customer Support Telephone
Singapore: **+65 63539449**
China: **800.828.2268**
Australia: **1300-725-295**
Australia Direct Sales: **1800-885-841**
Mon-Fri, 9 am – 6 pm SGT
asia-support@infocus.com

Europe, Middle East, Africa
Customer Support Telephone
+31 (0)20 579 2820
Mon-Fri, 08:00 – 18:00 CET
emea.support@infocus.com

Warning: This product has a lamp which contains a very small amount of mercury. Dispose of it as required by local, state, or federal ordinances and regulations. For more information, see www.eiae.org.

Declaration of Conformity
Manufacturer: InFocus Corporation, 27700B SW Parkway Ave. Wilsonville, Oregon 97070 USA
European Office: Strawinskylaan 585, 1077 XX Amsterdam, The Netherlands
We declare under our sole responsibility that this projector conforms to the following directives and norms: EMC Directive 89/336/EEC, Amended by 93/68/EEC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 73/23/EEC, Amended by 93/68/EEC, Safety: IEC 60950-1:1st Edition

Trademarks
Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. InFocus, In Focus, and INFOCUS (stylized), LP, LiteShow, ScreenPlay, LitePort, ASK and Proxima are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.

FCC Warning
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

Canada
This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals
UL, CUL, NOM, IRAM, GOST, C-tick
Other specific Country Approvals may apply. Please see product certification label.

InFocus reserves the right to alter product offerings and specifications at any time without notice.