SHARP

DATA PROJECTOR

MODEL

XG-F315X

OPERATION MANUAL

Notevision

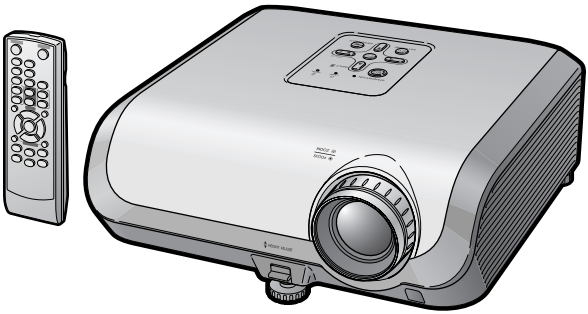

PICTURE BY DLP TEXAS INSTRUMENTS

IMPORTANT

- For your assistance in reporting the loss or theft of your Projector, please record the Model and Serial Number located on the bottom of the projector and retain this information.
- Before recycling the packaging, please ensure that you have checked the contents of the carton thoroughly against the list of “Supplied accessories” on page **11**.

Model No.:

Serial No.:

SPECIAL NOTE FOR USERS IN THE U.K.

The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 10A fuse. Should the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked ♡ or ◇ and of the same rating as above, which is also indicated on the pin face of the plug, must be used.

Always refit the fuse cover after replacing the fuse. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut off the mains plug and fit an appropriate type.

DANGER:

The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner.

Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet, as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

WARNING:

THIS APPARATUS MUST BE EARTHED.

IMPORTANT:

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	: Earth
Blue	: Neutral
Brown	: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol ⏚ or coloured green or green-and-yellow.
- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

The supplied CD-ROM contains operation instructions in English, German, French, Swedish, Spanish, Italian, Dutch, Portuguese, Chinese and Korean. Carefully read through the operation instructions before operating the projector.

Die mitgelieferte CD-ROM enthält Bedienungsanleitungen in Englisch, Deutsch, Französisch, Schwedisch, Spanisch, Italienisch, Niederländisch, Portugiesisch, Chinesisch und Koreanisch. Bitte lesen Sie die Bedienungsanleitung vor der Verwendung des Projektors sorgfältig durch.

Le CD-ROM fourni contient les instructions de fonctionnement en anglais, allemand, français, suédois, espagnol, italien, néerlandais, portugais, chinois et coréen. Veuillez lire attentivement ces instructions avant de faire fonctionner le projecteur.

Den medföljande CD-ROM-skivan innehåller bruksanvisningar på engelska, tyska, franska, svenska, spanska, italienska, holländska, portugisiska, kinesiska och koreanska. Läs noga igenom bruksanvisningen innan projektorn tas i bruk.

El CD-ROM suministrado contiene instrucciones de operación en inglés, alemán, francés, sueco, español, italiano, holandés, portugués, chino y coreano. Lea cuidadosamente las instrucciones de operación antes de utilizar el proyector.

Il CD-ROM in dotazione contiene istruzioni per l'uso in inglese, tedesco, francese, svedese, spagnolo, italiano, olandese, portoghese, cinese e coreano. Leggere attentamente le istruzioni per l'uso prima di usare il proiettore.

De meegeleverde CD-ROM bevat handleidingen in het Engels, Duits, Frans, Zweeds, Spaans, Italiaans, Nederlands, Portugees, Chinees en Koreaans. Lees de handleiding zorgvuldig door voor u de projector in gebruik neemt.

O CD-ROM fornecido contém instruções de operação em Inglês, Alemão, Francês, Sueco, Espanhol, Italiano, Holandês, Português, Chinês e Coreano. Leia cuidadosamente todas as instruções de operação antes de operar o projetor.

附送之CD-ROM光碟中，有用英文、德文、法文、瑞典文、西班牙文、意大利文、荷蘭文、葡萄牙文、中文和韓國文所寫的使用說明書。在操作本投影機之前，請務必仔細閱讀整本使用說明書。

제공된 CD-ROM에는 영어, 독일어, 프랑스어, 스웨덴어, 스페인어, 이탈리아어, 네덜란드어, 포르투갈어, 중국어, 그리고 한국어로 작성된 조작 설명서가 포함되어 있습니다. 프로젝터를 조작하기 전에 조작 지침을 상세하게 숙지하십시오.

Before using the projector, please read this operation manual carefully.

Introduction

ENGLISH

There are two important reasons for prompt warranty registration of your new SHARP Projector, using the REGISTRATION CARD packed with the projector.

1. **WARRANTY**
   This is to assure that you immediately receive the full benefit of the parts, service and labor warranty applicable to your purchase.
2. **CONSUMER PRODUCT SAFETY ACT**
   To ensure that you will promptly receive any safety notification of inspection, modification, or recall that SHARP may be required to give under the 1972 Consumer Product Safety Act, PLEASE READ CAREFULLY THE IMPORTANT "LIMITED WARRANTY" CLAUSE. U.S.A. ONLY

WARNING: High brightness light source. Do not stare into the beam of light, or view directly. Be especially careful that children do not stare directly into the beam of light.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

See bottom of projector.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT REMOVE SCREWS EXCEPT SPECIFIED USER SERVICE SCREW.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.
NO USER-SERVICEABLE PARTS EXCEPT LAMP UNIT.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk or electric shock to persons.

The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment. U.S.A. ONLY

INFORMATION

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the operation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

U.S.A. ONLY

The enclosed computer cable must be used with the device. The cable is provided to ensure that the device complies with FCC Class A verification.

U.S.A. ONLY

WARNING:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

PRODUCT DISPOSAL

This projector utilizes tin-lead solder, and a pressurized lamp containing a small amount of mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or, if you are located in the United States of America, the Electronic Industries Alliance: www.eiae.org.

Caution Concerning Lamp Replacement

See “Replacing the Lamp” on page **57**.

This SHARP projector uses a DLP® chip. This very sophisticated panel contains 786,432 pixels (micromirrors). As with any high technology electronic equipment such as large screen TVs, video systems and video cameras, there are certain acceptable tolerances that the equipment must conform to.
This unit has some inactive pixels within acceptable tolerances which may result in inactive dots on the picture screen. This will not affect the picture quality or the life expectancy of the unit.

Authorized representative responsible for the European Union Community Market

SHARP ELECTRONICS (Europe) GmbH
Sonninstraße 3, D-20097 Hamburg

E.U. ONLY

How to Read this Operation Manual

■ The specifications are slightly different, depending on the model. However, you can connect and operate all models in the same manner.

- In this operation manual, the illustration and the screen display are simplified for explanation, and may differ slightly from the actual display.

Using the Menu Screen

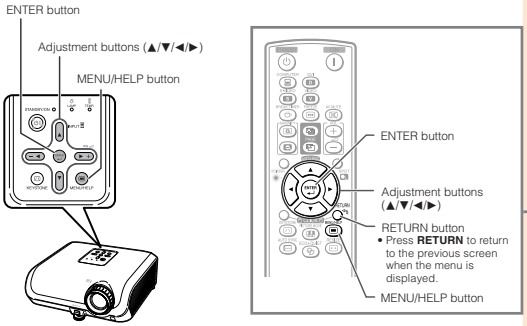

Buttons used in this operation

Menu Selections (Adjustments)

Example: Adjusting "Bright".
• This operation can also be performed by using the buttons on the projector.

1 **Press MENU/HELP.**
• The "Picture" menu screen for the selected input mode is displayed.

2 **Press ► or ◄ and select "Picture" to adjust.**

Example: "Picture" screen menu for COMPUTER (RGB) input

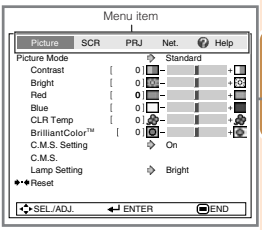

Button used in this step

On-screen display

Info .....Indicates safeguards for using the projector.

Note.....Indicates additional information for setting up and operating the projector.

For Future Reference

Maintenance ➡ P. 52

Troubleshooting ➡ PP. 62 and 63

Index ➡ P. 67

Contents

Preparing

Introduction

How to Read this Operation Manual 3
Contents 4
IMPORTANT SAFEGUARDS 6
How to Access the PDF Operation Manuals 10
Accessories 11
Part Names and Functions 12
- Projector 12
- Rear View 13
- Inserting the Batteries 15
- Usable Range 15

Quick Start

Quick Start 16
- Setup and Projection 16

Setup

Setting up the Projector 18
- Setting up the Projector 18
- Standard Setup (Front Projection) 18
- Ceiling-mount Setup 18
- Projection (PRJ) Mode 19
- Screen Size and Projection Distance .. 20

Connections

Connecting the Projector to Other Equipment 21
Controlling the Projector by a Computer 24
Connecting the Power Cord 25

Using

Basic Operation

Turning the Projector On/Off 26
- Turning the Projector on 26
- Turning the Power off (Putting the Projector into Standby Mode) 26

Image Projection 27
- About the Setup Guide 27
- Adjusting the Projected Image 27
- Correcting Trapezoidal Distortion 29
- Switching the Input Mode 30
- Adjusting the Volume 30
- Displaying the Black Screen and Turning off the Sound Temporarily 30
- Resize Mode 31

Useful Features

Operating with the Remote Control 33
- Displaying and Setting the Break Timer 33
- Displaying the Pointer 33
- Using the Spot Function 33
- Switching the Eco+Quiet Mode 33
- Auto Sync (Auto Sync Adjustment) 34
- Freezing a Moving Image 34
- Selecting the Picture Mode 34
- Displaying an Enlarged Portion of an Image 34
- Using the Remote Control as the Wireless Computer Mouse 35

Menu Items 36
Using the Menu Screen 39
- Menu Selections (Adjustments) 39

Picture Adjustment (“Picture” Menu) ... 41
- Selecting the Picture Mode 41
- Adjusting the Image 42
- Adjusting the Color Temperature 42
- Adjusting the Colors 42
- Progressive 43
- Lamp Setting 43

Adjusting the Projector Image (“SCR - ADJ” Menu) 44
- Setting the Resize Mode 44
- Adjusting the Image Position 44
- Keystone Correction 44
- Setting the On-screen Display 45
- Selecting the Background Image 45
- Selecting the Setup Guide 45
- Reversing/Inverting Projected Images 45
- Selecting the On-screen Display Language 45

Adjusting the Projector Function (“PRJ - ADJ” Menu) 46
- Auto Sync (Auto Sync Adjustment) 46
- Auto Power Off Function 46
- Auto Restart Function 46
- STANDBY Mode 46
- Setting the Confirmation Sound (System Sound) 46
- Speaker Setting 46
- Audio Input 47
- Selecting the Transmission Speed (RS-232C) 47
- Fan Mode Setting 47
- System Lock Function 47
- Checking the Lamp Life Status 48
- Keylock Function 48

Setting up the Projector Network Environment (“Network” menu) 49
Setting a Password 49
DHCP Client Setting 50
TCP/IP Setting 50
Confirming the Projector Information ... 50
Troubleshooting with the “Help” Menu 51
Utilizing the “Help” Menu Functions 51

Reference

Appendix

Maintenance 52
Cleaning and Replacing the Dust Filters 53
Cleaning the Dust Filters 53
Replacing the Dust Filters 54
Maintenance Indicators 55
Regarding the Lamp 57
Lamp 57
Caution Concerning the Lamp 57
Replacing the Lamp 57
Removing and Installing the Lamp Unit 58
Resetting the Lamp Timer 59
Storing the Projector 60
How to Use the Storage Case 60
Computer Compatibility Chart 61
Troubleshooting 62
For SHARP Assistance 64
Specifications 65
Dimensions 66
Index 67

IMPORTANT SAFEGUARDS

CAUTION: Please read all of these instructions before you operate this product and save these instructions for later use.

Electrical energy can perform many useful functions. This product has been engineered and manufactured to assure your personal safety. BUT IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARDS. In order not to defeat the safeguards incorporated in this product, observe the following basic rules for its installation, use and servicing.

1. **Read Instructions**
   All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions**
   The safety and operating instructions should be retained for future reference.
3. **Heed Warnings**
   All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions**
   All operating and use instructions should be followed.
5. **Cleaning**
   Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments**
   Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture**
   Do not use this product near water–for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. **Accessories**
   Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. **Transportation**
   A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10. **Ventilation**
    Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. **Power Sources**
    This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. **Grounding or Polarization**
    This product is provided with one of the following types of plugs. If the plug should fail to fit into the power outlet, please contact your electrician.
    Do not defeat the safety purpose of the plug.
    a. Two-wire type (mains) plug.
    b. Three-wire grounding type (mains) plug with a grounding terminal.
       This plug will only fit into a grounding type power outlet.
13. **Power-Cord Protection**
    Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. **Lightning**
    For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power-line surges.

15. Overloading
Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

16. Object and Liquid Entry
Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

17. Servicing
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. Damage Requiring Service
Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled, or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
e. If the product has been dropped or damaged in any way.
f. When the product exhibits a distinct change in performance, this indicates a need for service.

19. Replacement Parts
When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. Safety Check
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

21. Wall or Ceiling Mounting
This product should be mounted to a wall or ceiling only as recommended by the manufacturer.

22. Heat
This product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

- DLP® and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments.
- Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- PC/AT is a registered trademark of International Business Machines Corporation in the United States.
- Adobe® Reader® is a trademark of Adobe Systems Incorporated.
- Macintosh® is a registered trademark of Apple Computer, Inc. in the United States and/or other countries.
- All other company or product names are trademarks or registered trademarks of their respective companies.
- Some IC chips in this product include confidential and/or trade secret property belonging to Texas Instruments. Therefore you may not copy, modify, adapt, translate, distribute, reverse engineer, reverse assemble or discompile the contents thereof.

Observe the following safeguards when setting up your projector.

Caution concerning the lamp unit

■ Potential hazard of glass particles if lamp ruptures. In case of lamp rupture, contact your nearest Sharp Authorized Projector Dealer or Service Center for replacement.
See “Replacing the Lamp” on page 57.

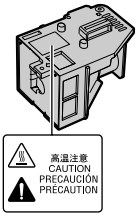

Caution concerning the setup of the projector

■ For minimal servicing and to maintain high image quality, SHARP recommends that this projector be installed in an area free from humidity, dust and cigarette smoke. When the projector is subjected to these environments, the vents and lens must be cleaned more often. As long as the projector is regularly cleaned, use in these environments will not reduce the overall operation life of the unit. Internal cleaning should only be performed by a Sharp Authorized Projector Dealer or Service Center.

Do not set up the projector in places exposed to direct sunlight or bright light.

■ Position the screen so that it is not in direct sunlight or room light. Light falling directly on the screen washes out the colors, making viewing difficult. Close the curtains and dim the lights when setting up the screen in a sunny or bright room.

Caution regarding placing of the projector

■ Place the projector on a level site within the adjustment range (8 degrees) of the adjustment foot.

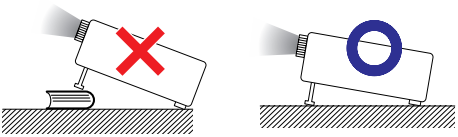

■ After the projector is purchased, a faint smell from the vent may appear when the power is first turned on. This is normal and is not a malfunction. It will disappear after the projector is used for a while.

When using the projector in high-altitude areas such as mountains (at altitudes of approximately 1,500 meters (4,900 feet) or more)

■ When you use the projector in high-altitude areas with thin air, set “Fan Mode” to “High”. Neglecting this can affect the longevity of the optical system.

Warning about placing the projector in a high position

■ When placing the projector in a high position, make certain it is carefully secure to avoid personal injury caused by the projector falling down.

Do not subject the projector to hard impact and/or vibration.

■ Protect the lens so as not to hit or damage the surface of the lens.

Rest your eyes occasionally.

■ Continuously watching the screen for long hours will cause eye strain. Take regular breaks to rest your eyes.

Avoid locations with extremes of temperature.

■ The operating temperature of the projector is from 41°F to 95°F (+5°C to +35°C).

■ The storage temperature of the projector is from –4°F to 140°F (–20°C to +60°C).

Do not block the exhaust and intake vents.

■ Allow at least 11 13/16 inches (30 cm) of space between the exhaust vent and the nearest wall or obstruction.

■ Ensure that the intake vent and the exhaust vent are not obstructed.

■ If the cooling fan becomes obstructed, a protection circuit will automatically put the projector into standby mode to prevent overheat damage. This does not indicate a malfunction. (See pages 55 and 56.) Remove the projector power cord from the wall outlet and wait at least 10 minutes. Place the projector where the intake and exhaust vents are not blocked, plug the power cord back in and turn on the projector. This will return the projector to the normal operating condition.

Caution regarding usage of the projector

- If you are not to use the projector for a long time or before moving the projector, make certain you unplug the power cord from the wall outlet, and disconnect any other cables connected to it.
- If the power cord is unplugged while the cooling fan is running, some parts of the projector may still be hot. Use caution when handling the projector.
- Do not carry the projector by holding the lens.
- When storing the projector, ensure you attach the lens cap to the projector. (See page 12.)
- Do not expose the projector to direct sunlight or place next to heat sources. Doing so may affect the cabinet color or cause deformation of the plastic cover.

Other connected equipment

- When connecting a computer or other audio-visual equipment to the projector, make the connections AFTER unplugging the power cord of the projector from the AC outlet and turning off the equipment to be connected.
- Please read the operation manuals of the projector and the equipment to be connected for instructions on how to make the connections.

Using the projector in other countries

- The power supply voltage and the shape of the plug may vary depending on the region or country you are using the projector in. When using the projector overseas, make sure you use an appropriate power cord for the country you are in.

Temperature monitor function

- If the projector starts to overheat due to setup problems or blockage of the air vents, “ ” and “ TEMP. ” will illuminate in the lower left corner of the picture. If the temperature continues to rise, the lamp will turn off, the temperature warning indicator on the projector will blink, and after a 60-second cooling-off period the projector will enter standby mode. Refer to “Maintenance Indicators” on page 55 for details.

Info

- The cooling fan regulates the internal temperature, and its performance is automatically controlled. The sound of the fan may change during projector operation due to changes in the fan speed. This does not indicate malfunction.
- Even if you unplug the power cord after projector operation, the cooling fan continues to run for a while.

How to Access the PDF Operation Manuals

PDF operation manuals in several languages are included in the CD-ROM. To utilize these manuals, you need to install Adobe® Reader® on your computer (Windows® or Macintosh®).

Please download Adobe® Reader® from the Internet (http://www.adobe.com).

Accessing the PDF Manuals

For Windows®:

① Insert the CD-ROM in the CD-ROM drive.
② Double click the "My Computer" icon.
③ Double click the "CD-ROM" drive.
④ **When you want to view the operation manual**
1) Double click the "MANUALS" folder.
2) Double click the language (name of the folder) that you want to view.
3) Double click the pdf file to access the projector manuals.

When you want to view the SETUP MANUAL
1) Double click the "SETUP" folder.
2) Double click the language (name of the folder) that you want to view.
3) Double click the pdf file to access the SETUP MANUAL.

For Macintosh®:

① Insert the CD-ROM in the CD-ROM drive.
② Double click the "CD-ROM" icon.
③ **When you want to view the operation manual**
1) Double click the "MANUALS" folder.
2) Double click the language (name of the folder) that you want to view.
3) Double click the pdf file to access the projector manuals.

When you want to view the SETUP MANUAL
1) Double click the "SETUP" folder.
2) Double click the language (name of the folder) that you want to view.
3) Double click the pdf file to access the SETUP MANUAL.

Note

- If the desired pdf file cannot be opened by double clicking the mouse, start Adobe® Reader® first, then specify the desired file using the "File", "Open" menu.

SETUP MANUAL

Refer to the "SETUP MANUAL" contained on the supplied CD-ROM for details.

Connecting Pin Assignments 2
RS-232C Specifications and Commands 4
Setting up the Projector Network Environment 9
Controlling the Projector via LAN 15
Setting up the Projector Using RS-232C or Telnet 20
Resetting the Lamp Timer of the Projector via LAN 30
Troubleshooting 32

Accessories

Supplied accessories

Remote control
<RRMCGA592WJSA>

Two R-6 batteries
("AA" size, UM/SUM-3,
HP-7 or similar)

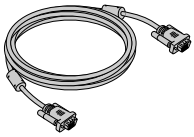

RGB cable
(10′ (3.0 m))
<QCNWGA045WJPZ>

Lens cap (attached)
<CCAPHA024WJSA>

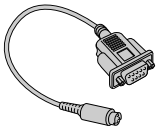

DIN-D-sub RS-232C adaptor
(5 $^{57}/_{64}$″ (15 cm))
<QCNWGA091WJPZ>

Storage case
<GCASNA014WJSA>

Power cord*

(1)



For U.S. and
Canada, etc.
(6′ (1.8 m))
<QACCDA007WJPZ>

(2)



For Europe,
except U.K.
(6′ (1.8 m))
<QACCVA011WJPZ>

(3)



For U.K. and
Singapore
(6′ (1.8 m))
<QACCBA036WJPZ>

(4)



For Australia, New
Zealand and Oceania
(6′ (1.8 m))
<QACCLA018WJPZ>

* Use the power cord that corresponds to the wall outlet in your country.
- Operation manual (this manual <TINS-D161WJZZ> and CD-ROM <UDSKAA090WJZZ>)

Note
- Codes in "< >" are Replacement parts codes.

Optional accessories

■ 3 RCA to mini D-sub 15 pin cable (10′ (3.0 m))	AN-C3CP2
■ Remote receiver	AN-MR2
■ Lamp unit	AN-F310LP
■ Ceiling-mount bracket	AN-XRCM30 (for U.S.A.) AN-60KT
■ Extension tube	AN-TK201 AN-TK202

Note
- Some of the optional accessories may not be available depending on the region. Please check with your nearest Sharp Authorized Projector Dealer or Service Center.

Part Names and Functions

Numbers in refer to the main pages in this operation manual where the topic is explained.

Projector

Top View

Power indicator 26 55

STANDBY/ON button 26
For turning the power on and putting the projector into standby mode.

ENTER button 39
For setting items selected or adjusted on the menu.

KEYSTONE button 29
For entering the Keystone Correction mode.

26 55 Lamp indicator

55 Temperature warning indicator

30 VOL (Volume) buttons (–◀/▶+)
For adjusting the speaker sound level.

30 INPUT buttons (▲/▼)
For switching input mode.

39 51 MENU/HELP button
For displaying adjustment and setting screens, and help screen.

39 Adjustment buttons (▲/▼/◀/▶)
For selecting menu items.

Front View

52 Intake vent

Focus ring 27
For adjusting the focus.

27 Zoom ring
For enlarging/ reducing the picture.

15 Remote control sensor

HEIGHT ADJUST lever 28

Push both sides of the lens cap to attach or remove.

Numbers in refer to the main pages in this operation manual where the topic is explained.

Rear View

Terminals

MONITOR OUT terminal (Output terminal for computer RGB, component and DVI analog signals. Shared for COMPUTER/COMPONENT and DVI-I) Terminal for connecting a monitor. 23

DVI-I input terminal Terminal for DVI digital, computer RGB, and component signals. 21 22

COMPUTER/ COMPONENT input terminal Terminal for computer RGB and component signals. 21 22

AUDIO 1 input terminal 23

AUDIO OUT terminal Audio output terminal of equipment connected to the audio input terminal. 23

RS-232C terminal Terminal for controlling the projector using a computer. 24

S-VIDEO input terminal Terminal for connecting video equipment with an S-video terminal. 22

USB terminal Terminal connecting with the USB terminal on the computer for using the supplied remote control as the computer mouse. 35

LAN terminal Terminal for controlling the projector using a computer via network. 25

AUDIO 2 input terminal 23

VIDEO input terminal Terminal for connecting video equipment. 22

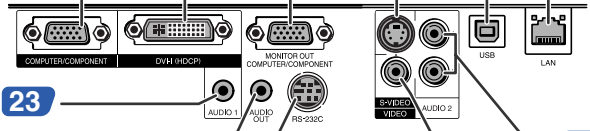

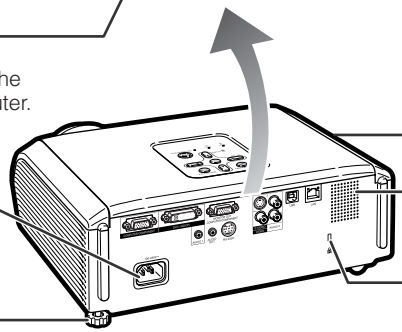

Exhaust vent 52

Speaker 46

AC socket Connect the supplied power cord. 25

Kensington Security Standard connector

Rear adjustment foot 28

Using the Kensington Lock

- This projector has a Kensington Security Standard connector for use with a Kensington MicroSaver Security System. Refer to the information that came with the system for instructions on how to use it to secure the projector.

Part Names and Functions (Continued)

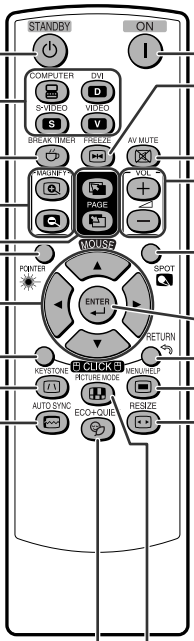

STANDBY button **26**
For putting the projector into the standby mode.

COMPUTER, DVI, S-VIDEO, VIDEO buttons **30**
For switching to the respective input modes.

BREAK TIMER button **33**
For displaying the break time.

MAGNIFY buttons **34**
For enlarging/reducing part of the image.

PAGE UP/PAGE DOWN buttons **35**
Same as the [Page Down] and [Page Up] keys on a computer keyboard, when with the USB connection (using a USB cable or the optional remote receiver).

POINTER button **33**
For displaying the pointer.

MOUSE/Adjustment buttons (▲/▼/◀/▶) **35** **39**
- For moving the computer cursor when with the USB connection (using a USB cable or the optional remote receiver).
- For selecting and adjusting menu items.

L-CLICK button **35**
For the Left click when with the USB connection (using a USB cable or the optional remote receiver).

KEYSTONE button **29**
For entering the Keystone Correction mode.

AUTO SYNC button **34**
For automatically adjusting images when connected to a computer.

ECO+QUIET button **33**
For lowering the noise of the cooling fan and extending the lamp life.

ON button **26**
For turning the power on.

FREEZE button **34**
For freezing images.

AV MUTE button **30**
For temporarily displaying a black screen and turning off the sound.

VOL +/– (Volume) buttons **30**
For adjusting the speaker sound level.

SPOT button **33**
For displaying the spotlight.

ENTER button **39**
For setting items selected or adjusted on the menu.

R-CLICK/RETURN button **35** **39**
- For the Right click when with the USB connection (using a USB cable or the optional remote receiver).
- For returning to the previous menu screen during menu operations.

MENU/HELP button **39** **51**
For displaying adjustment and setting screens, and help screen.

RESIZE button **31**
For switching the picture size (NORMAL, BORDER, etc.).

PICTURE MODE button **34**
For selecting the appropriate picture.

Inserting the Batteries

1 **Pull down the tab on the cover and remove the cover towards the direction of the arrow.**

2 **Insert the batteries.**
- Insert the batteries making sure the polarities correctly match the ⊕ and ⊖ marks inside the battery compartment.

3 **Insert the lower tab of the cover into the opening, and lower the cover until it clicks in place.**

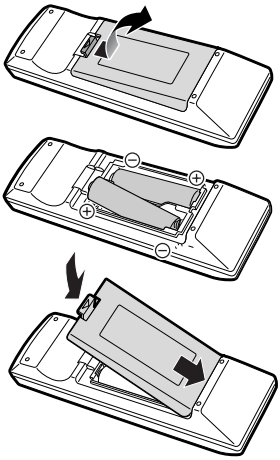

Incorrect use of the batteries may cause them to leak or explode. Please follow the precautions below.

Caution

- Danger of explosion if battery is incorrectly replaced.
  Replace only with alkaline or manganese batteries.
- Insert the batteries making sure the polarities correctly match the ⊕ and ⊖ marks inside the battery compartment.
- Batteries of different types have different properties, therefore do not mix batteries of different types.
- Do not mix new and old batteries.
  This may shorten the life of new batteries or may cause old batteries to leak.
- Remove the batteries from the remote control once they have run out, as leaving them in can cause them to leak.
  Battery fluid from leaked batteries is harmful to skin, therefore ensure you wipe them first and then remove them using a cloth.
- The batteries included with this projector may run down in a short period, depending on how they are kept. Be sure to replace them as soon as possible with new batteries.
- Remove the batteries from the remote control if you will not be using the remote control for a long time.
- Comply with the rules (ordinance) of each local government when disposing of worn-out batteries.

Usable Range

The remote control can be used to control the projector within the ranges shown in the illustration.

Note

- The signal from the remote control can be reflected off a screen for easy operation. However, the effective distance of the signal may differ depending on the screen material.

When using the remote control

- Ensure that you do not drop it or expose it to moisture or high temperature.
- The remote control may malfunction under a fluorescent lamp. In this case, move the projector away from the fluorescent lamp.

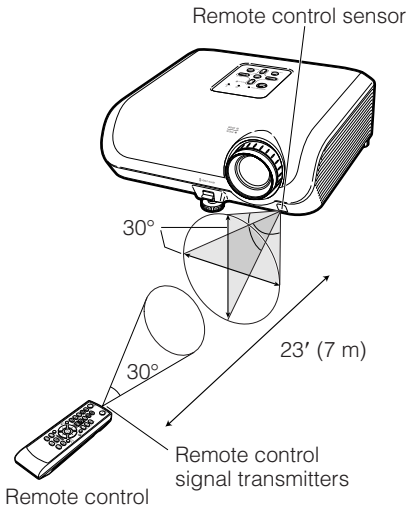

Quick Start

This section shows the basic operation (projector connecting with the computer). For details, see the page described below for each step.

Setup and Projection

In this section, connection of the projector and the computer is explained using one example.

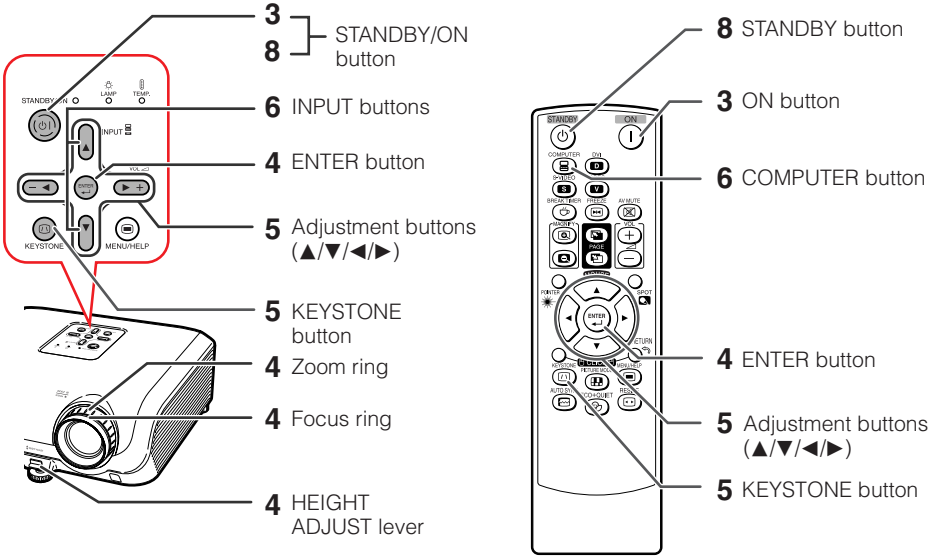

1. Place the projector facing a wall or a screen

➡P. 18

2. Connect the projector to the computer and plug the power cord into the AC socket of the projector

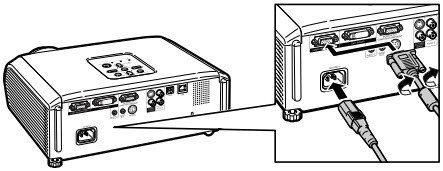

When connecting equipment other than a computer, see pages 22 and 23.

➡PP. 21, 24, 25

3. Remove the lens cap and turn the projector on

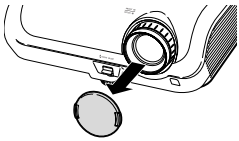

On the projector

On the remote control

➡P. 26

4. Adjust the projected image with the Setup Guide

1 After the projector turns on, the Setup Guide appears.
(When "Setup Guide" is set to "On". See page **45**.)

2 Follow the steps in the Setup Guide and adjust the focus, picture size, and height (angle).

3 After adjusting the focus, height (angle) and picture size, press **ENTER** to finish the Setup Guide.

➡PP. **27, 28**

5. Correct trapezoidal distortion

Correcting trapezoidal distortion using Keystone Correction.

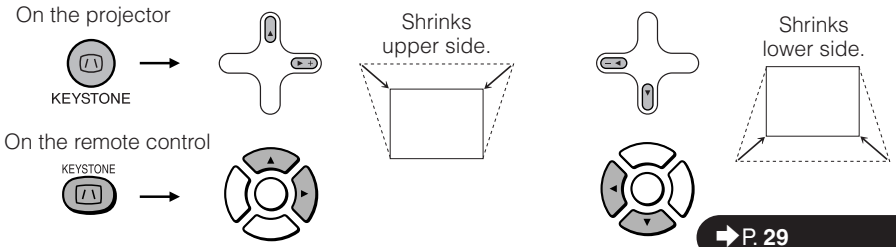

➡P. **29**

6. Select the INPUT mode

Select the "COMPUTER" using **INPUT** on the projector or **COMPUTER** on the remote control.

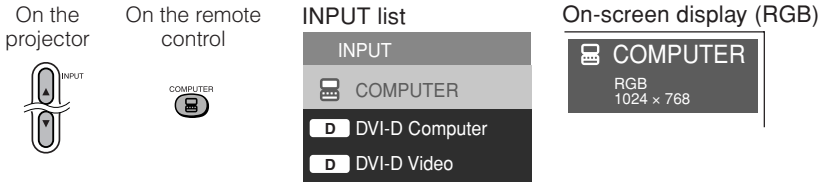

- When you press **INPUT** on the projector, the INPUT list appears.
  Press ▲/▼ to switch the INPUT mode.

➡P. **30**

7. Turn the computer on

8. Turn the power off

Press **STANDBY/ON** on the projector or **STANDBY** on the remote control, and then press the button again while the confirmation message is displayed to put the projector into standby mode.

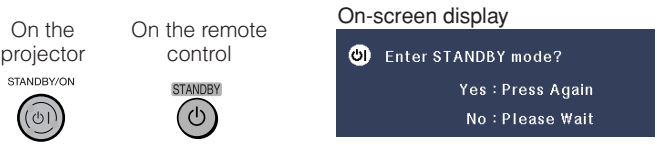

➡P. **26**

Setting up the Projector

Setting up the Projector

For optimal image quality, position the projector perpendicular to the screen with the projector's feet flat and level. Doing so will eliminate the need for Keystone correction and provide the best image quality. (See page 29.)

Standard Setup (Front Projection)

■ Place the projector at the required distance from the screen according to the desired picture size. (See page 20.)

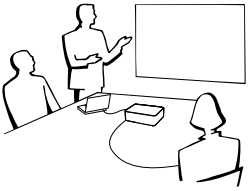

Example of standard setup

Side View

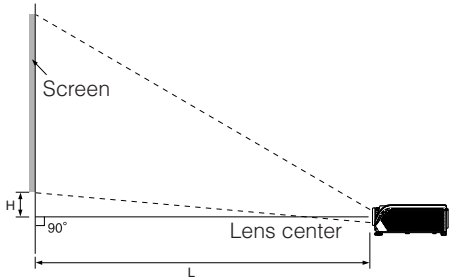

Note

• Refer to page 20 for additional information concerning "Screen Size and Projection Distance".

Ceiling-mount Setup

■ It is recommended that you use the optional Sharp ceiling-mount bracket for this installation. Before mounting the projector, contact your nearest Sharp Authorized Projector Dealer or Service Center to obtain the recommended ceiling-mount bracket (sold separately).

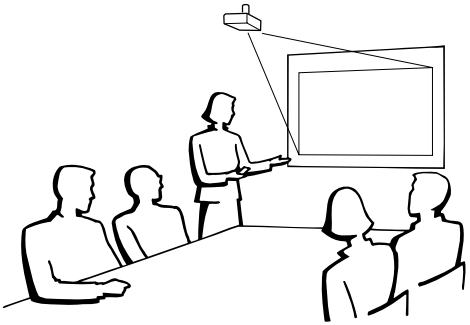

Projection (PRJ) Mode

The projector can use any of the 4 projection modes shown in the diagram below. Select the mode most appropriate for the projection setting in use. (You can set the PRJ mode in “SCR-ADJ” menu. See page 45.)

■ Table mounted, front projection
[Menu item → “Front”]

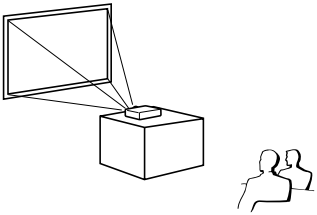

■ Ceiling mounted, front projection
[Menu item → “Ceiling + Front”]

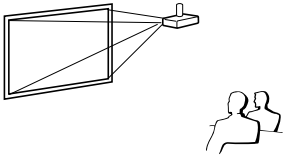

■ Table mounted, rear projection
(with a translucent screen)
[Menu item → “Rear”]

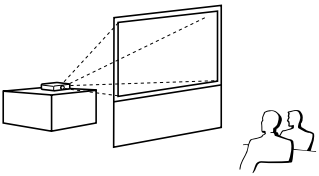

■ Ceiling mounted, rear projection
(with a translucent screen)
[Menu item → “Ceiling + Rear”]

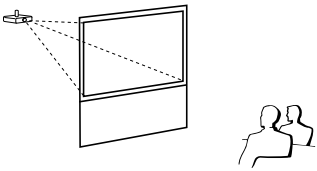

Indication of the Projection Image Size and Projection Distance

Example: NORMAL Mode (4:3)

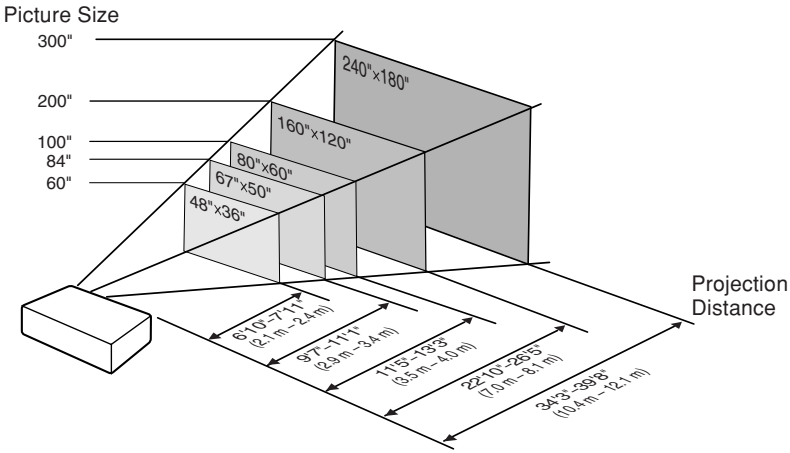

Setup

Screen Size and Projection Distance

NORMAL Mode (4:3)

Picture (Screen) size			Projection distance [L]		Distance from the lens center to the bottom of the image [H]
Diag. [χ]	Width	Height	Minimum [L1]	Maximum [L2]	
300″ (762 cm)	610 cm (240″)	457 cm (180″)	10.4 m (34′ 3″)	12.1 m (39′ 8″)	48 cm (19 5/64″)
270″ (686 cm)	549 cm (216″)	411 cm (162″)	9.4 m (30′ 10″)	10.9 m (35′ 8″)	44 cm (17 11/64″)
250″ (635 cm)	508 cm (200″)	381 cm (150″)	8.7 m (28′ 7″)	10.1 m (33′ 1″)	40 cm (15 57/64″)
200″ (508 cm)	406 cm (160″)	305 cm (120″)	7.0 m (22′ 10″)	8.1 m (26′ 5″)	32 cm (12 23/32″)
150″ (381 cm)	305 cm (120″)	229 cm (90″)	5.2 m (17′ 2″)	6.0 m (19′ 10″)	24 cm (9 17/32″)
100″ (254 cm)	203 cm (80″)	152 cm (60″)	3.5 m (11′ 5″)	4.0 m (13′ 3″)	16 cm (6 23/64″)
84″ (213 cm)	171 cm (67″)	128 cm (50″)	2.9 m (9′ 7″)	3.4 m (11′ 1″)	14 cm (5 11/32″)
80″ (203 cm)	163 cm (64″)	122 cm (48″)	2.8 m (9′ 2″)	3.2 m (10′ 7″)	13 cm (5 3/32″)
72″ (183 cm)	146 cm (58″)	110 cm (43″)	2.5 m (8′ 3″)	2.9 m (9′ 6″)	12 cm (4 37/64″)
60″ (152 cm)	122 cm (48″)	91 cm (36″)	2.1 m (6′ 10″)	2.4 m (7′ 11″)	10 cm (3 13/16″)
40″ (102 cm)	81 cm (32″)	61 cm (24″)	1.4 m (4′ 7″)	1.6 m (5′ 3″)	6 cm (2 35/64″)

χ: Picture size (diag.) (in/cm)
L: Projection distance (m/ft)
L1: Minimum projection distance (m/ft)
L2: Maximum projection distance (m/ft)
H: Distance from the lens center to the bottom of the image (cm/in)

The formula for picture size and projection distance

[m/cm]	**[Feet/inches]**
L1 (m) = 0.03482χ	L1 (ft) = 0.03482χ / 0.3048
L2 (m) = 0.04029χ	L2 (ft) = 0.04029χ / 0.3048
H (cm) = 0.16151χ	H (in) = 0.16151χ / 2.54

STRETCH Mode (16:9)

Picture (Screen) size			Projection distance [L]		Distance from the lens center to the bottom of the image [H]	Adjustable range of image position [S]
Diag. [χ]	Width	Height	Minimum [L1]	Maximum [L2]		
250″ (635 cm)	553 cm (218″)	311 cm (123″)	9.5 m (31′ 1″)	11.0 m (36′ 0″)	96 cm (37 3/4″)	±52 cm (±20 27/64″)
225″ (572 cm)	498 cm (196″)	280 cm (110″)	8.5 m (28′ 0″)	9.9 m (32′ 5″)	86 cm (33 31/32″)	±47 cm (±18 25/64″)
200″ (508 cm)	443 cm (174″)	249 cm (98″)	7.6 m (24′ 11″)	8.8 m (28′ 10″)	77 cm (30 13/64″)	±42 cm (±16 11/32″)
150″ (381 cm)	332 cm (131″)	187 cm (74″)	5.7 m (18′ 8″)	6.6 m (21′ 7″)	58 cm (22 41/64″)	±31 cm (±12 1/4″)
133″ (338 cm)	294 cm (116″)	166 cm (65″)	5.0 m (16′ 7″)	5.8 m (19′ 2″)	51 cm (20 5/64″)	±28 cm (±10 7/8″)
106″ (269 cm)	235 cm (92″)	132 cm (52″)	4.0 m (13′ 2″)	4.7 m (15′ 3″)	41 cm (16″)	±22 cm (±8 21/32″)
100″ (254 cm)	221 cm (87″)	125 cm (49″)	3.8 m (12′ 5″)	4.4 m (14′ 5″)	38 cm (15 3/32″)	±21 cm (±8 11/64″)
92″ (234 cm)	204 cm (80″)	115 cm (45″)	3.5 m (11′ 5″)	4.0 m (13′ 3″)	35 cm (13 57/64″)	±19 cm (±7 33/64″)
84″ (213 cm)	186 cm (73″)	105 cm (41″)	3.2 m (10′ 5″)	3.7 m (12′ 1″)	32 cm (12 11/16″)	±17 cm (±6 55/64″)
80″ (203 cm)	177 cm (70″)	100 cm (39″)	3.0 m (9′ 11″)	3.5 m (11′ 6″)	31 cm (12 5/64″)	±17 cm (±6 17/32″)
72″ (183 cm)	159 cm (63″)	90 cm (35″)	2.7 m (9′ 0″)	3.2 m (10′ 4″)	28 cm (10 7/8″)	±15 cm (±5 57/64″)
60″ (152 cm)	133 cm (52″)	75 cm (29″)	2.3 m (7′ 6″)	2.6 m (8′ 8″)	23 cm (9 1/16″)	±12 cm (±4 29/32″)
40″ (102 cm)	89 cm (35″)	50 cm (20″)	1.5 m (5′ 0″)	1.8 m (5′ 9″)	15 cm (6 3/64″)	± 8 cm (±3 17/64″)

χ: Picture size (diag.) (in/cm)
L: Projection distance (m/ft)
L1: Minimum projection distance (m/ft)
L2: Maximum projection distance (m/ft)
H: Distance from the lens center to the bottom of the image (cm/in)
S: Adjustable range of image position (cm/in) See page 44.

The formula for picture size and projection distance

[m/cm]	**[Feet/inches]**
L1 (m) = 0.03794χ	L1 (ft) = 0.03794χ / 0.3048
L2 (m) = 0.04389χ	L2 (ft) = 0.04389χ / 0.3048
H (cm) = 0.3835χ	H (in) = 0.3835χ / 2.54
S (cm) = ±0.20754χ	S (in) = ±0.20754χ / 2.54

Note

- Refer to page 18 concerning “Projection distance [L]” and “Distance from the lens center to the bottom of the image [H]”.
- Allow a margin of error in the values in the diagrams above.

Connecting the Projector to Other Equipment

Before connecting, ensure that the power cord of the projector is unplugged from the AC outlet and turn off the equipment to be connected. After making all connections, turn on the projector and then the other pieces of equipment. When connecting a computer, ensure that it is the last equipment to be turned on after all the connections are made.

> **IMPORTANT:**
> Ensure that the appropriate input mode has been selected on the projector before you turn on the connected equipment.

- For more details of connection and cables, refer to the operation manual of the connecting equipment.
- You may need other cables or connectors not listed below.

Terminals on the Projector

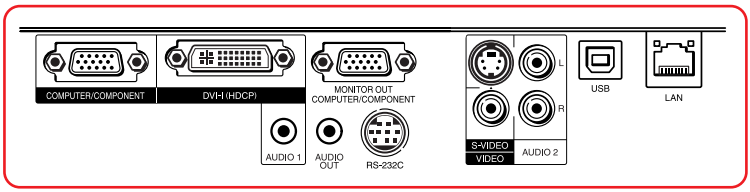

Equipment	Terminal on connected equipment	Cable	Terminal on the projector
Computer	RGB output terminal	RGB cable (supplied) 	COMPUTER/ COMPONENT 
	RGB output terminal	mini D-sub 15 pin to DVI cable (commercially available) 	DVI-I
	DVI digital output terminal 	DVI Digital cable (commercially available) 	

Note

- See page **61** "Computer Compatibility Chart" for a list of computer signals compatible with the projector. Use with computer signals other than those listed may cause some of the functions to not work.
- A Macintosh adaptor may be required for use with some Macintosh computers. Contact your nearest Macintosh Dealer.
- **Depending on the computer you are using, an image may not be projected unless the computer's external output port is switched on (e.g. Press "Fn" and "F5" keys simultaneously when using a SHARP notebook computer).** Refer to the specific instructions in your computer's operation manual to enable your computer's external output port.

Connecting the Projector to Other Equipment (Continued)

Equipment	Terminal on connected equipment	Cable	Terminal on the projector
Video equipment	HDMI output terminal	HDMI to DVI cable (commercially available)	DVI-I
	DVI digital output terminal	DVI Digital cable (commercially available)	
	Component video output terminal	3 RCA to mini D-sub 15 pin cable (optional, AN-C3CP2)	COMPUTER/ COMPONENT
	S-video output terminal	S-video cable (commercially available)	S-VIDEO
	Video output terminal	Video cable (commercially available)	VIDEO
Camera/Video game	Component video output terminal	Cables for a camera or a video game/3 RCA to mini D-sub 15 pin cable (optional, AN-C3CP2) — RCA adaptor plug (commercially available)	COMPUTER/ COMPONENT
	S-video output terminal	Cables for a camera or a video game	S-VIDEO
	Video output terminal	Cables for a camera or a video game	VIDEO

Note

- While the projector is connected to video equipment that has an HDMI output terminal, only the video signal can be input to the projector. (Connect the AUDIO input terminal for audio input.)
- Depending on specifications of video equipment or HDMI to DVI digital cable, the signal transmission may not work property. (The HDMI specification does not support all connections to video equipment that has HDMI digital output terminal using HDMI to DVI digital cable.)
- For details on compatibility for connection, see support information on DVI connection provided by the video equipment manufacturer.
- When you connect video equipment with a 21-pin RGB output (Euro-scart) to the projector, use a commercially available cable that fits in the projector terminal you want to connect.
- The projector does not support RGBC signals via the Euro-scart.

Equipment	Terminal on connected equipment	Cable	Terminal on the projector
Audio equipment	**ø3.5 mm audio output terminal**	**ø3.5 mm stereo or mono audio cable (commercially available or available as Sharp service part QCNWGA038WJPZ)**	**AUDIO 1** AUDIO 1
	RCA audio output terminal	**RCA audio cable (commercially available)**	**AUDIO 2** L R AUDIO 2
	Audio output terminal	**Cables for a camera or a video game**	
Monitor	**RGB input terminal**	**RGB cable (supplied or commercially available)**	**MONITOR OUT** MONITOR OUT COMPUTER/COMPONENT
Amplifier	**ø3.5 mm audio input terminal**	**ø3.5 mm stereo or mono audio cable (commercially available or available as Sharp service part QCNWGA038WJPZ)**	**AUDIO OUT** AUDIO OUT
	RCA audio input terminal	**ø3.5 mm stereo minijack to RCA audio cable (commercially available)**	

Note

- When using the ø3.5 mm mono audio cable, the volume level will be half of when using the ø3.5 mm stereo audio cable.
- You can select “Audio 1” or “Audio 2” for “Audio Input” in the “PRJ-ADJ” menu. (See page **47**.)
- RGB signals and Component signals can be output to the monitor.

Controlling the Projector by a Computer

When the RS-232C terminal on the projector is connected to a computer with a DIN-D-sub RS-232C adaptor and an RS-232C serial control cable (cross type, commercially available), the computer can be used to control the projector and check the status of the projector. Refer to the “SETUP MANUAL” contained on the supplied CD-ROM for “RS-232C Specifications and Commands”.

When connecting to a computer using an RS-232C serial control cable and a DIN-D-sub RS-232C adaptor

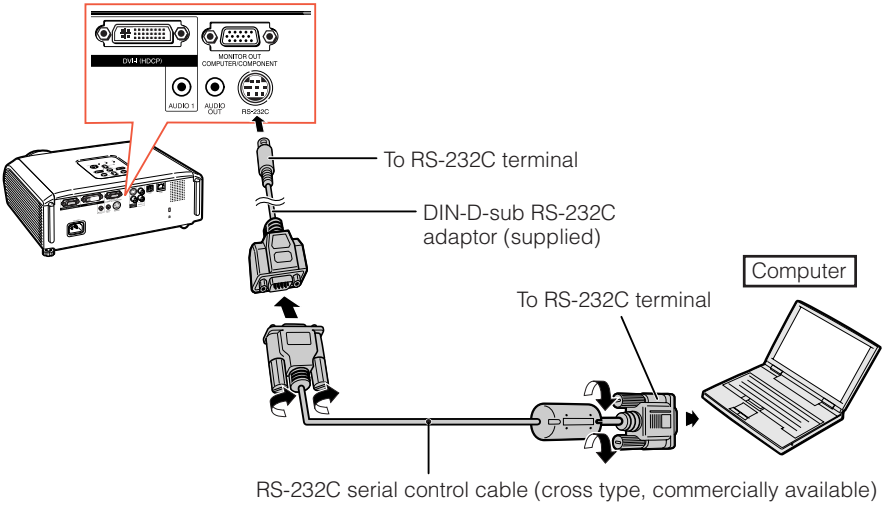

Note

- The RS-232C function may not operate if your computer terminal is not correctly set up. Refer to the operation manual of the computer for details.
- Refer to pages **2** to **8** of the “SETUP MANUAL” contained on the supplied CD-ROM for “Connecting Pin Assignments” and “RS-232C Specifications and Commands”.

Info

- Do not connect the RS-232C cable to a port other than the RS-232C terminal on the computer. This may damage your computer or projector.
- Do not connect or disconnect an RS-232C serial control cable to or from the computer while it is on. This may damage your computer.

When connecting to the LAN terminal using a LAN cable

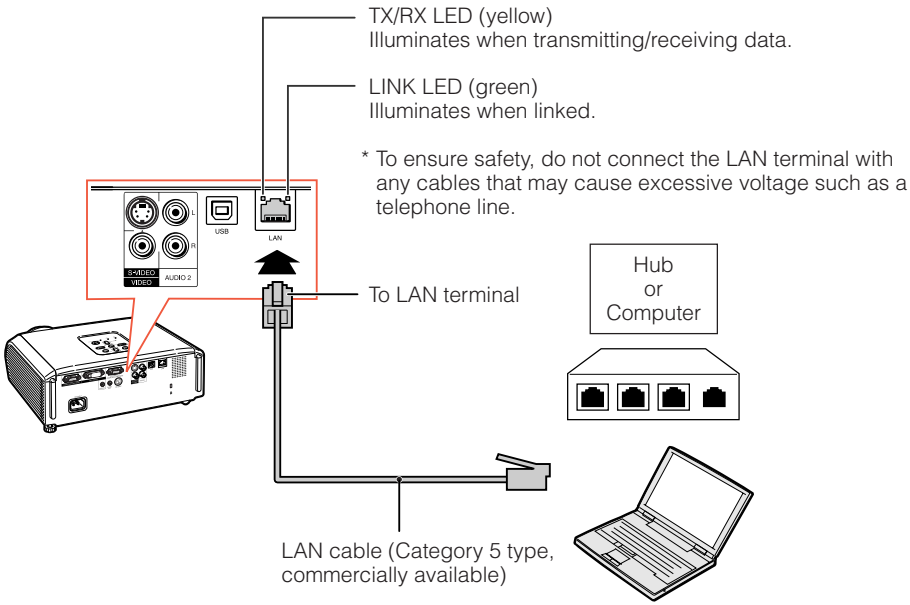

Note

- When connecting to a hub, use a straight-through Category 5 (CAT.5) type cable (commercially available).
- When connecting to a computer, use a cross-over Category 5 (CAT.5) type cable (commercially available).

Connecting the Power Cord

Plug the supplied power cord into the AC socket on the rear of the projector. Then plug into AC outlet.

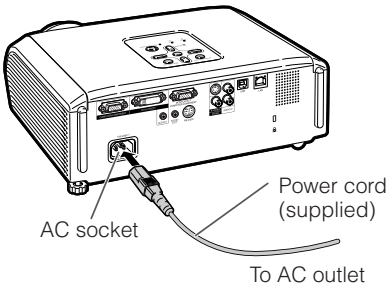

Turning the Projector On/Off

Turning the Projector on

Note that the connections to external equipment and power outlet should be done before performing the operations written below. (See pages 21 to 25.)

Remove the lens cap and press STANDBY/ON on the projector or ON on the remote control.

- The power indicator illuminates green.
- After the lamp indicator illuminates, the projector is ready to start operation.

Note

- **About the Lamp Indicator**
  The lamp indicator illuminates to indicate the status of the lamp.
  Green: The lamp is on.
  Blinking in green: The lamp is warming up.
  Red: The lamp is shut down abnormally or the lamp should be replaced.
- When switching on the projector, a slight flickering of the image may be experienced within the first minute after the lamp has been illuminated. This is normal operation as the lamp's control circuitry is stabilising the lamp output characteristics. It should not be regarded as faulty operation.
- If the projector is put into standby mode and immediately turned on again, the lamp may take some time to start projection.
- When System Lock is set, the keycode input box appears. To cancel the keycode setting, input the keycode that you have already set. See page 47 for details.

Info

- **When "Auto Restart" is set to "On":**
  If the power cord is unplugged from the outlet or the breaker switch is turned off when the projector is on, then the projector automatically turns on when the power cord is plugged into the AC outlet or the breaker switch is turned on. (See page 46.)
- English is the factory default language. If you want to change the on-screen display to another language, change the language according to the procedure on page 45.

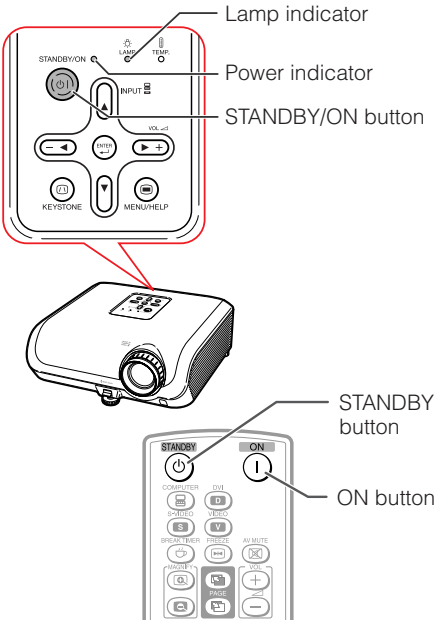

On-screen display (confirmation message)

Turning the Power off (Putting the Projector into Standby Mode)

Press STANDBY/ON on the projector or STANDBY on the remote control, then press that button again while the confirmation message is displayed, to put the projector into standby mode.

- The projector cannot be turned on while cooling.

Info

- **Direct Power Off function:**
  You can unplug the power cord from the AC outlet even if the cooling fan is still running.
- Even if you unplug the power cord after projector operation, the cooling fan continues to run for a while.

About the Setup Guide

After turning on the projector, the Setup Guide screen appears to assist you with projector setup.

Guidance items
1 FOCUS
2 HEIGHT ADJUST
3 ZOOM

Press ENTER to exit the Setup Guide screen.

Note

- The Setup Guide screen automatically highlights the items in the following order:

  1 FOCUS → 2 HEIGHT ADJUST → 3 ZOOM → 4 ENTER

  However, you can adjust the focus, height (angle), or zoom regardless of the highlighted item.
- If you do not want to display the Setup Guide for the next time, set "Menu" - "SCR - ADJ" - "Setup Guide" to "Off". (See page 45.)

Setup Guide screen

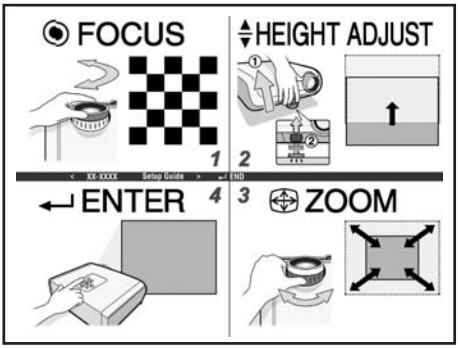

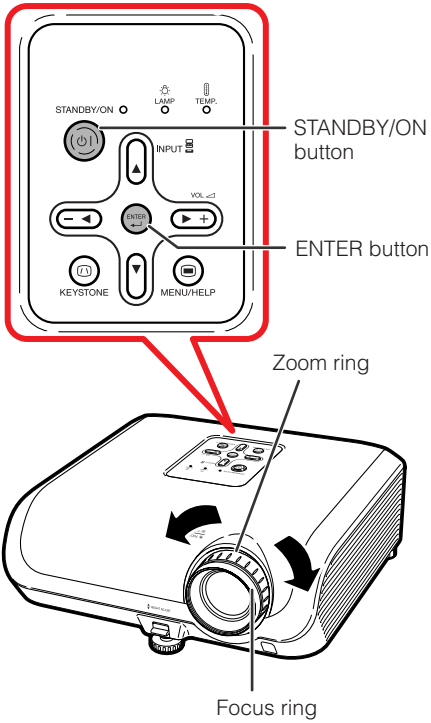

Adjusting the Projected Image

1 Adjusting the Focus

You can adjust the focus with the focus ring on the projector.

Rotate the focus ring to adjust the focus while watching the projected image.

2 Adjusting the Picture Size

You can adjust the picture size using the zoom ring on the projector.

Rotate the zoom ring to enlarge or shrink the picture size.

3 Adjusting the Height

The height of the projector can be adjusted using the adjustment feet at the front and rear of the projector.

When the screen is above the projector, the projection image can be made higher by adjusting the projector.

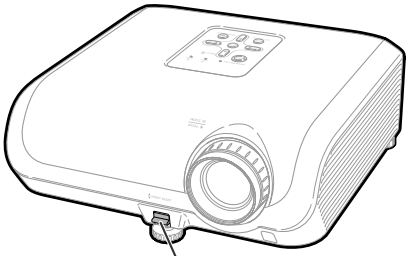

1 **Lift the projector to adjust its height while lifting the HEIGHT ADJUST lever.**

2 **Remove your hands from the HEIGHT ADJUST lever of the projector after its height has been finely adjusted.**

- The angle of projection is adjustable up to 8 degrees from the surface on which the projector is placed.

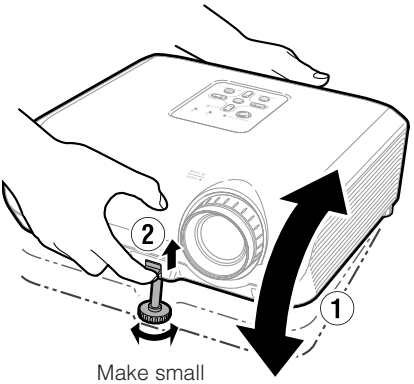

Make small adjustments.

3 **Use the rear adjustment foot to make the projector level.**

- The projector is adjustable ±1 degree from the standard position.

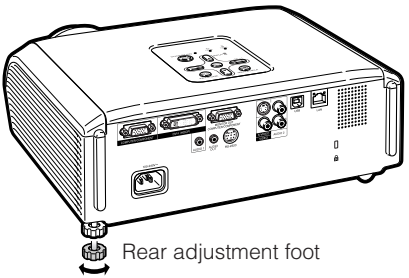

Rear adjustment foot

Note

- When adjusting the height of the projector, trapezoidal distortion occurs. Follow the procedures in Keystone Correction to correct the distortion. (See pages **29** and **44**.)

Info

- Do not apply too much pressure on the projector when the front adjustment foot comes out.
- When lowering the projector, be careful not to get your fingers caught in the area between the adjustment foot and the projector.
- Hold the projector firmly while lifting or carrying.
- Do not hold by the lens area.

Correcting Trapezoidal Distortion

When the image is projected either from the top or from the bottom towards the screen at an angle, the image becomes distorted trapezoidally. The function for correcting trapezoidal distortion is called Keystone Correction.

Note

- The Keystone Correction can be adjusted up to an angle of approximately ±40 degrees and the screen can also be set up to an angle of approximately ±40 degrees (when the resize mode is set to "NORMAL" (see page **31**)).

1 **Press KEYSTONE to enter the Keystone Correction mode.**

- You can also display the on-screen display of the Keystone Correction mode with **KEYSTONE** on the projector.

2 **Press ▲/▶ or ◀/▼ to adjust the Keystone Correction.**

- You can also adjust the Keystone Correction using the adjustment buttons on the projector.

Note

- To return to the default setting, press **RETURN** while the on-screen display of the Keystone Correction mode is on the screen.

3 **Press KEYSTONE.**

- The on-screen display of the Keystone Correction mode will disappear.
- You can also use **KEYSTONE** on the projector.

About the Auto Keystone Correction

- The projector automatically detects tilt and the AUTO KEYSTONE feature automatically corrects trapezoidal distortion.

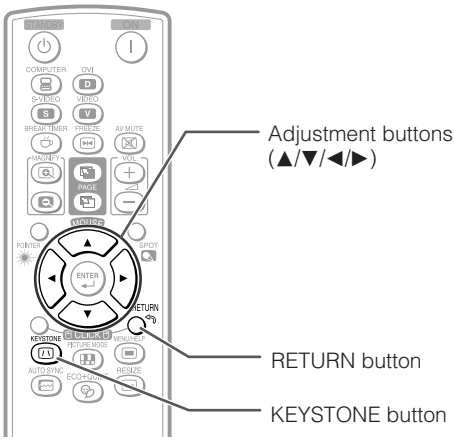

On-screen display
(Keystone Correction mode)



Shrinks upper side.
(Move the slide bar in the + direction.)



Shrinks lower side.
(Move the slide bar in the - direction.)



Info

- While adjusting the image using Keystone Correction, straight lines and the edges of the image may appear jagged.

Note

- Automatic Keystone Correction may not work well in some cases, such as when the screen is leaning, temperature is extremely high or low, or zoom is at maximum or minimum. In these cases, fine adjust the Keystone Correction following steps 1 to 3.
- You can select "On" or "Off" for the Auto Keystone Correction mode. (See page **44**.)

Switching the Input Mode

Select the appropriate input mode for the connected equipment.

Press COMPUTER, DVI, S-VIDEO or VIDEO on the remote control to select the input mode.

- When you press **INPUT** on the projector or **DVI** on the remote control, the INPUT list appears. Press ▲/▼ to switch the INPUT mode.

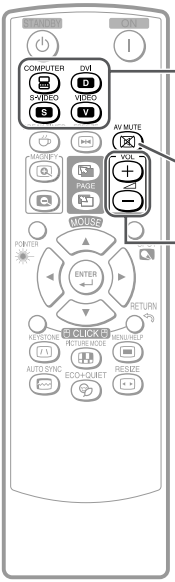

Adjusting the Volume

Press VOL +/– on the remote control or –◀/▶+ on the projector to adjust the volume.

On-screen display

Note

- Pressing **VOL–/–◀** will lower the volume.
- Pressing **VOL+/▶+** will raise the volume.
- When the projector is connected to external equipment, the volume level of the external equipment changes in accordance with the volume level of the projector. Set the projector's volume to the lowest level when turning the projector on/off or when changing the input signal.
- When you do not want to output the sound from the projector's speaker while the projector is connected to external equipment, set "Speaker" in "PRJ-ADJ" menu to "Off". (See page **46**.)

Displaying the Black Screen and Turning off the Sound Temporarily

Press AV MUTE on the remote control to temporarily display a black screen and turn off the sound.

On-screen display

Note

- Pressing **AV MUTE** again will turn the projected image back on.

Resize Mode

This function allows you to modify or customize the resize mode to enhance the input image. Depending on the input signal, you can choose a desired image.

Press RESIZE.

- See page **44** for setting on menu screen.

RESIZE button

COMPUTER

		NORMAL	FULL	DOT BY DOT	BORDER	STRETCH
4:3 aspect ratio	SVGA (800 × 600)	1024 × 768	1024 × 768	800 × 600	768 × 576	1024 × 576
	XGA (1024 × 768)			1024 × 768		
	SXGA (1152 × 864)			1152 × 864		
	SXGA+ (1400 × 1050)			1400 × 1050		
Other aspect ratios	SXGA (1280 × 1024)	968 × 768		1280 × 1024		
	1280 × 720	1024 × 576		1280 × 720	—	—
	1360 × 768	1024 × 578		1360 × 768	—	—
	1366 × 768	1024 × 576		1366 × 768	—	—
	1280 × 768	1024 × 614		1280 × 768	960 × 576	1024 × 576
	1280 × 800	1024 × 640		1280 × 800	922 × 576	

Input signal		For 4:3 screen			For 16:9 screen	
Computer	**Image type**	**NORMAL**	**FULL**	**DOT BY DOT**	**BORDER**	**STRETCH**
Resolution lower than XGA	4:3 aspect ratio		—		*	*
XGA				—		
Resolution higher than XGA						
SXGA (1280 × 1024)	5:4 aspect ratio					
1280 × 720	16:9 aspect ratio	*			—	—
1360 × 768 **1366 × 768**						
1280 × 768	16:10 aspect ratio	*			*	*
1280 × 800						

■ : Cutout area on which images cannot be projected
⬚ : Area where the signals are off screen
*The Image Shift function can be used for these images.

Image Projection (Continued)

VIDEO/DTV

Input signal		For 4:3 screen			For 16:9 screen	
Video/DTV	Image type	NORMAL	AREA ZOOM	V-STRETCH	BORDER	STRETCH
480I, 480P, 576I, 576P, NTSC, PAL, SECAM	4:3 aspect ratio				*	*
	Squeeze				*	*
	Letter box				*	*
720P, 1035I, 1080I, 1080P	16:9 aspect ratio	*			—	—
540P	16:9 aspect ratio					
	(4:3 aspect ratio in 16:9)	*				

: Cutout area on which images cannot be projected
: Area on which the image is not included in the original signals
*The Image Shift function can be used for these images.

Operating with the Remote Control

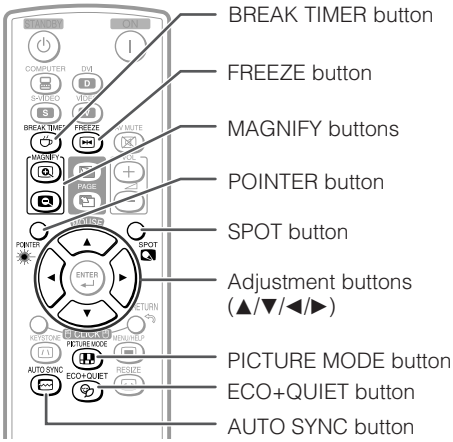

Displaying and Setting the Break Timer

1 **Press BREAK TIMER.**
- The timer starts to count down from 5 minutes.

On-screen display

5 : 0 0

2 **Press ▲/▼/◀/▶ to adjust the length of the break time.**
- **Increases with ▲ or ▶**
  5 minutes → 6 minutes → 60 minutes
- **Shortens with ◀ or ▼**
  4 minutes → 3 minutes →1 minute
- The break time can be set in units of one minute (up to 60 minutes).

Canceling the break timer display function

Press BREAK TIMER.

Note
- Break Timer does not function while the projector is operating the "Auto Sync", "FREEZE" or "AV MUTE" functions.

Displaying the Pointer

1 **Press POINTER and press ▲/▼/◀/▶ on the remote control to move the pointer.**

2 **Press POINTER again.**
- The pointer will disappear.

Using the Spot Function

1 **Press SPOT and press ▲/▼/◀/▶ on the remote control to move the spot area.**

2 **Press SPOT again.**
- The spot area will disappear.

Switching the Eco+Quiet Mode

Press ECO+QUIET to switch the Eco+Quiet mode between on and off.
- When the Eco+Quiet Mode is set to "ON", the sound of the cooling fan will turn down, the power consumption will decrease, and the lamp life will extend.

Note
- Refer to "Lamp Setting" on page 43 for details of the Eco+Quiet mode.

Auto Sync (Auto Sync Adjustment)

Auto Sync function works when detecting input signal after the projector turns on.
Press AUTO SYNC to manually adjust with Auto Sync function.

Note
- When the optimum image cannot be achieved with Auto Sync adjustment, use the help menu for manual adjustments. (See page 51.)

Freezing a Moving Image

1 **Press FREEZE.**
- The projected image is frozen.

2 **Press FREEZE again to return to the moving image from the currently connected device.**

Selecting the Picture Mode

You can select the appropriate picture mode for the projected image, such as movie or video game.

Press PICTURE MODE.
- When pressing **PICTURE MODE**, the picture mode changes in the following order:
  STANDARD → PRESENTATION → MOVIE → GAME → sRGB*

Note
- See page 41 for details on the picture mode.

* "sRGB" is displayed only when RGB signal is input.

Displaying an Enlarged Portion of an Image

Graphs, tables and other portions of projected images can be enlarged. This is helpful when providing more detailed explanations.

1 **Press MAGNIFY on the remote control.**
- Enlarges the image.
- Pressing MAGNIFY or MAGNIFY enlarges or reduces the projected image.

Note

Press .
×1 ×2 ×3 ×4
Press .

- You can change the location of the enlarged image using ▲, ▼, ◀ and ▶.

2 **Press RETURN on the remote control to cancel the operation.**
- The magnification then returns to ×1.

Note
- The selectable magnifications differ depending on the input signal.
- In the following cases, the image will return to the normal size (×1).
  - When switching the INPUT mode.
  - When **RETURN** has been pressed.
  - When the input signal is changed.
  - When the input signal resolution and refresh rate (vertical frequency) change.
  - When **RESIZE** has been pressed.

Using the Remote Control as the Wireless Computer Mouse

When connecting the projector and the computer with a USB cable, you can use the remote control as the computer mouse.

If the computer is placed too far away from the projector to be connected via the USB cable, the remote receiver (optional, AN-MR2) makes it possible to operate the projector with the remote control. For details, see the operation manual of the receiver.

Connecting with a USB cable

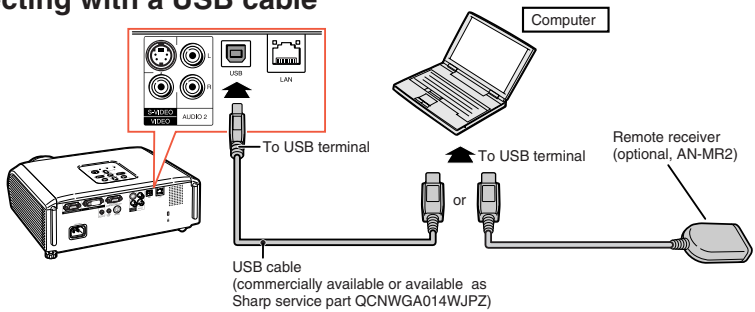

The mouse pointer can be operated in the following way after it is connected.

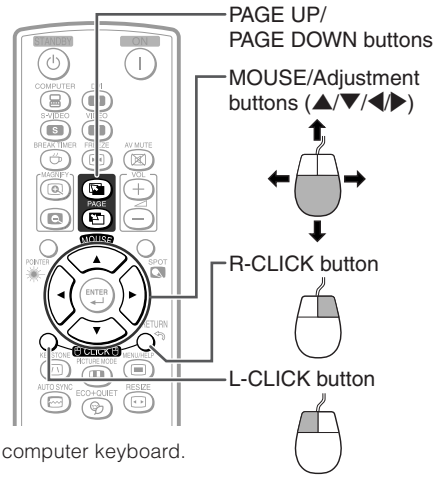

■ **When moving the cursor**
Press MOUSE/Adjustment buttons (▲/▼/◀/▶).

■ **When left-clicking**
Press **L-CLICK**.

■ **When right-clicking**
Press **R-CLICK**.

■ **When your computer supports only a one-click mouse (such as Macintosh)**
Press **L-CLICK** or **R-CLICK**.
L-CLICK and **R-CLICK** have common function.

■ **When using [Page Up] or [Page Down]**
Same as the [Page Up] and [Page Down] keys on a computer keyboard.
Press **PAGE UP** or **PAGE DOWN**.

Note

- This function only works with the Microsoft® Windows® OS and Mac OS®. However, this function does not work with the following operation systems that do not support USB.
  - Versions earlier than Windows® 95
  - Versions earlier than Windows® NT4.0
  - Versions earlier than Mac OS® 8.5
- You cannot use this function when displaying the menu screen.
- Confirm that the computer recognizes the USB connection.

Menu Items

The following shows the items that can be set in the projector.

"Picture" menu

PAGE 1

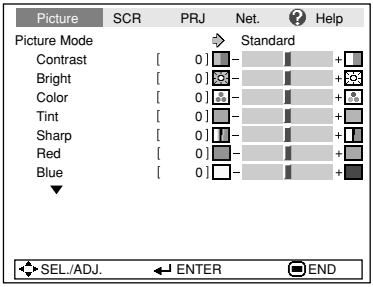

PAGE 2

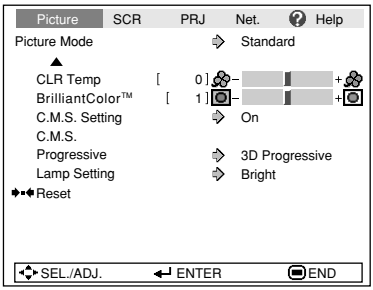

"C.M.S."

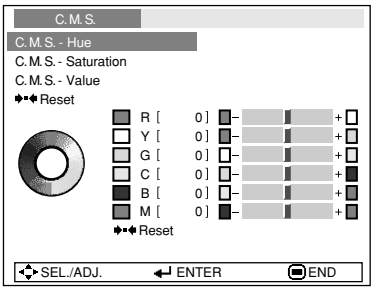

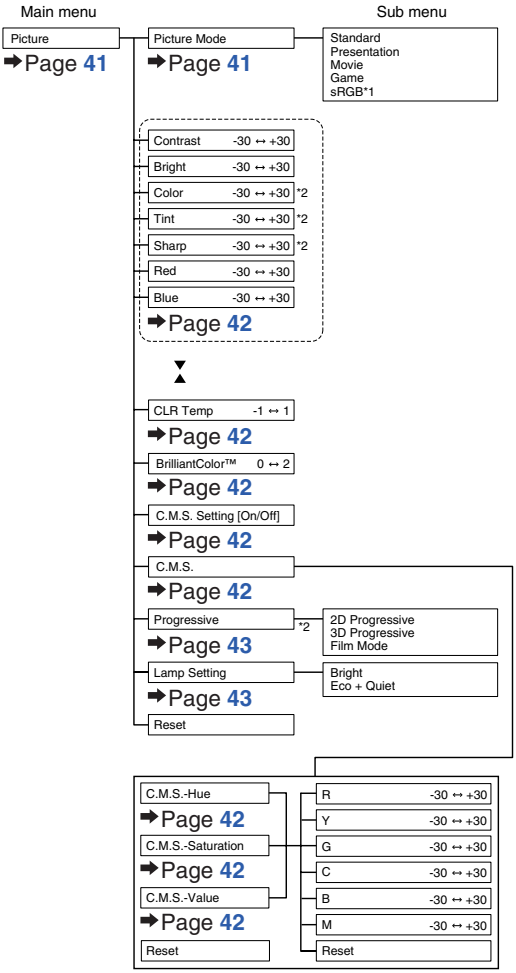

*1 Items when inputting RGB signal through COMPUTER or DVI.

*2 Items when inputting component signal through COMPUTER or DVI, or when selecting S-VIDEO or VIDEO.

“Screen adjustment (SCR-ADJ)” menu

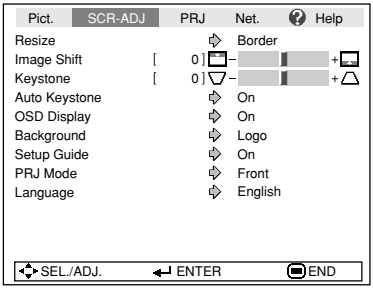

Main menu

SCR - ADJ
➡Page 44

Sub menu

- Resize ➡Page 44
  - COMPUTER/DTV: Normal, Full, Dot By Dot, Area Zoom, V-Stretch, Border, Stretch
  - VIDEO/S-VIDEO: Normal, Area Zoom, V-Stretch, Border, Stretch
- Image Shift -96 ↔ +96 ➡Page 44
- Keystone -80 ↔ +80 ➡Page 44
- Auto Keystone [On/Off] ➡Page 44
- OSD Display [On/Off] ➡Page 45
- Background ➡Page 45
  - Logo, Blue, None
- Setup Guide [On/Off] ➡Page 45
- PRJ Mode ➡Page 45
  - Front, Ceiling + Front, Rear, Ceiling + Rear
- Language ➡Page 45
  - English, Deutsch, Español, Nederlands, Français, Italiano, Svenska, Português, 汉语, 한국어, 日本語, Русский, عربي, polski, Türkçe

“Projector adjustment (PRJ-ADJ)” menu

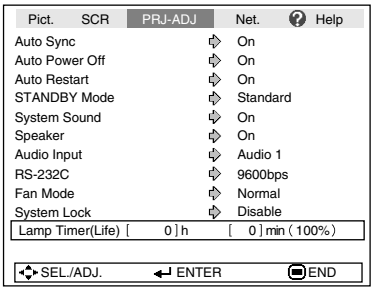

Main menu

PRJ - ADJ
➡Page 46

Sub menu

- Auto Sync [On/Off] ➡Page 46
- Auto Power Off [On/Off] ➡Page 46
- Auto Restart [On/Off] ➡Page 46
- STANDBY Mode ➡Page 46
  - Standard, Eco
- System Sound [On/Off] ➡Page 46
- Speaker [On/Off] ➡Page 46
- Audio Input ➡Page 47
  - Audio 1, Audio 2
- RS-232C ➡Page 47
  - 9600bps, 115200bps
- Fan Mode ➡Page 47
  - Normal, High
- System Lock [Enable/Disable] ➡Page 47
- Lamp Timer(Life) ➡Page 48

Menu Items (Continued)

"Network" menu

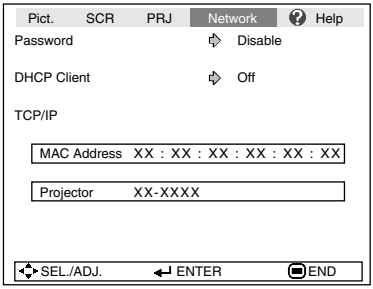

Main menu

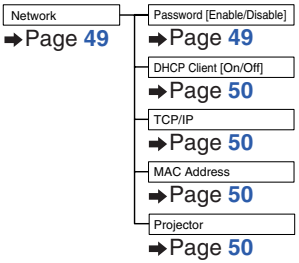

"Help" menu

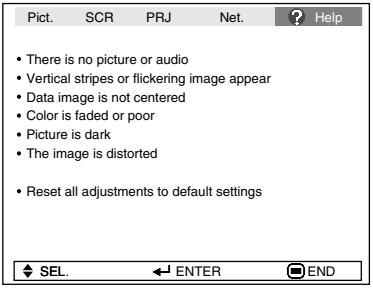

The items you can set with the "Help" menu

"Help" menu ➔ Page 51

- Vertical stripes or flickering image appear
  - Auto Sync
  - Clock
  - Phase
- Data image is not centered
  - Auto Sync
  - H-Pos
  - V-Pos
- Color is faded or poor
  - COMPUTER/COMPONENT or DVI input
    - Signal type: Auto/RGB/Component
  - S-VIDEO or VIDEO input
    - Video System: Auto/PAL/SECAM/ NTSC3.58/NTSC4.43/ PAL-M/PAL-N/PAL-60
  - DVI (Digital) input
    - Dynamic range: Auto/Standard/Enhanced

* The selectable items vary depending on the input signal and the selected input mode.

Using the Menu Screen

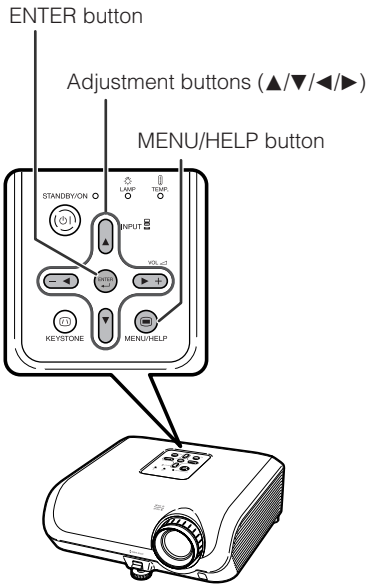

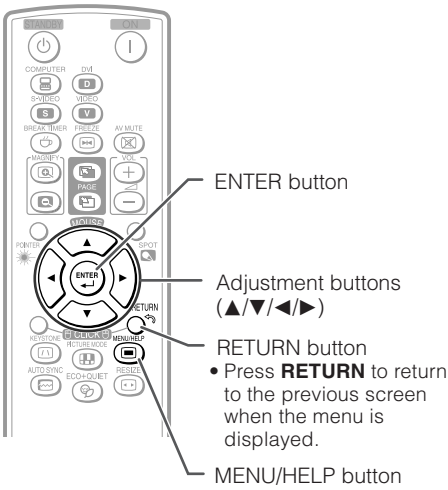

Menu Selections (Adjustments)

Example: Adjusting "Bright".
• This operation can also be performed by using the buttons on the projector.

1 **Press MENU/HELP.**
• The "Picture" menu screen for the selected input mode is displayed.

2 **Press ▶ or ◀ and select "Picture" to adjust.**

Example: "Picture" screen menu for COMPUTER (RGB) input

Menu item

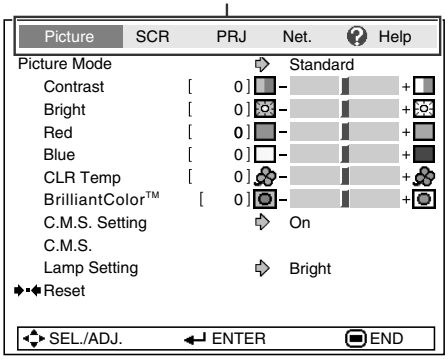

Useful Features

3 **Press ▲ or ▼ and select "Bright" to adjust.**

- The selected item is highlighted.

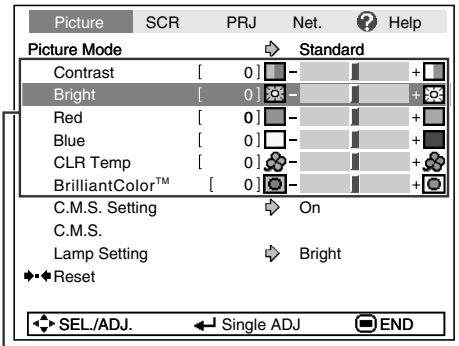

Items to be adjusted

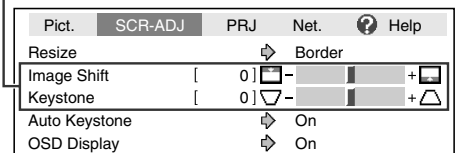

Press **ENTER**.

The item displayed by itself



To adjust the projected image while watching it

Press ENTER.

- The selected item (e.g. "Bright") is displayed by itself at the bottom of the screen.
- When pressing ▲ or ▼, the following item ("Red" after "Bright") will be displayed.

Note

- Press **ENTER** again to return to the previous screen.

4 **Press ◄ or ► to adjust the item selected.**

- The adjustment is stored.

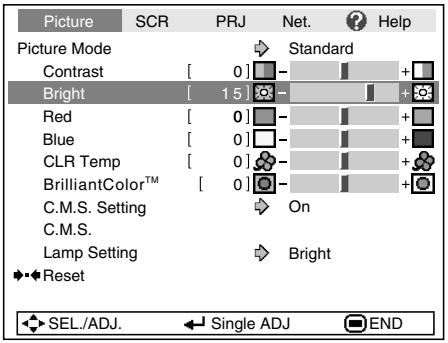

5 **Press MENU/HELP.**

- The menu screen will disappear.

Note

- Menu buttons do not function while the projector is operating the "Auto Sync", "Break Timer", "FREEZE", or "AV MUTE" functions.

Picture Adjustment (“Picture” Menu)

Menu operation ➜ Page 39

▶ PAGE1

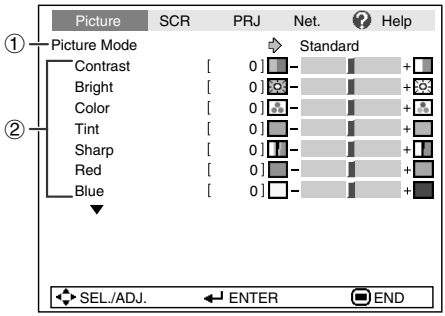

▶ PAGE2

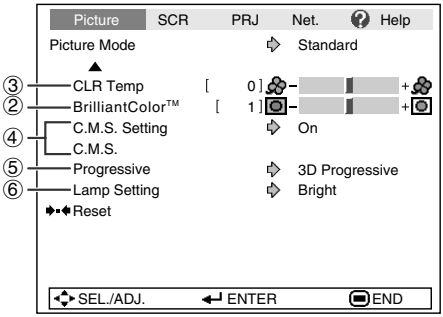

① Selecting the Picture Mode

Selectable items	Description	The default settings of each item when selecting Picture Mode		
		CLR Temp	BrilliantColor™	Lamp Setting
Standard	For standard image	0	1	Bright
Presentation	Brightens portions of image for more enhanced presentations.	0	2	Bright
Movie	Gives natural tint to the projected image.	–1	0	Eco + Quiet
Game	Gives sharpness to the projected image.	0	1	Bright
*sRGB	For high fidelity reproduction of images from a computer.	–	–	Bright

- “sRGB” is displayed only when RGB signal is input.
- You can set or adjust each item in the “Picture” menu to your preference. Any changes you make are retained in memory.

Note

- You can also press **PICTURE MODE** on the remote control to select the picture mode. (See page 34.)
- *sRGB is an international standard of color reproduction regulated by the IEC (International Electrotechnical Commission). As the fixed color area has been decided by the IEC, the images are displayed in a natural tint based on an original image, when “sRGB” is selected.
  For additional information about the sRGB function, visit “http://www.srgb.com/”.
  You cannot set the items, “Red”, “Blue”, “CLR Temp”, “BrilliantColor™”, when “sRGB” is selected.

Info

- When “sRGB” is selected, the projected image may become dark, but this does not indicate a malfunction.

Picture Adjustment ("Picture" Menu) (Continued)

Menu operation ➜ Page 39

② Adjusting the Image

Adjustment items	◀ button	▶ button
Contrast	For less contrast.	For more contrast.
Bright	For less brightness.	For more brightness.
Color*1	For less color intensity.	For more color intensity.
Tint*1	For making skin tones purplish.	For making skin tones greenish.
Sharp*1	For less sharpness.	For more sharpness.
Red*2	For weaker red.	For stronger red.
Blue*2	For weaker blue.	For stronger blue.
BrilliantColor™*2 *3	For making the effect weaker.	For making the effect stronger.

*1 Not displayed in the RGB input mode.
*2 Not adjustable/selectable when selecting "sRGB".
*3 BrilliantColor™ uses Texas Instruments' BrilliantColor™ technology. As the BrilliantColor™ level is increased, the image becomes brighter while the color reproduction is kept at a high level.

Note

- "Red", "Blue", "BrilliantColor™" and "CLR Temp" cannot be set when "sRGB" is selected.
- To reset all adjustment items, select "Reset" and press **ENTER**.

③ Adjusting the Color Temperature

Selectable items	Description
–1	For lower color temperature for warmer, reddish incandescent-like images.
0	↕
1	For higher color temperature for cooler, bluish, fluorescent-like images.

Note

- Values on "CLR Temp" are only for general standard purposes.

④ Adjusting the Colors

This function adjusts each of the six main colors that comprise the color wheel, altering their "Hue", "Saturation", or "Value".

Selectable items	Description
C.M.S.-Hue	Sets the hue of the main colors.
C.M.S.-Saturation	Sets the saturation of the main colors
C.M.S.-Value	Sets the brightness of the main colors.
Reset	The adjustments of "Hue", "Saturation" and "Value" of all colors are reset to the default setting.

Adjusting "Hue", "Saturation", or "Value".

1. Select "On" for "C.M.S. Setting" in the "Picture" menu and then press **ENTER**.
2. Select "C.M.S." in the "Picture" menu and then press **ENTER**.
3. Press ▲ or ▼ to select either "Hue", "Saturation", or "Value" and then press **ENTER**.
4. Select the color to be adjusted with ▲ or ▼ and adjust it with ◀ or ▶.

Example of adjusting the "Hue"

Main colors	◀ button	▶ button
R (Red)	Closer to magenta	Closer to yellow
Y (Yellow)	Closer to red	Closer to green
G (Green)	Closer to yellow	Closer to cyan
C (Cyan)	Closer to green	Closer to blue
B (Blue)	Closer to cyan	Closer to magenta
M (Magenta)	Closer to blue	Closer to red

- When "Saturation" is selected, the selected color becomes
  ◀: lighter. ▶: thicker.
- When "Value" is selected, the selected color becomes
  ◀: darker. ▶: brighter.
- To reset the adjustment values of each color to the default settings, select "Reset" and press **ENTER**.

Menu operation ➔ Page 39

⑤ Progressive

Selectable items	Description
2D Progressive	Useful to display fast-moving images such as sports.
3D Progressive	Useful to display relatively slow-moving images such as drama and documentary more clearly.
Film Mode	Reproduces the image of film source* clearly. Displays the optimized image of film transformed with three-two pull down (NTSC and PAL60Hz) or two-two pull down (PAL50Hz and SECAM) enhancement to progressive mode images.

* The film source is a digital video recording with the original encoded as is at 24 frames/second. The projector can convert this film source to progressive video at 60 frames/second with NTSC and PAL60Hz or at 50 frames/second with PAL50Hz and SECAM to play back a high-definition image.

Note

- In NTSC or PAL60Hz, even if the 3D Progressive mode has been set, the three-two pull down enhancement will be enabled automatically when the film source has been entered.
- When the image is blurred or noisy, switch to the optimal mode.
- When using progressive inputs, inputs are directly displayed so that 2D Progressive, 3D Progressive and Film Mode cannot be selected.

⑥ Lamp Setting

Selectable items	Brightness and Power consumption
Eco + Quiet	Approx. 80%
Bright	100%

Note

- In the Eco + Quiet mode, the fan sound and power consumption are lower than those in the Bright mode. (Projection brightness decreases as shown in the chart.) The lamp life will be approximately 3,000 hours (approximately 2,000 hours in the Bright mode).

Adjusting the Projected Image (“SCR - ADJ” Menu)

Menu operation ➜ Page 39

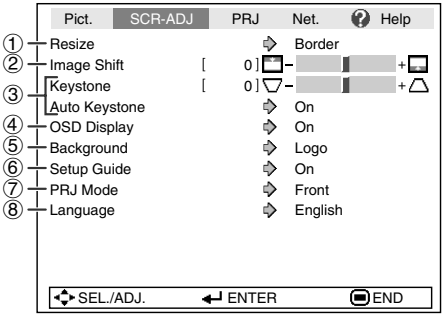

① Setting the Resize Mode

Note

- For details of the Resize mode, see pages **31** and **32**.
- You can also press **RESIZE** on the remote control to set the resize mode. (See page **31**.)

② Adjusting the Image Position

You can move the projected image vertically.

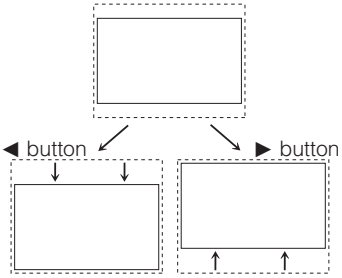

Note

- This function only works in some RESIZE modes. (See pages **31** and **32**.)

③ Keystone Correction

When the image is projected either from the top or from the bottom towards the screen at an angle, the image becomes distorted trapezoidally. The function for correcting trapezoidal distortion is called Keystone Correction.

For Auto Keystone Correction

Set “Auto Keystone” on the “SCR - ADJ” menu to “On”.

For Manual Keystone Correction

Set “Auto Keystone” on the “SCR - ADJ” menu to “Off”, select “Keystone”, and then adjust with the slide bar.

Manual Correction

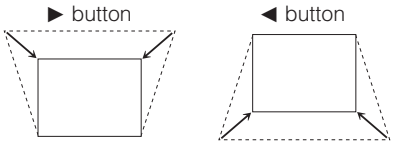

See page **29** for details of Keystone Correction.

Note

- The Keystone Correction can be adjusted up to an angle of approximately ±40 degrees (when “Resize” is set to “Normal”).
- You can also press **KEYSTONE** on the remote control or on the projector to adjust Keystone Correction.

④ Setting the On-screen Display

Selectable items	Description
On	All on-screen displays are displayed.
Off	INPUT/VOLUME/AV MUTE/FREEZE/ AUTO SYNC/RESIZE/PICTURE MODE/ ECO+QUIET/MAGNIFY/ “An invalid button has been pressed.” are not displayed.

⑤ Selecting the Background Image

Selectable items	Description
Logo	Sharp logo screen
Blue	Blue screen
None	—

⑥ Selecting the Setup Guide

Selectable items	Description
On	Displaying the Setup Guide when turning the projector on.
Off	Not displaying the Setup Guide.

⑦ Reversing/Inverting Projected Images

Selectable items	Description
Front	Normal image (Projected from the front of the screen)
Ceiling + Front	Inverted image (Projected from the front of the screen with an inverted projector)
Rear	Reversed image (Projected from the rear of the screen or with a mirror)
Ceiling + Rear	Reversed and inverted image (Projected with a mirror)

See page 19 for details of Projection (PRJ) Mode.

⑧ Selecting the On-screen Display Language

The projector can switch the on-screen display language among 15 languages.

English
Deutsch
Español
Nederlands
Français
Italiano
Svenska
Português
汉语
한국어
日本語
▼

▲
Русский
عربي
polski
Türkçe

Adjusting the Projector Function (“PRJ - ADJ” Menu)

Menu operation ➜ Page 39

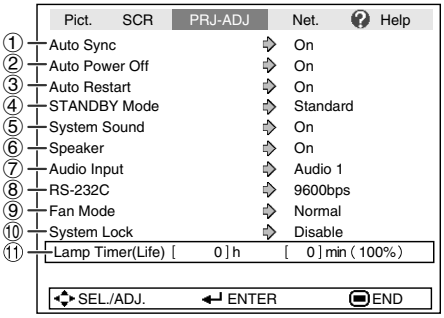

① Auto Sync (Auto Sync Adjustment)

Selectable items	Description
On	Auto Sync adjustment will occur when the projector is turned on or when the input signals are switched, when connected to a computer.
Off	Auto Sync adjustment is not automatically performed.

Note

- Auto Sync adjustment is also performed by pressing **AUTO SYNC** on the remote control.
- The Auto Sync adjustment may take some time to complete, depending on the image of the computer connected to the projector.
- When the optimum image cannot be achieved with Auto Sync adjustment, use manual adjustments. (See page 51.)

② Auto Power Off Function

Selectable items	Description
On	When no input signal is detected for more than 15 minutes, the projector will automatically enter standby mode.
Off	The Auto Power Off function will be disabled.

Note

- When the Auto Power Off function is set to “On”, 5 minutes before the projector enters standby mode, the message “Enter STANDBY mode in X min.” will appear on the screen to indicate the remaining minutes.

③ Auto Restart Function

Selectable items	Description
On	If the power cord is unplugged from the outlet or the breaker switch is turned off when the projector is on, then the projector automatically turns on when the power cord is plugged into the AC outlet or the breaker switch is turned on.
Off	The projector does not turn on automatically when the power cord is plugged into the AC outlet or the breaker switch is turned on.

④ STANDBY Mode

When set to “Eco”, power consumption is reduced in standby mode.

Selectable items	Description
Eco	The monitor output, RS-232C and Network functions are switched off in standby mode.
Standard	The monitor output, RS-232C and Network functions are activated even if the projector is in standby mode.

⑤ Setting the Confirmation Sound (System Sound)

Selectable items	Description
On	A confirmation sound is made when the projector turns on/off.
Off	No confirmation sound is made.

⑥ Speaker Setting

Selectable items	Description
On	The audio signal is output from the internal speaker.
Off	The audio signal is not output from the internal speaker.

⑦ Audio Input

This function allows you to select an appropriate combination of audio input terminals for each input mode.

Selectable items	Description
Audio 1	The AUDIO 1 input terminal is used as an audio input terminal.
Audio 2	The AUDIO 2 input terminal is used as an audio input terminal.

⑧ Selecting the Transmission Speed (RS-232C)

Make sure that both the projector and computer are set for the same baud rate.

Selectable items	Description
9600bps	Transmission speed is slow.
↕	
115200bps	Transmission speed is rapid.

⑨ Fan Mode Setting

This function changes the fan rotation speed.

Selectable items	Description
Normal	Suitable for normal environments.
High	Select this when using the projector at altitudes of approximately 1,500 meters (4,900 feet) or more.

When "Fan Mode" is set to "High", the fan rotation speeds up, and the fan noise becomes louder.

⑩ System Lock Function

This function prevents unauthorized use of the projector. Once this function is activated, users must enter the correct keycode each time the projector is turned on. **We suggest you record the keycode in a safe place where only authorized users have access.**

Info

- If you lose or forget your keycode, contact your nearest Sharp Authorized Projector Dealer or Service Center (see page 64). Even if the product warranty is valid, the keycode reset will incur a charge.

Menu operation ➜ Page 39

■ Setting/Changing the keycode

1 **Select "System Lock", then press ENTER or ▶.**

2 **Select "Next", then press ENTER.**

- **The screen for entering the keycode appears.**

3 **Press the 4 buttons on the remote control or on the projector to enter the preset keycode in "Old Code".**

- **When setting the keycode for the first time, press ▼ on the projector for four times.**

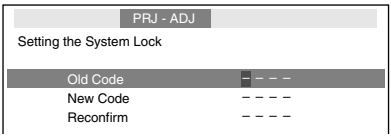

Note

- If you input a wrong keycode, the cursor returns to the first point of the "Old Code".
- The preset keycode is 4 ▼ buttons on the projector. When you press the ▼ button four times, the keycord input screen disappears.

4 **Press the 4 buttons on the remote control or on the projector to enter the new keycode in "New Code".**

Note

- You cannot use the following buttons for keycode: **STANDBY/ON, ON, STANDBY, ENTER, L-CLICK, R-CLICK/RETURN and MENU/HELP**
- **System lock function recognizes each button on the remote control or on the projector as an individual button, even if they share the same button name. If you used the buttons on the projector in setting your keycode, the keycode cannot be canceled with the remote control.**

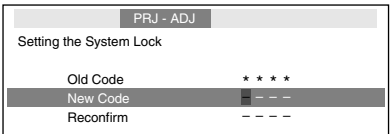

5 **Enter the same keycode in "Re-confirm".**

Note

To cancel the keycode that you have already set

- Press ▼ on the projector for four times in steps 4 and 5 above.

When the System Lock is set

- When System Lock is set, the keycode input screen appears after the power is turned on. When it appears, enter the right keycode to start projection.

Input screen for keycode

System Lock – – – –

⑪ Checking the Lamp Life Status

You can confirm the cumulative lamp usage time and the remaining lamp life (percentage).

Lamp usage condition	Remaining lamp life	
"Life"	100%	5%
Operated exclusively with Lamp Setting set to "Eco +Quiet"	Approx. 3,000 hours	Approx. 150 hours
Operated exclusively with Lamp Setting set to "Bright"	Approx. 2,000 hours	Approx. 100 hours

Note

- It is recommended that the lamp be changed when the remaining lamp life becomes 5%.
- The lamp life may vary depending on the usage condition.

Keylock Function

Locking the Operation Buttons on the Projector

Use this function to lock the operation buttons on the projector.

■ Locking the Operation Buttons

Hold down **ENTER** on the projector for about 5 seconds while the projector is being turned on.

On-screen display

Keylock function ON

- The keylock function does not affect the operation with the remote control buttons.
- You cannot use the keylock function while the projector is warming up.

■ Taking the Keylock off

Hold down **ENTER** on the projector for about 5 seconds.

On-screen display

Keylock function OFF

- When the projector is in standby mode, you can release the keylock by holding down **ENTER** and **STANDBY/ON** on the projector simultaneously for about 5 seconds.

Info

- Keylock cannot be set while the projector is: displaying the "Setup Guide" or "Menu" screens, in standby mode, warming up, changing input signals, operating "Auto Sync" function, in "FREEZE" mode or on the "System Lock" screen during warming up.

Setting up the Projector Network Environment (“Network” menu)

Menu operation ➜ Page 39

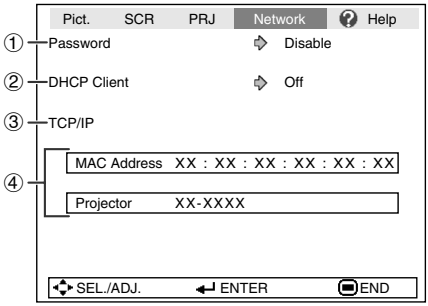

① Setting a Password

If you do not want others to change the setting for the “Network” menu, set a password.

Setting a Password

1 **Select “Password”, then press ENTER or ▶.**
- The screen for entering the password appears.

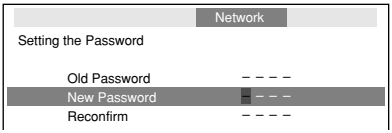

2 **Press ▲ or ▼ to set the first digit in “New Password”, then press ▶.**

3 **Enter the remaining 3 digits, then press ENTER.**
- To return to the previous digit, press ◀.

4 **Enter the same password in “Reconfirm”, then press ENTER.**
- The status for “Password” changes to “Enable”.

Note
- Once after the password is set, you must enter the password to change the “Network” menu settings.

Changing the Password

1 **Select “Password”, then press ENTER or ▶.**
- The screen for entering the password appears.

2 **Enter the password in “Old Password” using ▲, ▼, ▶ and ◀, then press ENTER.**

3 **Enter the password in “New Password” using ▲, ▼, ▶ and ◀, then press ENTER.**

4 **Enter the same password again in “Reconfirm” using ▲, ▼, ▶ and ◀, then press ENTER.**

Note
- If you do not need the password protection for the “Network” menu settings anymore, press **ENTER** without entering new password in steps 3 and 4.
- To cancel the password settings, press **RETURN**.

If you forget the password

If you forget the password, perform the following procedure to delete it, then set a new password.

On the projector, press

⏻ → ENTER → ⏻ → ENTER → ⏻ → ENTER → ▭.

Note
- If **ENTER** is held down for more than 5 seconds, the operation buttons on the projector will be locked. (See page 48.)
- You cannot use the buttons on the remote control to delete the password.

Menu operation ➜ Page 39

② DHCP Client Setting

Connect the LAN cable before turning the projector on. If not, the DHCP Client function does not work.

Selectable items	Description
On	Obtains configuration parameters for TCP/IP network automatically.
Off	Sets the TCP/IP manually.

Select “On” for “DHCP Client”. “Obtaining IP Address...” appears, then the menu screen appears. Confirm the parameters of IP Address, Subnet Mask and Gateway on the TCP/IP screen.

If the DHCP server is not available, “Could not obtain IP Address.” appears.

In this case, set the TCP/IP manually. (See the item ③.)

③ TCP/IP Setting

Set the TCP/IP manually.

1 **Select “Off” for “DHCP Client”, then press ENTER.**

2 **Select “TCP/IP”, then press ENTER.**

3 **Enter “IP Address” using ▲, ▼, ► and ◄, then press ENTER.**

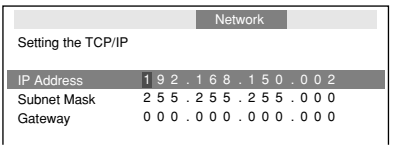

4 **Enter “Subnet Mask” using ▲, ▼, ► and ◄, then press ENTER.**

5 **Enter “Gateway” using ▲, ▼, ► and ◄, then press ENTER.**

Selectable items	Description
IP Address	Factory default setting: 192.168.150.002 Enter an IP address appropriate for the network.
Subnet Mask	Factory default setting: 255.255.255.000 Set the subnet mask to the same as that of the computer and equipment on the network.
Gateway	Factory default setting: 000. 000. 000. 000 * When not in use, set to “000. 000. 000. 000”.

Note

- Confirm the existing network’s segment (IP address group) to avoid setting an IP address that duplicates the IP addresses of other network equipment or computers. If “192.168.150.002” is not used in a network with an IP address of “192.168.150.XXX”, you don’t have to change the projector IP address.
- For details about each setting, consult your network administrator.

④ Confirming the Projector Information

You can confirm the MAC address and projector name.

Displayed items	Description
MAC Address	The MAC address of the projector is displayed.
Projector	The projector name is displayed.

Note

- For information on how to change the projector name, see “SETUP MANUAL” contained in the supplied CD-ROM.

Troubleshooting with the “Help” Menu

This function advises you to solve the problems during usage.

Utilizing the “Help” Menu Functions

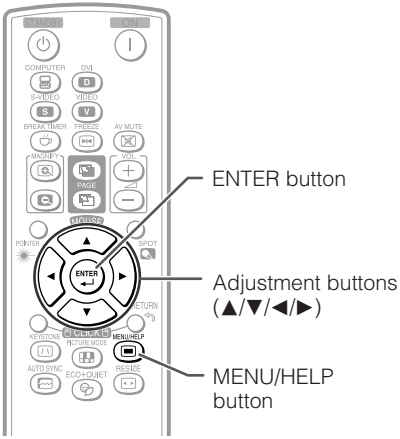

Example: When image flickering appears

Operation to solve image flickering when projecting the computer RGB signal.

1 **Press MENU/HELP.**

2 **Press ◀ or ▶ to select “Help”, then press ENTER.**

3 **Press ▲ or ▼ to select “Vertical stripes or flickering image appears” on Help menu, then press ENTER.**

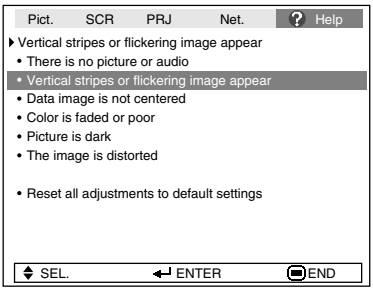

Press **ENTER**.

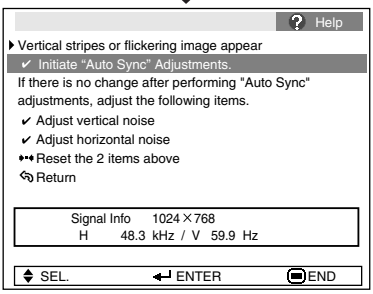

4 **Select “Initiate “Auto Sync” Adjustments”, then press ENTER.**

5 **If the image is not improved, select “Adjust horizontal noise”, then press ENTER.**

6 **Press ◀ or ▶ to adjust.**



Note

- You can adjust the items with check marks (✔).
- The items in the “Help” menu change, depending on the input signal or setting that you have selected.
- **If the problem is not solved, refer to “Troubleshooting” (see pages 62 and 63).**
- When selecting “sRGB” in "Picture Mode”, the item “Color is faded or poor” is not displayed. This means you cannot change input signal types.

Maintenance

Cleaning the projector

- Ensure that you have unplugged the power cord before cleaning the projector.
- The cabinet as well as the operation panel is made of plastic. Avoid using benzene or thinner, as these can damage the finish on the cabinet.
- Do not use volatile agents such as insecticides on the projector.
  Do not attach rubber or plastic items to the projector for long periods.
  The effects of some of the agents in the plastic may cause damage to the quality or finish of the projector.
- Wipe off dirt gently with a soft flannel cloth.
- When the dirt is hard to remove, soak a cloth in a mild detergent diluted with water, wring the cloth well and then wipe the projector.
  Strong cleaning detergents may discolor, warp or damage the coating on the projector. Make sure to test on a small, inconspicuous area on the projector before use.

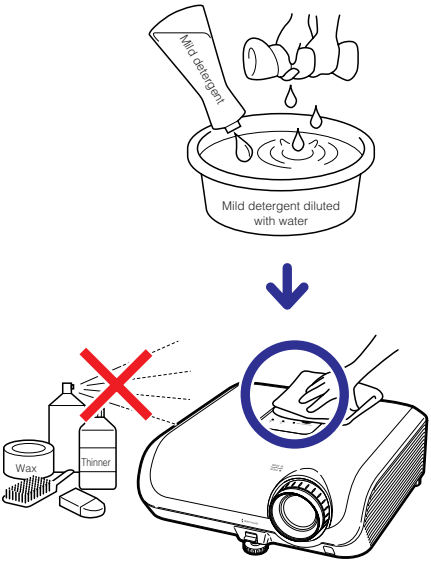

Cleaning the lens

- Use a commercially available blower or lens cleaning paper (for glasses and camera lenses) for cleaning the lens. Do not use any liquid type cleaning agents, as they may wear off the coating film on the surface of the lens.
- As the surface of the lens can easily get damaged, be careful not to scrape or hit the lens.

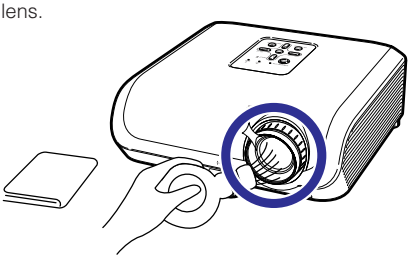

Cleaning the exhaust and intake vents

- Use a vacuum cleaner to clean dust from the exhaust vent and the intake vent.

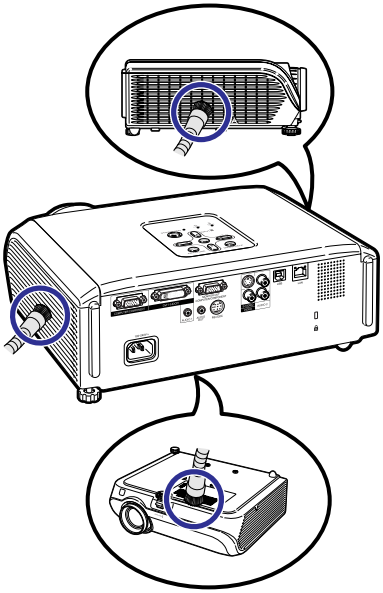

Info

- If you want to clean the air vents during projector operation, ensure you press **STANDBY/ON** on the projector or **STANDBY** on the remote control and put the projector into standby mode. After the cooling fan has stopped, clean the vents.

Cleaning and Replacing the Dust Filters

Cleaning the Dust Filters

Info

- The dust filters should be cleaned every 100 hours of use. Clean the filters more often when the projector is used in a dusty or smoky location.

1 **Press STANDBY/ON on the projector to put the projector into standby mode.**

- Wait until the cooling fan stops.
- Disconnect the power cord and unplug the power cord from the AC socket.

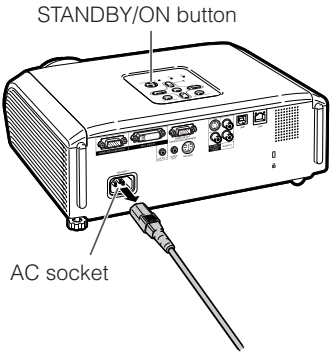

2 **Remove the filter holders.**

- Turn the projector over. To remove the filter holders, press in the tabs while lifting up.

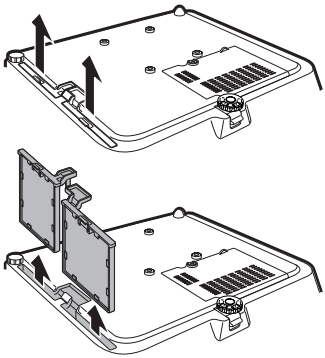

3 **Clean the dust off the dust filters and the holders with a hand broom.**

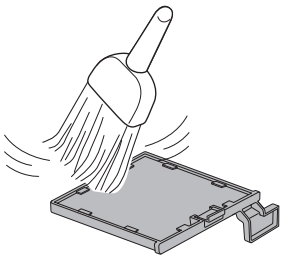

4 **Replace the filter holders.**

- Align the tabs on the filter holders while replacing them, and then press down on the tabs to lock them in place.

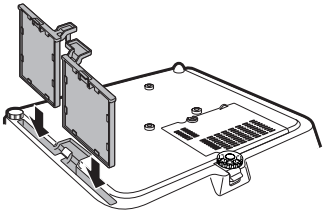

Note

- Be sure the filter holders are securely installed. The power will not turn on unless it is correctly installed.

Replacing the Dust Filters

Info

- If the filters become too dirty to clean effectively, purchase new ones (PFILDA025WJZZ) from your nearest Sharp Authorized Projector Dealer or Service Center.

After removing the filter holders (see step 2 of "Cleaning the Dust Filters"), remove the dust filters, then replace with new ones.

- Pick the dust filters up with your fingers and lift them out of the filter holders.
- With the reinforcement seal facing down, place the dust filters underneath the tabs on the filter holders.

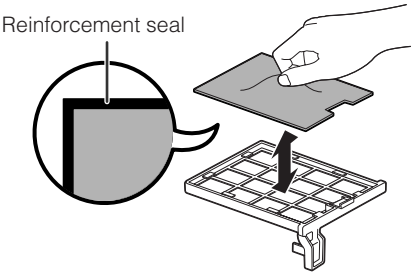

Maintenance Indicators

- The warning lights (power indicator, lamp indicator and temperature warning indicator) on the projector indicate problems inside the projector.
- If a problem occurs, either the temperature warning indicator or the lamp indicator will illuminate red, and the projector will enter standby mode. After the projector has entered standby mode, follow the procedures given below.

Top View

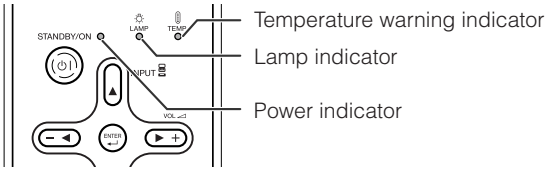

About the temperature warning indicator

If the temperature inside the projector increases, due to blockage of the air vents, or the setting location, "TEMP." will illuminate in the lower left corner of the picture. If the temperature keeps on rising, the lamp will turn off and the temperature warning indicator will blink, the cooling fan will run, and then the projector will enter standby mode. After "TEMP." appears, ensure you perform the measures described on page **56**.

About the lamp indicator

- When the remaining lamp life becomes 5% or less, (yellow) and "Change The Lamp" will be displayed on the screen. When the percentage becomes 0%, it will change to (red), the lamp will automatically turn off and then the projector will automatically enter standby mode. At this time, the lamp indicator will illuminate in red.
- **If you try to turn on the projector a fourth time without replacing the lamp, the projector will not turn on.**

Indicators on the Projector

Power indicator	Red on	Normal (Standby)
	Green on	Normal (Power on)
	Red blinks	Abnormal (See page **56**.)
	Green blinks	Normal (Cooling)
Lamp indicator	Green on	Normal
	Green blinks	The lamp is warming up.
	Red on	The lamp is shut down abnormally or requires to be changed. (See page **56**.)
Temperature warning indicator	Off	Normal
	Red on	The internal temperature is abnormally high. (See page **56**.)

Maintenance Indicators (Continued)

Maintenance indicator			Problem	Cause	Possible Solution
	Normal	Abnormal			
Tempera-ture warning indicator	Off	Red on (Standby)	The internal temperature is abnormally high.	• Blocked air intake	• Relocate the projector to an area with proper ventilation. (See page **8**.)
				• Cooling fan breakdown • Internal circuit failure • Clogged air intake	• Take the projector to your nearest Sharp Authorized Projector Dealer or Service Center (see page **64**) for repair.
Lamp indicator	Green on (Green blinks when the lamp is warming up or turning off.)	Red on	The lamp does not illuminate.	• The lamp is shut down abnormally.	• Disconnect the power cord from the AC outlet, and then connect it again.
			Time to change the lamp.	• Remaining lamp life becomes 5% or less.	• Carefully replace the lamp. (See page **57**.) • Take the projector to your nearest Sharp Authorized Projector Dealer or Service Center (see page **64**) for repair. • Please exercise care when replacing the lamp. • Securely install the cover.
		Red on (Standby)	The lamp does not illuminate.	• Burnt-out lamp • Lamp circuit failure	
Power indicator	Green on/ Red on Green blinks (Cooling)	Red blinks	The power indicator blinks in red when the projector is on.	• The dust filter holder or lamp unit cover is open.	• If the power indicator blinks in red even when the dust filter holder and lamp unit cover are securely installed, contact your nearest Sharp Authorized Projector Dealer or Service Center (see page **64**) for advice.

Info

- If the temperature warning indicator illuminates, and the projector enters standby mode, follow the possible solutions above and then wait until the projector has cooled down completely before plugging in the power cord and turning the power back on. (At least 10 minutes.)
- If the power is turned off for a brief moment due to power outage or some other cause while using the projector, and the power supply recovers immediately after that, the lamp indicator will illuminate in red and the lamp may not be lit. In this case, unplug the power cord from the AC outlet, replace the power cord in the AC outlet and then turn the power on again.
- The cooling fan keeps the internal temperature of the projector constant and this function is controlled automatically. The sound of the cooling fan may change during operation because the fan speed may change and this is not a malfunction.

Regarding the Lamp

Lamp

- It is recommended that the lamp (sold separately) be replaced when the remaining lamp life becomes 5% or less, or when you notice a significant deterioration in the picture and color quality. The lamp life (percentage) can be checked with the on-screen display. (See page **48**.)
- Purchase a replacement lamp of type AN-F310LP from your place of purchase, nearest Sharp Authorized Projector Dealer or Service Center.

IMPORTANT NOTE TO U.S. CUSTOMERS:

The lamp included with this projector is backed by a 90-day parts and labor limited warranty. All service of this projector under warranty, including lamp replacement, must be obtained through a Sharp Authorized Projector Dealer or Service Center. For the name of the nearest Sharp Authorized Projector Dealer or Service Center, please call toll-free: 1-888-GO-SHARP (1-888-467-4277).

Hg LAMP CONTAINS MERCURY For State Lamp Disposal Information
www.lamprecycle.org or 1-800-BE-SHARP U.S.A. ONLY

Caution Concerning the Lamp

- This projector utilizes a pressurized mercury lamp. A loud sound may indicate lamp failure. Lamp failure can be attributed to numerous sources such as: excessive shock, improper cooling, surface scratches or deterioration of the lamp due to a lapse of usage time.
  The period of time up to failure largely varies depending on the individual lamp and/or the condition and the frequency of use. It is important to note that failure can often result in the bulb cracking.
- When the lamp replacement indicator and on-screen display icon are illuminated, it is recommended that the lamp be replaced with a new one immediately, even if the lamp appears to be operating normally.
- Should the lamp break, there is also a possibility that glass particles may spread inside of the projector. In such a case, it is recommended you contact your nearest Sharp Authorized Projector Dealer or Service Center to assure safe operation.
- Should the lamp break, the glass particles may spread inside the lamp cage or gas contained in the lamp may be vented into the room from the exhaust vent. Because the gas in this lamp includes mercury, ventilate the room well if the lamp breaks and avoid all exposure to the released gas. In case of exposure to the gas, consult a doctor as soon as possible.

Replacing the Lamp

Caution

- Do not remove the lamp unit from the projector right after use. The lamp will be very hot and may cause burns or injury.
- Wait at least one hour after the power cord is disconnected to allow the surface of the lamp unit to fully cool before removing the lamp unit.

- **Carefully change the lamp by following the instructions described in this section. * If you wish, you may have the lamp replaced at your nearest Sharp Authorized Projector Dealer or Service Center.**

* If the new lamp does not light after replacement, take your projector to the nearest Sharp Authorized Projector Dealer or Service Center for repair.

Removing and Installing the Lamp Unit

Warning!

- Do not remove the lamp unit from the projector right after use. The lamp and parts around the lamp will be very hot and may cause burns or injury.

Info

- Make sure that you remove the lamp unit by the handle. Do not touch the glass surface of the lamp unit or the inside of the projector.
- To avoid injury to yourself and damage to the lamp, make sure you carefully follow the steps below.
- Do not loosen other screws except for the lamp unit cover and lamp unit.

Optional accessory



Lamp unit
AN-F310LP

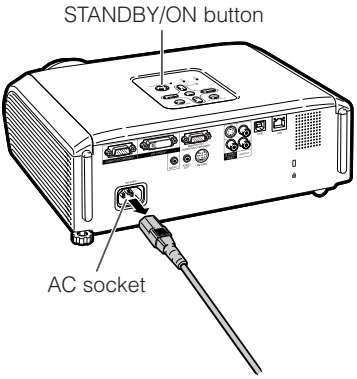

1 **Press STANDBY/ON on the projector or STANDBY on the remote control to put the projector into standby mode.**

- Wait until the cooling fan stops.

2 **Disconnect the power cord.**

- Unplug the power cord from the AC socket.
- Leave the lamp until it has fully cooled down (about 1 hour).

3 **Remove the lamp unit cover.**

- Turn the projector over. Loosen the user service screw (①) that secures the lamp unit cover. Remove the lamp unit cover (②).

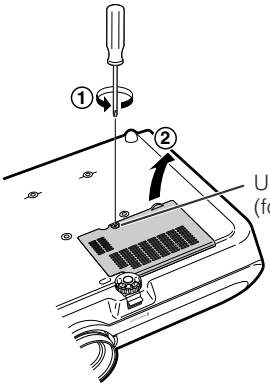

4 Remove the lamp unit.

- Loosen the securing screws from the lamp unit. Hold the lamp unit by the handle and pull it in the direction of the arrow. At this time, keep the lamp unit horizontal and do not tilt it.

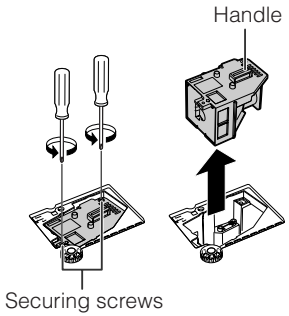

5 Insert the new lamp unit.

- Press the lamp unit firmly into the lamp unit compartment. Fasten the securing screws.

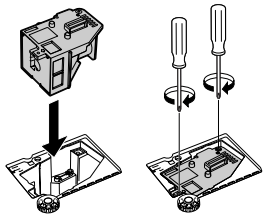

6 Replace the lamp unit cover.

- Align the tab on the lamp unit cover (①) and place it while pressing the tab (②) to close it. Then tighten the user service screw (③) to secure the lamp unit cover.

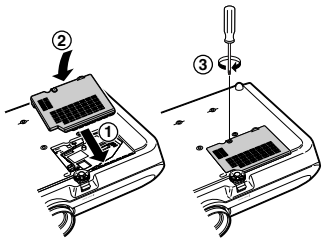

Info

- If the lamp unit and lamp unit cover are not correctly installed, the power will not turn on, even if the power cord is connected to the projector.

Resetting the Lamp Timer

Reset the lamp timer after replacing the lamp.

Info

- Make sure to reset the lamp timer only when replacing the lamp. If you reset the lamp timer and continue to use the same lamp, this may cause the lamp to become damaged or explode.

1 Connect the power cord.

- Plug the power cord into the AC socket of the projector.

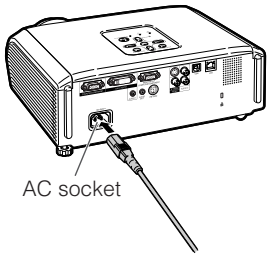

2 Reset the lamp timer.

- While simultaneously holding down **MENU/HELP**, **ENTER** and ▼ on the projector, press **STANDBY/ON** on the projector.
- "LAMP 0000H" is displayed, indicating that the lamp timer is reset.

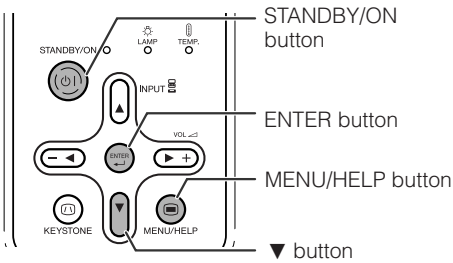

Storing the Projector

How to Use the Storage Case

When storing the projector, attach the lens cap to the lens, and place it in the supplied storage case.

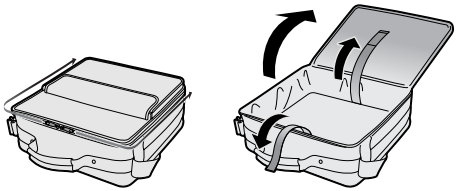

1 **Open the cover of the storage case.**

2 **Place the projector into the storage case.**

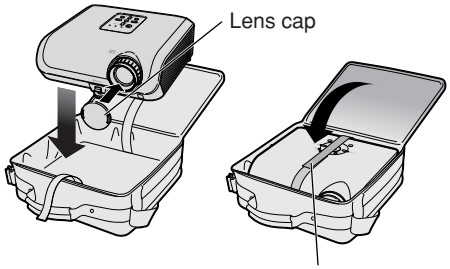

Info

- Ensure the projector has cooled down sufficiently before placing it in the case.
- When you place the projector into the storage case, make sure that the cooling fan has stopped.
- Ensure the lens cap is attached to the lens for protection.
- **Place the projector into the storage case with the lens facing the handle.**
- Ensure the projector is held in place by using the fixing band.
- Do not expose the storage case to direct sunlight or near heat sources. The storage case may change color or become deformed.

3 **Close the cover of the storage case.**

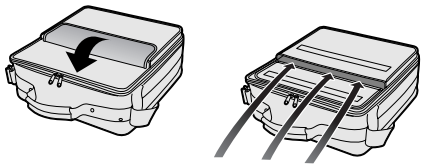

4 **Place the accessories in the front pocket of the storage case.**

Computer Compatibility Chart

Computer

- Multiple signal support
  Horizontal Frequency: 15-110 kHz,
  Vertical Frequency: 45-85 Hz,
  Pixel Clock: 12-170 MHz
  Sync signal: Compatible with TTL level
- Compatible with sync on green signal

The following is a list of modes that conform to VESA. However, this projector supports other signals that are not VESA standards.

PC/MAC	Resolution		Horizontal Frequency (kHz)	Vertical Frequency (Hz)	VESA Standard	DVI-D Support	Display
PC	VGA	640 × 350	27.0	60			Upscale
			31.5	70			
			37.5	85	✔		
		640 × 400	27.0	60		✔	
			31.5	70			
			37.9	85	✔		
		720 × 350	27.0	60			
			31.5	70			
		720 × 400	27.0	60		✔	
			31.5	70			
			37.9	85	✔		
		640 × 480	26.2	50			
			31.5	60	✔		
			34.7	70			
			37.9	72	✔		
			37.5	75	✔		
			43.3	85	✔		
	SVGA	800 × 600	31.4	50			
			35.1	56	✔		
			37.9	60	✔		
			46.6	70			
			48.1	72	✔		
			46.9	75	✔		
			53.7	85	✔		
	XGA	1024 × 768	40.3	50			True
			48.4	60	✔		
			56.5	70	✔		
			60.0	75	✔		
			68.7	85	✔		
	WXGA	1280 × 720	45.0	60			Intelligent Compression
		1280 × 768	47.7	60			
		1280 × 800	62.7	75			
		1360 × 768	47.6	60			
		1366 × 768	47.8	60			
	SXGA	1152 × 864	55.0	60			
			66.2	70			
			67.5	75	✔		
		1280 × 1024	64.0	60	✔		
		1280 × 1024	80.0	75	✔		
	SXGA+	1400 × 1050	64.0	60			
	UXGA	1600 × 1200	75.0	60	✔		
MAC 13"	VGA	640 × 480	34.9	67			Upscale
MAC 16"	SVGA	832 × 624	49.7	75			
MAC 19"	XGA	1024 × 768	60.2	75			True
MAC 21"	SXGA	1152 × 870	68.7	75			Intelligent Compression

Note

- When this projector receives 640 × 350 VESA format VGA signals, “640 × 400” appears on the screen.
- Optimum image quality will be achieved by matching your computer’s output resolution to the projector’s native resolution. (1024 × 768)

DTV

Signal	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	DVI-D Support (Compatible with HDCP)
480I	15.7	60	
480P	31.5	60	✔
540P	33.8	60	
576I	15.6	50	
576P	31.3	50	✔
720P	37.5	50	✔
720P	45.0	60	✔
1035I	33.8	60	✔
1080I	28.1	50	✔
1080I	33.8	60	✔
1080P	56.3	50	✔
1080P	67.5	60	✔

Troubleshooting

Problem	Check	Page
 No picture and no sound or projector does not start.	• Projector power cord is not plugged into the wall outlet.	25
	• Power to the external connected devices is off.	–
	• The selected input mode is wrong.	30
	• Cables are incorrectly connected to the projector.	21–25
	• Remote control battery has run out.	15
	• External output has not been set when connecting notebook computer.	21
	• The lamp unit cover is not installed correctly.	58, 59
	• If the connected DVI digital equipment is turned on before the “DVI-D” input mode is selected on the projector, the image may not be projected properly or may not be displayed at all. Ensure that the appropriate input mode has been selected on the projector before you turn on the connected equipment.	21
 Sound is heard but no picture appears (or picture is dark).	• Cables are incorrectly connected to the projector.	21–25
	• “Bright” is set to minimum position.	42
	• Depending on the computer you are using, an image may not be projected unless the signal output setting of the computer is switched to the external output. Refer to the computer’s operation manual for how to switch its signal output settings.	–
 Color is faded or poor.	• Image adjustments are incorrectly set. • Make adjustments of “Color” and “Tint” in “Picture Mode” and lower the “BrilliantColor™” value.	42
	(Video Input only) • Video input system is incorrectly set.	51
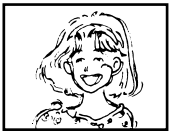 Picture is blurred; noise appears.	• Adjust the focus.	27
	• The projection distance exceeds the focus range.	20
	• There is fog on the lens. If the projector is carried from a cold room into a warm room, or if it is suddenly heated, condensation may form on the surface of the lens and the image will become blurred. Set up the projector at least one hour before it is to be used. If condensation should form, remove the power cord from the wall outlet and wait for it to clear.	–
	(Computer Input only) • Perform “Fine Sync” Adjustments (“Clock” Adjustment) • Perform “Fine Sync” Adjustments (“Phase” Adjustment) • Noise may appear depending on the computer.	 51 51 –
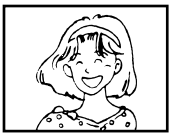 Picture appears but no sound is heard.	• Cables are incorrectly connected to the projector.	21–25
	• Volume is set to minimum. • When the projector is connected to an external device and the volume is set to minimum, the sound is not output even if you turn up the volume of the external device.	30
	• “Speaker” is set to “Off”.	46
An unusual sound is occasionally heard from the cabinet.	• If the picture is normal, the sound is due to cabinet shrinkage caused by room temperature changes. This will not affect operation or performance.	–

Problem	Check	Page
Maintenance indicator on the projector illuminates or blinks in red.	• See “Maintenance Indicators”.	55
The projector cannot be turned on or put into the standby mode using **STANDBY/ON** on the projector.	• The keylock is set. If the keylock is set to “ON”, all the buttons are locked.	48
Picture is green on COMPUTER (Component)/ DVI (Component).	• Change the input signal type setting. • When you cannot select an input signal type, select “Color is faded or poor” in the “Help” menu, after selecting an item other than “sRGB” in “Picture Mode”, and then select an input signal type.	51 41, 51
Picture is pink (no green) on COMPUTER (RGB)/ DVI (RGB).		
Picture is too bright and whitish.	• Image adjustments are incorrectly set.	42
The cooling fan becomes noisy.	• When temperature inside the projector increases, the cooling fan runs faster.	8, 9 52, 55, 56
The lamp does not light up even after the projector turns on.	• The lamp indicator is illuminating in red. Replace the lamp.	55, 58
The lamp suddenly turns off during projection.		
The image sometimes flickers.	• Cables are incorrectly connected to the projector or the connected equipment works improperly. • Select “Vertical stripes or flickering image appear” in the “Help” menu and make the necessary adjustments. • If this happens frequently, replace the lamp.	21–25 51 58
The lamp needs much time to turn on.	• The lamp will eventually need to be changed. While the remaining lamp life draws to a close, replace the lamp.	58
Picture is dark.		
The remote control cannot be used.	• Operate the remote control while pointing it at the projector’s remote control sensor. • The remote control may be too far away from the projector. • If direct sunlight or a strong fluorescent lamp is shining on the projector’s remote control sensor, place the projector where it will not be affected by strong light.	15
	• The batteries may be depleted or inserted incorrectly. Make sure the batteries are inserted correctly or insert new ones.	15

This unit is equipped with a microprocessor. Its performance could be adversely affected by incorrect operation or interference. If this should happen, unplug the Unit and plug it in again after more than 5 minutes.

For SHARP Assistance

If you encounter any problems during setup or operation of this projector, first refer to the "Troubleshooting" section on pages 62 and 63. If this operation manual does not answer your question, please contact the SHARP Service departments listed below.

U.S.A.	**Sharp Electronics Corporation** 1-888-GO-SHARP (1-888-467-4277) lcdsupport@sharpsec.com http://www.sharpusa.com
Canada	**Sharp Electronics of Canada Ltd.** (905) 568-7140 http://www.sharp.ca
Mexico	**Sharp Electronics Corporation Mexico Branch** (525) 716-9000 http://www.sharp.com.mx
Latin America	**Sharp Electronics Corp. Latin American Group** (305) 264-2277 www.servicio@sharpsec.com http://www.siempresharp.com
Germany	**Sharp Electronics (Europe) GMBH** 01805-234675 http://www.sharp.de
U.K.	**Sharp Electronics (U.K.) Ltd.** 08705 274277 http://www.sharp.co.uk/customersupport
Italy	**Sharp Electronics (Italy) S.P.A.** (39) 02-89595-1 http://www.sharp.it
France	**Sharp Electronics France** 01 49 90 35 40 hotlineced@sef.sharp-eu.com http://www.sharp.fr
Spain	**Sharp Electronica Espana, S.A.** 93 5819700 sharplcd@sees.sharp-eu.com http://www.sharp.es
Switzerland	**Sharp Electronics (Schweiz) AG** 0041 1 846 63 11 cattaneo@sez.sharp-eu.com http://www.sharp.ch
Sweden	**Sharp Electronics (Nordic) AB** (46) 8 6343600 vision.support@sen.sharp-eu.com http://www.sharp.se
Austria	**Sharp Electronics (Europe) GMBH Branch Office Austria** 0043 1 727 19 123 pogats@sea.sharp-eu.com http://www.sharp.at
Benelux	**SHARP Electronics Benelux BV** 0900-SHARPCE (0900-7427723) Nederland 9900-0159 Belgium http://www.sharp.nl http://www.sharp.be http://www.sharp.lu
Australia	**Sharp Corporation of Australia Pty. Ltd.** 1300-135-022 http://www.sharp.net.au
New Zealand	**Sharp Corporation of New Zealand** (09) 634-2059, (09) 636-6972 http://www.sharp.net.nz
Singapore	**Sharp-Roxy Sales (S) Pte. Ltd.** 65-226-6556 ckng@srs.global.sharp.co.jp http://www.sharp.com.sg
Hong Kong	**Sharp-Roxy (HK) Ltd.** (852) 2410-2623 dcmktg@srh.global.sharp.co.jp http://www.sharp.com.hk
Taiwan	**Sharp Corporation (Taiwan)** 0800-025111 http://www.sharp-scot.com.tw
Malaysia	**Sharp-Roxy Sales & Service Co.** (60) 3-5125678
U.A.E.	**Sharp Middle East Fze** 971-4-81-5311 helpdesk@smef.global.sharp.co.jp
Thailand	**Sharp Thebnakorn Co. Ltd.** 02-236-0170 svc@stcl.global.sharp.co.jp http://www.sharp-th.com
Korea	**Sharp Electronics Incorporated of Korea** (82) 2-3660-2002 lcd@sharp-korea.co.kr http://www.sharpkorea.co.kr
India	**Sharp Business Systems (India) Limited** (91) 11- 6431313 service@sharp-oa.com

Specifications

Model		XG-F315X
Display device		0.55" DLP® Chip
Resolution		XGA (1024 × 768)
Lens	F number	F 2.4 – 2.6
	Zoom	Manual, ×1.15 (f = 18.7 – 21.5 mm)
	Focus	Manual
Input terminal	DVI-I (Compatible with HDCP)	×1
	RGB/Component (mini D-sub 15 pin)	×1
	S-Video (mini DIN 4 pin)	×1
	Video (RCA)	×1
	Audio (ø3.5 mm stereo minijack)	×1
	Audio (RCA)	×1 (L/R)
Output terminal	RGB/Component (mini D-sub 15 pin)	×1
	Audio (ø3.5 mm stereo minijack)	×1
Control, others	LAN (RJ-45)	×1
	USB (Type B)	×1
	RS-232C (mini DIN 9 pin)	×1
Speaker		2 W (Mono)
Projection lamp		275 W
Rated voltage		AC 100 – 240 V
Rated frequency		50/60 Hz
Input current		3.7 A
Power consumption (Standby)		363 W (10.5 W) with AC 100 V 349 W (11.0 W) with AC 240 V
Operation temperature		41°F to 95°F (+5°C to +35°C)
Cabinet		Plastic
Dimensions (main body only)		12 13/32" × 4 19/64" × 11 1/32" (315 (W) × 109 (H) × 280 (D) mm)
Weight (approx.)		9.1 lbs. (4.1 kg)

As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Dimensions

Units: inches (mm)

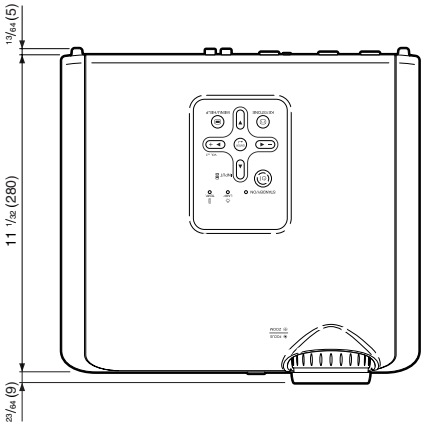

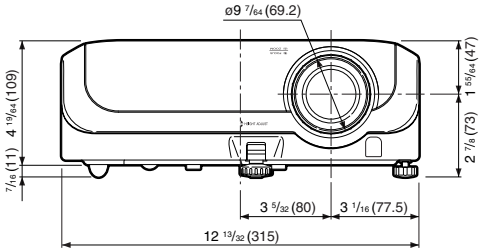

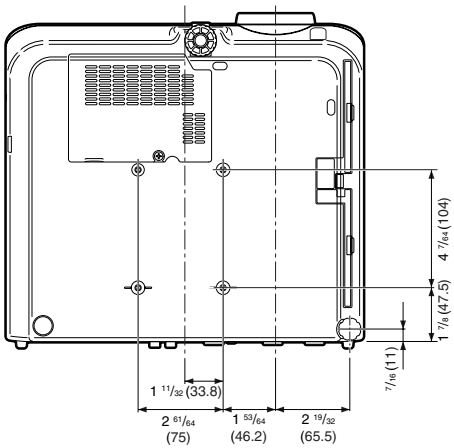

Index

Accessories 11
AC socket 25
Adjustment buttons 39
AREA ZOOM 32
Aspect ratio 31
Audio Input 47
AUDIO 1, 2 terminal 23
AUDIO OUT terminal 23
Auto Keystone Correction 44
Auto Power Off 46
Auto Restart 46
Auto Sync (Auto Sync adjustment) 34, 38, 46, 51
AUTO SYNC button 34
AV MUTE button 30

Background 45
Batteries 15
Blue 42
BORDER 31, 32
BREAK TIMER button 33
Bright 42
BrilliantColor™ 42

CLR Temp (Color Temperature) 42
C.M.S. 42
Color 42
COMPUTER button 30
COMPUTER/COMPONENT input terminal 21, 22
Contrast 42

DHCP Client 50
DIN-D-sub RS-232C adaptor 24
DOT BY DOT 31
Dust filter 53
DVI button 30
DVI-I input terminal 21, 22

ECO+QUIET button 33
ENTER button 39
Exhaust vent 13, 52

Fan Mode 47
Fine Sync 51
Focus ring 27
FREEZE button 34
Front adjustment foot 28
FULL 31

HEIGHT ADJUST lever 28
Help 51
H-Pos 38, 51

Image shift 44
INPUT modes 30
Intake vent 12, 52

Kensington Security Standard connector 13
Keycode 47
Keylock 48
KEYSTONE button 29
Keystone Correction 29, 44

Lamp 57
Lamp indicator 55
Lamp Setting 43
Lamp Timer (Life) 48
Lamp unit 58
Language (on-screen display language) 45
LAN terminal 25

L-CLICK button 35
Lens Cap 12

MAC Address 50
MAGNIFY buttons 34
MENU/HELP button 39, 51
MONITOR OUT terminal 23
MOUSE/Adjustment buttons 35, 39

NORMAL 31, 32

ON button 26
Optional accessories 11
OSD Display 45

PAGE DOWN button 35
PAGE UP button 35
Password 49
PDF 10
Picture Adjustment 41
Picture Mode 34, 41
PICTURE MODE button 34
POINTER button 33
Power cord 25
Power indicator 55
PRJ - ADJ 46
PRJ Mode 19, 45
Progressive 43

R-CLICK/RETURN button 35, 39
Rear adjustment foot 28
Red 42
Remote control 14
Remote control sensor 15
Replacing the lamp 57, 58
Resize 31, 44
RESIZE button 31
RGB cable 21
RS-232C terminal 24

SCR - ADJ 44
Screen Size and Projection Distance 20
Setup Guide 27, 45
Sharp 42
Speaker 46
SPOT button 33
STANDBY button 26
STANDBY Mode 46
STANDBY/ON button 26
Storage case 60
STRETCH 31, 32
Supplied accessories 11
S-VIDEO button 30
S-VIDEO terminal 22
System Lock 47
System Sound 46

TCP/IP 50
Temperature warning indicator 55
Tint 42

USB terminal 35

VIDEO button 30
VIDEO terminal 22
VOL (Volume) buttons 30
V-Pos 38, 51
V-STRETCH 32

Zoom ring 27

SHARP®

SHARP CORPORATION